

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scripter Modules, refer to the "[Guide to Using Scripter Modules](#)" document.

Device Specifications

Device Type: Media Player
Manufacturer: Apart
Firmware Version: N/A
Model(s): PCR3000R MKIII

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scripter Version
2.06.0002-b002	1.4.1

Version History

Module Version	Date	Notes
1_1_0_0	12/6/2017	Added TimeStatus.
1_1_0_0	8/11/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Unsolicited responses will not work when DAB or CD is in standby.
- Unit may respond slowly when you change the input source depending on the size and number of files present on the media.
- Transport commands will not work proper if both DAB and CD are in playing mode.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PCR3000R MKIII')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PCR3000R MKIII')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command Band	Value None	
# Band example InterfaceName.Set('Band', None)		
Command CD	Value 'On'	Value 'Off'
# CD example InterfaceName.Set('CD', 'On')		
Command CDMute	Value 'On'	Value 'Off'
# CDMute example InterfaceName.Set('CDMute', 'On')		
Command Info	Value None	
# Info example InterfaceName.Set('Info', None)		
Command Input	Value None	
# Input example InterfaceName.Set('Input', None)		
Command MonoStereo	Value None	
# MonoStereo example InterfaceName.Set('MonoStereo', None)		
Command PresetRecall	Value '1' – '10'	
# PresetRecall example InterfaceName.Set('PresetRecall', '1')		
Command PresetSave	Value '1' – '10'	
# PresetSave example InterfaceName.Set('PresetSave', '1')		
Command	Value	Value

Global Scripter Module Communication Sheet

Random	'On'	'Off'	
# Random example InterfaceName.Set('Random', 'On')			
Command Repeat	Value 'Off'	Value 'One'	Value 'All'
# Repeat example InterfaceName.Set('Repeat', 'Off')			
Command Scan	Value 'Next'	Value 'Previous'	
# Scan example InterfaceName.Set('Scan', 'Next')			
Command Track	Value 0 to 4095 in steps of 1		
# Track example InterfaceName.Set('Track', 4095)			
Command Transport	Value 'Play' 'Eject' 'Fast Forward'	Value 'Stop' 'Next' 'Fast Backward'	Value 'Pause' 'Previous'
# Transport example InterfaceName.Set('Transport', 'Play')			
Command Tuner	Value 'Up'	Value 'Down'	
# Tuner example InterfaceName.Set('Tuner', 'Up')			
Command TunerMode	Value 'On'	Value 'Off'	
# TunerMode example InterfaceName.Set('TunerMode', 'On')			
Command TunerMute	Value 'On'	Value 'Off'	
# TunerMute example InterfaceName.Set('TunerMute', 'On')			
Command Volume	Value 'Up'	Value 'Down'	
# Volume example InterfaceName.Set('Volume', 'Up')			

Status Available

For all commands, call Update to receive the latest status, except for ConnectionStatus, CD, CDMute, PresetRecall, Random, Repeat, TimeStatus, Track, Transport, TunerMode, and TunerMute do not support the Update function. ConnectionStatus is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
CD	'On'	'Off'
# CD examples Value = InterfaceName.ReadStatus('CD') InterfaceName.SubscribeStatus('CD', None, FeedbackHandler)		
Command	Value	Value
CDMute	'On'	'Off'
# CDMute examples Value = InterfaceName.ReadStatus('CDMute') InterfaceName.SubscribeStatus('CDMute', None, FeedbackHandler)		
Command	Value	
CDStatus	'String'	
# CDStatus examples InterfaceName.Update('CDStatus') Value = InterfaceName.ReadStatus('CDStatus') InterfaceName.SubscribeStatus('CDStatus', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
DABStatus	'String'	
# DABStatus examples InterfaceName.Update('DABStatus') Value = InterfaceName.ReadStatus('DABStatus') InterfaceName.SubscribeStatus('DABStatus', None, FeedbackHandler)		
Command	Value	

Global Scripter Module Communication Sheet

PresetRecall	'1' – '10'		
# PresetRecall examples Value = InterfaceName.ReadStatus('PresetRecall') InterfaceName.SubscribeStatus('PresetRecall', None, FeedbackHandler)			
Command Random	Value 'On'	Value 'Off'	
# Random examples Value = InterfaceName.ReadStatus('Random') InterfaceName.SubscribeStatus('Random', None, FeedbackHandler)			
Command Repeat	Value 'Off'	Value 'One'	Value 'All'
# Repeat examples Value = InterfaceName.ReadStatus('Repeat') InterfaceName.SubscribeStatus('Repeat', None, FeedbackHandler)			
Command TimeStatus	Value 'String'		
# TimeStatus examples Value = InterfaceName.ReadStatus('TimeStatus') InterfaceName.SubscribeStatus('TimeStatus', None, FeedbackHandler)			
Command Track	Value 0 to 4095 in steps of 1		
# Track examples Value = InterfaceName.ReadStatus('Track') InterfaceName.SubscribeStatus('Track', None, FeedbackHandler)			
Command Transport	Value 'Play' 'Eject' 'Fast Forward'	Value 'Stop' 'Next' 'Fast Backward'	Value 'Pause' 'Previous'
# Transport examples Value = InterfaceName.ReadStatus('Transport') InterfaceName.SubscribeStatus('Transport', None, FeedbackHandler)			
Command TunerMode	Value 'On'	Value 'Off'	
# TunerMode examples Value = InterfaceName.ReadStatus('TunerMode') InterfaceName.SubscribeStatus('TunerMode', None, FeedbackHandler)			
Command TunerMute	Value 'On'	Value 'Off'	
# TunerMute examples Value = InterfaceName.ReadStatus('TunerMute') InterfaceName.SubscribeStatus('TunerMute', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

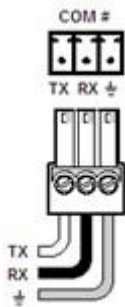

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

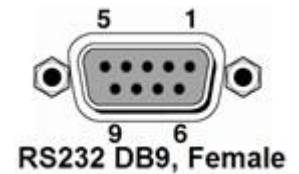

Appendix A. Set Commands

Band	BAND
CD Off	CD OFF
CD On	CD ON
CD Mute Off	CD MUTE OFF
CD Mute On	CD MUTE ON
Info None	INFO
Input None	INPUT
Mono Stereo None	ENTER
Preset Recall 1	PRESET 1
Preset Recall 10	PRESET 10
Preset Save 1	SAVE 1
Preset Save 10	SAVE 10
Random Off	RANDOM OFF
Random On	RANDOM ON
Repeat All	REPEAT ALL
Repeat Off	REPEAT OFF
Repeat One	REPEAT 1
Scan Next	AUTO+
Scan Previous	AUTO-
Track 0	TRACK 0
Track 4095	TRACK 4095
Transport Eject	EJECT
Transport Fast Backward	FAST-
Transport Fast Forward	FAST+
Transport Next	SKIP+
Transport Pause	PAUSE
Transport Play	PLAY
Transport Previous	SKIP-
Transport Stop	STOP
Tuner Down	TUNE-
Tuner Up	TUNE+
Tuner Mode Off	DAB OFF
Tuner Mode On	DAB ON
Tuner Mute Off	DAB MUTE OFF
Tuner Mute On	DAB MUTE ON
Volume Down	VOL-

Volume Up	VOL+
------------------	------

Appendix B. Update Commands

CD Status	STATUS CD
DAB Status	STATUS DAB