

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Audio Processor
Manufacturer: Ashly
Firmware Version: N/A
Model(s): pema 4250, pema 4125, pema 8125, pema 8250

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_3_0	8/20/2019	Fixed MixerMute command for Ethernet control.
1_0_2_0	5/28/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. deviceUsername default value is admin respectively. The password must be set when an admin username is used and cannot exceed 8 characters.
Example: `InterfaceName.deviceUsername = 'admin'`
`InterfaceName.devicePassword = ''`
- Ethernet Only:
MACAddress variable must be set accordingly.
Example: `InterfaceName.MACAddress = 'XX-XX-XX-XX-XX-XX'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='pema 4250')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='pema 4250')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3100, Model='pema 4250')</code>

Control Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	
AudioMuteInput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# AudioMuteInput example InterfaceName.Set('AudioMuteInput', 'On', {'Channel': '1'})		
Command	Value	
AudioMuteOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '4'	'5' – '8' ¹
# AudioMuteOutput example InterfaceName.Set('AudioMuteOutput', 'On', {'Channel': '1'})		
Command	Value	
InputVolume	-50 to 12 in steps of 1	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# InputVolume example InterfaceName.Set('InputVolume', 12, {'Channel': '1'})		
Command	Value	
MixerFaderLevelControl	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Input'	'1' – '8'	
Qualifier Key	Qualifier Value	Qualifier Value
'Mute'	'On'	'Off'
Qualifier Key	Qualifier Value	Qualifier Value
'Output'	'1' – '4'	'5' – '8' ¹
Qualifier Key	Qualifier Value	Qualifier Value
'Routing'	'Enable'	'Disable'
# MixerFaderLevelControl example InterfaceName.Set('MixerFaderLevelControl', 12, {'Input': '1', 'Mute': 'On', 'Output': '1', 'Routing': 'Enable'})		
Command	Value	
OutputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '4'	'5' – '8' ¹
# OutputVolume example InterfaceName.Set('OutputVolume', 12, {'Channel': '1'})		
Command	Value	
PresetRecall	'1' – '31'	
# PresetRecall example InterfaceName.Set('PresetRecall', '1')		

¹ Only supported for models pema 8125 and 8250

Status Available (Serial)

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	
AudioMuteInput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# AudioInputMuteOutput example InterfaceName.Update('AudioMuteOutput', {'Channel': '1'}) Value = InterfaceName.ReadStatus('AudioMuteInput', {'Channel': '1'}) InterfaceName.SubscribeStatus('AudioMuteInput', None, FeedbackHandler)		
Command	Value	
AudioMuteOutput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '4'	'5' – '8' ¹
# AudioMuteOutput example InterfaceName.Update('AudioMuteOutput', {'Channel': '1'}) Value = InterfaceName.ReadStatus('AudioMuteOutput', {'Channel': '1'}) InterfaceName.SubscribeStatus('AudioMuteOutput', None, FeedbackHandler)		
Command	Value	
ConnectionStatus	'Connected'	'Disconnected'
# Connection Status example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
InputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# InputVolume example InterfaceName.Update('InputVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('InputVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('InputVolume', None, FeedbackHandler)		
Command	Value	
OutputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '4'	'5' – '8' ¹
# OutputVolume example InterfaceName.Update('OutputVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('OutputVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('OutputVolume', None, FeedbackHandler)		

¹ Only supported for models pema 8125 and 8250

Control Commands (Ethernet)

Format with Qualifier:

InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})

Format with Qualifier:

InterfaceName.Set(Command, Value)

Command	Value	Value
AudioMuteInput	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# AudioMuteInput example InterfaceName.Set('AudioMuteInput', 'On', {'Channel': '1'})		
Command	Value	Value
AudioMuteOutput	'On'	'Off'
Qualifier Key	Qualifier Value	Qualifier Value
'Channel'	'1' – '4'	'5' – '8' ¹
# AudioMuteOutput example InterfaceName.Set('AudioMuteOutput', 'On', {'Channel': '1'})		
Command	Value	
InputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# InputVolume example InterfaceName.Set('InputVolume', 12, {'Channel': '1'})		
Command	Value	Value
MixerMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Input'	'1' – '8'	
Qualifier Key	Qualifier Value	Qualifier Value
'Output'	'1' – '4'	'5' – '8' ¹
# MixerMute example InterfaceName.Set('MixerMute', 'On', {'Input': '1', 'Output': '1'})		
Command	Value	
OutputVolume	-50 to 12 in steps of 1	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# OutputVolume example InterfaceName.Set('OutputVolume', 12, {'Channel': '1'})		
Command	Value	
PresetRecall	'1' – '31'	
# PresetRecall example InterfaceName.Set('PresetRecall', '1')		
Command	Value	
PresetSave	'1' – '31'	
# PresetSave example InterfaceName.Set('PresetSave', '1')		

¹ Only supported for models pema 8125 and 8250

Status Available (Ethernet)

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AudioMuteInput ²	'On'	'Off'
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# AudioMuteInput example InterfaceName.Update('AudioMuteInput', {'Channel': '1'}) Value = InterfaceName.ReadStatus('AudioMuteInput', {'Channel': '1'}) InterfaceName.SubscribeStatus('AudioMuteInput', None, FeedbackHandler)		
Command	Value	Value
AudioMuteOutput ²	'On'	'Off'
Qualifier Key	Qualifier Value	Qualifier Value
'Channel'	'1' – '4'	'5' – '8' ¹
# AudioMuteOutput example InterfaceName.Update('AudioMuteOutput', {'Channel': '1'}) Value = InterfaceName.ReadStatus('AudioMuteOutput', {'Channel': '1'}) InterfaceName.SubscribeStatus('AudioMuteOutput', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	
InputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# InputVolume example InterfaceName.Update('InputVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('InputVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('InputVolume', None, FeedbackHandler)		
Command	Value	
OutputVolume	-50 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '8'	
# OutputVolume example InterfaceName.Update('OutputVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('OutputVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('OutputVolume', None, FeedbackHandler)		
Command	Value	Value
PowerStatus	'On'	'Standby'

```
# PowerStatus example  
InterfaceName.Update('PowerStatus')  
Value = InterfaceName.ReadStatus('PowerStatus')  
InterfaceName.SubscribeStatus('PowerStatus', None, FeedbackHandler)
```

¹Only supported for models pema 8125 and 8250

Cable and Adapter Requirements

Please contact the manufacturer for the device's cable and adapter requirements.

Notes for the Device


- This device requires the Ashly INA-1 RS-232 adapter. Please contact the manufacturer for more information about connecting to the device.

Serial communication

Port Type: RS-232
Baud Rate: 9600
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

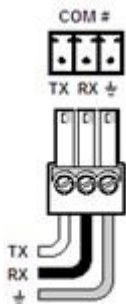

Please contact the manufacturer for the pin assignments diagram.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Device Listen Port:	3100
Device Reply Port:	3100
Logon Credentials Supported:	Yes
Multi-Connection Capabilities:	Undetermined
Listen Port Changeability:	No
Listen Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Audio Mute Input Off Channel 1	\xF0\x00\x01*\x06\x00\x15\x00\x00\xF7
Audio Mute Input Off Channel 8	\xF0\x00\x01*\x06\x00\x15\x07\x00\xF7
Audio Mute Input On Channel 1	\xF0\x00\x01*\x06\x00\x15\x00\x01\xF7
Audio Mute Input On Channel 8	\xF0\x00\x01*\x06\x00\x15\x07\x01\xF7
Audio Mute Output Off Channel 1	\xF0\x00\x01*\x06\x00\x15@\x00\xF7
Audio Mute Output Off Channel 4	\xF0\x00\x01*\x06\x00\x15C\x00\xF7
Audio Mute Output Off Channel 8	\xF0\x00\x01*\x06\x00\x15G\x00\xF7
Audio Mute Output On Channel 1	\xF0\x00\x01*\x06\x00\x15@\x01\xF7
Audio Mute Output On Channel 4	\xF0\x00\x01*\x06\x00\x15C\x01\xF7
Audio Mute Output On Channel 8	\xF0\x00\x01*\x06\x00\x15G\x01\xF7
Input Volume 12 Channel 1	\xF0\x00\x01*\x06\x00\x0C\x00@\x\xF7
Input Volume 12 Channel 8	\xF0\x00\x01*\x06\x00\x0C\x07@\x\xF7
Input Volume -50 Channel 1	\xF0\x00\x01*\x06\x00\x0C\x00<\x0C\xF7
Input Volume -50 Channel 8	\xF0\x00\x01*\x06\x00\x0C\x07<\x0C\xF7
Mixer Fader Level Control 12 Output 1 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x00?\x00\x00\xF7
Mixer Fader Level Control 12 Output 1 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12@\x00?\x00\x01\xF7
Mixer Fader Level Control 12 Output 1 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x00?\x01\x00\xF7
Mixer Fader Level Control 12 Output 1 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12@\x00?\x01\x01\xF7
Mixer Fader Level Control 12 Output 1 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x07?\x00\x00\xF7
Mixer Fader Level Control 12 Output 1 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12@\x07?\x00\x01\xF7
Mixer Fader Level Control 12 Output 1 Input 8 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x07?\x01\x00\xF7
Mixer Fader Level Control 12 Output 1 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12@\x07?\x01\x01\xF7
Mixer Fader Level Control 12 Output 4 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x00?\x00\x00\xF7
Mixer Fader Level Control 12 Output 4 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12C\x00?\x00\x01\xF7
Mixer Fader Level Control 12 Output 4 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x00?\x01\x00\xF7
Mixer Fader Level Control 12 Output 4 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12C\x00?\x01\x01\xF7
Mixer Fader Level Control 12 Output 4 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x07?\x00\x00\xF7
Mixer Fader Level Control 12 Output 4 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12C\x07?\x00\x01\xF7
Mixer Fader Level Control 12 Output 4 Input 8 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x07?\x01\x00\xF7

Global Scriptor Module Communication Sheet

Revision: 8/20/2019

Mixer Fader Level Control 12 Output 4 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12C\x07?\x01\x01\xF7
Mixer Fader Level Control 12 Output 8 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x00?\x00\x00\xF7
Mixer Fader Level Control 12 Output 8 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12G\x00?\x00\x01\xF7
Mixer Fader Level Control 12 Output 8 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x00?\x01\x00\xF7
Mixer Fader Level Control 12 Output 8 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12G\x00?\x01\x01\xF7
Mixer Fader Level Control 12 Output 8 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x07?\x00\x00\xF7
Mixer Fader Level Control 12 Output 8 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12G\x07?\x00\x01\xF7
Mixer Fader Level Control 12 Output 8 Input 8 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x07?\x01\x00\xF7
Mixer Fader Level Control 12 Output 8 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12G\x07?\x01\x01\xF7
Mixer Fader Level Control -50 Output 1 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x00\x01\x00\x00\xF7
Mixer Fader Level Control -50 Output 1 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12@\x00\x01\x00\x01\xF7
Mixer Fader Level Control -50 Output 1 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x00\x01\x01\x00\xF7
Mixer Fader Level Control -50 Output 1 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12@\x00\x01\x01\x01\xF7
Mixer Fader Level Control -50 Output 1 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x07\x01\x00\x00\xF7
Mixer Fader Level Control -50 Output 1 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12@\x07\x01\x00\x01\xF7
Mixer Fader Level Control -50 Output 1 Input 8 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12@\x07\x01\x01\x00\xF7
Mixer Fader Level Control -50 Output 1 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12@\x07\x01\x01\x01\xF7
Mixer Fader Level Control -50 Output 4 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x00\x01\x00\x00\xF7
Mixer Fader Level Control -50 Output 4 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12C\x00\x01\x00\x01\xF7
Mixer Fader Level Control -50 Output 4 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x00\x01\x01\x00\xF7
Mixer Fader Level Control -50 Output 4 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12C\x00\x01\x01\x01\xF7
Mixer Fader Level Control -50 Output 4 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12C\x07\x01\x00\x00\xF7
Mixer Fader Level Control -50 Output 4 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12C\x07\x01\x00\x01\xF7
Mixer Fader Level Control -50 Output 4 Input 8	\xF0\x00\x01*\x06\x00\x12C\x07\x01\x01\x00\xF7

Global Scriptor Module Communication Sheet

Revision: 8/20/2019

Routing Enable Mute Off	
Mixer Fader Level Control -50 Output 4 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12C\x07\x01\x01\xF7
Mixer Fader Level Control -50 Output 8 Input 1 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x00\x01\x00\xF7
Mixer Fader Level Control -50 Output 8 Input 1 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12G\x00\x01\x00\xF7
Mixer Fader Level Control -50 Output 8 Input 1 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x00\x01\x01\xF7
Mixer Fader Level Control -50 Output 8 Input 1 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12G\x00\x01\x01\xF7
Mixer Fader Level Control -50 Output 8 Input 8 Routing Disable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x07\x01\x00\xF7
Mixer Fader Level Control -50 Output 8 Input 8 Routing Disable Mute On	\xF0\x00\x01*\x06\x00\x12G\x07\x01\x00\xF7
Mixer Fader Level Control -50 Output 8 Input 8 Routing Enable Mute Off	\xF0\x00\x01*\x06\x00\x12G\x07\x01\x01\xF7
Mixer Fader Level Control -50 Output 8 Input 8 Routing Enable Mute On	\xF0\x00\x01*\x06\x00\x12G\x07\x01\x01\xF7
Output Volume 12 Channel 1	\xF0\x00\x01*\x06\x00\x0C@@x\xF7
Output Volume 12 Channel 4	\xF0\x00\x01*\x06\x00\x0C@x\xF7
Output Volume 12 Channel 8	\xF0\x00\x01*\x06\x00\x0CG@x\xF7
Output Volume -50 Channel 1	\xF0\x00\x01*\x06\x00\x0C@<\x0C\xF7
Output Volume -50 Channel 4	\xF0\x00\x01*\x06\x00\x0CC<\x0C\xF7
Output Volume -50 Channel 8	\xF0\x00\x01*\x06\x00\x0CG<\x0C\xF7
Preset Recall 1	\xF0\x00\x01*\x06\x00\x07\x00\x00\xF7
Preset Recall 31	\xF0\x00\x01*\x06\x00\x07\x1E\x00\xF7

Appendix B. Update Commands (Serial)

Audio Mute Input and Mute Output	\xF0\x00\x01*\x0C\x00\x03\x00\x01\xF7
Input Volume Channel 1	\xF0\x00\x01*\x0C\x00\x07\x00\x01\xF7
Input Volume Channel 8	\xF0\x00\x01*\x0C\x00\x07\x00\x01\xF7
Output Volume Channel 1	\xF0\x00\x01*\x0C\x00\x07\x00\x01@x\xF7
Output Volume Channel 4	\xF0\x00\x01*\x0C\x00\x07\x00\x01C\xF7
Output Volume Channel 8	\xF0\x00\x01*\x0C\x00\x07\x00\x01G\xF7

Appendix C. Set Commands (Ethernet)

* commands below only work when MACAddress is set to '00-00-00-00-00-00' and deviceUsername is set to 'admin'

Audio Mute Input Off Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x01\x00\x00\xFF
Audio Mute Input Off Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x01\x07\x00\xFF
Audio Mute Input On Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x01\x00\x00\xFF
Audio Mute Input On Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x01\x07\x01\xFF
Audio Mute Output Off Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x00\x00\xFF
Audio Mute Output Off Channel 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x03\x00\xFF
Audio Mute Output Off Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x07\x00\xFF
Audio Mute Output On Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x00\x01\xFF
Audio Mute Output On Channel 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x03\x01\xFF
Audio Mute Output On Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x03\x00\x07\x01\xFF
Input Volume 12 Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x01\x00\x17 x\x00\xFF
Input Volume 12 Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x01\x07\x17 x\x00\xFF
Input Volume -50 Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x01\x00\x17\x1E\x0C\x00\xFF
Input Volume -50 Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x01\x07\x17\x1E\x0C\x00\xFF
Mixer Mute Off Input 1 Output 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x00t\x00\x00\x00\x00\x00\x00\x01\xFF
Mixer Mute Off Input 1 Output 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x03t\x00\x00\x00\x00\x00\x00\x00\x01\xFF
Mixer Mute Off Input 1 Output 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x07t\x00\x00\x00\x00\x00\x00\x00\x01\xFF
Mixer Mute Off Input 8 Output 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x00t\x00\x00\x00\x00\x00\x00\x80\xFF
Mixer Mute Off Input 8 Output 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x03t\x00\x00\x00\x00\x00\x00\x00\x80\xFF
Mixer Mute Off Input 8 Output 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x07t\x00\x00\x00\x00\x00\x00\x00\x80\xFF
Mixer Mute On Input 1 Output 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x00t\x00\x00\x00\x01\x00\x00\x00\x00\xFF
Mixer Mute On Input 1 Output 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x03t\x00\x00\x00\x01\x00\x00\x00\x00\xFF
Mixer Mute On Input 1 Output 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x07t\x00\x00\x00\x01\x00\x00\x00\x00\xFF
Mixer Mute On Input 8 Output 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x00t\x00\x00\x00\x80\x00\x00\x00\xFF
Mixer Mute On Input 8 Output 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x03t\x00\x00\x00\x80\x00\x00\x00\xFF
Mixer Mute On Input 8 Output 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x0B\x00\x07t\x00\x00\x00\x80\x00\x00\x00\xFF
Output Volume 12 Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x00\x17 x\x00\xFF

Global Scripter Module Communication Sheet

Revision: 8/20/2019

Output Volume 12 Channel 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x03\x17 x\x00\xFF
Output Volume 12 Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x07\x17 x\x00\xFF
Output Volume -50 Channel 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x00\x17\x1E\x0C\x00\xFF
Output Volume -50 Channel 4	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x03\x17\x1E\x0C\x00\xFF
Output Volume -50 Channel 8	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x81\x06\x00\x07\x17\x1E\x0C\x00\xFF
Preset Recall 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x02\x00\x00\xFF
Preset Recall 31	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x02\x02\x1E\x00\xFF
Preset Save 1	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x01\x02\x00\x00\xFF
Preset Save 31	\xAA\xAA\xAA\xAA\x00\x00\x00\x00\x00\x00admin\x00\x00\x00\x00\x01\x02\x1E\x00\xFF

Appendix D. Update Commands (Ethernet)

* commands below only work when MACAddress is set to '00-00-00-00-00-00

Audio Mute Input Channel 1	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x02\x02\x01\x00\xFF
Audio Mute Input Channel 8	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x02\x02\x01\x07\xFF
Audio Mute Output Channel 1	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x02\x02\x00\x00\xFF
Audio Mute Output Channel 4	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x02\x02\x00\x03\xFF
Audio Mute Output Channel 8	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x02\x02\x00\x07\xFF
Input Volume Channel 1	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x81\x03\x01\x00\x17\xFF
Input Volume Channel 8	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x81\x03\x01\x07\x17\xFF
Output Volume Channel 1	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x81\x03\x00\x00\x17\xFF
Output Volume Channel 4	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x81\x03\x00\x03\x17\xFF
Output Volume Channel 8	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x81\x03\x00\x07\x17\xFF
Power Status	\x8F\x8F\x8F\x8F\x00\x00\x00\x00\x00\x00\x00\x00\x00\x00\x06\x00\xFF