

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Signal Processor
 Manufacturer: Apantac
 Firmware Version: N/A
 Model(s): MiniDE-4

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_0_0_0	1/10/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

FullScreenDisplay	'Input 1' 'Input 4'	'Input 2' 'Saved Preset'	'Input 3'
SideBySideDisplay	None		
['Left Side Input']	'1' – '4'		
['Right Side Input']	'1' – '4'		

Status Available:

ConnectionStatus	'Connected'	'Disconnected'	
DisplayMode	'Full Screen'	'Side By Side'	'Saved Preset'
FullScreenDisplay	'Input 1' 'Input 4'	'Input 2' 'Saved Preset'	'Input 3'
SideBySideDisplayStatus	'Input 1' 'Input 4'	'Input 2'	'Input 3'
['Side']	'Left'	'Right'	

Cable and Adapter Requirements:

Captive Screw to RJ-45 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 57600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

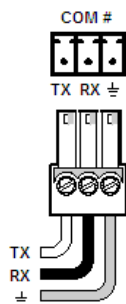

Please contact the manufacturer for Pin Assignment Diagram

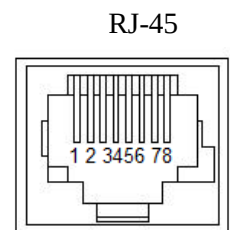

General Notes:

Network communication:

When configuring the Ethernet driver, be sure device settings match that of the GCP configuration.

Port Type:	Ethernet
Default Port:	2009
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Driver Configuration Description:

Please refer to user manual for settings and changes to the network communication parameters.

Notes for the Device:

Appendix A. Set Commands

Full Screen Display Input 1	Full 1\x0D
Full Screen Display Input 2	Full 2\x0D
Full Screen Display Input 3	Full 3\x0D
Full Screen Display Input 4	Full 4\x0D
Full Screen Display Saved Preset	Full 0\x0D
Side By Side Display Left Side Input 1 Right Side Input 1	Sidebyside 11\x0D
Side By Side Display Left Side Input 4 Right Side Input 4	Sidebyside 44\x0D

Appendix B. Query Commands

Full Screen Display	Status\x0D
---------------------	------------