

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Document Camera
Manufacturer: AVerMedia
Firmware Version: N/A
Model(s): AVerVision PL50, AVerVision M70

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_2_0	8/29/2019	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AVerVision PL50')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AVerVision PL50')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
AutoImage	'On'	'Off'	
# AutoImage example InterfaceName.Set('AutoImage', 'On')			
Command	Value		
Brightness	0 to 63 in steps of 1		
# Brightness example InterfaceName.Set('Brightness', 63)			
Command	Value		
Contrast	0 to 255 in steps of 1		
# Contrast example InterfaceName.Set('Contrast', 255)			
Command	Value	Value	Value
DisplayMode	'Camera' 'PC2' ¹	'Playback'	'PC1'
# DisplayMode example InterfaceName.Set('DisplayMode', 'Camera')			
Command	Value	Value	Value
Effect	'Color'	'B/W'	'Negative'
# Effect example InterfaceName.Set('Effect', 'Color')			
Command	Value	Value	Value
Focus	'Near'	'Far'	'Auto'
# Focus example InterfaceName.Set('Focus', 'Near')			
Command	Value	Value	Value
Format	'Embedded'	'SD'	'Flash Drive'
# Format example InterfaceName.Set('Format', 'Embedded')			
Command	Value		
Freeze	'Toggle'		
# Freeze example InterfaceName.Set('Freeze', 'Toggle')			
Command	Value	Value	Value
ImageCapture	'Single' '3M/5M Image'	'Continuous'	'Normal'
# ImageCapture example InterfaceName.Set('ImageCapture', 'Single')			
Command	Value	Value	
Lamp	'On'	'Off'	
# Lamp example InterfaceName.Set('Lamp', 'On')			
Command	Value	Value	
LightBox ¹	'On'	'Off'	
# LightBox example InterfaceName.Set('LightBox', 'On')			

Global Scripter Module Communication Sheet

Command MenuNavigation	Value 'Menu' 'Left'	Value 'Up' 'Right'	Value 'Down' 'Enter'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command Mirror	Value 'On'	Value 'Off'	
# Mirror example InterfaceName.Set('Mirror', 'On')			
Command OutputResolution	Value '1280x720' '1600x1200'	Value '1920x1080' '1024x768'	Value '1280x1024' '1280x800'
# OutputResolution example InterfaceName.Set('OutputResolution', '1280x720')			
Command PIPMode	Value 'On'	Value 'Off'	
# PIPMode example InterfaceName.Set('PIPMode', 'On')			
Command PIPPosition	Value 'Bottom Left' 'Bottom Right'	Value 'Top Left'	Value 'Top Right'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Bottom Left')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command PresetRecall	Value '1' – '3'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1')			
Command PresetSave	Value '1' – '3'		
# PresetSave example InterfaceName.Set('PresetSave', '1')			
Command PreviewMode	Value 'Sharp' 'Microscope' 'Capture'	Value 'Graphic' 'Macro'	Value 'Motion' 'Infinite'
# PreviewMode example InterfaceName.Set('PreviewMode', 'Sharp')			
Command Record	Value 'On'	Value 'Off'	
# Record example InterfaceName.Set('Record', 'On')			
Command Rotate	Value '0' – '270'		
# Rotate example InterfaceName.Set('Rotate', '0')			
Command SpotLightControl	Value 'On'	Value 'Off'	
# SpotLightControl example InterfaceName.Set('SpotLightControl', 'On')			
Command	Value	Value	Value

Global Scriptor Module Communication Sheet

SpotlightShade	'0%'	'50%'	'100%'
# SpotlightShade example InterfaceName.Set('SpotlightShade', '0%')			
Command Storage	Value 'Embedded'	Value 'SD'	Value 'Flash Drive'
# Storage example InterfaceName.Set('Storage', 'Embedded')			
Command Zoom	Value 'Zoom In'	Value 'Zoom Out'	Value 'Reset'
# Zoom example InterfaceName.Set('Zoom', 'Zoom In')			

¹ Available on AVerVision PL50 only

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command Brightness	Value 0 to 63 in steps of 1		
# Brightness example InterfaceName.Update('Brightness') Value = InterfaceName.ReadStatus('Brightness') InterfaceName.SubscribeStatus('Brightness', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Contrast	Value 0 to 255 in steps of 1		
# Contrast example InterfaceName.Update('Contrast') Value = InterfaceName.ReadStatus('Contrast') InterfaceName.SubscribeStatus('Contrast', None, FeedbackHandler)			
Command DisplayMode	Value 'Camera' 'PC2' ¹	Value 'Playback'	Value 'PC1'
# DisplayMode example InterfaceName.Update('DisplayMode') Value = InterfaceName.ReadStatus('DisplayMode') InterfaceName.SubscribeStatus('DisplayMode', None, FeedbackHandler)			
Command Freeze	Value 'Toggle'	Value 'On'	Value 'Off'
# Freeze example InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Lamp	Value 'On'	Value 'Off'	
# Lamp example InterfaceName.Update('Lamp') Value = InterfaceName.ReadStatus('Lamp') InterfaceName.SubscribeStatus('Lamp', None, FeedbackHandler)			
Command LightBox ¹	Value 'On'	Value 'Off'	
# LightBox example			

Global Scripter Module Communication Sheet

<pre>InterfaceName.Update('LightBox') Value = InterfaceName.ReadStatus('LightBox') InterfaceName.SubscribeStatus('LightBox', None, FeedbackHandler)</pre>		
Command	Value	Value
Power	'On'	'Off'
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command	Value	Value
VideoOutputStatus	'VGA'	'TV'
<pre># VideoOutputStatus example InterfaceName.Update('VideoOutputStatus') Value = InterfaceName.ReadStatus('VideoOutputStatus') InterfaceName.SubscribeStatus('VideoOutputStatus', None, FeedbackHandler)</pre>		

¹ Available on AVerVision PL50 only

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

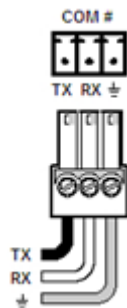

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

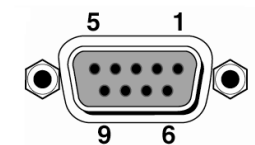

RS232 DB9, Female
Document Camera

Appendix A. Set Commands

Auto Image Off	R\x0B\x036\x00\x00Sm
Auto Image On	R\x0B\x036\x01\x00S1
Brightness 0	R\x0B\x03\x12\x02\x00SK
Brightness 63	R\x0B\x03\x12\x02?St
Contrast 0	R\x0B\x03\x11\x02\x00SH
Contrast 255	R\x0B\x03\x11\x02\xFFS\xB7
Display Mode Camera	R\x0B\x03\x02\x00\x00SY
Display Mode PC1	R\x0B\x03\x04\x00\x00S_
Display Mode PC2	R\x0B\x03\x04\x01\x00S^
Display Mode Playback	R\x0B\x03\x03\x00\x00SX
Effect B/W	R\x0B\x03\x10\x01\x00SJ
Effect Color	R\x0B\x03\x10\x00\x00SK
Effect Negative	R\x0B\x03\x10\x02\x00SI
Focus Auto	R\x0B\x03@\x00\x00S\x1B
Focus Far	R\x0B\x03H\x01\x00S\x12
Focus Near	R\x0B\x03H\x00\x00S\x13
Format Embedded	R\x0B\x03)\x00\x00Sr
Format Flash Drive	R\x0B\x03)\x02\x00Sp
Format SD	R\x0B\x03)\x01\x00Ss
Freeze Toggle	R\x0B\x03D\x00\x00S\x1F
Image Capture 3M/5M Image	R\x0B\x03\x07\x01\x00S]
Image Capture Continuous	R\x0B\x03\x05\x01\x00S_
Image Capture Normal	R\x0B\x03\x07\x00\x00S\
Image Capture Single	R\x0B\x03\x05\x00\x00S^
Lamp Off	R\x0B\x03I\x00\x00S\x12
Lamp On	R\x0B\x03I\x01\x00S\x13
LightBox Off	R\x0B\x03J\x00\x00S\x11
LightBox On	R\x0B\x03J\x01\x00S\x10
Menu Navigation Down	R\x0B\x03B\x00\x00S\x19
Menu Navigation Enter	R\x0B\x03C\x00\x00S\x18
Menu Navigation Left	R\x0B\x03B\x02\x00S\x1B
Menu Navigation Menu	R\x0B\x03A\x00\x00S\x1A
Menu Navigation Right	R\x0B\x03B\x03\x00S\x1A
Menu Navigation Up	R\x0B\x03B\x01\x00S\x18
Mirror Off	R\x0B\x03\x0E\x00\x00SU
Mirror On	R\x0B\x03\x0E\x01\x00ST
Output Resolution 1024x768	R\x0B\x03/\x01\x00Su
Output Resolution 1280x1024	R\x0B\x03/\x04\x00Sp
Output Resolution 1280x720	R\x0B\x03/\x02\x00Sv
Output Resolution 1280x800	R\x0B\x03/\x06\x00Sr
Output Resolution 1600x1200	R\x0B\x03/\x05\x00Sq
Output Resolution 1920x1080	R\x0B\x03/\x03\x00Sw

Global Scriptor Module Communication Sheet

Revision: 8/29/2019

PIP Mode Off	R\x0B\x03\x1F\x00\x00SD
PIP Mode On	R\x0B\x03\x1F\x01\x00SE
PIP Position Bottom Left	R\x0B\x03 \x00\x00S{
PIP Position Bottom Right	R\x0B\x03 \x03\x00Sx
PIP Position Top Left	R\x0B\x03 \x01\x00Sz
PIP Position Top Right	R\x0B\x03 \x02\x00Sy
Power Off	R\x0B\x03\x01\x00\x00SZ
Power On	R\x0B\x03\x01\x01\x00S[
Preset Recall 1	R\x0B\x033\x00\x00Sh
Preset Recall 3	R\x0B\x033\x02\x00Sj
Preset Save 1	R\x0B\x032\x00\x00Si
Preset Save 3	R\x0B\x032\x02\x00Sk
Preview Mode Capture	R\x0B\x03\x0B\x00\x00SP
Preview Mode Graphic	R\x0B\x03\x0A\x01\x00SP
Preview Mode Infinite	R\x0B\x03\x0A\x05\x00ST
Preview Mode Macro	R\x0B\x03\x0A\x04\x00SU
Preview Mode Microscope	R\x0B\x03\x0A\x03\x00SR
Preview Mode Motion	R\x0B\x03\x0A\x02\x00SS
Preview Mode Sharp	R\x0B\x03\x0A\x00\x00SQ
Record Off	R\x0B\x03#\x00\x00Sx
Record On	R\x0B\x03#\x01\x00Sy
Rotate 0	R\x0B\x03\x0F\x00\x00ST
Rotate 180	R\x0B\x03\x0F\x02\x00SV
Rotate 270	R\x0B\x03\x0F\x03\x00SW
Rotate 90	R\x0B\x03\x0F\x01\x00SU
SpotLight Control Off	R\x0B\x03\x19\x00\x00SB
SpotLight Control On	R\x0B\x03\x19\x01\x00SC
Spotlight Shade 0%	R\x0B\x03\x1A\x00\x00SA
Spotlight Shade 100%	R\x0B\x03\x1A\x02\x00SC
Spotlight Shade 50%	R\x0B\x03\x1A\x01\x00S@
Storage Embedded	R\x0B\x03(\x00\x00Ss
Storage Flash Drive	R\x0B\x03(\x02\x00Sq
Storage SD	R\x0B\x03(\x01\x00Sr
Zoom Reset	R\x0B\x03G\x00\x00S\x1C
Zoom Zoom In	R\x0B\x03F\x01\x00S\x1C
Zoom Zoom Out	R\x0B\x03F\x00\x00S\x1D

Appendix B. Update Commands

Brightness	R\x0A\x01\x0ASR
Contrast	R\x0A\x01\x0BSS
Display Mode	R\x0A\x01\x06S^
Freeze	R\x0A\x01\x08SP
Lamp	R\x0A\x01\x05S]
LightBox	R\x0A\x01\x0CST
Power	R\x0A\x01\x04S\
Video Output Status	R\x0A\x01\x07S_