

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: Avonic
Firmware Version: N/A
Model(s): CM73-IP, CM70-IP, CM71-IP

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.10.0000-b007	2.6.0

Version History

Module Version	Date	Notes
1_0_1_0	9/21/2020	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- CameraAddress variable must be set accordingly. Default value is '1'. CameraAddress ranges from 1' to '7'.
Example: `InterfaceName.CameraAddress = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CM73-IP')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CM73-IP')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1259, Model='CM73-IP')</code>

Control Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
Aperture	'Reset'	'Up'	'Down'
# Aperture example InterfaceName.Set('Aperture', 'Reset')			
Command	Value	Value	
AutoFocus	'On'	'Off'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'On')			
Command	Value	Value	Value
AutomaticExposure	'Full Auto' 'Iris Priority'	'Manual' 'Bright'	'Shutter Priority'
# AutomaticExposure example InterfaceName.Set('AutomaticExposure', 'Full Auto')			
Command	Value	Value	
BacklightMode	'On'	'Off'	
# BacklightMode example InterfaceName.Set('BacklightMode', 'On')			
Command	Value	Value	Value
Focus	'Stop'	'Far'	'Near'
Qualifier Key	Qualifier Value		
'Speed'	'0' – '15'		
# Focus example InterfaceName.Set('Focus', 'Stop', {'Speed': '0'})			
Command	Value	Value	Value
Iris	'Reset'	'Up'	'Down'
# Iris example InterfaceName.Set('Iris', 'Reset')			
Command	Value	Value	Value
PanTilt	'Up' 'Right' 'Down Left' 'Home'	'Down' 'Up Left' 'Down Right' 'Reset'	'Left' 'Up Right' 'Stop'
Qualifier Key	Qualifier Value		
'Pan Speed'	'1' – '24'		
Qualifier Key	Qualifier Value		
'Tilt Speed'	'1' – '20'		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Pan Speed': '1', 'Tilt Speed': '1'})			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
Preset	'0' – '127'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value

Global Scriptor Module Communication Sheet

'Action'	'Reset'	'Set'	'Recall'
# Preset example InterfaceName.Set('Preset', '0', {'Action': 'Reset'})			
Command TallyLight	Value 'Red'	Value 'Green'	Value 'Off'
# TallyLight example InterfaceName.Set('TallyLight', 'Red')			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
Qualifier Key 'Speed'	Qualifier Value '0' – '15'		
# Zoom example InterfaceName.Set('Zoom', 'Stop', {'Speed': '0'})			

Status Available (Serial)

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AutoFocus	'On'	'Off'
# AutoFocus example InterfaceName.Update('AutoFocus') Value = InterfaceName.ReadStatus('AutoFocus') InterfaceName.SubscribeStatus('AutoFocus', None, FeedbackHandler)		
Command	Value	Value
AutomaticExposure	'Full Auto'	'Manual'
	'Iris Priority'	'Bright'
# AutomaticExposure example InterfaceName.Update('AutomaticExposure') Value = InterfaceName.ReadStatus('AutomaticExposure') InterfaceName.SubscribeStatus('AutomaticExposure', None, FeedbackHandler)		
Command	Value	Value
BacklightMode	'On'	'Off'
# BacklightMode example InterfaceName.Update('BacklightMode') Value = InterfaceName.ReadStatus('BacklightMode') InterfaceName.SubscribeStatus('BacklightMode', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		

Control Commands (Ethernet)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value	Value
Aperture	'Reset'	'Up'	'Down'
# Aperture example InterfaceName.Set('Aperture', 'Reset')			
Command	Value	Value	
AutoFocus	'On'	'Off'	
# AutoFocus example InterfaceName.Set('AutoFocus', 'On')			
Command	Value	Value	Value
AutomaticExposure	'Full Auto' 'Iris Priority'	'Manual' 'Bright'	'Shutter Priority'
# AutomaticExposure example InterfaceName.Set('AutomaticExposure', 'Full Auto')			
Command	Value	Value	
BacklightMode	'On'	'Off'	
# BacklightMode example InterfaceName.Set('BacklightMode', 'On')			
Command	Value	Value	Value
Focus	'Stop'	'Far'	'Near'
Qualifier Key	Qualifier Value		
'Speed'	'0' – '15'		
# Focus example InterfaceName.Set('Focus', 'Stop', {'Speed': '0'})			
Command	Value	Value	Value
Iris	'Reset'	'Up'	'Down'
# Iris example InterfaceName.Set('Iris', 'Reset')			
Command	Value	Value	Value
PanTilt	'Up' 'Right' 'Down Left' 'Home'	'Down' 'Up Left' 'Down Right' 'Reset'	'Left' 'Up Right' 'Stop'
Qualifier Key	Qualifier Value		
'Pan Speed'	'1' – '24'		
Qualifier Key	Qualifier Value		
'Tilt Speed'	'1' – '20'		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Pan Speed': '1', 'Tilt Speed': '1'})			
Command	Value		
PowerOff	None		
# PowerOff example InterfaceName.Set('PowerOff', None)			
Command	Value		
Preset	'0' – '127'		
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value

Global Scriptor Module Communication Sheet

'Action'	'Reset'	'Set'	'Recall'
# Preset example InterfaceName.Set('Preset', '0', {'Action': 'Reset'})			
Command TallyLight	Value 'Red'	Value 'Green'	Value 'Off'
# TallyLight example InterfaceName.Set('TallyLight', 'Red')			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
Qualifier Key 'Speed'	Qualifier Value '0' – '15'		
# Zoom example InterfaceName.Set('Zoom', 'Stop', {'Speed': '0'})			

Cable and Adapter Requirements

RS232: Captive Screw to DIN-8 VISCA Serial Cable

RS485: Captive Screw to Captive Screw

Notes for the Device

Baud rate 115200 is available only when controlling the device over RS232

Serial communication

Port Type: RS-232, RS485

Parity: None


Baud Rate: 9600

Stop Bits: One


Data Bits: 8

Flow Control: None


Pin Assignments Diagram

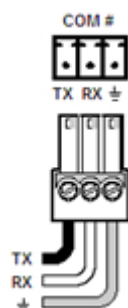

Signal	Main Cable	Pin	Signal
TxD	→	5	RxD
RxD	←	3	TxD
GND	→	4	GND

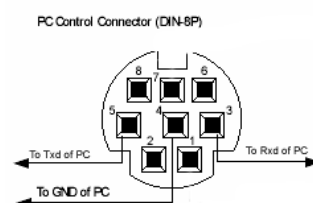

Pin Assignments Diagram RS485

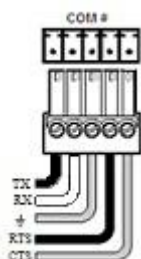

Please contact the manufacturer for the pin assignments diagram and connector type.

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Default Port:	1259
Logon Credentials Supported:	No
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Aperture Down	\x81\x01\x04\x02\x03\xFF
Aperture Reset	\x81\x01\x04\x02\x00\xFF
Aperture Up	\x81\x01\x04\x02\x02\xFF
Auto Focus Off	\x81\x01\x048\x03\xFF
Auto Focus On	\x81\x01\x048\x02\xFF
Automatic Exposure Bright	\x81\x01\x049\x0D\xFF
Automatic Exposure Full Auto	\x81\x01\x049\x00\xFF
Automatic Exposure Iris Priority	\x81\x01\x049\x0B\xFF
Automatic Exposure Manual	\x81\x01\x049\x03\xFF
Automatic Exposure Shutter Priority	\x81\x01\x049\x0A\xFF
Backlight Mode Off	\x81\x01\x043\x03\xFF
Backlight Mode On	\x81\x01\x043\x02\xFF
Focus Far Speed 0	\x81\x01\x04\x08 \xFF
Focus Far Speed 15	\x81\x01\x04\x08/\xFF
Focus Near Speed 0	\x81\x01\x04\x080\xFF
Focus Near Speed 15	\x81\x01\x04\x08?\xFF
Focus Stop Speed 0	\x81\x01\x04\x08\x00\xFF
Focus Stop Speed 15	\x81\x01\x04\x08\x00\xFF
Iris Down	\x81\x01\x04\x0B\x03\xFF
Iris Reset	\x81\x01\x04\x0B\x00\xFF
Iris Up	\x81\x01\x04\x0B\x02\xFF
Pan Tilt Down Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x02\xFF
Pan Tilt Down Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\xFF
Pan Tilt Down Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\xFF
Pan Tilt Down Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\xFF
Pan Tilt Down Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x02\xFF
Pan Tilt Down Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x03\x02\xFF
Pan Tilt Down Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x03\x02\xFF
Pan Tilt Down Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x02\xFF
Pan Tilt Down Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x02\xFF
Pan Tilt Home Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x04\xFF
Pan Tilt Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x03\xFF
Pan Tilt Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\xFF
Pan Tilt Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\xFF
Pan Tilt Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\xFF
Pan Tilt Reset Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x05\xFF

Global Scriptor Module Communication Sheet

Revision: 9/21/2020

Pan Tilt Reset Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x05\xff
Pan Tilt Reset Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x05\xff
Pan Tilt Reset Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x05\xff
Pan Tilt Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x02\x03\xff
Pan Tilt Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\x03\xff
Pan Tilt Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x03\xff
Pan Tilt Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x03\xff
Pan Tilt Stop Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x03\x03\xff
Pan Tilt Stop Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\x03\xff
Pan Tilt Stop Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x03\xff
Pan Tilt Stop Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x03\xff
Pan Tilt Up Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x01\xff
Pan Tilt Up Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x01\x01\xff
Pan Tilt Up Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x01\x01\xff
Pan Tilt Up Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x01\x01\xff
Pan Tilt Up Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x02\x01\xff
Pan Tilt Up Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\x01\xff
Pan Tilt Up Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x01\xff
Pan Tilt Up Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x01\xff
Pan Tilt Up Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x03\x01\xff
Pan Tilt Up Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\x01\xff
Pan Tilt Up Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x01\xff
Pan Tilt Up Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x01\xff
Power Off	\x81\x01\x04\x07\x00\xff
Power On	\x81\x01\x04\x00\x02\xff
Preset 0 Action Recall	\x81\x01\x04?\x02\x00\xff
Preset 0 Action Reset	\x81\x01\x04?\x00\x00\xff
Preset 0 Action Set	\x81\x01\x04?\x01\x00\xff
Preset 127 Action Recall	\x81\x01\x04?\x02\x7F\xff
Preset 127 Action Reset	\x81\x01\x04?\x00\x7F\xff
Preset 127 Action Set	\x81\x01\x04?\x01\x7F\xff
Tally Light Green	\x81\x01~\x01\x0A\x00\x03\x02\xff
Tally Light Off	\x81\x01~\x01\x0A\x00\x03\x03\xff
Tally Light Red	\x81\x01~\x01\x0A\x00\x02\x03\xff
Zoom Stop Speed 0	\x81\x01\x04\x07\x00\xff
Zoom Stop Speed 15	\x81\x01\x04\x07\x00\xff
Zoom Tele Speed 0	\x81\x01\x04\x07 \xff
Zoom Tele Speed 15	\x81\x01\x04\x07/\xff
Zoom Wide Speed 0	\x81\x01\x04\x070\xff
Zoom Wide Speed 15	\x81\x01\x04\x07?\xff

Appendix B. Update Commands (Serial)

Auto Focus	\x81\x09\x048\xff
Automatic Exposure	\x81\x09\x049\xff
Backlight Mode	\x81\x09\x043\xff

Appendix C. Set Commands (Ethernet)

Aperture Down	\x81\x01\x04\x02\x03\xFF
Aperture Reset	\x81\x01\x04\x02\x00\xFF
Aperture Up	\x81\x01\x04\x02\x02\xFF
Auto Focus Off	\x81\x01\x048\x03\xFF
Auto Focus On	\x81\x01\x048\x02\xFF
Automatic Exposure Bright	\x81\x01\x049\x0D\xFF
Automatic Exposure Full Auto	\x81\x01\x049\x00\xFF
Automatic Exposure Iris Priority	\x81\x01\x049\x0B\xFF
Automatic Exposure Manual	\x81\x01\x049\x03\xFF
Automatic Exposure Shutter Priority	\x81\x01\x049\x0A\xFF
Backlight Mode Off	\x81\x01\x043\x03\xFF
Backlight Mode On	\x81\x01\x043\x02\xFF
Focus Far Speed 0	\x81\x01\x04\x08 \xFF
Focus Far Speed 15	\x81\x01\x04\x08/\xFF
Focus Near Speed 0	\x81\x01\x04\x080\xFF
Focus Near Speed 15	\x81\x01\x04\x08?\xFF
Focus Stop Speed 0	\x81\x01\x04\x08\x00\xFF
Focus Stop Speed 15	\x81\x01\x04\x08\x00\xFF
Iris Down	\x81\x01\x04\x0B\x03\xFF
Iris Reset	\x81\x01\x04\x0B\x00\xFF
Iris Up	\x81\x01\x04\x0B\x02\xFF
Pan Tilt Down Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x02\xFF
Pan Tilt Down Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x01\x02\xFF
Pan Tilt Down Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x01\x02\xFF
Pan Tilt Down Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x01\x02\xFF
Pan Tilt Down Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x02\xFF
Pan Tilt Down Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x02\xFF
Pan Tilt Down Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x03\x02\xFF
Pan Tilt Down Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\x02\xFF
Pan Tilt Down Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x02\xFF
Pan Tilt Down Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x02\xFF
Pan Tilt Home Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x04\xFF
Pan Tilt Home Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x04\xFF
Pan Tilt Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x03\xFF
Pan Tilt Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x01\x03\xFF
Pan Tilt Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x01\x03\xFF
Pan Tilt Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x01\x03\xFF
Pan Tilt Reset Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x05\xFF

Global Scriptor Module Communication Sheet

Revision: 9/21/2020

Pan Tilt Reset Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x05\xff
Pan Tilt Reset Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x05\xff
Pan Tilt Reset Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x05\xff
Pan Tilt Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x02\x03\xff
Pan Tilt Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\x03\xff
Pan Tilt Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x03\xff
Pan Tilt Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x03\xff
Pan Tilt Stop Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x03\x03\xff
Pan Tilt Stop Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\x03\xff
Pan Tilt Stop Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x03\xff
Pan Tilt Stop Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x03\xff
Pan Tilt Up Left Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x01\x01\xff
Pan Tilt Up Left Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x01\x01\xff
Pan Tilt Up Left Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x01\x01\xff
Pan Tilt Up Left Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x01\x01\xff
Pan Tilt Up Right Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x02\x01\xff
Pan Tilt Up Right Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x02\x01\xff
Pan Tilt Up Right Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x02\x01\xff
Pan Tilt Up Right Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x02\x01\xff
Pan Tilt Up Tilt Speed 1 Pan Speed 1	\x81\x01\x06\x01\x01\x03\x01\xff
Pan Tilt Up Tilt Speed 1 Pan Speed 24	\x81\x01\x06\x01\x18\x01\x03\x01\xff
Pan Tilt Up Tilt Speed 20 Pan Speed 1	\x81\x01\x06\x01\x01\x14\x03\x01\xff
Pan Tilt Up Tilt Speed 20 Pan Speed 24	\x81\x01\x06\x01\x18\x14\x03\x01\xff
Power Off None	\x81\x01\x04\x07\x00\xff
Preset 0 Action Recall	\x81\x01\x04?\x02\x00\xff
Preset 0 Action Reset	\x81\x01\x04?\x00\x00\xff
Preset 0 Action Set	\x81\x01\x04?\x01\x00\xff
Preset 127 Action Recall	\x81\x01\x04?\x02\x7F\xff
Preset 127 Action Reset	\x81\x01\x04?\x00\x7F\xff
Preset 127 Action Set	\x81\x01\x04?\x01\x7F\xff
Tally Light Green	\x81\x01~\x01\x0A\x00\x03\x02\xff
Tally Light Off	\x81\x01~\x01\x0A\x00\x03\x03\xff
Tally Light Red	\x81\x01~\x01\x0A\x00\x02\x03\xff
Zoom Stop Speed 0	\x81\x01\x04\x07\x00\xff
Zoom Stop Speed 15	\x81\x01\x04\x07\x00\xff
Zoom Tele Speed 0	\x81\x01\x04\x07 \xff
Zoom Tele Speed 15	\x81\x01\x04\x07/\xff
Zoom Wide Speed 0	\x81\x01\x04\x070\xff
Zoom Wide Speed 15	\x81\x01\x04\x07?\xff