

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AVer
Firmware Version: N/A
Model(s): CAM520 PRO

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.12.0000-b001	2.8.0

Version History

Module Version	Date	Notes
1_1_0_0	4/29/2021	Initial Version

Module Notes

- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to '8'.
Example: InterfaceName.DeviceID = '1'
- Status is not supported.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CAM520 PRO')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='CAM520 PRO')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 52381, Model='CAM520 PRO')

Control Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command PanTilt	Value 'Stop' 'Left'	Value 'Up' 'Right'	Value 'Down'
Qualifier Key 'Pan Speed'	Qualifier Value 1 – 24		
Qualifier Key 'Tilt Speed'	Qualifier Value 1 – 24		
# PanTilt example InterfaceName.Set('PanTilt', 'Stop', {'Pan Speed': 24, 'Tilt Speed': 24})			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Preset	Value '1' – '128'		
Qualifier Key 'Action'	Qualifier Value 'Recall'	Qualifier Value 'Save'	
# Preset example InterfaceName.Set('Preset', '1', {'Action': 'Recall'})			
Command TrackingMode	Value 'On'	Value 'Off'	
# TrackingMode example InterfaceName.Set('TrackingMode', 'On')			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
Qualifier Key 'Speed'	Qualifier Value 0 – 7		
# Zoom example InterfaceName.Set('Zoom', 'Stop', {'Speed': 7})			

Control Commands (Ethernet)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command PanTilt	Value 'Stop' 'Left'	Value 'Up' 'Right'	Value 'Down'
Qualifier Key 'Pan Speed'	Qualifier Value 1 – 24		
Qualifier Key 'Tilt Speed'	Qualifier Value 1 – 24		
# PanTilt example InterfaceName.Set('PanTilt', 'Stop', {'Pan Speed': 24, 'Tilt Speed': 24})			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Preset	Value '1' – '128'		
Qualifier Key 'Action'	Qualifier Value 'Recall'	Qualifier Value 'Save'	
# Preset example InterfaceName.Set('Preset', '1', {'Action': 'Recall'})			
Command TrackingMode	Value 'On'	Value 'Off'	
# TrackingMode example InterfaceName.Set('TrackingMode', 'On')			
Command Zoom	Value 'Stop'	Value 'Tele'	Value 'Wide'
Qualifier Key 'Speed'	Qualifier Value 0 – 7		
# Zoom example InterfaceName.Set('Zoom', 'Stop', {'Speed': 7})			

Cable and Adapter Requirements

Captive Screw to 9 pin DIN Serial Cable

Notes for the Device

To ensure the functionality of the module, please set the following:

- Through the camera's web page
 - Setting → RS232 → Visca Protocol → Visca
- Through the camera's OSD
 - Advanced Setting → RS232 → RS232 Protocol → Visca

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

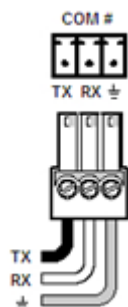

Signal	Main Cable	Pin	Signal
TxD		3	TxD
RxD		6	RxD
GND		5	GND

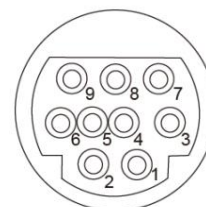

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type: Ethernet (UDP)

Device Listen Port: 52381

Logon Credentials Supported: No

Multi-Connection Capabilities: Undetermined

Listen Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

To ensure the functionality of the module, please access the camera's webpage and set the following:

- Though the camera's web page
 - Setting → RS232 → Visca Protocol → Visca
 - Setting → RS232 → Visca Over IP → On
- Through the camera's OSD
 - Advanced Setting → RS232 → RS232 Protocol → Visca
 - Advanced Setting → RS232 → Visca over IP → On

Appendix A. Set Commands(Serial)

Pan Tilt Down Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\x02\xff
Pan Tilt Down Pan Speed 1 Tilt Speed 24	\x81\x01\x06\x01\x01\x18\x03\x02\xff
Pan Tilt Down Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\x02\xff
Pan Tilt Down Pan Speed 24 Tilt Speed 24	\x81\x01\x06\x01\x18\x18\x03\x02\xff
Pan Tilt Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\xff
Pan Tilt Left Pan Speed 1 Tilt Speed 24	\x81\x01\x06\x01\x01\x18\x01\x03\xff
Pan Tilt Left Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\xff
Pan Tilt Left Pan Speed 24 Tilt Speed 24	\x81\x01\x06\x01\x18\x18\x01\x03\xff
Pan Tilt Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x02\x03\xff
Pan Tilt Right Pan Speed 1 Tilt Speed 24	\x81\x01\x06\x01\x01\x18\x02\x03\xff
Pan Tilt Right Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x02\x03\xff
Pan Tilt Right Pan Speed 24 Tilt Speed 24	\x81\x01\x06\x01\x18\x18\x02\x03\xff
Pan Tilt Stop Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x03\x03\xff
Pan Tilt Stop Pan Speed 1 Tilt Speed 24	\x81\x01\x06\x01\x01\x18\x03\x03\xff
Pan Tilt Stop Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\x03\xff
Pan Tilt Stop Pan Speed 24 Tilt Speed 24	\x81\x01\x06\x01\x18\x18\x03\x03\xff
Pan Tilt Up Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x03\x01\xff
Pan Tilt Up Pan Speed 1 Tilt Speed 24	\x81\x01\x06\x01\x01\x18\x03\x01\xff
Pan Tilt Up Pan Speed 24 Tilt Speed 1	\x81\x01\x06\x01\x18\x01\x03\x01\xff
Pan Tilt Up Pan Speed 24 Tilt Speed 24	\x81\x01\x06\x01\x18\x18\x03\x01\xff
Power Off	\x81\x01\x04\x00\x03\xff
Power On	\x81\x01\x04\x00\x02\xff
Preset 1 Action Recall	\x81\x01\x04?\x02\x00\xff
Preset 1 Action Save	\x81\x01\x04?\x01\x00\xff
Preset 128 Action Recall	\x81\x01\x04?\x02\x7F\xff
Preset 128 Action Save	\x81\x01\x04?\x01\x7F\xff
Tracking Mode Off	\x81\x01\x04}\x03\x00\xff
Tracking Mode On	\x81\x01\x04}\x02\x00\xff
Zoom Stop Speed 0	\x81\x01\x04\x07\x00\xff
Zoom Stop Speed 7	\x81\x01\x04\x07\x00\xff
Zoom Tele Speed 0	\x81\x01\x04\x07 \xff
Zoom Tele Speed 7	\x81\x01\x04\x07' \xff
Zoom Wide Speed 0	\x81\x01\x04\x070\xff
Zoom Wide Speed 7	\x81\x01\x04\x077\xff

Appendix C. Set Commands(Ethernet)

Reset Sequence	\x02\x00\x00\x01\x00\x00\x00\x00\x01
Pan Tilt Down Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\x02\xFF
Pan Tilt Down Pan Speed 1 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x18\x03\x02\xFF
Pan Tilt Down Pan Speed 24 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x01\x03\x02\xFF
Pan Tilt Down Pan Speed 24 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x18\x03\x02\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x18\x01\x03\xFF
Pan Tilt Left Pan Speed 24 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 24 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x18\x01\x03\xFF
Pan Tilt Right Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x02\x03\xFF
Pan Tilt Right Pan Speed 1 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x18\x02\x03\xFF
Pan Tilt Right Pan Speed 24 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x01\x02\x03\xFF
Pan Tilt Right Pan Speed 24 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x18\x02\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x18\x03\x03\xFF
Pan Tilt Stop Pan Speed 24 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x01\x03\x03\xFF
Pan Tilt Stop Pan Speed 24 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x18\x03\x03\xFF
Pan Tilt Up Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\x01\xFF
Pan Tilt Up Pan Speed 1 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x18\x03\x01\xFF
Pan Tilt Up Pan Speed 24 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x01\x03\x01\xFF
Pan Tilt Up Pan Speed 24 Tilt Speed 24	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x18\x18\x03\x01\xFF
Power Off	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x03\xFF
Power On	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x02\xFF
Preset 1 Action Recall	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\x00\xFF

Global Scriptor Module Communication Sheet

Preset 1 Action Save	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\x00\xff
Preset 128 Action Recall	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\x7F\xff
Preset 128 Action Save	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\x7F\xff
Tracking Mode Off	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x03\x00\xff
Tracking Mode On	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x02\x00\xff
Zoom Stop Speed 0	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07\x00\xff
Zoom Stop Speed 7	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07\x00\xff
Zoom Tele Speed 0	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07 \xff
Zoom Tele Speed 7	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07' \xff
Zoom Wide Speed 0	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x070\xff
Zoom Wide Speed 7	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x077\xff