

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Camera
Manufacturer: AVer
Firmware Version: N/A
Model(s): PTC500S, TR320, TR530

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.10.0000-b007	2.6.0

Version History

Module Version	Date	Notes
1_0_1_0	9/3/2020	Initial Version

Module Notes

- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to 8.
Example: InterfaceName.DeviceID = '1'

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='PTC500S')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='PTC500S')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 52381, Model='PTC500S')

Control Commands (Serial)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
Home	None		
# Home example InterfaceName.Set('Home', None)			
Command	Value	Value	Value
PanTilt	'Up'	'Down'	'Left'
	'Right'	'Up Left'	'Up Right'
	'Down Left'	'Down Right'	'Stop'
Qualifier Key	Qualifier Value		
'Pan Speed'	1 to 15 in steps of 1		
Qualifier Key	Qualifier Value		
'Tilt Speed'	1 to 15 in steps of 1		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Pan Speed': 15, 'Tilt Speed': 15})			
Command	Value	Value	
PiPMode	'1' – '8'	'Off'	
# PiPMode example InterfaceName.Set('PiPMode', '1')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value		
PresetRecall	1 to 255 in steps of 1		
# PresetRecall example InterfaceName.Set('PresetRecall', 255)			
Command	Value		
PresetSave	1 to 255 in steps of 1		
# PresetSave example InterfaceName.Set('PresetSave', 255)			
Command	Value		
ProfileRecall	'1' – '5'		
# ProfileRecall example InterfaceName.Set('ProfileRecall', '1')			
Command	Value		
ProfileSave	'1' – '5'		
# ProfileSave example InterfaceName.Set('ProfileSave', '1')			
Command	Value	Value	
Tracking	'On'	'Off'	
# Tracking example InterfaceName.Set('Tracking', 'On')			
Command	Value	Value	Value
Zoom	'Tele'	'Wide'	'Stop'
# Zoom example InterfaceName.Set('Zoom', 'Tele')			

Control Commands (Ethernet)

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
Home	None		
# Home example InterfaceName.Set('Home', None)			
Command	Value	Value	Value
PanTilt	'Up'	'Down'	'Left'
	'Right'	'Up Left'	'Up Right'
	'Down Left'	'Down Right'	'Stop'
Qualifier Key	Qualifier Value		
'Pan Speed'	1 to 15 in steps of 1		
Qualifier Key	Qualifier Value		
'Tilt Speed'	1 to 15 in steps of 1		
# PanTilt example InterfaceName.Set('PanTilt', 'Up', {'Pan Speed': 15, 'Tilt Speed': 15})			
Command	Value	Value	
PiPMode	'1' – '8'	'Off'	
# PiPMode example InterfaceName.Set('PiPMode', '1')			
Command	Value		
PowerOff	None		
# PowerOff example InterfaceName.Set('PowerOff', None)			
Command	Value		
PresetRecall	1 to 255 in steps of 1		
# PresetRecall example InterfaceName.Set('PresetRecall', 255)			
Command	Value		
PresetSave	1 to 255 in steps of 1		
# PresetSave example InterfaceName.Set('PresetSave', 255)			
Command	Value		
ProfileRecall	'1' – '5'		
# ProfileRecall example InterfaceName.Set('ProfileRecall', '1')			
Command	Value		
ProfileSave	'1' – '5'		
# ProfileSave example InterfaceName.Set('ProfileSave', '1')			
Command	Value	Value	
Tracking	'On'	'Off'	
# Tracking example InterfaceName.Set('Tracking', 'On')			
Command	Value	Value	Value
Zoom	'Tele'	'Wide'	'Stop'

```
# Zoom example  
InterfaceName.Set('Zoom', 'Tele')
```

Cable and Adapter Requirements

Captive Screw to Male 6 Pin MINI DIN.

Notes for the Device

- For the driver to properly work, please configure the following settings on the device:
Using the Device and Remote Control:
 - Menu → Advanced Setting → RS232 Protocol → VISCA
- Using the Webpage:
 - Setting → Advanced setting → VISCA

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

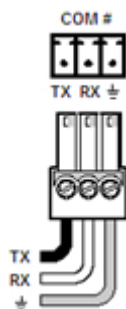

Signal	Main Cable	Pin	Signal
TxD	↗	4	TxD
RxD	↖	6	RxD
GND	—	5	GND

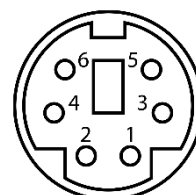

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scriptor ethernet interface.

Port Type:	Ethernet
Device Listen Port:	52381
Device Reply Port:	0
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Listen Port Changeability:	No
Listen Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

- To Power On the device, the Wake on LAN driver may be used. To enable Wake on LAN on the device:
Using the Webpage:
 - Setting → System setting → Wake on LAN → On
- In order for the ethernet driver to work, "VISCA-over-IP" must be enabled:
Using the Device and Remote Control:
 - Menu → Advanced Setting → VISCA-over-IP → On
Using the Webpage:
 - Setting → Advanced setting → Visca Over-IP → On

Appendix A. Set Commands(Serial)

Home None	\x81\x01\x06\x04\xFF
Pan Tilt Down Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\xFF
Pan Tilt Down Left Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x01\x02\xFF
Pan Tilt Down Left Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x01\x02\xFF
Pan Tilt Down Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x02\xFF
Pan Tilt Down Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\x02\xFF
Pan Tilt Down Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x03\x02\xFF
Pan Tilt Down Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\x02\xFF
Pan Tilt Down Right Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x02\x02\xFF
Pan Tilt Down Right Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x02\x02\xFF
Pan Tilt Down Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x02\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x03\xFF
Pan Tilt Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\x03\xFF
Pan Tilt Right Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Up Left Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x01\x01\xFF
Pan Tilt Up Left Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x01\x01\xFF
Pan Tilt Up Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x03\x01\xFF
Pan Tilt Up Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x03\x01\xFF
Pan Tilt Up Right Pan Speed 1 Tilt Speed 1	\x81\x01\x06\x01\x01\x01\x02\x01\xFF
Pan Tilt Up Right Pan Speed 1 Tilt Speed 15	\x81\x01\x06\x01\x01\x0F\x02\x01\xFF
Pan Tilt Up Right Pan Speed 15 Tilt Speed 1	\x81\x01\x06\x01\x0F\x01\x02\x01\xFF
Pan Tilt Up Right Pan Speed 15 Tilt Speed 15	\x81\x01\x06\x01\x0F\x0F\x02\x01\xFF
PiP Mode 1	\x81\x01\x04\x7F\x01\x01\xFF
PiP Mode 8	\x81\x01\x04\x7F\x01\x08\xFF
PiP Mode Off	\x81\x01\x04\x7F\x02\x00\xFF
Power Off	\x81\x01\x04\x00\x03\xFF\x81\x01\x04\x00\x03\xFF
Power On	\x81\x01\x04\x00\x02\xFF\x81\x01\x04\x00\x02\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Preset Recall 1	\x81\x01\x04?\x02\x01\xff
Preset Recall 255	\x81\x01\x04?\x02\xff\xff
Preset Save 1	\x81\x01\x04?\x01\x01\xff
Preset Save 255	\x81\x01\x04?\x01\xff\xff
Profile Recall 1	\x81\x01\x04@\x01\x01\xff
Profile Recall 5	\x81\x01\x04@\x01\x05\xff
Profile Save 1	\x81\x01\x04@\x02\x01\xff
Profile Save 5	\x81\x01\x04@\x02\x05\xff
Tracking Off	\x81\x01\x04}\x03\x00\xff
Tracking On	\x81\x01\x04}\x02\x00\xff
Zoom Stop	\x81\x01\x04\x07\x00\xff
Zoom Tele	\x81\x01\x04\x07 \xff
Zoom Wide	\x81\x01\x04\x070\xff

Appendix C. Set Commands(Ethernet)

Home None	\x01\x00\x00\x05\x00\x00\x00\x01\x81\x01\x06\x04\xff
Pan Tilt Down Left Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x02\xff
Pan Tilt Down Left Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0f\x01\x02\xff
Pan Tilt Down Left Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0f\x01\x01\x02\xff
Pan Tilt Down Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0f\x0f\x01\x02\xff
Pan Tilt Down Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\x02\xff

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Pan Tilt Down Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x03\x02\xFF
Pan Tilt Down Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x03\x02\xFF
Pan Tilt Down Right Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x02\x02\xFF
Pan Tilt Down Right Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x02\x02\xFF
Pan Tilt Down Right Pan Speed 15 Tilt	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x02\x02\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Speed 1	
Pan Tilt Down Right Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x02\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x01\x03\xFF
Pan Tilt Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x01\x03\xFF
Pan Tilt Right Pan Speed 1 Tilt	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x02\x03\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Speed 1	
Pan Tilt Right Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x02\x03\xFF
Pan Tilt Right Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Stop Pan Speed 15 Tilt	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Speed 1	
Pan Tilt Stop Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x00\x00\x03\x03\xFF
Pan Tilt Up Left Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x01\xFF
Pan Tilt Up Left Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x01\xFF
Pan Tilt Up Left Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x01\x01\xFF
Pan Tilt Up Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x03\x01\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Pan Tilt Up Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x03\x01\xFF
Pan Tilt Up Pan Speed 15 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x03\x01\xFF
Pan Tilt Up Right Pan Speed 1 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x01\x02\x01\xFF
Pan Tilt Up Right Pan Speed 1 Tilt Speed 15	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x01\x0F\x02\x01\xFF
Pan Tilt Up Right Pan Speed 15 Tilt Speed 1	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x01\x02\x01\xFF
Pan Tilt Up Right Pan	\x01\x00\x00\x09\x00\x00\x00\x01\x81\x01\x06\x01\x0F\x0F\x02\x01\xFF

Global Scriptor Module Communication Sheet

Revision: 9/3/2020

Speed 15 Tilt Speed 15	
PiP Mode 1	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x01\xFF
PiP Mode 8	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x01\x08\xFF
PiP Mode Off	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04\x7F\x02\x00\xFF
Power Off None	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x03\xFF\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x00\x03\xFF
Preset Recall 1	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\x01\xFF
Preset Recall 255	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x02\xFF\xFF
Preset Save 1	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\x01\xFF
Preset Save 255	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04?\x01\xFF\xFF
Profile Recall 1	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04@\x01\x01\xFF
Profile Recall 5	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04@\x01\x05\xFF
Profile Save 1	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04@\x02\x01\xFF
Profile Save 5	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04@\x02\x05\xFF
Tracki ng Off	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x03\x00\xFF
Tracki ng On	\x01\x00\x00\x07\x00\x00\x00\x01\x81\x01\x04}\x02\x00\xFF
Zoom Stop	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07\x00\xFF
Zoom Tele	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x07 \xFF
Zoom Wide	\x01\x00\x00\x06\x00\x00\x00\x01\x81\x01\x04\x070\xFF

