

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Conference
 Manufacturer: Avaya
 Firmware Version: N/A
 Model(s): Scopia XT5000, Scopia XT4200, Scopia XT1200, Scopia XTE240, Scopia XT7100, Scopia XT4300

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0001-b006	1.4.2

Version History

Module Version	Date	Notes
1_6_0_0	3/9/2018	Fixed Hook command by splitting Dial into Dial (IP) & Dial (ISDN) and Hang up into Hang up (IP) & Hang up (ISDN). Modified command names according to new standards.
1_5_0_0	1/22/2018	Fixed PresentationStatus and PhoneBookUpdate. Added On except Trusted value to Do Not Disturb.
1_3_0_0	10/3/2016	Fixed Call Status. Removed status from Presentation and added Presentation Status. Renamed Phonebook Button to Phonebook Search Result. Removed Phonebook Search Set.
1_2_3_2	4/25/2016	Added Do Not Disturb command.

Global Scripter Module Communication Sheet

Revision: 3/9/2018

1_2_2_1	4/15/2016	Added Initialization command.
1_2_2_0	3/24/2016	Initial Version.

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- NumberOfPhonebookSearch variable must be set accordingly. Default value is '5'.
Example: `InterfaceName.NumberOfPhonebookSearch = '10'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Scopia XT5000')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Scopia XT5000')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 55003, Model='Scopia XT5000')</code>

Phonebook commands:

- PhonebookUpdate
This is used to trigger the Phonebook search.
- PhonebookSearchResult
This is where the search results will be saved to when phonebook is searched. The number of results are set by NumberOfPhonebookSearch, this is initialized to 5 results by default. Simply call SetText with the returned result to display the search result on a button or label object.
- PhonebookNavigation
This command is used for navigating through the search results. The navigation commands scroll through the results when there are more results than NumberofPhonebookSearch variable.
- PhonebookSearchSet
When the number selected with this command it will dial the number.

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command CameraPresetFar	Value '0' – '15'		
Qualifier Key 'Type'	Qualifier Value 'Save'	Qualifier Value 'Recall'	
# CameraPresetFar example InterfaceName.Set('CameraPresetFar', '0', {'Type': 'Save'})			
Command CameraPresetNear	Value '0' – '15'		
Qualifier Key 'Type'	Qualifier Value 'Save'	Qualifier Value 'Recall'	
# CameraPresetNear example InterfaceName.Set('CameraPresetNear', '0', {'Type': 'Save'})			
Command DoNotDisturb	Value 'On'	Value 'Off'	
# DoNotDisturb example InterfaceName.Set('DoNotDisturb', 'On')			
Command DTMF	Value '0' '3' '6' '9'	Value '1' '4' '7' '#'	Value '2' '5' '8' '*'
# DTMF example InterfaceName.Set('DTMF', '0')			
Command Hook	Value 'Dial (IP)' 'Hang up (ISDN)'	Value 'Dial (ISDN)' 'Answer'	Value 'Hang up (IP)' 'Reject'
Qualifier Key 'Number'	Qualifier Value 'String'		
# Hook example InterfaceName.Set('Hook', 'Dial', {'Number': '123456789'}) InterfaceName.Set('Hook', 'Hang up') InterfaceName.Set('Hook', 'Answer') InterfaceName.Set('Hook', 'Reject')			
Command	Value	Value	Value

IRRemoteEmulation	'0'	'1'	'2'
	'3'	'4'	'5'
	'6'	'7'	'8'
	'9'	'*'	'#'
	'Power'	'?'	'Call'
	'Disconnect'	'C'	'Phonebook'
	'Layout'	'PIP'	'Up'
	'Down'	'Left'	'Right'
	'Enter'	'Memo'	'Select'
	'Near'	'Far'	'Zoom Out'
	'Zoom In'	'Video Privacy'	'Volume Down'
	'Volume Up'	'Mute'	'Presentation'
	'Back'	'Input'	'Red'
	'Yellow'	'Blue'	'Green'
# IRRemoteEmulation example InterfaceName.Set('IRRemoteEmulation', '0')			
Command Layout	Value 'Upper Left' 'Bottom Right' 'Off'	Value 'Upper Right' 'POP'	Value 'Bottom Left' 'PAP'
# Layout example InterfaceName.Set('Layout', 'Upper Left')			
Command PanTiltFar	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
Qualifier Key 'CameraSelect'	Qualifier Value 'HD1' 'HD3'	Qualifier Value 'HD2' 'HD4'	Qualifier Value 'DVI' 'HD5'
# PanTiltFar example InterfaceName.Set('PanTiltFar', 'Up', {'CameraSelect': 'HD1'})			
Command PanTiltNear	Value 'Up' 'Right'	Value 'Down' 'Stop'	Value 'Left'
Qualifier Key 'CameraSelect'	Qualifier Value 'HD1' 'HD4'	Qualifier Value 'HD2' 'DVI'	Qualifier Value 'HD3' 'HD5'
# PanTiltNear example InterfaceName.Set('PanTiltNear', 'Up', {'CameraSelect': 'HD1'})			

Command PhonebookNavigation	Value 'Up' 'Page Down'	Value 'Down'	Value 'Page Up'
# PhonebookNavigation example InterfaceName.Set('PhonebookNavigation', 'Up')			
Command PhonebookSearch	Value 'String'		
# PhonebookSearch example InterfaceName.Set('PhonebookSearch', 'String')			
Command PhonebookSearchSet	Value 1 – 10		
# PhonebookSearchSet example InterfaceName.Set('PhonebookSearchSet', 10)			
Command PhonebookUpdate	Value None		
# PhonebookUpdate example InterfaceName.Set('PhonebookUpdate', None)			
Command PIPMODE	Value 'On'	Value 'Off'	
# PIPMode example InterfaceName.Set('PIPMODE', 'On')			
Command Presentation ¹	Value 'Start'	Value 'Stop'	
# Presentation example InterfaceName.Set('Presentation', 'Start')			
Command ReceiveVolume	Value -44 to 20 in steps of 1		
# ReceiveVolume example InterfaceName.Set('ReceiveVolume', 20)			
Command Recording	Value 'Start' 'Stop'	Value 'Pause'	Value 'Resume'
Qualifier Key 'Location'	Qualifier Value 'USB'	Qualifier Value 'Server'	
# Recording example InterfaceName.Set('Recording', 'Start', {'Location': 'USB'})			
Command SelfView	Value None		
# SelfView example InterfaceName.Set('SelfView', None)			
Command TransmitMute	Value 'On'	Value 'Off'	

# TransmitMute example InterfaceName.Set('TransmitMute', 'On')			
Command VideoPrivacy	Value 'On'	Value 'Off'	
# VideoPrivacy example InterfaceName.Set('VideoPrivacy', 'On')			
Command ZoomFar	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'CameraSelect'	Qualifier Value 'HD1' 'HD3'	Qualifier Value 'HD2' 'HD4'	Qualifier Value 'DVI' 'HD5'
# ZoomFar example InterfaceName.Set('ZoomFar', 'In', {'CameraSelect': 'HD1'})			
Command ZoomNear	Value 'In'	Value 'Out'	Value 'Stop'
Qualifier Key 'CameraSelect'	Qualifier Value 'HD1' 'HD3'	Qualifier Value 'HD2' 'HD4'	Qualifier Value 'DVI' 'HD5'
# ZoomNear example InterfaceName.Set('ZoomNear', 'In', {'CameraSelect': 'HD1'})			

¹ Only applicable for DVI Input.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command CallStatus	Value 'Connected' 'Dialing'	Value 'Not In Call'	Value 'Ringing'
# CallStatus examples InterfaceName.Update('CallStatus') Value = InterfaceName.ReadStatus('CallStatus') InterfaceName.SubscribeStatus('CallStatus', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DoNotDisturb	Value 'On'	Value 'Off'	Value 'On except Trusted'
# DoNotDisturb examples InterfaceName.Update('DoNotDisturb') Value = InterfaceName.ReadStatus('DoNotDisturb') InterfaceName.SubscribeStatus('DoNotDisturb', None, FeedbackHandler)			
Command Layout	Value 'Upper Left' 'Bottom Right' 'Off'	Value 'Upper Right' 'POP'	Value 'Bottom Left' 'PAP'
# Layout examples InterfaceName.Update('Layout') Value = InterfaceName.ReadStatus('Layout') InterfaceName.SubscribeStatus('Layout', None, FeedbackHandler)			
Command PhonebookSearchResult	Value 'String'		

Qualifier Key 'Button'	Qualifier Value 1 to 10 in steps of 1		
# PhonebookSearchResult examples InterfaceName.Update('PhonebookSearchResult', {'Button': 10}) Value = InterfaceName.ReadStatus('PhonebookSearchResult', {'Button': 10}) InterfaceName.SubscribeStatus('PhonebookSearchResult', None, FeedbackHandler)			
Command PIPMODE	Value 'On'	Value 'Off'	
# PIPMode examples InterfaceName.Update('PIPMODE') Value = InterfaceName.ReadStatus('PIPMODE') InterfaceName.SubscribeStatus('PIPMODE', None, FeedbackHandler)			
Command PresentationStatus	Value 'Activated'	Value 'Not Activated'	
# PresentationStatus examples InterfaceName.Update('PresentationStatus') Value = InterfaceName.ReadStatus('PresentationStatus') InterfaceName.SubscribeStatus('PresentationStatus', None, FeedbackHandler)			
Command ReceiveVolume	Value -44 to 20 in steps of 1		
# ReceiveVolume examples InterfaceName.Update('ReceiveVolume') Value = InterfaceName.ReadStatus('ReceiveVolume') InterfaceName.SubscribeStatus('ReceiveVolume', None, FeedbackHandler)			
Command RecordingStatus	Value 'Recording on USB' 'Pause'	Value 'Recording on Server' 'Stop'	Value 'Recording on Server Initiated'
# RecordingStatus examples InterfaceName.Update('RecordingStatus') Value = InterfaceName.ReadStatus('RecordingStatus') InterfaceName.SubscribeStatus('RecordingStatus', None, FeedbackHandler)			
Command TransmitMute	Value 'On'	Value 'Off'	
# TransmitMute examples InterfaceName.Update('TransmitMute') Value = InterfaceName.ReadStatus('TransmitMute') InterfaceName.SubscribeStatus('TransmitMute', None, FeedbackHandler)			
Command VideoPrivacy	Value 'On'	Value 'Off'	
# VideoPrivacy examples InterfaceName.Update('VideoPrivacy') Value = InterfaceName.ReadStatus('VideoPrivacy') InterfaceName.SubscribeStatus('VideoPrivacy', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to DB9 RS-232 Serial Cable. The device requires a special RS232 to USB converter for control. Please consult the user manual or contact the manufacturer for further details.

Notes for the Device

Remote access via RS232 has to be enabled in the “AT Commands” menu of the device.
Baud rate must be configured in the “AT Commands” menu of the device.

Serial communication

Port Type: RS-232

Baud Rate: 115200

Data Bits: 8


Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

See the Cable and Adapter Requirements section above.

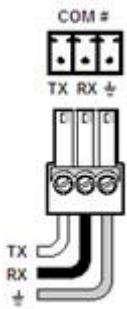

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	55003
Logon Credentials Supported:	No
Multi-Connection	Yes
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Remote access via IP must be enabled in the “AT Commands” menu of the device.

Serial Appendix A. Set Commands

Camera Preset Far 0 Type Recall	AT[&SF01150\x0D
Camera Preset Far 15 Type Recall	AT[&SF0115F\x0D
Camera Preset Far 0 Type Save	AT[&SF01160\x0D
Camera Preset Far 15 Type Save	AT[&SF0116F\x0D
Camera Preset Near 0 Type Recall	AT[&SF01050\x0D
Camera Preset Near 15 Type Recall	AT[&SF0105F\x0D
Camera Preset Near 0 Type Save	AT[&SF01060\x0D
Camera Preset Near 15 Type Save	AT[&SF0106F\x0D
DTMF 0	AT[&CF0\x0D
DTMF 9	AT[&CF9\x0D
DTMF #	AT[&CF#\x0D
DTMF *	AT[&CF*\x0D
Do Not Disturb Off	AT[&SR0\x0D
Do Not Disturb On	AT[&SR1\x0D
Hook Dial (IP)	AT[&CD180String\x0D
Hook Dial (ISDN)	AT[&CD180String\x0D
IR Remote Emulation 0	AT[&SW000\x0D
IR Remote Emulation 9	AT[&SW009\x0D
IR Remote Emulation #	AT[&SW011\x0D
IR Remote Emulation *	AT[&SW010\x0D
IR Remote Emulation ?	AT[&SW014\x0D
IR Remote Emulation Back	AT[&SW044\x0D
IR Remote Emulation Blue	AT[&SW048\x0D
IR Remote Emulation C	AT[&SW017\x0D
IR Remote Emulation Call	AT[&SW015\x0D
IR Remote Emulation Disconnect	AT[&SW016\x0D
IR Remote Emulation Down	AT[&SW029\x0D
IR Remote Emulation Enter	AT[&SW031\x0D
IR Remote Emulation Far	AT[&SW036\x0D
IR Remote Emulation Green	AT[&SW049\x0D
IR Remote Emulation Input	AT[&SW045\x0D
IR Remote Emulation Layout	AT[&SW025\x0D
IR Remote Emulation Left	AT[&SW030\x0D
IR Remote Emulation Memo	AT[&SW032\x0D
IR Remote Emulation Mute	AT[&SW042\x0D
IR Remote Emulation Near	AT[&SW035\x0D

Global Scripter Module Communication Sheet

IR Remote Emulation PIP	AT[&SW026\x0D
IR Remote Emulation Phonebook	AT[&SW018\x0D
IR Remote Emulation Power	AT[&SW013\x0D
IR Remote Emulation Presentation	AT[&SW043\x0D
IR Remote Emulation Red	AT[&SW046\x0D
IR Remote Emulation Right	AT[&SW028\x0D
IR Remote Emulation Select	AT[&SW033\x0D
IR Remote Emulation Up	AT[&SW027\x0D
IR Remote Emulation Video Privacy	AT[&SW039\x0D
IR Remote Emulation Volume Down	AT[&SW040\x0D
IR Remote Emulation Volume Up	AT[&SW041\x0D
IR Remote Emulation Yellow	AT[&SW047\x0D
IR Remote Emulation Zoom In	AT[&SW038\x0D
IR Remote Emulation Zoom Out	AT[&SW037\x0D
Layout Bottom Left	AT[&SD04\x0D
Layout Bottom Right	AT[&SD03\x0D
Layout Off	AT[&SD00\x0D
Layout PAP	AT[&SD05\x0D
Layout POP	AT[&SD06\x0D
Layout Upper Left	AT[&SD01\x0D
Layout Upper Right	AT[&SD02\x0D
PIP Mode Off	AT[&ST0\x0D
PIP Mode On	AT[&ST1\x0D
Pan Tilt Far Down CameraSelect DVI	AT[&SF0818D\x0D
Pan Tilt Far Left CameraSelect DVI	AT[&SF0817L\x0D
Pan Tilt Far Right CameraSelect DVI	AT[&SF0817R\x0D
Pan Tilt Far Stop CameraSelect DVI	AT[&SF081!\x0D
Pan Tilt Far Up CameraSelect DVI	AT[&SF0818U\x0D
Pan Tilt Far Down CameraSelect HD1	AT[&SF0118D\x0D
Pan Tilt Far Left CameraSelect HD1	AT[&SF0117L\x0D
Pan Tilt Far Right CameraSelect HD1	AT[&SF0117R\x0D
Pan Tilt Far Stop CameraSelect HD1	AT[&SF011!\x0D
Pan Tilt Far Up CameraSelect HD1	AT[&SF0118U\x0D
Pan Tilt Far Down CameraSelect HD2	AT[&SF0318D\x0D
Pan Tilt Far Left CameraSelect HD2	AT[&SF0317L\x0D
Pan Tilt Far Right CameraSelect HD2	AT[&SF0317R\x0D
Pan Tilt Far Stop CameraSelect HD2	AT[&SF031!\x0D
Pan Tilt Far Up CameraSelect HD2	AT[&SF0318U\x0D
Pan Tilt Far Down CameraSelect HD3	AT[&SF0418D\x0D

Global Scripter Module Communication Sheet

Pan Tilt Far Left CameraSelect HD3	AT[&SF0417L\x0D
Pan Tilt Far Right CameraSelect HD3	AT[&SF0417R\x0D
Pan Tilt Far Stop CameraSelect HD3	AT[&SF041!\x0D
Pan Tilt Far Up CameraSelect HD3	AT[&SF0418U\x0D
Pan Tilt Far Down CameraSelect HD4	AT[&SF0518D\x0D
Pan Tilt Far Left CameraSelect HD4	AT[&SF0517L\x0D
Pan Tilt Far Right CameraSelect HD4	AT[&SF0517R\x0D
Pan Tilt Far Stop CameraSelect HD4	AT[&SF051!\x0D
Pan Tilt Far Up CameraSelect HD4	AT[&SF0518U\x0D
Pan Tilt Far Down CameraSelect HD5	AT[&SF0618D\x0D
Pan Tilt Far Left CameraSelect HD5	AT[&SF0617L\x0D
Pan Tilt Far Right CameraSelect HD5	AT[&SF0617R\x0D
Pan Tilt Far Stop CameraSelect HD5	AT[&SF061!\x0D
Pan Tilt Far Up CameraSelect HD5	AT[&SF0618U\x0D
Pan Tilt Near Down CameraSelect DVI	AT[&SF0808D\x0D
Pan Tilt Near Left CameraSelect DVI	AT[&SF0807L\x0D
Pan Tilt Near Right CameraSelect DVI	AT[&SF0807R\x0D
Pan Tilt Near Stop CameraSelect DVI	AT[&SF080!\x0D
Pan Tilt Near Up CameraSelect DVI	AT[&SF0808U\x0D
Pan Tilt Near Down CameraSelect HD1	AT[&SF0108D\x0D
Pan Tilt Near Left CameraSelect HD1	AT[&SF0107L\x0D
Pan Tilt Near Right CameraSelect HD1	AT[&SF0107R\x0D
Pan Tilt Near Stop CameraSelect HD1	AT[&SF010!\x0D
Pan Tilt Near Up CameraSelect HD1	AT[&SF0108U\x0D
Pan Tilt Near Down CameraSelect HD2	AT[&SF0308D\x0D
Pan Tilt Near Left CameraSelect HD2	AT[&SF0307L\x0D
Pan Tilt Near Right CameraSelect HD2	AT[&SF0307R\x0D
Pan Tilt Near Stop CameraSelect HD2	AT[&SF030!\x0D
Pan Tilt Near Up CameraSelect HD2	AT[&SF0308U\x0D
Pan Tilt Near Down CameraSelect HD3	AT[&SF0408D\x0D
Pan Tilt Near Left CameraSelect HD3	AT[&SF0407L\x0D
Pan Tilt Near Right CameraSelect HD3	AT[&SF0407R\x0D
Pan Tilt Near Stop CameraSelect HD3	AT[&SF040!\x0D
Pan Tilt Near Up CameraSelect HD3	AT[&SF0408U\x0D
Pan Tilt Near Down CameraSelect HD4	AT[&SF0508D\x0D
Pan Tilt Near Left CameraSelect HD4	AT[&SF0507L\x0D
Pan Tilt Near Right CameraSelect HD4	AT[&SF0507R\x0D
Pan Tilt Near Stop CameraSelect HD4	AT[&SF050!\x0D
Pan Tilt Near Up CameraSelect HD4	AT[&SF0508U\x0D

Global Scripter Module Communication Sheet

Pan Tilt Near Down CameraSelect HD5	AT[&SF0608D\x0D
Pan Tilt Near Left CameraSelect HD5	AT[&SF0607L\x0D
Pan Tilt Near Right CameraSelect HD5	AT[&SF0607R\x0D
Pan Tilt Near Stop CameraSelect HD5	AT[&SF060!\x0D
Pan Tilt Near Up CameraSelect HD5	AT[&SF0608U\x0D
Presentation Start	AT[&SQ0108\x0D
Presentation Stop	AT[&SQ0008\x0D
Receive Volume -44	AT[&SV-44\x0D
Receive Volume 20	AT[&SV020\x0D
Recording Pause Location Server	AT[&SNA22\x0D
Recording Resume Location Server	AT[&SNA32\x0D
Recording Start Location Server	AT[&SNA12\x0D
Recording Stop Location Server	AT[&SNA42\x0D
Recording Pause Location USB	AT[&SNA21\x0D
Recording Resume Location USB	AT[&SNA31\x0D
Recording Start Location USB	AT[&SNA11\x0D
Recording Stop Location USB	AT[&SNA41\x0D
Self View None	AT[&SS1\x0D
Transmit Mute Off	AT[&SM0\x0D
Transmit Mute On	AT[&SM1\x0D
Video Privacy Off	AT[&SP0\x0D
Video Privacy On	AT[&SP1\x0D
Zoom Far In CameraSelect DVI	AT[&SF0819+\x0D
Zoom Far Out CameraSelect DVI	AT[&SF0819-\x0D
Zoom Far Stop CameraSelect DVI	AT[&SF081!\x0D
Zoom Far In CameraSelect HD1	AT[&SF0119+\x0D
Zoom Far Out CameraSelect HD1	AT[&SF0119-\x0D
Zoom Far Stop CameraSelect HD1	AT[&SF011!\x0D
Zoom Far In CameraSelect HD2	AT[&SF0319+\x0D
Zoom Far Out CameraSelect HD2	AT[&SF0319-\x0D
Zoom Far Stop CameraSelect HD2	AT[&SF031!\x0D
Zoom Far In CameraSelect HD3	AT[&SF0419+\x0D
Zoom Far Out CameraSelect HD3	AT[&SF0419-\x0D
Zoom Far Stop CameraSelect HD3	AT[&SF041!\x0D
Zoom Far In CameraSelect HD4	AT[&SF0519+\x0D
Zoom Far Out CameraSelect HD4	AT[&SF0519-\x0D
Zoom Far Stop CameraSelect HD4	AT[&SF051!\x0D
Zoom Far In CameraSelect HD5	AT[&SF0619+\x0D
Zoom Far Out CameraSelect HD5	AT[&SF0619-\x0D

Global Scripter Module Communication Sheet

Zoom Far Stop CameraSelect HD5	AT[&SF061!\x0D
Zoom Near In CameraSelect DVI	AT[&SF0809+\x0D
Zoom Near Out CameraSelect DVI	AT[&SF0809-\x0D
Zoom Near Stop CameraSelect DVI	AT[&SF080!\x0D
Zoom Near In CameraSelect HD1	AT[&SF0109+\x0D
Zoom Near Out CameraSelect HD1	AT[&SF0109-\x0D
Zoom Near Stop CameraSelect HD1	AT[&SF010!\x0D
Zoom Near In CameraSelect HD2	AT[&SF0309+\x0D
Zoom Near Out CameraSelect HD2	AT[&SF0309-\x0D
Zoom Near Stop CameraSelect HD2	AT[&SF030!\x0D
Zoom Near In CameraSelect HD3	AT[&SF0409+\x0D
Zoom Near Out CameraSelect HD3	AT[&SF0409-\x0D
Zoom Near Stop CameraSelect HD3	AT[&SF040!\x0D
Zoom Near In CameraSelect HD4	AT[&SF0509+\x0D
Zoom Near Out CameraSelect HD4	AT[&SF0509-\x0D
Zoom Near Stop CameraSelect HD4	AT[&SF050!\x0D
Zoom Near In CameraSelect HD5	AT[&SF0609+\x0D
Zoom Near Out CameraSelect HD5	AT[&SF0609-\x0D
Zoom Near Stop CameraSelect HD5	AT[&SF060!\x0D

Serial Appendix B. Update Commands

Call Status	AT[?CB0\x0D
Do Not Disturb	AT[?SR\x0D
Layout	AT[?SD\x0D
PIP Mode	AT[?ST\x0D
Presentation Status	AT[?SQ0\x0D
Receive Volume	AT[?SV\x0D
Recording Status	AT[?SNA\x0D
Video Privacy	AT[?SP\x0D

Appendix A. Set Commands

Camera Preset Far 0 Type Recall	\xAA\xAA\x00\x00\x00\x0CAT[&SF01150\x0D
Camera Preset Far 15 Type Recall	\xAA\xAA\x00\x00\x00\x0CAT[&SF0115F\x0D
Camera Preset Far 0 Type Save	\xAA\xAA\x00\x00\x00\x0CAT[&SF01160\x0D
Camera Preset Far 15 Type Save	\xAA\xAA\x00\x00\x00\x0CAT[&SF0116F\x0D
Camera Preset Near 0 Type Recall	\xAA\xAA\x00\x00\x00\x0CAT[&SF01050\x0D
Camera Preset Near 15 Type Recall	\xAA\xAA\x00\x00\x00\x0CAT[&SF0105F\x0D
Camera Preset Near 0 Type Save	\xAA\xAA\x00\x00\x00\x0CAT[&SF01060\x0D
Camera Preset Near 15 Type Save	\xAA\xAA\x00\x00\x00\x0CAT[&SF0106F\x0D
DTMF 0	\xAA\xAA\x00\x00\x00\x08AT[&CF0\x0D
DTMF 9	\xAA\xAA\x00\x00\x00\x08AT[&CF9\x0D
DTMF #	\xAA\xAA\x00\x00\x00\x08AT[&CF#\x0D
DTMF *	\xAA\xAA\x00\x00\x00\x08AT[&CF*\x0D
Do Not Disturb Off	\xAA\xAA\x00\x00\x00\x08AT[&SR0\x0D
Do Not Disturb On	\xAA\xAA\x00\x00\x00\x08AT[&SR1\x0D
Hook Answer	\xAA\xAA\x00\x00\x00\x13AT[&CG10000000010\x0D
Hook Dial (IP)	\xAA\xAA\x00\x00\x00\x10AT[&CD180String\x0D
Hook Dial (ISDN)	\xAA\xAA\x00\x00\x00\x10AT[&CD180String\x0D
Hook Hang up (IP)	\xAA\xAA\x00\x00\x00\x09AT[&CH11\x0D
Hook Hang up (ISDN)	\xAA\xAA\x00\x00\x00\x09AT[&CH10\x0D
Hook Reject	\xAA\xAA\x00\x00\x00\x13AT[&CG00000000010\x0D
IR Remote Emulation 0	\xAA\xAA\x00\x00\x00\x0AAT[&SW000\x0D
IR Remote Emulation 9	\xAA\xAA\x00\x00\x00\x0AAT[&SW009\x0D
IR Remote Emulation #	\xAA\xAA\x00\x00\x00\x0AAT[&SW011\x0D
IR Remote Emulation *	\xAA\xAA\x00\x00\x00\x0AAT[&SW010\x0D
IR Remote Emulation ?	\xAA\xAA\x00\x00\x00\x0AAT[&SW014\x0D
IR Remote Emulation Back	\xAA\xAA\x00\x00\x00\x0AAT[&SW044\x0D
IR Remote Emulation Blue	\xAA\xAA\x00\x00\x00\x0AAT[&SW048\x0D
IR Remote Emulation C	\xAA\xAA\x00\x00\x00\x0AAT[&SW017\x0D
IR Remote Emulation Call	\xAA\xAA\x00\x00\x00\x0AAT[&SW015\x0D
IR Remote Emulation Disconnect	\xAA\xAA\x00\x00\x00\x0AAT[&SW016\x0D
IR Remote Emulation Down	\xAA\xAA\x00\x00\x00\x0AAT[&SW029\x0D
IR Remote Emulation Enter	\xAA\xAA\x00\x00\x00\x0AAT[&SW031\x0D
IR Remote Emulation Far	\xAA\xAA\x00\x00\x00\x0AAT[&SW036\x0D
IR Remote Emulation Green	\xAA\xAA\x00\x00\x00\x0AAT[&SW049\x0D
IR Remote Emulation Input	\xAA\xAA\x00\x00\x00\x0AAT[&SW045\x0D

Global Scripter Module Communication Sheet

Revision: 3/9/2018

IR Remote Emulation Layout	\xAA\xAA\x00\x00\x00\x0AAT[&SW025\x0D
IR Remote Emulation Left	\xAA\xAA\x00\x00\x00\x0AAT[&SW030\x0D
IR Remote Emulation Memo	\xAA\xAA\x00\x00\x00\x0AAT[&SW032\x0D
IR Remote Emulation Mute	\xAA\xAA\x00\x00\x00\x0AAT[&SW042\x0D
IR Remote Emulation Near	\xAA\xAA\x00\x00\x00\x0AAT[&SW035\x0D
IR Remote Emulation PIP	\xAA\xAA\x00\x00\x00\x0AAT[&SW026\x0D
IR Remote Emulation Phonebook	\xAA\xAA\x00\x00\x00\x0AAT[&SW018\x0D
IR Remote Emulation Power	\xAA\xAA\x00\x00\x00\x0AAT[&SW013\x0D
IR Remote Emulation Presentation	\xAA\xAA\x00\x00\x00\x0AAT[&SW043\x0D
IR Remote Emulation Red	\xAA\xAA\x00\x00\x00\x0AAT[&SW046\x0D
IR Remote Emulation Right	\xAA\xAA\x00\x00\x00\x0AAT[&SW028\x0D
IR Remote Emulation Select	\xAA\xAA\x00\x00\x00\x0AAT[&SW033\x0D
IR Remote Emulation Up	\xAA\xAA\x00\x00\x00\x0AAT[&SW027\x0D
IR Remote Emulation Video Privacy	\xAA\xAA\x00\x00\x00\x0AAT[&SW039\x0D
IR Remote Emulation Volume Down	\xAA\xAA\x00\x00\x00\x0AAT[&SW040\x0D
IR Remote Emulation Volume Up	\xAA\xAA\x00\x00\x00\x0AAT[&SW041\x0D
IR Remote Emulation Yellow	\xAA\xAA\x00\x00\x00\x0AAT[&SW047\x0D
IR Remote Emulation Zoom In	\xAA\xAA\x00\x00\x00\x0AAT[&SW038\x0D
IR Remote Emulation Zoom Out	\xAA\xAA\x00\x00\x00\x0AAT[&SW037\x0D
Layout Bottom Left	\xAA\xAA\x00\x00\x00\x09AT[&SD04\x0D
Layout Bottom Right	\xAA\xAA\x00\x00\x00\x09AT[&SD03\x0D
Layout Off	\xAA\xAA\x00\x00\x00\x09AT[&SD00\x0D
Layout PAP	\xAA\xAA\x00\x00\x00\x09AT[&SD05\x0D
Layout POP	\xAA\xAA\x00\x00\x00\x09AT[&SD06\x0D
Layout Upper Left	\xAA\xAA\x00\x00\x00\x09AT[&SD01\x0D
Layout Upper Right	\xAA\xAA\x00\x00\x00\x09AT[&SD02\x0D
PIP Mode Off	\xAA\xAA\x00\x00\x00\x08AT[&ST0\x0D
PIP Mode On	\xAA\xAA\x00\x00\x00\x08AT[&ST1\x0D
Pan Tilt Far Down CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0818D\x0D
Pan Tilt Far Left CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0817L\x0D
Pan Tilt Far Right CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0817R\x0D
Pan Tilt Far Stop CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0BAT[&SF081!\x0D
Pan Tilt Far Up CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0818U\x0D
Pan Tilt Far Down CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0118D\x0D
Pan Tilt Far Left CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0117L\x0D
Pan Tilt Far Right CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0117R\x0D
Pan Tilt Far Stop CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0BAT[&SF011!\x0D
Pan Tilt Far Up CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0118U\x0D
Pan Tilt Far Down CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0318D\x0D

Global Scripter Module Communication Sheet

Pan Tilt Far Left CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0317L\x0D
Pan Tilt Far Right CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0317R\x0D
Pan Tilt Far Stop CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0BAT[&SF031!\x0D
Pan Tilt Far Up CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0318U\x0D
Pan Tilt Far Down CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0418D\x0D
Pan Tilt Far Left CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0417L\x0D
Pan Tilt Far Right CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0417R\x0D
Pan Tilt Far Stop CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0BAT[&SF041!\x0D
Pan Tilt Far Up CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0418U\x0D
Pan Tilt Far Down CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0518D\x0D
Pan Tilt Far Left CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0517L\x0D
Pan Tilt Far Right CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0517R\x0D
Pan Tilt Far Stop CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0BAT[&SF051!\x0D
Pan Tilt Far Up CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0518U\x0D
Pan Tilt Far Down CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0618D\x0D
Pan Tilt Far Left CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0617L\x0D
Pan Tilt Far Right CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0617R\x0D
Pan Tilt Far Stop CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0BAT[&SF061!\x0D
Pan Tilt Far Up CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0618U\x0D
Pan Tilt Near Down CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0808D\x0D
Pan Tilt Near Left CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0807L\x0D
Pan Tilt Near Right CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0807R\x0D
Pan Tilt Near Stop CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0BAT[&SF080!\x0D
Pan Tilt Near Up CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0808U\x0D
Pan Tilt Near Down CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0108D\x0D
Pan Tilt Near Left CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0107L\x0D
Pan Tilt Near Right CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0107R\x0D
Pan Tilt Near Stop CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0BAT[&SF010!\x0D
Pan Tilt Near Up CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0108U\x0D
Pan Tilt Near Down CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0308D\x0D
Pan Tilt Near Left CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0307L\x0D
Pan Tilt Near Right CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0307R\x0D
Pan Tilt Near Stop CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0BAT[&SF030!\x0D
Pan Tilt Near Up CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0308U\x0D
Pan Tilt Near Down CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0408D\x0D
Pan Tilt Near Left CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0407L\x0D
Pan Tilt Near Right CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0407R\x0D
Pan Tilt Near Stop CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0BAT[&SF040!\x0D
Pan Tilt Near Up CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0408U\x0D

Global Scripter Module Communication Sheet

Pan Tilt Near Down CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0508D\x0D
Pan Tilt Near Left CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0507L\x0D
Pan Tilt Near Right CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0507R\x0D
Pan Tilt Near Stop CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0BAT[&SF050!\x0D
Pan Tilt Near Up CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0508U\x0D
Pan Tilt Near Down CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0608D\x0D
Pan Tilt Near Left CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0607L\x0D
Pan Tilt Near Right CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0607R\x0D
Pan Tilt Near Stop CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0BAT[&SF060!\x0D
Pan Tilt Near Up CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0608U\x0D
Presentation Start	\xAA\xAA\x00\x00\x00\x0BAT[&SQ0108\x0D
Presentation Stop	\xAA\xAA\x00\x00\x00\x0BAT[&SQ0008\x0D
Receive Volume -44	\xAA\xAA\x00\x00\x00\x0AAT[&SV-44\x0D
Receive Volume 20	\xAA\xAA\x00\x00\x00\x0AAT[&SV020\x0D
Recording Pause Location Server	\xAA\xAA\x00\x00\x00\x0AAT[&SNA22\x0D
Recording Resume Location Server	\xAA\xAA\x00\x00\x00\x0AAT[&SNA32\x0D
Recording Start Location Server	\xAA\xAA\x00\x00\x00\x0AAT[&SNA12\x0D
Recording Stop Location Server	\xAA\xAA\x00\x00\x00\x0AAT[&SNA42\x0D
Recording Pause Location USB	\xAA\xAA\x00\x00\x00\x0AAT[&SNA21\x0D
Recording Resume Location USB	\xAA\xAA\x00\x00\x00\x0AAT[&SNA31\x0D
Recording Start Location USB	\xAA\xAA\x00\x00\x00\x0AAT[&SNA11\x0D
Recording Stop Location USB	\xAA\xAA\x00\x00\x00\x0AAT[&SNA41\x0D
Self View None	\xAA\xAA\x00\x00\x00\x08AT[&SS1\x0D
Transmit Mute Off	\xAA\xAA\x00\x00\x00\x08AT[&SM0\x0D
Transmit Mute On	\xAA\xAA\x00\x00\x00\x08AT[&SM1\x0D
Video Privacy Off	\xAA\xAA\x00\x00\x00\x08AT[&SP0\x0D
Video Privacy On	\xAA\xAA\x00\x00\x00\x08AT[&SP1\x0D
Zoom Far In CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0819+\x0D
Zoom Far Out CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0819-\x0D
Zoom Far Stop CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0BAT[&SF081!\x0D
Zoom Far In CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0119+\x0D
Zoom Far Out CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0119-\x0D
Zoom Far Stop CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0BAT[&SF011!\x0D
Zoom Far In CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0319+\x0D
Zoom Far Out CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0319-\x0D
Zoom Far Stop CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0BAT[&SF031!\x0D
Zoom Far In CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0419+\x0D
Zoom Far Out CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0419-\x0D
Zoom Far Stop CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0BAT[&SF041!\x0D

Global Scripter Module Communication Sheet

Zoom Far In CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0519+\x0D
Zoom Far Out CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0519-\x0D
Zoom Far Stop CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0BAT[&SF051!\x0D
Zoom Far In CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0619+\x0D
Zoom Far Out CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0619-\x0D
Zoom Far Stop CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0BAT[&SF061!\x0D
Zoom Near In CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0809+\x0D
Zoom Near Out CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0CAT[&SF0809-\x0D
Zoom Near Stop CameraSelect DVI	\xAA\xAA\x00\x00\x00\x0BAT[&SF080!\x0D
Zoom Near In CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0109+\x0D
Zoom Near Out CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0CAT[&SF0109-\x0D
Zoom Near Stop CameraSelect HD1	\xAA\xAA\x00\x00\x00\x0BAT[&SF010!\x0D
Zoom Near In CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0309+\x0D
Zoom Near Out CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0CAT[&SF0309-\x0D
Zoom Near Stop CameraSelect HD2	\xAA\xAA\x00\x00\x00\x0BAT[&SF030!\x0D
Zoom Near In CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0409+\x0D
Zoom Near Out CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0CAT[&SF0409-\x0D
Zoom Near Stop CameraSelect HD3	\xAA\xAA\x00\x00\x00\x0BAT[&SF040!\x0D
Zoom Near In CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0509+\x0D
Zoom Near Out CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0CAT[&SF0509-\x0D
Zoom Near Stop CameraSelect HD4	\xAA\xAA\x00\x00\x00\x0BAT[&SF050!\x0D
Zoom Near In CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0609+\x0D
Zoom Near Out CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0CAT[&SF0609-\x0D
Zoom Near Stop CameraSelect HD5	\xAA\xAA\x00\x00\x00\x0BAT[&SF060!\x0D

Ethernet Appendix B. Update Commands

Call Status	\xAA\xAA\x00\x00\x00\x08AT[?CB0\x0D
Do Not Disturb	\xAA\xAA\x00\x00\x00\x07AT[?SR\x0D
Layout	\xAA\xAA\x00\x00\x00\x07AT[?SD\x0D
PIP Mode	\xAA\xAA\x00\x00\x00\x07AT[?ST\x0D
Presentation Status	\xAA\xAA\x00\x00\x00\x08AT[?SQ0\x0D
Receive Volume	\xAA\xAA\x00\x00\x00\x07AT[?SV\x0D
Recording Status	\xAA\xAA\x00\x00\x00\x08AT[?SNA\x0D
Video Privacy	\xAA\xAA\x00\x00\x00\x07AT[?SP\x0D