

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Audio Processor
Manufacturer: Barco
Firmware Version: N/A
Model(s): IOSONO Core

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0002-b005	1.2.3

Version History

Module Version	Date	Notes
1_0_0_0	4/18/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

LoadNamedPresetCommand	'String'
LoadPreset	'1' – '10'
Shutdown	None
TrackPosition	0 to 100 in steps of 1
Transport	'Play' 'Pause' 'Stop'
Volume	-60 to 0 in steps of 1

Status Available:

ConnectionStatus	'Connected' 'Disconnected'
TrackPosition	0 to 100 in steps of 1
Volume	-60 to 0 in steps of 1

Cable and Adapter Requirements:

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

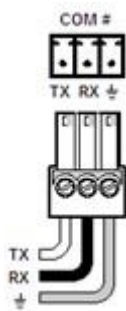

Please contact device manufacturer for pinout.

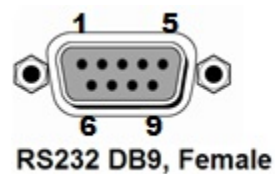

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Load Named Preset Command PresetName	controlunit/set_preset PresetName\x0D
Load Preset 1	controlunit/set_preset_nr 1\x0D
Load Preset 10	controlunit/set_preset_nr 10\x0D
Shutdown None	system/shutdown\x0D
Track Position 0	player/set_position 0\x0D
Track Position 100	player/set_position 100\x0D
Transport Pause	player/pause\x0D
Transport Play	player/play\x0D
Transport Stop	player/stop\x0D
Volume 0	controlunit/set_volume 0\x0D
Volume -60	controlunit/set_volume -60\x0D

Appendix B. Query Commands

Track Position	player/get_position\x0D
Volume	controlunit/get_volume\x0D