

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Barco
Firmware Version: N/A
Model(s): CRWQ-72B, CRPN-52B, CRPN-62B, CRWQ-62B

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_0_0_0	1/12/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

AspectRatio	'1:1' 'Fill All' 'Anamorphic Lens'	'16:9' 'Fill Aspect Ratio'	'4:3' 'Fill 2.35:1'
AutoImage	None		
Freeze	'On'	'Off'	
Input	'VGA 1' 'HDMI 1' 'DVI 2'	'VGA 2' 'HDMI 2' 'DVI Dual'	'Component' 'DVI 1' 'HDMI Dual'
LampMode	'Eco'	'Normal'	
LampSelect	'Lamp 1' 'Auto'	'Lamp 2'	'Dual Lamp'
MenuNavigation	'Menu' 'Left'	'Up' 'Right'	'Down' 'Ok'
OnScreenDisplay	'On'	'Show Only Warnings'	'Off'
Power	'On'	'Off'	
VideoMute	'On'	'Off'	

Status Available:

AspectRatio	'1:1' 'Fill All' 'Anamorphic Lens'	'16:9' 'Fill Aspect Ratio'	'4:3' 'Fill 2.35:1'
ConnectionStatus	'Connected'	'Disconnected'	
Freeze	'On'	'Off'	
Input	'VGA 1' 'HDMI 1' 'DVI 2'	'VGA 2' 'HDMI 2' 'DVI Dual'	'Component' 'DVI 1' 'HDMI Dual'
LampMode	'Eco'	'Normal'	
LampSelect	'Lamp 1' 'Auto'	'Lamp 2'	'Dual Lamp'
LampStatus	'Defect' 'Off'	'Warming Up' 'Cooling Down'	'On' 'Not Present'
['Lamp']	'1' – '2'		
LampUsage	Hours		
['Lamp']	'1' – '2'		
OnScreenDisplay	'On'	'Show Only Warnings'	'Off'
OperationHours	Hours		
Power	'On' 'Warming Up'	'Off'	'Cooling Down'
VideoMute	'On'	'Off'	

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

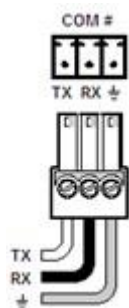

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

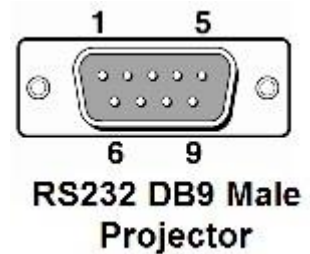

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	1025
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Aspect Ratio 1:1	:SABS0\x0D
Aspect Ratio 16:9	:SABS3\x0D
Aspect Ratio 4:3	:SABS4\x0D
Aspect Ratio Anamorphic Lens	:SABS11\x0D
Aspect Ratio Fill 2.35:1	:SABS5\x0D
Aspect Ratio Fill All	:SABS1\x0D
Aspect Ratio Fill Aspect Ratio	:SABS2\x0D
Auto Image None	:AUTO\x0D
Freeze Off	:FRZE0\x0D
Freeze On	:FRZE1\x0D
Input Component	:IABS7\x0D
Input DVI 1	:IABS2\x0D
Input DVI 2	:IABS10\x0D
Input DVI Dual	:IABS12\x0D
Input HDMI 1	:IABS8\x0D
Input HDMI 2	:IABS11\x0D
Input HDMI Dual	:IABS13\x0D
Input VGA 1	:IABS0\x0D
Input VGA 2	:IABS1\x0D
Lamp Mode Eco	:ECOM1\x0D
Lamp Mode Normal	:ECOM0\x0D
Lamp Select Auto	:LMOD3\x0D
Lamp Select Dual Lamp	:LMOD2\x0D
Lamp Select Lamp 1	:LMOD0\x0D
Lamp Select Lamp 2	:LMOD1\x0D
Menu Navigation Down	:NVDW\x0D
Menu Navigation Left	:NVLF\x0D
Menu Navigation Menu	:MENU\x0D
Menu Navigation Ok	:NVOK\x0D
Menu Navigation Right	:NVRH\x0D
Menu Navigation Up	:NVUP\x0D
On Screen Display Off	:OSDC0\x0D
On Screen Display On	:OSDC2\x0D
On Screen Display Show Only Warnings	:OSDC1\x0D
Power Off	:POWR0\x0D
Power On	:POWR1\x0D

Appendix B. Query Commands

Aspect Ratio	:SABS?\x0D
Freeze	:FRZE?\x0D
Input	:IABS?\x0D
Lamp Mode	:ECOM?\x0D

Lamp Select	:LMOD?\x0D
Lamp Status Lamp 1	:LST1?\x0D
Lamp Status Lamp 2	:LST2?\x0D
Lamp Usage Lamp 1	:LTR1?\x0D
Lamp Usage Lamp 2	:LTR2?\x0D
On Screen Display	:OSDC?\x0D
Operation Hours	:UTOT?\x0D
Power	:POST?\x0D