
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Barco
Firmware Version: N/A
Model(s): F30 1080

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0002-b002	1.4.2

Version History

Module Version	Date	Notes
1_0_0_0	1/16/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Device requires a command pacing of 0.5 seconds based on recommended timings from the Manufacturer's protocol.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='F30 1080')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='F30 1080')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 1025, Model='F30 1080')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '1:1' 'Fill 16:9' 'Letterbox St 16:9'	Value 'Fill All' 'Fill 4:3' 'Anamorphic Lens'	Value 'Fill Aspect Ratio' 'Letterbox 16:9'
# AspectRatio example InterfaceName.Set('AspectRatio', '1:1')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command EcoMode	Value 'On'	Value 'Off'	
# EcoMode example InterfaceName.Set('EcoMode', 'On')			
Command Focus	Value 'In'	Value 'Out'	
Qualifier Key 'Speed'	Qualifier Value 'Slow'	Qualifier Value 'Medium'	Qualifier Value 'Fast'
# Focus example InterfaceName.Set('Focus', 'In', {'Speed': 'Slow'})			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'VGA' 'Composite' 'HDMI'	Value 'DVI' 'Component'	Value 'S-Video' 'RGBs'
# Input example InterfaceName.Set('Input', 'VGA')			
Command Iris	Value 'Open'	Value 'Close'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value

Global Scripter Module Communication Sheet

'Speed'	'Slow'	'Medium'	'Fast'
# Iris example InterfaceName.Set('Iris', 'Open', {'Speed': 'Slow'})			
Command LampMode	Value 'Lamp 1' 'Auto'	Value 'Lamp 2'	Value 'Dual'
# LampMode example InterfaceName.Set('LampMode', 'Lamp 1')			
Command LensShift	Value 'Up' 'Right'	Value 'Down'	Value 'Left'
Qualifier Key 'Speed'	Qualifier Value 'Slow'	Qualifier Value 'Medium'	Qualifier Value 'Fast'
# LensShift example InterfaceName.Set('LensShift', 'Up', {'Speed': 'Slow'})			
Command MenuNavigation	Value 'Menu' 'Left'	Value 'Up' 'Right'	Value 'Down' 'OK'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Menu')			
Command OnScreenDisplay	Value 'Off'	Value 'Warnings Only'	Value 'On'
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', 'Off')			
Command PictureMute	Value 'On'	Value 'Off'	
# PictureMute example InterfaceName.Set('PictureMute', 'On')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Shutter	Value 'On'	Value 'Off'	
# Shutter example InterfaceName.Set('Shutter', 'On')			
Command Zoom	Value 'In'	Value 'Out'	
Qualifier Key 'Speed'	Qualifier Value 'Slow'	Qualifier Value 'Medium'	Qualifier Value 'Fast'
# Zoom example			

```
InterfaceName.Set('Zoom', 'In', {'Speed': 'Slow'})
```

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value '1:1' 'Fill 16:9' 'Letterbox St 16:9'	Value 'Fill All' 'Fill 4:3' 'Anamorphic Lens'	Value 'Fill Aspect Ratio' 'Letterbox 16:9'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command EcoMode	Value 'On'	Value 'Off'	
# EcoMode examples InterfaceName.Update('EcoMode') Value = InterfaceName.ReadStatus('EcoMode') InterfaceName.SubscribeStatus('EcoMode', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'VGA' 'Composite'	Value 'DVI' 'Component'	Value 'S-Video' 'RGBs'

Global Scripter Module Communication Sheet

	'HDMI'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampMode	Value 'Lamp 1' 'Auto'	Value 'Lamp 2'	Value 'Dual'
# LampMode examples InterfaceName.Update('LampMode') Value = InterfaceName.ReadStatus('LampMode') InterfaceName.SubscribeStatus('LampMode', None, FeedbackHandler)			
Command LampStatus	Value 'Broken' 'Off'	Value 'Warming Up' 'Cooling Down'	Value 'On' 'Not Present'
Qualifier Key 'Lamp'	Qualifier Value '1' – '2'		
# LampStatus examples InterfaceName.Update('LampStatus', {'Lamp': '1'}) Value = InterfaceName.ReadStatus('LampStatus', {'Lamp': '1'}) InterfaceName.SubscribeStatus('LampStatus', None, FeedbackHandler)			
Command LampUsage	Value –		
Qualifier Key 'Lamp'	Qualifier Value '1' – '2'		
# LampUsage examples InterfaceName.Update('LampUsage', {'Lamp': '1'}) Value = InterfaceName.ReadStatus('LampUsage', {'Lamp': '1'}) InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)			
Command OnScreenDisplay	Value 'Off'	Value 'Warnings Only'	Value 'On'
# OnScreenDisplay examples InterfaceName.Update('OnScreenDisplay') Value = InterfaceName.ReadStatus('OnScreenDisplay') InterfaceName.SubscribeStatus('OnScreenDisplay', None, FeedbackHandler)			
Command OperationHours	Value –		
# OperationHours examples InterfaceName.Update('OperationHours') Value = InterfaceName.ReadStatus('OperationHours') InterfaceName.SubscribeStatus('OperationHours', None, FeedbackHandler)			
Command PictureMute	Value 'On'	Value 'Off'	
# PictureMute examples			

Global Scripter Module
Communication Sheet

InterfaceName.Update('PictureMute') Value = InterfaceName.ReadStatus('PictureMute') InterfaceName.SubscribeStatus('PictureMute', None, FeedbackHandler)			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

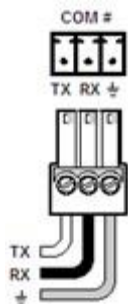

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	1025
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 1:1	:SABS0\x0D
Aspect Ratio Anamorphic Lens	:SABS11\x0D
Aspect Ratio Fill 16:9	:SABS3\x0D
Aspect Ratio Fill 4:3	:SABS4\x0D
Aspect Ratio Fill All	:SABS1\x0D
Aspect Ratio Fill Aspect Ratio	:SABS2\x0D
Aspect Ratio Letterbox 16:9	:SABS9\x0D
Aspect Ratio Letterbox St 16:9	:SABS10\x0D
Auto Image None	:AUTO\x0D
Eco Mode Off	:ECOM0\x0D
Eco Mode On	:ECOM1\x0D
Focus In Speed Fast	:FOIN3\x0D
Focus Out Speed Fast	:FOUT3\x0D
Focus In Speed Medium	:FOIN2\x0D
Focus Out Speed Medium	:FOUT2\x0D
Focus In Speed Slow	:FOIN1\x0D
Focus Out Speed Slow	:FOUT1\x0D
Freeze Off	:FRZE0\x0D
Freeze On	:FRZE1\x0D
Input Component	:IABS6\x0D
Input Composite	:IABS5\x0D
Input DVI	:IABS2\x0D
Input HDMI	:IABS8\x0D
Input RGBs	:IABS7\x0D
Input S-Video	:IABS4\x0D
Input VGA	:IABS0\x0D
Iris Close Speed Fast	:IRCL3\x0D
Iris Open Speed Fast	:IROP3\x0D
Iris Close Speed Medium	:IRCL2\x0D
Iris Open Speed Medium	:IROP2\x0D
Iris Close Speed Slow	:IRCL1\x0D
Iris Open Speed Slow	:IROP1\x0D
Lamp Mode Auto	:LMOD3\x0D
Lamp Mode Dual	:LMOD2\x0D
Lamp Mode Lamp 1	:LMOD0\x0D
Lamp Mode Lamp 2	:LMOD1\x0D

Global Scripter Module Communication Sheet

Lens Shift Down Speed Fast	:LSDW3\x0D
Lens Shift Left Speed Fast	:LSLF3\x0D
Lens Shift Right Speed Fast	:LSRH3\x0D
Lens Shift Up Speed Fast	:LSUP3\x0D
Lens Shift Down Speed Medium	:LSDW2\x0D
Lens Shift Left Speed Medium	:LSLF2\x0D
Lens Shift Right Speed Medium	:LSRH2\x0D
Lens Shift Up Speed Medium	:LSUP2\x0D
Lens Shift Down Speed Slow	:LSDW1\x0D
Lens Shift Left Speed Slow	:LSLF1\x0D
Lens Shift Right Speed Slow	:LSRH1\x0D
Lens Shift Up Speed Slow	:LSUP1\x0D
Menu Navigation Down	:NVDW\x0D
Menu Navigation Left	:NVLF\x0D
Menu Navigation Menu	:MENU\x0D
Menu Navigation OK	:NVOK\x0D
Menu Navigation Right	:NVRH\x0D
Menu Navigation Up	:NVUP\x0D
On Screen Display Off	:OSDC0\x0D
On Screen Display On	:OSDC2\x0D
On Screen Display Warnings Only	:OSDC1\x0D
Picture Mute Off	:PMUT0\x0D
Picture Mute On	:PMUT1\x0D
Power Off	:POWR0\x0D
Power On	:POWR1\x0D
Shutter Off	:SHUT0\x0D
Shutter On	:SHUT1\x0D
Zoom In Speed Fast	:ZOIN3\x0D
Zoom Out Speed Fast	:ZOUT3\x0D
Zoom In Speed Medium	:ZOIN2\x0D
Zoom Out Speed Medium	:ZOUT2\x0D
Zoom In Speed Slow	:ZOIN1\x0D
Zoom Out Speed Slow	:ZOUT1\x0D

Appendix B. Update Commands

Aspect Ratio	:SABS?\x0D
Eco Mode	:ECOM?\x0D
Freeze	:FRZE?\x0D
Input	:IABS?\x0D
Lamp Mode	:LMOD?\x0D
Lamp Status Lamp 1	:LST1?\x0D
Lamp Status Lamp 2	:LST2?\x0D
Lamp Usage Lamp 1	:LTR1?\x0D
Lamp Usage Lamp 2	:LTR2?\x0D
On Screen Display	:OSDC?\x0D
Operation Hours	:UTOT?\x0D
Power	:POST?\x0D