

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
 Manufacturer: Barco
 Firmware Version: N/A
 Model(s): PGWU-62L, PGWX-62L

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.03.0000-b006	2.01.0001-b001	1.1.1

Version History

Module Version	Date	Notes
1_1_0_0	12/12/2016	Initial Version

Module Notes

- Device ID variable must be set accordingly. Default value is '1'. Device ID ranges from '0' to '255'.
 Example: InterfaceName.DeviceID = '1'

Control Commands, States, and Qualifiers:

AspectRatio	'4:3' 'Auto'	'16:10'	'Native'
AutoImage	None		
AVMute	'On'	'Off'	
Brightness	0 to 255 in steps of 1		
Contrast	0 to 255 in steps of 1		
Focus	'In'	'Out'	
Freeze	'On'	'Off'	
Input	'HDMI' 'BNC'	'VGA' 'CVBS'	'DVI'
LaserPowerMode	'Economic'	'Normal'	'Power'
LensShift	'Up' 'Right'	'Down' 'Center'	'Left'
MenuNavigation	'Up' 'Right'	'Down' 'Menu'	'Left' 'Enter'
PictureMode	'Presentation' 'Bright'	'Video'	'Dicom'
PIPInput	'HDMI' 'BNC'	'VGA' 'CVBS'	'DVI'
PIPMode	'On'	'Off'	
PIPPosition	'Top Left' 'Bottom Right'	'Top Right'	'Bottom Left'
PIPSize	'Small'	'Medium'	'Large'
Power	'On'	'Off'	
Saturation	0 to 255 in steps of 1		
Sharpness	-7 to 7 in steps of 1		
Tint	0 to 255 in steps of 1		
Zoom	'In'	'Out'	

Status Available: N/A

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable.


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 115200
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

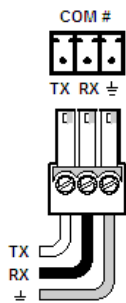

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

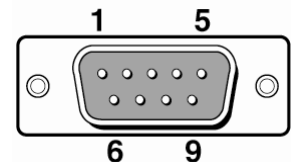

**RS232 DB9 Male
Projector**

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	43680
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Aspect Ratio 16:10	\xFE\x01 \x0B\xC0\x01\xED\xFF
Aspect Ratio 4:3	\xFE\x01 \x0B\xC0\x00\xEC\xFF
Aspect Ratio Auto	\xFE\x01 \x0B\xC0\x03\xEF\xFF
Aspect Ratio Native	\xFE\x01 \x0B\xC0\x02\xEE\xFF
Auto Image None	\xFE\x01 \x167\xFF
AV Mute Off	\xFE\x01 \xA9\x00\xCA\xFF
AV Mute On	\xFE\x01 \xA9\x01\xCB\xFF
Brightness 0	\xFE\x01 \x02\x00#\xFF
Contrast 0	\xFE\x01 \x01\x00"\xFF
Focus In	\xFE\x01 \xF4\x83\x01y\xFF
Focus Out	\xFE\x01 \xF4\x83\x00x\xFF
Freeze Off	\xFE\x01 \xAC\x00\xCD\xFF
Freeze On	\xFE\x01 \xAC\x01\xCE\xFF
Input BNC	\xFE\x013\x037\xFF
Input CVBS	\xFE\x013\x048\xFF
Input DVI	\xFE\x013\x026\xFF
Input HDMI	\xFE\x013\x004\xFF
Input VGA	\xFE\x013\x015\xFF
Laser Power Mode Economic	\xFE\x01 \x98\x02\xBB\xFF
Laser Power Mode Normal	\xFE\x01 \x98\x01\xBA\xFF
Laser Power Mode Power	\xFE\x01 \x98\x06\xBF\xFF
Lens Shift Center	\xFE\x01 \xF4\x88}\xFF
Lens Shift Down	\xFE\x01 \xF4\x81\x01w\xFF
Lens Shift Left	\xFE\x01 \xF4\x81\x02x\xFF
Lens Shift Right	\xFE\x01 \xF4\x81\x03y\xFF
Lens Shift Up	\xFE\x01 \xF4\x81\x00v\xFF
Menu Navigation Down	\xFE\x010\x056\xFF
Menu Navigation Enter	\xFE\x010\x0B<\xFF
Menu Navigation Left	\xFE\x010\x078\xFF
Menu Navigation Menu	\xFE\x010\x0A;\xFF
Menu Navigation Right	\xFE\x010\x067\xFF
Menu Navigation Up	\xFE\x010\x045\xFF
Picture Mode Bright	\xFE\x01 \x15\x039\xFF
Picture Mode Dicom	\xFE\x01 \x15\x028\xFF
Picture Mode Presentation	\xFE\x01 \x15\x006\xFF
Picture Mode Video	\xFE\x01 \x15\x017\xFF
PIP Input BNC	\xFE\x01 \xA0\x02\x03\xA6\xFF
PIP Input CVBS	\xFE\x01 \xA0\x02\x04\xA7\xFF
PIP Input DVI	\xFE\x01 \xA0\x02\x02\xA5\xFF
PIP Input HDMI	\xFE\x01 \xA0\x02\x00\xA3\xFF
PIP Input VGA	\xFE\x01 \xA0\x02\x01\xA4\xFF
PIP Mode Off	\xFE\x01 \xA0\x01\x00\xA2\xFF
PIP Mode On	\xFE\x01 \xA0\x01\x01\xA3\xFF
PIP Position Bottom Left	\xFE\x01 \xA0\x04\x02\xA7\xFF
PIP Position Bottom Right	\xFE\x01 \xA0\x04\x03\xA8\xFF
PIP Position Top Left	\xFE\x01 \xA0\x04\x00\xA5\xFF
PIP Position Top Right	\xFE\x01 \xA0\x04\x01\xA6\xFF

PIP Size Large	\xFE\x01\xA0\x03\x02\xA6\xFF
PIP Size Medium	\xFE\x01\xA0\x03\x01\xA5\xFF
PIP Size Small	\xFE\x01\xA0\x03\x00\xA4\xFF
Power Off	\xFE\x01X\x00Y\xFF
Power On	\xFE\x01X\x03\xFF
Saturation 0	\xFE\x01 \x03\x00\$\xFF
Sharpness -7	\xFE\x01 \x05\x00&\xFF
Tint 0	\xFE\x01 \x04\x00%\xFF
Zoom In	\xFE\x01\xF4\x82\x00w\xFF
Zoom Out	\xFE\x01\xF4\x82\x01x\xFF