
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Touch Display
Manufacturer: BenQ
Firmware Version: N/A
Model(s): RP702, RP652, RP705H, RP790S

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_1_0	10/30/2017	Initial Version

Module Notes

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='RP702')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='RP702')

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command Freeze	Value None		
# Freeze example InterfaceName.Set('Freeze', None)			
Command Input	Value 'AV 1' 'HDMI 1' 'HDMI 4' 'Optional'	Value 'Component' 'HDMI 2' 'HDMI 5' 'Source'	Value 'VGA' 'HDMI 3' 'Android'
# Input example InterfaceName.Set('Input', 'AV 1')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value None		
# VideoMute example InterfaceName.Set('VideoMute', None)			
Command Volume	Value 'Up'	Value 'Down'	
# Volume example InterfaceName.Set('Volume', 'Up')			

Status Available

N/A

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

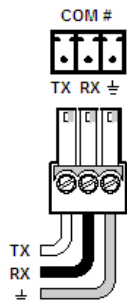

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Appendix A. Set Commands

Audio Mute Off	801s6000\x0D
Audio Mute On	801s6001\x0D
Freeze None	801s!003\x0D
Input Android	801s"101\x0D
Input AV 1	801s"003\x0D
Input Component	801s"004\x0D
Input HDMI 1	801s"001\x0D
Input HDMI 2	801s"002\x0D
Input HDMI 3	801s"021\x0D
Input HDMI 4	801s"022\x0D
Input HDMI 5	801s"023\x0D
Input Optional	801s"102\x0D
Input Source	801s"201\x0D
Input VGA	801s"000\x0D
Power Off	801s!002\x0D
Power On	801s!001\x0D
Video Mute None	801s!000\x0D
Volume Down	801s5200\x0D
Volume Up	801s5300\x0D