

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Audio Processor
Manufacturer: Biamp
Firmware Version: 4.910 (Audia)
1.860 (Nexia)
Software Versions: V5.4 (Audia)
V3.3 (Nexia)
Model(s): Audia, Nexia

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.03.0000-b006	2.3.0

Version History

Module Version	Date	Notes
1_2_5_0	5/21/2019	Added SourceSelectionSource command. Updated module to Rev B1.
1_2_4_0	12/7/2017	Fixed IO Input Gain command for Nexia. Fixed VoIPCallerID and TICallerID status. Added TIDTMF and VoIPDTMF commands. Updated module to Rev. B.
1_2_1_3	10/20/2016	Fixed comm sheet spacing in commands and qualifiers. Updated to current standard.

Global Scripter Module Communication Sheet

Revision: 5/21/2019

1_2_1_2	8/26/2016	Fixed status.
1_2_1_1	6/20/2016	Updated to current standard.
1_2_1_0	2/3/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- Input and Output numbers are dependent upon the configuration of the Audia/Nexia software and may or may not be valid for a given control based upon its configuration.
- Most of the Audia and Nexia commands require the Device Number and Instance ID parameters to be set.
 - Device Numbers are automatically assigned by the Audia/Nexia software.
 - Instance ID's can be the automatically assigned Instance ID number or the user defined Instance ID Tag specified in the Audia/Nexia software. For the module to work properly, do not include any spaces in the Instance ID.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Audia')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Audia')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='Audia')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value
AECEnable	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '24'	
# AECEnable example InterfaceName.Set('AECEnable', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	
AECInputGain	0 to 66 in steps of 6 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '24'	
# AECInputGain example InterfaceName.Set('AECInputGain', 66, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	
AECInputLevel	-100 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '24'	
# AECInputLevel example InterfaceName.Set('AECInputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		

Command	Value	Value
AECInputMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '24'	
# AECInputMute example InterfaceName.Set('AECInputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	Value
AutomixerCrosspointMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '32'	
# AutomixerCrosspointMute example InterfaceName.Set('AutomixerCrosspointMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	
AutomixerInputLevel	-100 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '32'	
# AutomixerInputLevel example InterfaceName.Set('AutomixerInputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	Value
AutomixerInputMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	

'Input'	'1' – '32'	
# AutomixerInputMute example InterfaceName.Set('AutomixerInputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command AutomixerOutputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# AutomixerOutputLevel example InterfaceName.Set('AutomixerOutputLevel', 12, {'Device Number': '1', 'Instance ID': 'String'})		
Command AutomixerOutputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# AutomixerOutputMute example InterfaceName.Set('AutomixerOutputMute', 'On', {'Device Number': '1', 'Instance ID': 'String'})		
Command FaderLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Channel'	Qualifier Value '1' – '16'	
# FaderLevel example InterfaceName.Set('FaderLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'})		
Command FaderMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Channel'	Qualifier Value '1' – '16'	

<pre># FaderMute example InterfaceName.Set('FaderMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'})</pre>	
Command	Value
IOInputGain	0 to 66 in steps of 6 dB
Qualifier Key	Qualifier Value
'Device Number'	'1' – '16'
Qualifier Key	Qualifier Value
'Instance ID'	'String'
Qualifier Key	Qualifier Value
'Input'	'1' – '24'
<pre># IOInputGain example InterfaceName.Set('IOInputGain', 66, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})</pre>	
Command	Value
IOInputLevel	-100 to 12 in steps of 1 dB
Qualifier Key	Qualifier Value
'Device Number'	'1' – '16'
Qualifier Key	Qualifier Value
'Instance ID'	'String'
Qualifier Key	Qualifier Value
'Input'	'1' – '24'
<pre># IOInputLevel example InterfaceName.Set('IOInputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})</pre>	
Command	Value
IOInputMute	'On' 'Off'
Qualifier Key	Qualifier Value
'Device Number'	'1' – '16'
Qualifier Key	Qualifier Value
'Instance ID'	'String'
Qualifier Key	Qualifier Value
'Input'	'1' – '24'
<pre># IOInputMute example InterfaceName.Set('IOInputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})</pre>	
Command	Value
IOOutputLevel	-100 to 0 in steps of 1 dB
Qualifier Key	Qualifier Value
'Device Number'	'1' – '16'
Qualifier Key	Qualifier Value

'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '24'	
# IOOutputLevel example InterfaceName.Set('IOOutputLevel', 0, {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})		
Command	Value	Value
IOOutputMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '24'	
# IOOutputMute example InterfaceName.Set('IOOutputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})		
Command	Value	Value
LogicState	'1'	'0'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '8'	
# LogicState example InterfaceName.Set('LogicState', '1', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command	Value	
MatrixMixerCrosspointLevel	-100 to 0 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '56'	
Qualifier Key	Qualifier Value	
'Output'	'21' – '42'	
# MatrixMixerCrosspointLevel example InterfaceName.Set('MatrixMixerCrosspointLevel', 0, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '21'})		

Global Scripter Module Communication Sheet

Command MatrixMixerCrosspointMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
Qualifier Key 'Output'	Qualifier Value '1' – '42'	
# MatrixMixerCrosspointMute example InterfaceName.Set('MatrixMixerCrosspointMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'})		
Command MatrixMixerInputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
# MatrixMixerInputLevel example InterfaceName.Set('MatrixMixerInputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command MatrixMixerInputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
# MatrixMixerInputMute example InterfaceName.Set('MatrixMixerInputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command MatrixMixerOutputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	

Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Output'	Qualifier Value '1' – '42'
# MatrixMixerOutputLevel example InterfaceName.Set('MatrixMixerOutputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})	
Command MatrixMixerOutputMute	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Output'	Qualifier Value '1' – '42'
# MatrixMixerOutputMute example InterfaceName.Set('MatrixMixerOutputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})	
Command MuteBlock	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Channel'	Qualifier Value '1' – '16'
# MuteBlock example InterfaceName.Set('MuteBlock', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'})	
Command PresetRecall	Value '1001' – '1128'
# PresetRecall example InterfaceName.Set('PresetRecall', '1001')	
Command RoomCombineOutputLevel	Value -100 to 12 in steps of 1 dB
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Output'	Qualifier Value '1' – '32'

# RoomCombineOutputLevel example InterfaceName.Set('RoomCombineOutputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})		
Command	Value	Value
RoomCombineOutputMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '32'	
# RoomCombineOutputMute example InterfaceName.Set('RoomCombineOutputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})		
Command	Value	Value
RoomCombineWall	'Open'	'Closed'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Wall'	'1' – '52'	
# RoomCombineWall example InterfaceName.Set('RoomCombineWall', 'Open', {'Device Number': '1', 'Instance ID': 'String', 'Wall': '1'})		
Command	Value	Value
RouterCrosspointMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '32'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '56'	
# RouterCrosspointMute example InterfaceName.Set('RouterCrosspointMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'})		
Command	Value	Value
SourceSelectionSource	'None'	'1' – '16'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	

Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# SourceSelectionSource example InterfaceName.Set('SourceSelectionSource', '1', {'Device Number': '1', 'Instance ID': 'String'})		
Command StandardMixerCrosspointMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
Qualifier Key 'Output'	Qualifier Value '1' – '42'	
# StandardMixerCrosspointMute example InterfaceName.Set('StandardMixerCrosspointMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'})		
Command StandardMixerInputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
# StandardMixerInputLevel example InterfaceName.Set('StandardMixerInputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command StandardMixerInputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '56'	
# StandardMixerInputMute example InterfaceName.Set('StandardMixerInputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})		
Command StandardMixerOutputLevel	Value	

	-100 to 12 in steps of 1 dB		
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
Qualifier Key 'Output'	Qualifier Value '1' – '42'		
# StandardMixerOutputLevel example InterfaceName.Set('StandardMixerOutputLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})			
Command StandardMixerOutputMute	Value 'On'	Value 'Off'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
Qualifier Key 'Output'	Qualifier Value '1' – '42'		
# StandardMixerOutputMute example InterfaceName.Set('StandardMixerOutputMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'})			
Command TIAutoAnswer	Value 'Off'	Value '1 Ring'	Value '2 Rings'
	'3 Rings'	'4 Rings'	'5 Rings'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
# TIAutoAnswer example InterfaceName.Set('TIAutoAnswer', 'Off', {'Device Number': '1', 'Instance ID': 'String'})			
Command TIDTMF	Value '0'	Value '1'	Value '2'
	'3'	'4'	'5'
	'6'	'7'	'8'
	'9'	'*'	'#'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
# TIDTMF example			

InterfaceName.Set('TIDTMF', '0', {'Device Number': '1', 'Instance ID': 'String'})			
Command	Value	Value	Value
TIHook	'Off'	'On'	'Flash'
	'Dial' ¹	'Redial' ²	'Clear Redial' ³
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Number'	'String'		
# TIHook example InterfaceName.Set('TIHook', 'Off', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.Set('TIHook', 'Dial', {'Device Number': '1', 'Instance ID': 'String', 'Number': '1234'})			
Command	Value	Value	
TIPhoneEchoCancellation	'Off'	'On'	
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
# TIPhoneEchoCancellation example InterfaceName.Set('TIPhoneEchoCancellation', 'Off', {'Device Number': '1', 'Instance ID': 'String'})			
Command	Value		
TIPhoneReceiveLevel	-100 to 12 in steps of 1 dB		
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
# TIPhoneReceiveLevel example InterfaceName.Set('TIPhoneReceiveLevel', 12, {'Device Number': '1', 'Instance ID': 'String'})			
Command	Value	Value	
TIPhoneReceiveMute	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
# TIPhoneReceiveMute example InterfaceName.Set('TIPhoneReceiveMute', 'On', {'Device Number': '1', 'Instance ID': 'String'})			
Command	Value		
TIPhoneTransmitLevel	-100 to 0 in steps of 1 dB		

Global Scripter Module Communication Sheet

Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
# TlPhoneTransmitLevel example InterfaceName.Set('TlPhoneTransmitLevel', 0, {'Device Number': '1', 'Instance ID': 'String'})			
Command TlPhoneTransmitMute	Value 'On'	Value 'Off'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
# TlPhoneTransmitMute example InterfaceName.Set('TlPhoneTransmitMute', 'On', {'Device Number': '1', 'Instance ID': 'String'})			
Command TlSpeedDial	Value '1' – '16'		
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
# TlSpeedDial example InterfaceName.Set('TlSpeedDial', '1', {'Device Number': '1', 'Instance ID': 'String'})			
Command VoIPAutoAnswer	Value 'Off'	Value 'On'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key 'Instance ID'	Qualifier Value 'String'		
Qualifier Key 'Line'	Qualifier Value '1' – '2'		
# VoIPAutoAnswer example InterfaceName.Set('VoIPAutoAnswer', 'Off', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})			
Command VoIPDTMF	Value '0' '3' '6' '9'	Value '1' '4' '7' '*'	Value '2' '5' '8' '#'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'		
Qualifier Key	Qualifier Value		

'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Line'	'1' – '2'		
# VoIPDTMF example InterfaceName.Set('VoIPDTMF', '0', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})			
Command	Value	Value	Value
VoIPHook	'Off'	'On'	'Answer'
	'End/Reject'	'Hold'	'Resume'
	'Dial' ¹	'Redial' ²	'Clear Redial' ³
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Line'	'1' – '2'		
Qualifier Key	Qualifier Value		
'Number'	'String'		
# VoIPHook example InterfaceName.Set('VoIPHook', 'Off', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.Set('VoIPHook', 'Dial', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1', 'Number': '15036417287'})			
Command	Value		
VoIPReceiveLevel	-100 to 12 in steps of 1 dB		
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Line'	'1' – '2'		
# VoIPReceiveLevel example InterfaceName.Set('VoIPReceiveLevel', 12, {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})			
Command	Value	Value	
VoIPReceiveMute	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		

'Line'	'1' – '2'	
# VoIPReceiveMute example InterfaceName.Set('VoIPReceiveMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})		
Command	Value	
VoIPSpeedDial	'1' – '16'	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Line'	'1' – '2'	
# VoIPSpeedDial example InterfaceName.Set('VoIPSpeedDial', '1', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})		
Command	Value	
VoIPTransmitLevel	-100 to 0 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Line'	'1' – '2'	
# VoIPTransmitLevel example InterfaceName.Set('VoIPTransmitLevel', 0, {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})		
Command	Value	Value
VoIPTransmitMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Line'	'1' – '2'	
# VoIPTransmitMute example InterfaceName.Set('VoIPTransmitMute', 'On', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'})		

¹ The 'Number' qualifier is only required when calling 'Dial' command.² Redial command dials the string stored within the module which was passed into the 'Number' qualifier when Dial command was last called.³ 'Clear Redial' clears any strings stored within the module when Redial was called.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AECEnable	'On'	'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
# AECEnable examples InterfaceName.Update('AECEnable', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AECEnable', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AECEnable', None, FeedbackHandler)		
Command AECInputGain	Value 0 to 66 in steps of 6 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
# AECInputGain examples InterfaceName.Update('AECInputGain', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AECInputGain', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AECInputGain', None, FeedbackHandler)		
Command	Value	

AECInputLevel	-100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
<pre># AECInputLevel examples InterfaceName.Update('AECInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AECInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AECInputLevel', None, FeedbackHandler)</pre>		
Command AECInputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
<pre># AECInputMute examples InterfaceName.Update('AECInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AECInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AECInputMute', None, FeedbackHandler)</pre>		
Command AutomixerCrosspointMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '32'	
<pre># AutomixerCrosspointMute examples InterfaceName.Update('AutomixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AutomixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AutomixerCrosspointMute', None, FeedbackHandler)</pre>		
Command AutomixerInputLevel	Value -100 to 12 in steps of 1 dB	

Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '32'	
# AutomixerInputLevel examples InterfaceName.Update('AutomixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AutomixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AutomixerInputLevel', None, FeedbackHandler)		
Command AutomixerInputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '32'	
# AutomixerInputMute examples InterfaceName.Update('AutomixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('AutomixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('AutomixerInputMute', None, FeedbackHandler)		
Command AutomixerOutputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# AutomixerOutputLevel examples InterfaceName.Update('AutomixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('AutomixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('AutomixerOutputLevel', None, FeedbackHandler)		
Command AutomixerOutputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# AutomixerOutputMute examples		

<pre>InterfaceName.Update('AutomixerOutputMute', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('AutomixerOutputMute', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('AutomixerOutputMute', None, FeedbackHandler)</pre>		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
<pre># ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)</pre>		
Command	Value	
FaderLevel	-100 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '16'	
<pre># FaderLevel examples InterfaceName.Update('FaderLevel', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) Value = InterfaceName.ReadStatus('FaderLevel', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) InterfaceName.SubscribeStatus('FaderLevel', None, FeedbackHandler)</pre>		
Command	Value	Value
FaderMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Channel'	'1' – '16'	
<pre># FaderMute examples InterfaceName.Update('FaderMute', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) Value = InterfaceName.ReadStatus('FaderMute', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) InterfaceName.SubscribeStatus('FaderMute', None, FeedbackHandler)</pre>		
Command	Value	
IOInputGain	0 to 66 in steps of 6 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	

'Input'	'1' – '24'	
# IOInputGain examples InterfaceName.Update('IOInputGain', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('IOInputGain', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('IOInputGain', None, FeedbackHandler)		
Command IOInputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
# IOInputLevel examples InterfaceName.Update('IOInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('IOInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('IOInputLevel', None, FeedbackHandler)		
Command IOInputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '24'	
# IOInputMute examples InterfaceName.Update('IOInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('IOInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('IOInputMute', None, FeedbackHandler)		
Command IOOutputLevel	Value -100 to 0 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Output'	Qualifier Value '1' – '24'	
# IOOutputLevel examples		

<pre>InterfaceName.Update('IOOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('IOOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('IOOutputLevel', None, FeedbackHandler)</pre>		
Command IOOutputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Output'	Qualifier Value '1' – '24'	
<pre># IOOutputMute examples InterfaceName.Update('IOOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('IOOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('IOOutputMute', None, FeedbackHandler)</pre>		
Command IPAddress	Value 'String'	
<pre># IPAddress examples InterfaceName.Update('IPAddress') Value = InterfaceName.ReadStatus('IPAddress') InterfaceName.SubscribeStatus('IPAddress', None, FeedbackHandler)</pre>		
Command LogicMeter	Value '0' – '1'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Input'	Qualifier Value '1' – '8'	
<pre># LogicMeter examples InterfaceName.Update('LogicMeter', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('LogicMeter', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('LogicMeter', None, FeedbackHandler)</pre>		
Command LogicState	Value '0' – '1'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	

Qualifier Key 'Input'	Qualifier Value '1' – '8'
# LogicState examples InterfaceName.Update('LogicState', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('LogicState', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('LogicState', None, FeedbackHandler)	
Command MatrixMixerCrosspointLevel	Value -100 to 0 in steps of 1 dB
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Input'	Qualifier Value '1' – '56'
Qualifier Key 'Output'	Qualifier Value '21' – '42'
# MatrixMixerCrosspointLevel examples InterfaceName.Update('MatrixMixerCrosspointLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '21'}) Value = InterfaceName.ReadStatus('MatrixMixerCrosspointLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '21'}) InterfaceName.SubscribeStatus('MatrixMixerCrosspointLevel', None, FeedbackHandler)	
Command MatrixMixerCrosspointMute	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Input'	Qualifier Value '1' – '56'
Qualifier Key 'Output'	Qualifier Value '1' – '42'
# MatrixMixerCrosspointMute examples InterfaceName.Update('MatrixMixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) Value = InterfaceName.ReadStatus('MatrixMixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) InterfaceName.SubscribeStatus('MatrixMixerCrosspointMute', None, FeedbackHandler)	
Command MatrixMixerInputLevel	Value -100 to 12 in steps of 1 dB
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'

Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Input'	Qualifier Value '1' – '56'
<pre># MatrixMixerInputLevel examples InterfaceName.Update('MatrixMixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('MatrixMixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('MatrixMixerInputLevel', None, FeedbackHandler)</pre>	
Command MatrixMixerInputMute	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Input'	Qualifier Value '1' – '56'
<pre># MatrixMixerInputMute examples InterfaceName.Update('MatrixMixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('MatrixMixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('MatrixMixerInputMute', None, FeedbackHandler)</pre>	
Command MatrixMixerOutputLevel	Value -100 to 12 in steps of 1 dB
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Output'	Qualifier Value '1' – '42'
<pre># MatrixMixerOutputLevel examples InterfaceName.Update('MatrixMixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('MatrixMixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('MatrixMixerOutputLevel', None, FeedbackHandler)</pre>	
Command MatrixMixerOutputMute	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'

Qualifier Key 'Output'	Qualifier Value '1' – '42'	
<pre># MatrixMixerOutputMute examples InterfaceName.Update('MatrixMixerOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('MatrixMixerOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('MatrixMixerOutputMute', None, FeedbackHandler)</pre>		
Command MuteBlock	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Channel'	Qualifier Value '1' – '16'	
<pre># MuteBlock examples InterfaceName.Update('MuteBlock', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) Value = InterfaceName.ReadStatus('MuteBlock', {'Device Number': '1', 'Instance ID': 'String', 'Channel': '1'}) InterfaceName.SubscribeStatus('MuteBlock', None, FeedbackHandler)</pre>		
Command RoomCombineOutputLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Output'	Qualifier Value '1' – '32'	
<pre># RoomCombineOutputLevel examples InterfaceName.Update('RoomCombineOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('RoomCombineOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('RoomCombineOutputLevel', None, FeedbackHandler)</pre>		
Command RoomCombineOutputMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
Qualifier Key 'Output'	Qualifier Value '1' – '32'	

<pre># RoomCombineOutputMute examples InterfaceName.Update('RoomCombineOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('RoomCombineOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('RoomCombineOutputMute', None, FeedbackHandler)</pre>		
Command	Value	Value
RoomCombineWall	'Open'	'Closed'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Wall'	'1' – '52'	
<pre># RoomCombineWall examples InterfaceName.Update('RoomCombineWall', {'Device Number': '1', 'Instance ID': 'String', 'Wall': '1'}) Value = InterfaceName.ReadStatus('RoomCombineWall', {'Device Number': '1', 'Instance ID': 'String', 'Wall': '1'}) InterfaceName.SubscribeStatus('RoomCombineWall', None, FeedbackHandler)</pre>		
Command	Value	Value
RouterCrosspointMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '32'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '56'	
<pre># RouterCrosspointMute examples InterfaceName.Update('RouterCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) Value = InterfaceName.ReadStatus('RouterCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) InterfaceName.SubscribeStatus('RouterCrosspointMute', None, FeedbackHandler)</pre>		
Command	Value	Value
SourceSelectionSource	'None'	'1' – '16'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
<pre># SourceSelectionSource examples InterfaceName.Update('SourceSelectionSource', {'Device Number': '1', 'Instance ID': 'String'})</pre>		

<pre>Value = InterfaceName.ReadStatus('SourceSelectionSource', {'Device Number': '1','Instance ID': 'String'}) InterfaceName.SubscribeStatus('SourceSelectionSource', None, FeedbackHandler)</pre>		
Command	Value	Value
StandardMixerCrosspointMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '56'	
Qualifier Key	Qualifier Value	
'Output'	'1' – '42'	
<pre># StandardMixerCrosspointMute examples InterfaceName.Update('StandardMixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) Value = InterfaceName.ReadStatus('StandardMixerCrosspointMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1', 'Output': '1'}) InterfaceName.SubscribeStatus('StandardMixerCrosspointMute', None, FeedbackHandler)</pre>		
Command	Value	
StandardMixerInputLevel	-100 to 12 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '56'	
<pre># StandardMixerInputLevel examples InterfaceName.Update('StandardMixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) Value = InterfaceName.ReadStatus('StandardMixerInputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('StandardMixerInputLevel', None, FeedbackHandler)</pre>		
Command	Value	Value
StandardMixerInputMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Input'	'1' – '56'	
<pre># StandardMixerInputMute examples InterfaceName.Update('StandardMixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'})</pre>		

Value = InterfaceName.ReadStatus('StandardMixerInputMute', {'Device Number': '1', 'Instance ID': 'String', 'Input': '1'}) InterfaceName.SubscribeStatus('StandardMixerInputMute', None, FeedbackHandler)			
Command	Value		
StandardMixerOutputLevel	-100 to 12 in steps of 1 dB		
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Output'	'1' – '42'		
# StandardMixerOutputLevel examples InterfaceName.Update('StandardMixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('StandardMixerOutputLevel', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('StandardMixerOutputLevel', None, FeedbackHandler)			
Command	Value	Value	Value
StandardMixerOutputMute	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
Qualifier Key	Qualifier Value		
'Output'	'1' – '42'		
# StandardMixerOutputMute examples InterfaceName.Update('StandardMixerOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) Value = InterfaceName.ReadStatus('StandardMixerOutputMute', {'Device Number': '1', 'Instance ID': 'String', 'Output': '1'}) InterfaceName.SubscribeStatus('StandardMixerOutputMute', None, FeedbackHandler)			
Command	Value	Value	Value
TIAutoAnswer	'Off'	'1 Ring'	'2 Rings'
	'3 Rings'	'4 Rings'	'5 Rings'
Qualifier Key	Qualifier Value		
'Device Number'	'1' – '16'		
Qualifier Key	Qualifier Value		
'Instance ID'	'String'		
# TIAutoAnswer examples InterfaceName.Update('TIAutoAnswer', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIAutoAnswer', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIAutoAnswer', None, FeedbackHandler)			
Command	Value		
TICallerID	'String'		

Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TICallerID examples InterfaceName.Update('TICallerID', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TICallerID', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TICallerID', None, FeedbackHandler)		
Command TIHook	Value 'Off'	Value 'On'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIHook examples InterfaceName.Update('TIHook', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIHook', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIHook', None, FeedbackHandler)		
Command TILastNumber	Value 'String'	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TILastNumber examples InterfaceName.Update('TILastNumber', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TILastNumber', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TILastNumber', None, FeedbackHandler)		
Command TIPhoneEchoCancellation	Value 'Off'	Value 'On'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIPhoneEchoCancellation examples InterfaceName.Update('TIPhoneEchoCancellation', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIPhoneEchoCancellation', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIPhoneEchoCancellation', None, FeedbackHandler)		
Command TIPhoneReceiveLevel	Value -100 to 12 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	

Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIFhoneReceiveLevel examples InterfaceName.Update('TIFhoneReceiveLevel', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIFhoneReceiveLevel', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIFhoneReceiveLevel', None, FeedbackHandler)		
Command TIFhoneReceiveMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIFhoneReceiveMute examples InterfaceName.Update('TIFhoneReceiveMute', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIFhoneReceiveMute', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIFhoneReceiveMute', None, FeedbackHandler)		
Command TIFhoneTransmitLevel	Value -100 to 0 in steps of 1 dB	
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIFhoneTransmitLevel examples InterfaceName.Update('TIFhoneTransmitLevel', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIFhoneTransmitLevel', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIFhoneTransmitLevel', None, FeedbackHandler)		
Command TIFhoneTransmitMute	Value 'On'	Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	
Qualifier Key 'Instance ID'	Qualifier Value 'String'	
# TIFhoneTransmitMute examples InterfaceName.Update('TIFhoneTransmitMute', {'Device Number': '1', 'Instance ID': 'String'}) Value = InterfaceName.ReadStatus('TIFhoneTransmitMute', {'Device Number': '1', 'Instance ID': 'String'}) InterfaceName.SubscribeStatus('TIFhoneTransmitMute', None, FeedbackHandler)		
Command VoIPAutoAnswer	Value 'Off'	Value 'On'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'	

Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPAutoAnswer examples InterfaceName.Update('VoIPAutoAnswer', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPAutoAnswer', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPAutoAnswer', None, FeedbackHandler)</pre>	
Command VoIPCallerID	Value 'String'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPCallerID examples InterfaceName.Update('VoIPCallerID', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPCallerID', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPCallerID', None, FeedbackHandler)</pre>	
Command VoIPHook	Value 'Off' Value 'On'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPHook examples InterfaceName.Update('VoIPHook', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPHook', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPHook', None, FeedbackHandler)</pre>	
Command VoIPLastNumber	Value 'String'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'

Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPLastNumber examples InterfaceName.Update('VoIPLastNumber', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPLastNumber', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPLastNumber', None, FeedbackHandler)</pre>	
Command VoIPReceiveLevel	Value -100 to 12 in steps of 1 dB
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPReceiveLevel examples InterfaceName.Update('VoIPReceiveLevel', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPReceiveLevel', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPReceiveLevel', None, FeedbackHandler)</pre>	
Command VoIPReceiveMute	Value 'On' Value 'Off'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'
<pre># VoIPReceiveMute examples InterfaceName.Update('VoIPReceiveMute', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPReceiveMute', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPReceiveMute', None, FeedbackHandler)</pre>	
Command VoIPRingIndicator	Value 'Not Ringing' Value 'Ringing'
Qualifier Key 'Device Number'	Qualifier Value '1' – '16'
Qualifier Key 'Instance ID'	Qualifier Value 'String'
Qualifier Key 'Line'	Qualifier Value '1' – '2'

<pre># VoIPRingIndicator examples InterfaceName.Update('VoIPRingIndicator', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPRingIndicator', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPRingIndicator', None, FeedbackHandler)</pre>		
Command	Value	
VoIPTransmitLevel	-100 to 0 in steps of 1 dB	
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Line'	'1' – '2'	
<pre># VoIPTransmitLevel examples InterfaceName.Update('VoIPTransmitLevel', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPTransmitLevel', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPTransmitLevel', None, FeedbackHandler)</pre>		
Command	Value	Value
VoIPTransmitMute	'On'	'Off'
Qualifier Key	Qualifier Value	
'Device Number'	'1' – '16'	
Qualifier Key	Qualifier Value	
'Instance ID'	'String'	
Qualifier Key	Qualifier Value	
'Line'	'1' – '2'	
<pre># VoIPTransmitMute examples InterfaceName.Update('VoIPTransmitMute', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) Value = InterfaceName.ReadStatus('VoIPTransmitMute', {'Device Number': '1', 'Instance ID': 'String', 'Line': '1'}) InterfaceName.SubscribeStatus('VoIPTransmitMute', None, FeedbackHandler)</pre>		

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

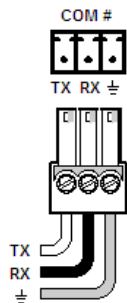

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection	Yes
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

AEC Enable Off Device Number 1 Instance ID testString Input 1	SETD 1 AECENABLE testString 1 0\x0A
AEC Enable Off Device Number 1 Instance ID testString Input 24	SETD 1 AECENABLE testString 24 0\x0A
AEC Enable Off Device Number 16 Instance ID testString Input 1	SETD 16 AECENABLE testString 1 0\x0A
AEC Enable Off Device Number 16 Instance ID testString Input 24	SETD 16 AECENABLE testString 24 0\x0A
AEC Enable On Device Number 1 Instance ID testString Input 1	SETD 1 AECENABLE testString 1 1\x0A
AEC Enable On Device Number 1 Instance ID testString Input 24	SETD 1 AECENABLE testString 24 1\x0A
AEC Enable On Device Number 16 Instance ID testString Input 1	SETD 16 AECENABLE testString 1 1\x0A
AEC Enable On Device Number 16 Instance ID testString Input 24	SETD 16 AECENABLE testString 24 1\x0A
AEC Input Gain 0 Device Number 1 Instance ID testString Input 1	SETD 1 AECMICGAIN testString 1 0\x0A
AEC Input Gain 0 Device Number 1 Instance ID testString Input 24	SETD 1 AECMICGAIN testString 24 0\x0A
AEC Input Gain 0 Device Number 16 Instance ID testString Input 1	SETD 16 AECMICGAIN testString 1 0\x0A
AEC Input Gain 0 Device Number 16 Instance ID testString Input 24	SETD 16 AECMICGAIN testString 24 0\x0A
AEC Input Gain 66 Device Number 1 Instance ID testString Input 1	SETD 1 AECMICGAIN testString 1 66\x0A
AEC Input Gain 66 Device Number 1 Instance ID testString Input 24	SETD 1 AECMICGAIN testString 24 66\x0A
AEC Input Gain 66 Device Number 16 Instance ID testString Input 1	SETD 16 AECMICGAIN testString 1 66\x0A
AEC Input Gain 66 Device Number 16 Instance ID testString Input 24	SETD 16 AECMICGAIN testString 24 66\x0A
AEC Input Level -100 Device Number 1 Instance ID testString Input 1	SETD 1 AECINPLVL testString 1 -100\x0A
AEC Input Level -100 Device Number 1 Instance ID testString Input 24	SETD 1 AECINPLVL testString 24 -100\x0A
AEC Input Level -100 Device Number 16 Instance ID testString Input 1	SETD 16 AECINPLVL testString 1 -100\x0A
AEC Input Level -100 Device Number 16 Instance ID testString Input 24	SETD 16 AECINPLVL testString 24 -100\x0A

Global Scripter Module Communication Sheet

AEC Input Level 12 Device Number 1 Instance ID testString Input 1	SETD 1 AECINPLVL testString 1 12\x0A
AEC Input Level 12 Device Number 1 Instance ID testString Input 24	SETD 1 AECINPLVL testString 24 12\x0A
AEC Input Level 12 Device Number 16 Instance ID testString Input 1	SETD 16 AECINPLVL testString 1 12\x0A
AEC Input Level 12 Device Number 16 Instance ID testString Input 24	SETD 16 AECINPLVL testString 24 12\x0A
AEC Input Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 AECINPMUTE testString 1 0\x0A
AEC Input Mute Off Device Number 1 Instance ID testString Input 24	SETD 1 AECINPMUTE testString 24 0\x0A
AEC Input Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 AECINPMUTE testString 1 0\x0A
AEC Input Mute Off Device Number 16 Instance ID testString Input 24	SETD 16 AECINPMUTE testString 24 0\x0A
AEC Input Mute On Device Number 1 Instance ID testString Input 1	SETD 1 AECINPMUTE testString 1 1\x0A
AEC Input Mute On Device Number 1 Instance ID testString Input 24	SETD 1 AECINPMUTE testString 24 1\x0A
AEC Input Mute On Device Number 16 Instance ID testString Input 1	SETD 16 AECINPMUTE testString 1 1\x0A
AEC Input Mute On Device Number 16 Instance ID testString Input 24	SETD 16 AECINPMUTE testString 24 1\x0A
Automixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 AMMUTEXP testString 1 0\x0A
Automixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 32	SETD 1 AMMUTEXP testString 32 0\x0A
Automixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 AMMUTEXP testString 1 0\x0A
Automixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 32	SETD 16 AMMUTEXP testString 32 0\x0A
Automixer Crosspoint Mute On Device Number 1 Instance ID testString Input 1	SETD 1 AMMUTEXP testString 1 1\x0A
Automixer Crosspoint Mute On Device Number 1 Instance ID testString Input 32	SETD 1 AMMUTEXP testString 32 1\x0A
Automixer Crosspoint Mute On Device Number 16 Instance ID testString Input 1	SETD 16 AMMUTEXP testString 1 1\x0A
Automixer Crosspoint Mute On Device Number 16 Instance ID testString Input 32	SETD 16 AMMUTEXP testString 32 1\x0A
Automixer Input Level -100 Device Number 1 Instance ID testString Input 1	SETD 1 AMLVLIN testString 1 -100\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Automixer Input Level -100 Device Number 1 Instance ID testString Input 32	SETD 1 AMLVLIN testString 32 -100\x0A
Automixer Input Level -100 Device Number 16 Instance ID testString Input 1	SETD 16 AMLVLIN testString 1 -100\x0A
Automixer Input Level -100 Device Number 16 Instance ID testString Input 32	SETD 16 AMLVLIN testString 32 -100\x0A
Automixer Input Level 12 Device Number 1 Instance ID testString Input 1	SETD 1 AMLVLIN testString 1 12\x0A
Automixer Input Level 12 Device Number 1 Instance ID testString Input 32	SETD 1 AMLVLIN testString 32 12\x0A
Automixer Input Level 12 Device Number 16 Instance ID testString Input 1	SETD 16 AMLVLIN testString 1 12\x0A
Automixer Input Level 12 Device Number 16 Instance ID testString Input 32	SETD 16 AMLVLIN testString 32 12\x0A
Automixer Input Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 AMMUTEIN testString 1 0\x0A
Automixer Input Mute Off Device Number 1 Instance ID testString Input 32	SETD 1 AMMUTEIN testString 32 0\x0A
Automixer Input Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 AMMUTEIN testString 1 0\x0A
Automixer Input Mute Off Device Number 16 Instance ID testString Input 32	SETD 16 AMMUTEIN testString 32 0\x0A
Automixer Input Mute On Device Number 1 Instance ID testString Input 1	SETD 1 AMMUTEIN testString 1 1\x0A
Automixer Input Mute On Device Number 1 Instance ID testString Input 32	SETD 1 AMMUTEIN testString 32 1\x0A
Automixer Input Mute On Device Number 16 Instance ID testString Input 1	SETD 16 AMMUTEIN testString 1 1\x0A
Automixer Input Mute On Device Number 16 Instance ID testString Input 32	SETD 16 AMMUTEIN testString 32 1\x0A
Automixer Output Level -100 Device Number 1 Instance ID testString	SETD 1 AMLVLOUT testString -100\x0A
Automixer Output Level -100 Device Number 16 Instance ID testString	SETD 16 AMLVLOUT testString -100\x0A
Automixer Output Level 12 Device Number 1 Instance ID testString	SETD 1 AMLVLOUT testString 12\x0A
Automixer Output Level 12 Device Number 16 Instance ID testString	SETD 16 AMLVLOUT testString 12\x0A
Automixer Output Mute Off Device Number 1 Instance ID testString	SETD 1 AMMUTEOUT testString 0\x0A
Automixer Output Mute Off Device Number 16 Instance ID testString	SETD 16 AMMUTEOUT testString 0\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Automixer Output Mute On Device Number 1 Instance ID testString	SETD 1 AMMUTEOUT testString 1\x0A
Automixer Output Mute On Device Number 16 Instance ID testString	SETD 16 AMMUTEOUT testString 1\x0A
Fader Level -100 Device Number 1 Instance ID testString Channel 1	SETD 1 FDRLVL testString 1 -100\x0A
Fader Level -100 Device Number 1 Instance ID testString Channel 16	SETD 1 FDRLVL testString 16 -100\x0A
Fader Level -100 Device Number 16 Instance ID testString Channel 1	SETD 16 FDRLVL testString 1 -100\x0A
Fader Level -100 Device Number 16 Instance ID testString Channel 16	SETD 16 FDRLVL testString 16 -100\x0A
Fader Level 12 Device Number 1 Instance ID testString Channel 1	SETD 1 FDRLVL testString 1 12\x0A
Fader Level 12 Device Number 1 Instance ID testString Channel 16	SETD 1 FDRLVL testString 16 12\x0A
Fader Level 12 Device Number 16 Instance ID testString Channel 1	SETD 16 FDRLVL testString 1 12\x0A
Fader Level 12 Device Number 16 Instance ID testString Channel 16	SETD 16 FDRLVL testString 16 12\x0A
Fader Mute Off Device Number 1 Instance ID testString Channel 1	SETD 1 FDRMUTE testString 1 0\x0A
Fader Mute Off Device Number 1 Instance ID testString Channel 16	SETD 1 FDRMUTE testString 16 0\x0A
Fader Mute Off Device Number 16 Instance ID testString Channel 1	SETD 16 FDRMUTE testString 1 0\x0A
Fader Mute Off Device Number 16 Instance ID testString Channel 16	SETD 16 FDRMUTE testString 16 0\x0A
Fader Mute On Device Number 1 Instance ID testString Channel 1	SETD 1 FDRMUTE testString 1 1\x0A
Fader Mute On Device Number 1 Instance ID testString Channel 16	SETD 1 FDRMUTE testString 16 1\x0A
Fader Mute On Device Number 16 Instance ID testString Channel 1	SETD 16 FDRMUTE testString 1 1\x0A
Fader Mute On Device Number 16 Instance ID testString Channel 16	SETD 16 FDRMUTE testString 16 1\x0A
IO Input Gain 0 Device Number 1 Instance ID testString Input 1	SETD 1 MICGAIN testString 1 0\x0A
IO Input Gain 0 Device Number 1 Instance ID testString Input 1	SETD 1 INPGAIN testString 1 0\x0A
IO Input Gain 0 Device Number 1 Instance ID testString Input 24	SETD 1 MICGAIN testString 24 0\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

IO Input Gain 0 Device Number 1 Instance ID testString Input 24	SETD 1 INPGAIN testString 24 0\x0A
IO Input Gain 0 Device Number 16 Instance ID testString Input 1	SETD 16 MICGAIN testString 1 0\x0A
IO Input Gain 0 Device Number 16 Instance ID testString Input 1	SETD 16 INPGAIN testString 1 0\x0A
IO Input Gain 0 Device Number 16 Instance ID testString Input 24	SETD 16 MICGAIN testString 24 0\x0A
IO Input Gain 0 Device Number 16 Instance ID testString Input 24	SETD 16 INPGAIN testString 24 0\x0A
IO Input Gain 66 Device Number 1 Instance ID testString Input 1	SETD 1 MICGAIN testString 1 66\x0A
IO Input Gain 66 Device Number 1 Instance ID testString Input 1	SETD 1 INPGAIN testString 1 66\x0A
IO Input Gain 66 Device Number 1 Instance ID testString Input 24	SETD 1 MICGAIN testString 24 66\x0A
IO Input Gain 66 Device Number 1 Instance ID testString Input 24	SETD 1 INPGAIN testString 24 66\x0A
IO Input Gain 66 Device Number 16 Instance ID testString Input 1	SETD 16 MICGAIN testString 1 66\x0A
IO Input Gain 66 Device Number 16 Instance ID testString Input 1	SETD 16 INPGAIN testString 1 66\x0A
IO Input Gain 66 Device Number 16 Instance ID testString Input 24	SETD 16 MICGAIN testString 24 66\x0A
IO Input Gain 66 Device Number 16 Instance ID testString Input 24	SETD 16 INPGAIN testString 24 66\x0A
IO Input Level -100 Device Number 1 Instance ID testString Input 1	SETD 1 INPLVL testString 1 -100\x0A
IO Input Level -100 Device Number 1 Instance ID testString Input 24	SETD 1 INPLVL testString 24 -100\x0A
IO Input Level -100 Device Number 16 Instance ID testString Input 1	SETD 16 INPLVL testString 1 -100\x0A
IO Input Level -100 Device Number 16 Instance ID testString Input 24	SETD 16 INPLVL testString 24 -100\x0A
IO Input Level 12 Device Number 1 Instance ID testString Input 1	SETD 1 INPLVL testString 1 12\x0A
IO Input Level 12 Device Number 1 Instance ID testString Input 24	SETD 1 INPLVL testString 24 12\x0A
IO Input Level 12 Device Number 16 Instance ID testString Input 1	SETD 16 INPLVL testString 1 12\x0A
IO Input Level 12 Device Number 16 Instance ID testString Input 24	SETD 16 INPLVL testString 24 12\x0A

**Global Scripter Module
Communication Sheet**

IO Input Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 INPMUTE testString 1 0\x0A
IO Input Mute Off Device Number 1 Instance ID testString Input 24	SETD 1 INPMUTE testString 24 0\x0A
IO Input Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 INPMUTE testString 1 0\x0A
IO Input Mute Off Device Number 16 Instance ID testString Input 24	SETD 16 INPMUTE testString 24 0\x0A
IO Input Mute On Device Number 1 Instance ID testString Input 1	SETD 1 INPMUTE testString 1 1\x0A
IO Input Mute On Device Number 1 Instance ID testString Input 24	SETD 1 INPMUTE testString 24 1\x0A
IO Input Mute On Device Number 16 Instance ID testString Input 1	SETD 16 INPMUTE testString 1 1\x0A
IO Input Mute On Device Number 16 Instance ID testString Input 24	SETD 16 INPMUTE testString 24 1\x0A
IO Output Level 0 Device Number 1 Instance ID testString Output 1	SETD 1 OUTLVL testString 1 0\x0A
IO Output Level 0 Device Number 1 Instance ID testString Output 24	SETD 1 OUTLVL testString 24 0\x0A
IO Output Level 0 Device Number 16 Instance ID testString Output 1	SETD 16 OUTLVL testString 1 0\x0A
IO Output Level 0 Device Number 16 Instance ID testString Output 24	SETD 16 OUTLVL testString 24 0\x0A
IO Output Level -100 Device Number 1 Instance ID testString Output 1	SETD 1 OUTLVL testString 1 -100\x0A
IO Output Level -100 Device Number 1 Instance ID testString Output 24	SETD 1 OUTLVL testString 24 -100\x0A
IO Output Level -100 Device Number 16 Instance ID testString Output 1	SETD 16 OUTLVL testString 1 -100\x0A
IO Output Level -100 Device Number 16 Instance ID testString Output 24	SETD 16 OUTLVL testString 24 -100\x0A
IO Output Mute Off Device Number 1 Instance ID testString Output 1	SETD 1 OUTMUTE testString 1 0\x0A
IO Output Mute Off Device Number 1 Instance ID testString Output 24	SETD 1 OUTMUTE testString 24 0\x0A
IO Output Mute Off Device Number 16 Instance ID testString Output 1	SETD 16 OUTMUTE testString 1 0\x0A
IO Output Mute Off Device Number 16 Instance ID testString Output 24	SETD 16 OUTMUTE testString 24 0\x0A
IO Output Mute On Device Number 1 Instance ID testString Output 1	SETD 1 OUTMUTE testString 1 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

IO Output Mute On Device Number 1 Instance ID testString Output 24	SETD 1 OUTMUTE testString 24 1\x0A
IO Output Mute On Device Number 16 Instance ID testString Output 1	SETD 16 OUTMUTE testString 1 1\x0A
IO Output Mute On Device Number 16 Instance ID testString Output 24	SETD 16 OUTMUTE testString 24 1\x0A
Logic State 0 Device Number 1 Instance ID testString Input 1	SETD 1 LGSTATE testString 1 0\x0A
Logic State 0 Device Number 1 Instance ID testString Input 8	SETD 1 LGSTATE testString 8 0\x0A
Logic State 0 Device Number 16 Instance ID testString Input 1	SETD 16 LGSTATE testString 1 0\x0A
Logic State 0 Device Number 16 Instance ID testString Input 8	SETD 16 LGSTATE testString 8 0\x0A
Logic State 1 Device Number 1 Instance ID testString Input 1	SETD 1 LGSTATE testString 1 1\x0A
Logic State 1 Device Number 1 Instance ID testString Input 8	SETD 1 LGSTATE testString 8 1\x0A
Logic State 1 Device Number 16 Instance ID testString Input 1	SETD 16 LGSTATE testString 1 1\x0A
Logic State 1 Device Number 16 Instance ID testString Input 8	SETD 16 LGSTATE testString 8 1\x0A
Matrix Mixer Crosspoint Level 0 Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 MMLVLXP testString 1 1 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 MMLVLXP testString 1 42 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 MMLVLXP testString 56 1 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 MMLVLXP testString 56 42 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 MMLVLXP testString 1 1 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 MMLVLXP testString 1 42 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 MMLVLXP testString 56 1 0\x0A
Matrix Mixer Crosspoint Level 0 Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 MMLVLXP testString 56 42 0\x0A
Matrix Mixer Crosspoint Level -100 Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 MMLVLXP testString 1 1 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 MMLVLXP testString 1 42 -100\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Matrix Mixer Crosspoint Level -100 Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 MMLVLXP testString 56 1 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 MMLVLXP testString 56 42 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 MMLVLXP testString 1 1 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 MMLVLXP testString 1 42 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 MMLVLXP testString 56 1 -100\x0A
Matrix Mixer Crosspoint Level -100 Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 MMLVLXP testString 56 42 -100\x0A
Matrix Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 MMMUTEXP testString 1 1 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 MMMUTEXP testString 1 42 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 MMMUTEXP testString 56 1 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 MMMUTEXP testString 56 42 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 MMMUTEXP testString 1 1 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 MMMUTEXP testString 1 42 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 MMMUTEXP testString 56 1 0\x0A
Matrix Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 MMMUTEXP testString 56 42 0\x0A
Matrix Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 MMMUTEXP testString 1 1 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 MMMUTEXP testString 1 42 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 MMMUTEXP testString 56 1 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 MMMUTEXP testString 56 42 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 MMMUTEXP testString 1 1 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 MMMUTEXP testString 1 42 1\x0A
Matrix Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 MMMUTEXP testString 56 1 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Matrix Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 MMMUTEXP testString 56 42 1\x0A
Matrix Mixer Input Level -100 Device Number 1 Instance ID testString Input 1	SETD 1 MMLVLIN testString 1 -100\x0A
Matrix Mixer Input Level -100 Device Number 1 Instance ID testString Input 56	SETD 1 MMLVLIN testString 56 -100\x0A
Matrix Mixer Input Level -100 Device Number 16 Instance ID testString Input 1	SETD 16 MMLVLIN testString 1 -100\x0A
Matrix Mixer Input Level -100 Device Number 16 Instance ID testString Input 56	SETD 16 MMLVLIN testString 56 -100\x0A
Matrix Mixer Input Level 12 Device Number 1 Instance ID testString Input 1	SETD 1 MMLVLIN testString 1 12\x0A
Matrix Mixer Input Level 12 Device Number 1 Instance ID testString Input 56	SETD 1 MMLVLIN testString 56 12\x0A
Matrix Mixer Input Level 12 Device Number 16 Instance ID testString Input 1	SETD 16 MMLVLIN testString 1 12\x0A
Matrix Mixer Input Level 12 Device Number 16 Instance ID testString Input 56	SETD 16 MMLVLIN testString 56 12\x0A
Matrix Mixer Input Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 MMMUTEIN testString 1 0\x0A
Matrix Mixer Input Mute Off Device Number 1 Instance ID testString Input 56	SETD 1 MMMUTEIN testString 56 0\x0A
Matrix Mixer Input Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 MMMUTEIN testString 1 0\x0A
Matrix Mixer Input Mute Off Device Number 16 Instance ID testString Input 56	SETD 16 MMMUTEIN testString 56 0\x0A
Matrix Mixer Input Mute On Device Number 1 Instance ID testString Input 1	SETD 1 MMMUTEIN testString 1 1\x0A
Matrix Mixer Input Mute On Device Number 1 Instance ID testString Input 56	SETD 1 MMMUTEIN testString 56 1\x0A
Matrix Mixer Input Mute On Device Number 16 Instance ID testString Input 1	SETD 16 MMMUTEIN testString 1 1\x0A
Matrix Mixer Input Mute On Device Number 16 Instance ID testString Input 56	SETD 16 MMMUTEIN testString 56 1\x0A
Matrix Mixer Output Level -100 Device Number 1 Instance ID testString Output 1	SETD 1 MMLVLOUT testString 1 -100\x0A
Matrix Mixer Output Level -100 Device Number 1 Instance ID testString Output 42	SETD 1 MMLVLOUT testString 42 -100\x0A
Matrix Mixer Output Level -100 Device Number 16 Instance ID testString Output 1	SETD 16 MMLVLOUT testString 1 -100\x0A
Matrix Mixer Output Level -100 Device Number 16 Instance ID testString Output 42	SETD 16 MMLVLOUT testString 42 -100\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Matrix Mixer Output Level 12 Device Number 1 Instance ID testString Output 1	SETD 1 MMLVLOUT testString 1 12\x0A
Matrix Mixer Output Level 12 Device Number 1 Instance ID testString Output 42	SETD 1 MMLVLOUT testString 42 12\x0A
Matrix Mixer Output Level 12 Device Number 16 Instance ID testString Output 1	SETD 16 MMLVLOUT testString 1 12\x0A
Matrix Mixer Output Level 12 Device Number 16 Instance ID testString Output 42	SETD 16 MMLVLOUT testString 42 12\x0A
Matrix Mixer Output Mute Off Device Number 1 Instance ID testString Output 1	SETD 1 MMMUTEOUT testString 1 0\x0A
Matrix Mixer Output Mute Off Device Number 1 Instance ID testString Output 42	SETD 1 MMMUTEOUT testString 42 0\x0A
Matrix Mixer Output Mute Off Device Number 16 Instance ID testString Output 1	SETD 16 MMMUTEOUT testString 1 0\x0A
Matrix Mixer Output Mute Off Device Number 16 Instance ID testString Output 42	SETD 16 MMMUTEOUT testString 42 0\x0A
Matrix Mixer Output Mute On Device Number 1 Instance ID testString Output 1	SETD 1 MMMUTEOUT testString 1 1\x0A
Matrix Mixer Output Mute On Device Number 1 Instance ID testString Output 42	SETD 1 MMMUTEOUT testString 42 1\x0A
Matrix Mixer Output Mute On Device Number 16 Instance ID testString Output 1	SETD 16 MMMUTEOUT testString 1 1\x0A
Matrix Mixer Output Mute On Device Number 16 Instance ID testString Output 42	SETD 16 MMMUTEOUT testString 42 1\x0A
Mute Block Off Device Number 1 Instance ID testString Channel 1	SETD 1 MBMUTE testString 1 0\x0A
Mute Block Off Device Number 1 Instance ID testString Channel 16	SETD 1 MBMUTE testString 16 0\x0A
Mute Block Off Device Number 16 Instance ID testString Channel 1	SETD 16 MBMUTE testString 1 0\x0A
Mute Block Off Device Number 16 Instance ID testString Channel 16	SETD 16 MBMUTE testString 16 0\x0A
Mute Block On Device Number 1 Instance ID testString Channel 1	SETD 1 MBMUTE testString 1 1\x0A
Mute Block On Device Number 1 Instance ID testString Channel 16	SETD 1 MBMUTE testString 16 1\x0A
Mute Block On Device Number 16 Instance ID testString Channel 1	SETD 16 MBMUTE testString 1 1\x0A
Mute Block On Device Number 16 Instance ID testString Channel 16	SETD 16 MBMUTE testString 16 1\x0A
Preset Recall 1001	RECALL 0 PRESET 1001\x0A
Preset Recall 1128	RECALL 0 PRESET 1128\x0A

Global Scripter Module Communication Sheet

Room Combine Output Level -100 Device Number 1 Instance ID testString Output 1	SETD 1 RMCMBLVL testString 1 -100\x0A
Room Combine Output Level -100 Device Number 1 Instance ID testString Output 32	SETD 1 RMCMBLVL testString 32 -100\x0A
Room Combine Output Level -100 Device Number 16 Instance ID testString Output 1	SETD 16 RMCMBLVL testString 1 -100\x0A
Room Combine Output Level -100 Device Number 16 Instance ID testString Output 32	SETD 16 RMCMBLVL testString 32 -100\x0A
Room Combine Output Level 12 Device Number 1 Instance ID testString Output 1	SETD 1 RMCMBLVL testString 1 12\x0A
Room Combine Output Level 12 Device Number 1 Instance ID testString Output 32	SETD 1 RMCMBLVL testString 32 12\x0A
Room Combine Output Level 12 Device Number 16 Instance ID testString Output 1	SETD 16 RMCMBLVL testString 1 12\x0A
Room Combine Output Level 12 Device Number 16 Instance ID testString Output 32	SETD 16 RMCMBLVL testString 32 12\x0A
Room Combine Output Mute Off Device Number 1 Instance ID testString Output 1	SETD 1 RMCMBMUTE testString 1 0\x0A
Room Combine Output Mute Off Device Number 1 Instance ID testString Output 32	SETD 1 RMCMBMUTE testString 32 0\x0A
Room Combine Output Mute Off Device Number 16 Instance ID testString Output 1	SETD 16 RMCMBMUTE testString 1 0\x0A
Room Combine Output Mute Off Device Number 16 Instance ID testString Output 32	SETD 16 RMCMBMUTE testString 32 0\x0A
Room Combine Output Mute On Device Number 1 Instance ID testString Output 1	SETD 1 RMCMBMUTE testString 1 1\x0A
Room Combine Output Mute On Device Number 1 Instance ID testString Output 32	SETD 1 RMCMBMUTE testString 32 1\x0A
Room Combine Output Mute On Device Number 16 Instance ID testString Output 1	SETD 16 RMCMBMUTE testString 1 1\x0A
Room Combine Output Mute On Device Number 16 Instance ID testString Output 32	SETD 16 RMCMBMUTE testString 32 1\x0A
Room Combine Wall Closed Device Number 1 Instance ID testString Wall 1	SETD 1 RMCMBWALL testString 1 1\x0A
Room Combine Wall Closed Device Number 1 Instance ID testString Wall 52	SETD 1 RMCMBWALL testString 52 1\x0A
Room Combine Wall Closed Device Number 16 Instance ID testString Wall 1	SETD 16 RMCMBWALL testString 1 1\x0A
Room Combine Wall Closed Device Number 16 Instance ID testString Wall 52	SETD 16 RMCMBWALL testString 52 1\x0A
Room Combine Wall Open Device Number 1 Instance ID testString Wall 1	SETD 1 RMCMBWALL testString 1 0\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Room Combine Wall Open Device Number 1 Instance ID testString Wall 52	SETD 1 RMCMBWALL testString 52 0\x0A
Room Combine Wall Open Device Number 16 Instance ID testString Wall 1	SETD 16 RMCMBWALL testString 1 0\x0A
Room Combine Wall Open Device Number 16 Instance ID testString Wall 52	SETD 16 RMCMBWALL testString 52 0\x0A
Router Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 RTRMUTEXP testString 1 1 0\x0A
Router Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 56	SETD 1 RTRMUTEXP testString 1 56 0\x0A
Router Crosspoint Mute Off Device Number 1 Instance ID testString Input 32 Output 1	SETD 1 RTRMUTEXP testString 32 1 0\x0A
Router Crosspoint Mute Off Device Number 1 Instance ID testString Input 32 Output 56	SETD 1 RTRMUTEXP testString 32 56 0\x0A
Router Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 RTRMUTEXP testString 1 1 0\x0A
Router Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 56	SETD 16 RTRMUTEXP testString 1 56 0\x0A
Router Crosspoint Mute Off Device Number 16 Instance ID testString Input 32 Output 1	SETD 16 RTRMUTEXP testString 32 1 0\x0A
Router Crosspoint Mute Off Device Number 16 Instance ID testString Input 32 Output 56	SETD 16 RTRMUTEXP testString 32 56 0\x0A
Router Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 RTRMUTEXP testString 1 1 1\x0A
Router Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 56	SETD 1 RTRMUTEXP testString 1 56 1\x0A
Router Crosspoint Mute On Device Number 1 Instance ID testString Input 32 Output 1	SETD 1 RTRMUTEXP testString 32 1 1\x0A
Router Crosspoint Mute On Device Number 1 Instance ID testString Input 32 Output 56	SETD 1 RTRMUTEXP testString 32 56 1\x0A
Router Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 RTRMUTEXP testString 1 1 1\x0A
Router Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 56	SETD 16 RTRMUTEXP testString 1 56 1\x0A
Router Crosspoint Mute On Device Number 16 Instance ID testString Input 32 Output 1	SETD 16 RTRMUTEXP testString 32 1 1\x0A
Router Crosspoint Mute On Device Number 16 Instance ID testString Input 32 Output 56	SETD 16 RTRMUTEXP testString 32 56 1\x0A
Source Selection Source 1 Device Number 1 Instance ID testString	SETD 1 SRCSELSRC testString 1 1\x0A
Source Selection Source 1 Device Number 16 Instance ID testString	SETD 16 SRCSELSRC testString 1 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Source Selection Source 16 Device Number 1 Instance ID testString	SETD 1 SRCSELSRC testString 1 16\x0A
Source Selection Source 16 Device Number 16 Instance ID testString	SETD 16 SRCSELSRC testString 1 16\x0A
Source Selection Source None Device Number 1 Instance ID testString	SETD 1 SRCSELSRC testString 1 None\x0A
Source Selection Source None Device Number 16 Instance ID testString	SETD 16 SRCSELSRC testString 1 None\x0A
Standard Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 SMMUTEXP testString 1 1 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 SMMUTEXP testString 1 42 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 SMMUTEXP testString 56 1 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 SMMUTEXP testString 56 42 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 SMMUTEXP testString 1 1 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 SMMUTEXP testString 1 42 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 SMMUTEXP testString 56 1 1\x0A
Standard Mixer Crosspoint Mute Off Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 SMMUTEXP testString 56 42 1\x0A
Standard Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 1	SETD 1 SMMUTEXP testString 1 1 0\x0A
Standard Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 1 Output 42	SETD 1 SMMUTEXP testString 1 42 0\x0A
Standard Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 56 Output 1	SETD 1 SMMUTEXP testString 56 1 0\x0A
Standard Mixer Crosspoint Mute On Device Number 1 Instance ID testString Input 56 Output 42	SETD 1 SMMUTEXP testString 56 42 0\x0A
Standard Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 1	SETD 16 SMMUTEXP testString 1 1 0\x0A
Standard Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 1 Output 42	SETD 16 SMMUTEXP testString 1 42 0\x0A
Standard Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 56 Output 1	SETD 16 SMMUTEXP testString 56 1 0\x0A
Standard Mixer Crosspoint Mute On Device Number 16 Instance ID testString Input 56 Output 42	SETD 16 SMMUTEXP testString 56 42 0\x0A
Standard Mixer Input Level -100 Device Number 1 Instance ID testString Input 1	SETD 1 SMLVLIN testString 1 -100\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Standard Mixer Input Level -100 Device Number 1 Instance ID testString Input 56	SETD 1 SMLVLIN testString 56 -100\x0A
Standard Mixer Input Level -100 Device Number 16 Instance ID testString Input 1	SETD 16 SMLVLIN testString 1 -100\x0A
Standard Mixer Input Level -100 Device Number 16 Instance ID testString Input 56	SETD 16 SMLVLIN testString 56 -100\x0A
Standard Mixer Input Level 12 Device Number 1 Instance ID testString Input 1	SETD 1 SMLVLIN testString 1 12\x0A
Standard Mixer Input Level 12 Device Number 1 Instance ID testString Input 56	SETD 1 SMLVLIN testString 56 12\x0A
Standard Mixer Input Level 12 Device Number 16 Instance ID testString Input 1	SETD 16 SMLVLIN testString 1 12\x0A
Standard Mixer Input Level 12 Device Number 16 Instance ID testString Input 56	SETD 16 SMLVLIN testString 56 12\x0A
Standard Mixer Input Mute Off Device Number 1 Instance ID testString Input 1	SETD 1 SMMUTEIN testString 1 0\x0A
Standard Mixer Input Mute Off Device Number 1 Instance ID testString Input 56	SETD 1 SMMUTEIN testString 56 0\x0A
Standard Mixer Input Mute Off Device Number 16 Instance ID testString Input 1	SETD 16 SMMUTEIN testString 1 0\x0A
Standard Mixer Input Mute Off Device Number 16 Instance ID testString Input 56	SETD 16 SMMUTEIN testString 56 0\x0A
Standard Mixer Input Mute On Device Number 1 Instance ID testString Input 1	SETD 1 SMMUTEIN testString 1 1\x0A
Standard Mixer Input Mute On Device Number 1 Instance ID testString Input 56	SETD 1 SMMUTEIN testString 56 1\x0A
Standard Mixer Input Mute On Device Number 16 Instance ID testString Input 1	SETD 16 SMMUTEIN testString 1 1\x0A
Standard Mixer Input Mute On Device Number 16 Instance ID testString Input 56	SETD 16 SMMUTEIN testString 56 1\x0A
Standard Mixer Output Level -100 Device Number 1 Instance ID testString Output 1	SETD 1 SMLVLOUT testString 1 -100\x0A
Standard Mixer Output Level -100 Device Number 1 Instance ID testString Output 42	SETD 1 SMLVLOUT testString 42 -100\x0A
Standard Mixer Output Level -100 Device Number 16 Instance ID testString Output 1	SETD 16 SMLVLOUT testString 1 -100\x0A
Standard Mixer Output Level -100 Device Number 16 Instance ID testString Output 42	SETD 16 SMLVLOUT testString 42 -100\x0A
Standard Mixer Output Level 12 Device Number 1 Instance ID testString Output 1	SETD 1 SMLVLOUT testString 1 12\x0A
Standard Mixer Output Level 12 Device Number 1 Instance ID testString Output 42	SETD 1 SMLVLOUT testString 42 12\x0A

Global Scripter Module Communication Sheet

Standard Mixer Output Level 12 Device Number 16 Instance ID testString Output 1	SETD 16 SMLVLOUT testString 1 12\x0A
Standard Mixer Output Level 12 Device Number 16 Instance ID testString Output 42	SETD 16 SMLVLOUT testString 42 12\x0A
Standard Mixer Output Mute Off Device Number 1 Instance ID testString Output 1	SETD 1 SMMUTEOUT testString 1 0\x0A
Standard Mixer Output Mute Off Device Number 1 Instance ID testString Output 42	SETD 1 SMMUTEOUT testString 42 0\x0A
Standard Mixer Output Mute Off Device Number 16 Instance ID testString Output 1	SETD 16 SMMUTEOUT testString 1 0\x0A
Standard Mixer Output Mute Off Device Number 16 Instance ID testString Output 42	SETD 16 SMMUTEOUT testString 42 0\x0A
Standard Mixer Output Mute On Device Number 1 Instance ID testString Output 1	SETD 1 SMMUTEOUT testString 1 1\x0A
Standard Mixer Output Mute On Device Number 1 Instance ID testString Output 42	SETD 1 SMMUTEOUT testString 42 1\x0A
Standard Mixer Output Mute On Device Number 16 Instance ID testString Output 1	SETD 16 SMMUTEOUT testString 1 1\x0A
Standard Mixer Output Mute On Device Number 16 Instance ID testString Output 42	SETD 16 SMMUTEOUT testString 42 1\x0A
TI Auto Answer 1 Ring Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 1\x0A
TI Auto Answer 1 Ring Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 1\x0A
TI Auto Answer 2 Rings Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 2\x0A
TI Auto Answer 2 Rings Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 2\x0A
TI Auto Answer 3 Rings Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 3\x0A
TI Auto Answer 3 Rings Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 3\x0A
TI Auto Answer 4 Rings Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 4\x0A
TI Auto Answer 4 Rings Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 4\x0A
TI Auto Answer 5 Rings Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 5\x0A
TI Auto Answer 5 Rings Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 5\x0A
TI Auto Answer Off Device Number 1 Instance ID testString	SETD 1 TIAUTOANSWER testString 0\x0A

Global Scripter Module Communication Sheet

TI Auto Answer Off Device Number 16 Instance ID testString	SETD 16 TIAUTOANSWER testString 0\x0A
TI DTMF # Device Number 1 Instance ID testString	DIAL 1 TIPHONENUM testString #\x0A
TI DTMF # Device Number 16 Instance ID testString	DIAL 16 TIPHONENUM testString #\x0A
TI DTMF * Device Number 1 Instance ID testString	DIAL 1 TIPHONENUM testString *\x0A
TI DTMF * Device Number 16 Instance ID testString	DIAL 16 TIPHONENUM testString *\x0A
TI DTMF 0 Device Number 1 Instance ID testString	DIAL 1 TIPHONENUM testString 0\x0A
TI DTMF 0 Device Number 16 Instance ID testString	DIAL 16 TIPHONENUM testString 0\x0A
TI DTMF 9 Device Number 1 Instance ID testString	DIAL 1 TIPHONENUM testString 9\x0A
TI DTMF 9 Device Number 16 Instance ID testString	DIAL 16 TIPHONENUM testString 9\x0A
TI Hook Dial Device Number 1 Instance ID testString	DIAL 1 TIPHONENUM testString Dial\x0A
TI Hook Dial Device Number 16 Instance ID testString	DIAL 16 TIPHONENUM testString Dial\x0A
TI Hook Flash Device Number 1 Instance ID testString	FLASH 1 TILINE testString\x0A
TI Hook Flash Device Number 16 Instance ID testString	FLASH 16 TILINE testString\x0A
TI Hook Off Device Number 1 Instance ID testString	SETD 1 TIHOOKSTATE testString 0\x0A
TI Hook Off Device Number 16 Instance ID testString	SETD 16 TIHOOKSTATE testString 0\x0A
TI Hook On Device Number 1 Instance ID testString	SETD 1 TIHOOKSTATE testString 1\x0A
TI Hook On Device Number 16 Instance ID testString	SETD 16 TIHOOKSTATE testString 1\x0A
TI Phone Echo Cancellation Off Device Number 1 Instance ID testString	SETD 1 TIRXLEC testString 0\x0A
TI Phone Echo Cancellation Off Device Number 16 Instance ID testString	SETD 16 TIRXLEC testString 0\x0A
TI Phone Echo Cancellation On Device Number 1 Instance ID testString	SETD 1 TIRXLEC testString 1\x0A
TI Phone Echo Cancellation On Device Number 16 Instance ID testString	SETD 16 TIRXLEC testString 1\x0A
TI Phone Receive Level -100 Device Number 1 Instance ID testString	SETD 1 TIRXLVL testString -100\x0A
TI Phone Receive Level -100 Device Number 16 Instance ID testString	SETD 16 TIRXLVL testString -100\x0A
TI Phone Receive Level 12 Device Number 1 Instance ID testString	SETD 1 TIRXLVL testString 12\x0A
TI Phone Receive Level 12 Device Number 16 Instance ID testString	SETD 16 TIRXLVL testString 12\x0A
TI Phone Receive Mute Off Device Number 1 Instance ID testString	SETD 1 TIRXMUTE testString 0\x0A
TI Phone Receive Mute Off Device Number 16 Instance ID testString	SETD 16 TIRXMUTE testString 0\x0A
TI Phone Receive Mute On Device Number 1 Instance ID testString	SETD 1 TIRXMUTE testString 1\x0A
TI Phone Receive Mute On Device Number 16 Instance ID testString	SETD 16 TIRXMUTE testString 1\x0A

Global Scripter Module Communication Sheet

TI Phone Transmit Level 0 Device Number 1 Instance ID testString	SETD 1 TITXLVL testString 0\x0A
TI Phone Transmit Level 0 Device Number 16 Instance ID testString	SETD 16 TITXLVL testString 0\x0A
TI Phone Transmit Level -100 Device Number 1 Instance ID testString	SETD 1 TITXLVL testString -100\x0A
TI Phone Transmit Level -100 Device Number 16 Instance ID testString	SETD 16 TITXLVL testString -100\x0A
TI Phone Transmit Mute Off Device Number 1 Instance ID testString	SETD 1 TITXMUTE testString 0\x0A
TI Phone Transmit Mute Off Device Number 16 Instance ID testString	SETD 16 TITXMUTE testString 0\x0A
TI Phone Transmit Mute On Device Number 1 Instance ID testString	SETD 1 TITXMUTE testString 1\x0A
TI Phone Transmit Mute On Device Number 16 Instance ID testString	SETD 16 TITXMUTE testString 1\x0A
TI Speed Dial 1 Device Number 1 Instance ID testString	DIAL 1 TISPEEDDIAL testString 1\x0A
TI Speed Dial 1 Device Number 16 Instance ID testString	DIAL 16 TISPEEDDIAL testString 1\x0A
TI Speed Dial 16 Device Number 1 Instance ID testString	DIAL 1 TISPEEDDIAL testString 16\x0A
TI Speed Dial 16 Device Number 16 Instance ID testString	DIAL 16 TISPEEDDIAL testString 16\x0A
VoIP Auto Answer Off Device Number 1 Instance ID testString Line 1	SETD 1 VOIPAAENABLE testString 1 0\x0A
VoIP Auto Answer Off Device Number 1 Instance ID testString Line 2	SETD 1 VOIPAAENABLE testString 2 0\x0A
VoIP Auto Answer Off Device Number 16 Instance ID testString Line 1	SETD 16 VOIPAAENABLE testString 1 0\x0A
VoIP Auto Answer Off Device Number 16 Instance ID testString Line 2	SETD 16 VOIPAAENABLE testString 2 0\x0A
VoIP Auto Answer On Device Number 1 Instance ID testString Line 1	SETD 1 VOIPAAENABLE testString 1 1\x0A
VoIP Auto Answer On Device Number 1 Instance ID testString Line 2	SETD 1 VOIPAAENABLE testString 2 1\x0A
VoIP Auto Answer On Device Number 16 Instance ID testString Line 1	SETD 16 VOIPAAENABLE testString 1 1\x0A
VoIP Auto Answer On Device Number 16 Instance ID testString Line 2	SETD 16 VOIPAAENABLE testString 2 1\x0A
VoIP DTMF # Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPPHONENUM testString 1 #\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

VoIP DTMF # Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPPHONENUM testString 2 #\x0A
VoIP DTMF # Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPPHONENUM testString 1 #\x0A
VoIP DTMF # Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPPHONENUM testString 2 #\x0A
VoIP DTMF * Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPPHONENUM testString 1 *\x0A
VoIP DTMF * Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPPHONENUM testString 2 *\x0A
VoIP DTMF * Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPPHONENUM testString 1 *\x0A
VoIP DTMF * Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPPHONENUM testString 2 *\x0A
VoIP DTMF 0 Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPPHONENUM testString 1 0\x0A
VoIP DTMF 0 Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPPHONENUM testString 2 0\x0A
VoIP DTMF 0 Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPPHONENUM testString 1 0\x0A
VoIP DTMF 0 Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPPHONENUM testString 2 0\x0A
VoIP DTMF 9 Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPPHONENUM testString 1 9\x0A
VoIP DTMF 9 Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPPHONENUM testString 2 9\x0A
VoIP DTMF 9 Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPPHONENUM testString 1 9\x0A
VoIP DTMF 9 Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPPHONENUM testString 2 9\x0A
VoIP Hook Answer Device Number 1 Instance ID testString Line 1	ANS 1 VOIPCALL testString 1\x0A
VoIP Hook Answer Device Number 1 Instance ID testString Line 2	ANS 1 VOIPCALL testString 2\x0A
VoIP Hook Answer Device Number 16 Instance ID testString Line 1	ANS 16 VOIPCALL testString 1\x0A
VoIP Hook Answer Device Number 16 Instance ID testString Line 2	ANS 16 VOIPCALL testString 2\x0A
VoIP Hook Dial Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPPHONENUM testString 1 Dial\x0A
VoIP Hook Dial Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPPHONENUM testString 2 Dial\x0A

Global Scripter Module Communication Sheet

VoIP Hook Dial Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPPHONENUM testString 1 Dial\x0A
VoIP Hook Dial Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPPHONENUM testString 2 Dial\x0A
VoIP Hook End/Reject Device Number 1 Instance ID testString Line 1	END 1 VOIPCALL testString 1\x0A
VoIP Hook End/Reject Device Number 1 Instance ID testString Line 2	END 1 VOIPCALL testString 2\x0A
VoIP Hook End/Reject Device Number 16 Instance ID testString Line 1	END 16 VOIPCALL testString 1\x0A
VoIP Hook End/Reject Device Number 16 Instance ID testString Line 2	END 16 VOIPCALL testString 2\x0A
VoIP Hook Hold Device Number 1 Instance ID testString Line 1	HOLD 1 VOIPCALL testString 1\x0A
VoIP Hook Hold Device Number 1 Instance ID testString Line 2	HOLD 1 VOIPCALL testString 2\x0A
VoIP Hook Hold Device Number 16 Instance ID testString Line 1	HOLD 16 VOIPCALL testString 1\x0A
VoIP Hook Hold Device Number 16 Instance ID testString Line 2	HOLD 16 VOIPCALL testString 2\x0A
VoIP Hook Off Device Number 1 Instance ID testString Line 1	SETD 1 VOIPHOOKSTATE testString 1 0\x0A
VoIP Hook Off Device Number 1 Instance ID testString Line 2	SETD 1 VOIPHOOKSTATE testString 2 0\x0A
VoIP Hook Off Device Number 16 Instance ID testString Line 1	SETD 16 VOIPHOOKSTATE testString 1 0\x0A
VoIP Hook Off Device Number 16 Instance ID testString Line 2	SETD 16 VOIPHOOKSTATE testString 2 0\x0A
VoIP Hook On Device Number 1 Instance ID testString Line 1	SETD 1 VOIPHOOKSTATE testString 1 1\x0A
VoIP Hook On Device Number 1 Instance ID testString Line 2	SETD 1 VOIPHOOKSTATE testString 2 1\x0A
VoIP Hook On Device Number 16 Instance ID testString Line 1	SETD 16 VOIPHOOKSTATE testString 1 1\x0A
VoIP Hook On Device Number 16 Instance ID testString Line 2	SETD 16 VOIPHOOKSTATE testString 2 1\x0A
VoIP Hook Resume Device Number 1 Instance ID testString Line 1	RESUME 1 VOIPCALL testString 1\x0A
VoIP Hook Resume Device Number 1 Instance ID testString Line 2	RESUME 1 VOIPCALL testString 2\x0A
VoIP Hook Resume Device Number 16 Instance ID testString Line 1	RESUME 16 VOIPCALL testString 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

VoIP Hook Resume Device Number 16 Instance ID testString Line 2	RESUME 16 VOIPCALL testString 2\x0A
VoIP Receive Level -100 Device Number 1 Instance ID testString Line 1	SETD 1 VOIPRXLVL testString 1 -100\x0A
VoIP Receive Level -100 Device Number 1 Instance ID testString Line 2	SETD 1 VOIPRXLVL testString 2 -100\x0A
VoIP Receive Level -100 Device Number 16 Instance ID testString Line 1	SETD 16 VOIPRXLVL testString 1 -100\x0A
VoIP Receive Level -100 Device Number 16 Instance ID testString Line 2	SETD 16 VOIPRXLVL testString 2 -100\x0A
VoIP Receive Level 12 Device Number 1 Instance ID testString Line 1	SETD 1 VOIPRXLVL testString 1 12\x0A
VoIP Receive Level 12 Device Number 1 Instance ID testString Line 2	SETD 1 VOIPRXLVL testString 2 12\x0A
VoIP Receive Level 12 Device Number 16 Instance ID testString Line 1	SETD 16 VOIPRXLVL testString 1 12\x0A
VoIP Receive Level 12 Device Number 16 Instance ID testString Line 2	SETD 16 VOIPRXLVL testString 2 12\x0A
VoIP Receive Mute Off Device Number 1 Instance ID testString Line 1	SETD 1 VOIPRXMUTE testString 1 0\x0A
VoIP Receive Mute Off Device Number 1 Instance ID testString Line 2	SETD 1 VOIPRXMUTE testString 2 0\x0A
VoIP Receive Mute Off Device Number 16 Instance ID testString Line 1	SETD 16 VOIPRXMUTE testString 1 0\x0A
VoIP Receive Mute Off Device Number 16 Instance ID testString Line 2	SETD 16 VOIPRXMUTE testString 2 0\x0A
VoIP Receive Mute On Device Number 1 Instance ID testString Line 1	SETD 1 VOIPRXMUTE testString 1 1\x0A
VoIP Receive Mute On Device Number 1 Instance ID testString Line 2	SETD 1 VOIPRXMUTE testString 2 1\x0A
VoIP Receive Mute On Device Number 16 Instance ID testString Line 1	SETD 16 VOIPRXMUTE testString 1 1\x0A
VoIP Receive Mute On Device Number 16 Instance ID testString Line 2	SETD 16 VOIPRXMUTE testString 2 1\x0A
VoIP Speed Dial 1 Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPSPEEDDIAL testString 1\x0A
VoIP Speed Dial 1 Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPSPEEDDIAL testString 2\x0A
VoIP Speed Dial 1 Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPSPEEDDIAL testString 1\x0A
VoIP Speed Dial 1 Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPSPEEDDIAL testString 2\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

VoIP Speed Dial 16 Device Number 1 Instance ID testString Line 1	DIAL 1 VOIPSPEEDDIAL testString 1\x0A
VoIP Speed Dial 16 Device Number 1 Instance ID testString Line 2	DIAL 1 VOIPSPEEDDIAL testString 2\x0A
VoIP Speed Dial 16 Device Number 16 Instance ID testString Line 1	DIAL 16 VOIPSPEEDDIAL testString 1\x0A
VoIP Speed Dial 16 Device Number 16 Instance ID testString Line 2	DIAL 16 VOIPSPEEDDIAL testString 2\x0A
VoIP Transmit Level 0 Device Number 1 Instance ID testString Line 1	SETD 1 VOIPTXLVL testString 1 0\x0A
VoIP Transmit Level 0 Device Number 1 Instance ID testString Line 2	SETD 1 VOIPTXLVL testString 2 0\x0A
VoIP Transmit Level 0 Device Number 16 Instance ID testString Line 1	SETD 16 VOIPTXLVL testString 1 0\x0A
VoIP Transmit Level 0 Device Number 16 Instance ID testString Line 2	SETD 16 VOIPTXLVL testString 2 0\x0A
VoIP Transmit Level -100 Device Number 1 Instance ID testString Line 1	SETD 1 VOIPTXLVL testString 1 -100\x0A
VoIP Transmit Level -100 Device Number 1 Instance ID testString Line 2	SETD 1 VOIPTXLVL testString 2 -100\x0A
VoIP Transmit Level -100 Device Number 16 Instance ID testString Line 1	SETD 16 VOIPTXLVL testString 1 -100\x0A
VoIP Transmit Level -100 Device Number 16 Instance ID testString Line 2	SETD 16 VOIPTXLVL testString 2 -100\x0A
VoIP Transmit Mute Off Device Number 1 Instance ID testString Line 1	SETD 1 VOIPTXMUTE testString 1 0\x0A
VoIP Transmit Mute Off Device Number 1 Instance ID testString Line 2	SETD 1 VOIPTXMUTE testString 2 0\x0A
VoIP Transmit Mute Off Device Number 16 Instance ID testString Line 1	SETD 16 VOIPTXMUTE testString 1 0\x0A
VoIP Transmit Mute Off Device Number 16 Instance ID testString Line 2	SETD 16 VOIPTXMUTE testString 2 0\x0A
VoIP Transmit Mute On Device Number 1 Instance ID testString Line 1	SETD 1 VOIPTXMUTE testString 1 1\x0A
VoIP Transmit Mute On Device Number 1 Instance ID testString Line 2	SETD 1 VOIPTXMUTE testString 2 1\x0A
VoIP Transmit Mute On Device Number 16 Instance ID testString Line 1	SETD 16 VOIPTXMUTE testString 1 1\x0A
VoIP Transmit Mute On Device Number 16 Instance ID testString Line 2	SETD 16 VOIPTXMUTE testString 2 1\x0A

Appendix B. Update Commands

AEC Enable Device Number 1 Instance ID testString Input 1	GETD 1 AECENABLE testString 1\x0A
AEC Enable Device Number 1 Instance ID testString Input 24	GETD 1 AECENABLE testString 24\x0A
AEC Enable Device Number 16 Instance ID testString Input 1	GETD 16 AECENABLE testString 1\x0A
AEC Enable Device Number 16 Instance ID testString Input 24	GETD 16 AECENABLE testString 24\x0A
AEC Input Gain Device Number 1 Instance ID testString Input 1	GETD 1 AECMICGAIN testString 1\x0A
AEC Input Gain Device Number 1 Instance ID testString Input 24	GETD 1 AECMICGAIN testString 24\x0A
AEC Input Gain Device Number 16 Instance ID testString Input 1	GETD 16 AECMICGAIN testString 1\x0A
AEC Input Gain Device Number 16 Instance ID testString Input 24	GETD 16 AECMICGAIN testString 24\x0A
AEC Input Level Device Number 1 Instance ID testString Input 1	GETD 1 AECINPLVL testString 1\x0A
AEC Input Level Device Number 1 Instance ID testString Input 24	GETD 1 AECINPLVL testString 24\x0A
AEC Input Level Device Number 16 Instance ID testString Input 1	GETD 16 AECINPLVL testString 1\x0A
AEC Input Level Device Number 16 Instance ID testString Input 24	GETD 16 AECINPLVL testString 24\x0A
AEC Input Mute Device Number 1 Instance ID testString Input 1	GETD 1 AECINPMUTE testString 1\x0A
AEC Input Mute Device Number 1 Instance ID testString Input 24	GETD 1 AECINPMUTE testString 24\x0A
AEC Input Mute Device Number 16 Instance ID testString Input 1	GETD 16 AECINPMUTE testString 1\x0A
AEC Input Mute Device Number 16 Instance ID testString Input 24	GETD 16 AECINPMUTE testString 24\x0A
Automixer Crosspoint Mute Device Number 1 Instance ID testString Input 1	GETD 1 AMMUTEXP testString 1\x0A
Automixer Crosspoint Mute Device Number 1 Instance ID testString Input 32	GETD 1 AMMUTEXP testString 32\x0A
Automixer Crosspoint Mute Device Number 16 Instance ID testString Input 1	GETD 16 AMMUTEXP testString 1\x0A
Automixer Crosspoint Mute Device Number 16 Instance ID testString Input 32	GETD 16 AMMUTEXP testString 32\x0A
Automixer Input Level Device Number 1 Instance ID testString Input 1	GETD 1 AMLVLIN testString 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Automixer Input Level Device Number 1 Instance ID testString Input 32	GETD 1 AMLVLIN testString 32\x0A
Automixer Input Level Device Number 16 Instance ID testString Input 1	GETD 16 AMLVLIN testString 1\x0A
Automixer Input Level Device Number 16 Instance ID testString Input 32	GETD 16 AMLVLIN testString 32\x0A
Automixer Input Mute Device Number 1 Instance ID testString Input 1	GETD 1 AMMUTEIN testString 1\x0A
Automixer Input Mute Device Number 1 Instance ID testString Input 32	GETD 1 AMMUTEIN testString 32\x0A
Automixer Input Mute Device Number 16 Instance ID testString Input 1	GETD 16 AMMUTEIN testString 1\x0A
Automixer Input Mute Device Number 16 Instance ID testString Input 32	GETD 16 AMMUTEIN testString 32\x0A
Automixer Output Level Device Number 1 Instance ID testString	GETD 1 AMLVLOUT testString\x0A
Automixer Output Level Device Number 16 Instance ID testString	GETD 16 AMLVLOUT testString\x0A
Automixer Output Mute Device Number 1 Instance ID testString	GETD 1 AMMUTEOUT testString\x0A
Automixer Output Mute Device Number 16 Instance ID testString	GETD 16 AMMUTEOUT testString\x0A
Fader Level Device Number 1 Instance ID testString Channel 1	GETD 1 FDRLVL testString 1\x0A
Fader Level Device Number 1 Instance ID testString Channel 16	GETD 1 FDRLVL testString 16\x0A
Fader Level Device Number 16 Instance ID testString Channel 1	GETD 16 FDRLVL testString 1\x0A
Fader Level Device Number 16 Instance ID testString Channel 16	GETD 16 FDRLVL testString 16\x0A
Fader Mute Device Number 1 Instance ID testString Channel 1	GETD 1 FDRMUTE testString 1\x0A
Fader Mute Device Number 1 Instance ID testString Channel 16	GETD 1 FDRMUTE testString 16\x0A
Fader Mute Device Number 16 Instance ID testString Channel 1	GETD 16 FDRMUTE testString 1\x0A
Fader Mute Device Number 16 Instance ID testString Channel 16	GETD 16 FDRMUTE testString 16\x0A
IO Input Gain Device Number 1 Instance ID testString Input 1	GETD 1 MICGAIN testString 1\x0A
IO Input Gain Device Number 1 Instance ID testString Input 1	GETD 1 INPGAIN testString 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

IO Input Gain Device Number 1 Instance ID testString Input 24	GETD 1 MICGAIN testString 24\x0A
IO Input Gain Device Number 1 Instance ID testString Input 24	GETD 1 INPGAIN testString 24\x0A
IO Input Gain Device Number 16 Instance ID testString Input 1	GETD 16 MICGAIN testString 1\x0A
IO Input Gain Device Number 16 Instance ID testString Input 1	GETD 16 INPGAIN testString 1\x0A
IO Input Gain Device Number 16 Instance ID testString Input 24	GETD 16 MICGAIN testString 24\x0A
IO Input Gain Device Number 16 Instance ID testString Input 24	GETD 16 INPGAIN testString 24\x0A
IO Input Level Device Number 1 Instance ID testString Input 1	GETD 1 INPLVL testString 1\x0A
IO Input Level Device Number 1 Instance ID testString Input 24	GETD 1 INPLVL testString 24\x0A
IO Input Level Device Number 16 Instance ID testString Input 1	GETD 16 INPLVL testString 1\x0A
IO Input Level Device Number 16 Instance ID testString Input 24	GETD 16 INPLVL testString 24\x0A
IO Input Mute Device Number 1 Instance ID testString Input 1	GETD 1 INPMUTE testString 1\x0A
IO Input Mute Device Number 1 Instance ID testString Input 24	GETD 1 INPMUTE testString 24\x0A
IO Input Mute Device Number 16 Instance ID testString Input 1	GETD 16 INPMUTE testString 1\x0A
IO Input Mute Device Number 16 Instance ID testString Input 24	GETD 16 INPMUTE testString 24\x0A
IO Output Level Device Number 1 Instance ID testString Output 1	GETD 1 OUTLVL testString 1\x0A
IO Output Level Device Number 1 Instance ID testString Output 24	GETD 1 OUTLVL testString 24\x0A
IO Output Level Device Number 16 Instance ID testString Output 1	GETD 16 OUTLVL testString 1\x0A
IO Output Level Device Number 16 Instance ID testString Output 24	GETD 16 OUTLVL testString 24\x0A
IO Output Mute Device Number 1 Instance ID testString Output 1	GETD 1 OUTMUTE testString 1\x0A
IO Output Mute Device Number 1 Instance ID testString Output 24	GETD 1 OUTMUTE testString 24\x0A
IO Output Mute Device Number 16 Instance ID testString Output 1	GETD 16 OUTMUTE testString 1\x0A

Global Scripter Module Communication Sheet

IO Output Mute Device Number 16 Instance ID testString Output 24	GETD 16 OUTMUTE testString 24\x0A
IP Address	GETD 0 IPADDR\x0A
Logic Meter Device Number 1 Instance ID testString Input 1	GETD 1 LGCMTSTATE testString 1 \x0A
Logic Meter Device Number 1 Instance ID testString Input 8	GETD 1 LGCMTSTATE testString 8 \x0A
Logic Meter Device Number 16 Instance ID testString Input 1	GETD 16 LGCMTSTATE testString 1 \x0A
Logic Meter Device Number 16 Instance ID testString Input 8	GETD 16 LGCMTSTATE testString 8 \x0A
Logic State Device Number 1 Instance ID testString Input 1	GETD 1 LGSTATE testString 1 \x0A
Logic State Device Number 1 Instance ID testString Input 8	GETD 1 LGSTATE testString 8 \x0A
Logic State Device Number 16 Instance ID testString Input 1	GETD 16 LGSTATE testString 1 \x0A
Logic State Device Number 16 Instance ID testString Input 8	GETD 16 LGSTATE testString 8 \x0A
Matrix Mixer Crosspoint Level Device Number 1 Instance ID testString Input 1 Output 1	GETD 1 MMLVLXP testString 1 1\x0A
Matrix Mixer Crosspoint Level Device Number 1 Instance ID testString Input 1 Output 42	GETD 1 MMLVLXP testString 1 42\x0A
Matrix Mixer Crosspoint Level Device Number 1 Instance ID testString Input 56 Output 1	GETD 1 MMLVLXP testString 56 1\x0A
Matrix Mixer Crosspoint Level Device Number 1 Instance ID testString Input 56 Output 42	GETD 1 MMLVLXP testString 56 42\x0A
Matrix Mixer Crosspoint Level Device Number 16 Instance ID testString Input 1 Output 1	GETD 16 MMLVLXP testString 1 1\x0A
Matrix Mixer Crosspoint Level Device Number 16 Instance ID testString Input 1 Output 42	GETD 16 MMLVLXP testString 1 42\x0A
Matrix Mixer Crosspoint Level Device Number 16 Instance ID testString Input 56 Output 1	GETD 16 MMLVLXP testString 56 1\x0A
Matrix Mixer Crosspoint Level Device Number 16 Instance ID testString Input 56 Output 42	GETD 16 MMLVLXP testString 56 42\x0A
Matrix Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 1	GETD 1 MMMUTEXP testString 1 1\x0A
Matrix Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 42	GETD 1 MMMUTEXP testString 1 42\x0A
Matrix Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 56 Output 1	GETD 1 MMMUTEXP testString 56 1\x0A
Matrix Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 56 Output 42	GETD 1 MMMUTEXP testString 56 42\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Matrix Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 1	GETD 16 MMMUTEXP testString 1 1\x0A
Matrix Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 42	GETD 16 MMMUTEXP testString 1 42\x0A
Matrix Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 56 Output 1	GETD 16 MMMUTEXP testString 56 1\x0A
Matrix Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 56 Output 42	GETD 16 MMMUTEXP testString 56 42\x0A
Matrix Mixer Input Level Device Number 1 Instance ID testString Input 1	GETD 1 MMLVLIN testString 1\x0A
Matrix Mixer Input Level Device Number 1 Instance ID testString Input 56	GETD 1 MMLVLIN testString 56\x0A
Matrix Mixer Input Level Device Number 16 Instance ID testString Input 1	GETD 16 MMLVLIN testString 1\x0A
Matrix Mixer Input Level Device Number 16 Instance ID testString Input 56	GETD 16 MMLVLIN testString 56\x0A
Matrix Mixer Input Mute Device Number 1 Instance ID testString Input 1	GETD 1 MMMUTEIN testString 1\x0A
Matrix Mixer Input Mute Device Number 1 Instance ID testString Input 56	GETD 1 MMMUTEIN testString 56\x0A
Matrix Mixer Input Mute Device Number 16 Instance ID testString Input 1	GETD 16 MMMUTEIN testString 1\x0A
Matrix Mixer Input Mute Device Number 16 Instance ID testString Input 56	GETD 16 MMMUTEIN testString 56\x0A
Matrix Mixer Output Level Device Number 1 Instance ID testString Output 1	GETD 1 MMLVLOUT testString 1\x0A
Matrix Mixer Output Level Device Number 1 Instance ID testString Output 42	GETD 1 MMLVLOUT testString 42\x0A
Matrix Mixer Output Level Device Number 16 Instance ID testString Output 1	GETD 16 MMLVLOUT testString 1\x0A
Matrix Mixer Output Level Device Number 16 Instance ID testString Output 42	GETD 16 MMLVLOUT testString 42\x0A
Matrix Mixer Output Mute Device Number 1 Instance ID testString Output 1	GETD 1 MMMUTEOUT testString 1\x0A
Matrix Mixer Output Mute Device Number 1 Instance ID testString Output 42	GETD 1 MMMUTEOUT testString 42\x0A
Matrix Mixer Output Mute Device Number 16 Instance ID testString Output 1	GETD 16 MMMUTEOUT testString 1\x0A
Matrix Mixer Output Mute Device Number 16 Instance ID testString Output 42	GETD 16 MMMUTEOUT testString 42\x0A
Mute Block Device Number 1 Instance ID testString Channel 1	GETD 1 MBMUTE testString 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Mute Block Device Number 1 Instance ID testString Channel 16	GETD 1 MBMUTE testString 16\x0A
Mute Block Device Number 16 Instance ID testString Channel 1	GETD 16 MBMUTE testString 1\x0A
Mute Block Device Number 16 Instance ID testString Channel 16	GETD 16 MBMUTE testString 16\x0A
Room Combine Output Level Device Number 1 Instance ID testString Output 1	GETD 1 RMCMBLVL testString 1\x0A
Room Combine Output Level Device Number 1 Instance ID testString Output 32	GETD 1 RMCMBLVL testString 32\x0A
Room Combine Output Level Device Number 16 Instance ID testString Output 1	GETD 16 RMCMBLVL testString 1\x0A
Room Combine Output Level Device Number 16 Instance ID testString Output 32	GETD 16 RMCMBLVL testString 32\x0A
Room Combine Output Mute Device Number 1 Instance ID testString Output 1	GETD 1 RMCMBMUTE testString 1\x0A
Room Combine Output Mute Device Number 1 Instance ID testString Output 32	GETD 1 RMCMBMUTE testString 32\x0A
Room Combine Output Mute Device Number 16 Instance ID testString Output 1	GETD 16 RMCMBMUTE testString 1\x0A
Room Combine Output Mute Device Number 16 Instance ID testString Output 32	GETD 16 RMCMBMUTE testString 32\x0A
Room Combine Wall Device Number 1 Instance ID testString Wall 1	GETD 1 RMCMBWALL testString 1\x0A
Room Combine Wall Device Number 1 Instance ID testString Wall 52	GETD 1 RMCMBWALL testString 52\x0A
Room Combine Wall Device Number 16 Instance ID testString Wall 1	GETD 16 RMCMBWALL testString 1\x0A
Room Combine Wall Device Number 16 Instance ID testString Wall 52	GETD 16 RMCMBWALL testString 52\x0A
Router Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 1	GETD 1 RTRMUTEXP testString 1 1\x0A
Router Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 56	GETD 1 RTRMUTEXP testString 1 56\x0A
Router Crosspoint Mute Device Number 1 Instance ID testString Input 32 Output 1	GETD 1 RTRMUTEXP testString 32 1\x0A
Router Crosspoint Mute Device Number 1 Instance ID testString Input 32 Output 56	GETD 1 RTRMUTEXP testString 32 56\x0A
Router Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 1	GETD 16 RTRMUTEXP testString 1 1\x0A
Router Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 56	GETD 16 RTRMUTEXP testString 1 56\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Router Crosspoint Mute Device Number 16 Instance ID testString Input 32 Output 1	GETD 16 RTRMUTEXP testString 32 1\x0A
Router Crosspoint Mute Device Number 16 Instance ID testString Input 32 Output 56	GETD 16 RTRMUTEXP testString 32 56\x0A
Source Selection Source Device Number 1 Instance ID testString	GETD 1 SRCSELSRC testString 1\x0A
Source Selection Source Device Number 16 Instance ID testString	GETD 16 SRCSELSRC testString 1\x0A
Standard Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 1	GETD 1 SMMUTEXP testString 1 1\x0A
Standard Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 1 Output 42	GETD 1 SMMUTEXP testString 1 42\x0A
Standard Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 56 Output 1	GETD 1 SMMUTEXP testString 56 1\x0A
Standard Mixer Crosspoint Mute Device Number 1 Instance ID testString Input 56 Output 42	GETD 1 SMMUTEXP testString 56 42\x0A
Standard Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 1	GETD 16 SMMUTEXP testString 1 1\x0A
Standard Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 1 Output 42	GETD 16 SMMUTEXP testString 1 42\x0A
Standard Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 56 Output 1	GETD 16 SMMUTEXP testString 56 1\x0A
Standard Mixer Crosspoint Mute Device Number 16 Instance ID testString Input 56 Output 42	GETD 16 SMMUTEXP testString 56 42\x0A
Standard Mixer Input Level Device Number 1 Instance ID testString Input 1	GETD 1 SMLVLIN testString 1\x0A
Standard Mixer Input Level Device Number 1 Instance ID testString Input 56	GETD 1 SMLVLIN testString 56\x0A
Standard Mixer Input Level Device Number 16 Instance ID testString Input 1	GETD 16 SMLVLIN testString 1\x0A
Standard Mixer Input Level Device Number 16 Instance ID testString Input 56	GETD 16 SMLVLIN testString 56\x0A
Standard Mixer Input Mute Device Number 1 Instance ID testString Input 1	GETD 1 SMMUTEIN testString 1\x0A
Standard Mixer Input Mute Device Number 1 Instance ID testString Input 56	GETD 1 SMMUTEIN testString 56\x0A
Standard Mixer Input Mute Device Number 16 Instance ID testString Input 1	GETD 16 SMMUTEIN testString 1\x0A
Standard Mixer Input Mute Device Number 16 Instance ID testString Input 56	GETD 16 SMMUTEIN testString 56\x0A
Standard Mixer Output Level Device Number 1 Instance ID testString Output 1	GETD 1 SMLVLOUT testString 1\x0A

Global Scripter Module Communication Sheet

Revision: 5/21/2019

Standard Mixer Output Level Device Number 1 Instance ID testString Output 42	GETD 1 SMLVLOUT testString 42\x0A
Standard Mixer Output Level Device Number 16 Instance ID testString Output 1	GETD 16 SMLVLOUT testString 1\x0A
Standard Mixer Output Level Device Number 16 Instance ID testString Output 42	GETD 16 SMLVLOUT testString 42\x0A
Standard Mixer Output Mute Device Number 1 Instance ID testString Output 1	GETD 1 SMMUTEOUT testString 1\x0A
Standard Mixer Output Mute Device Number 1 Instance ID testString Output 42	GETD 1 SMMUTEOUT testString 42\x0A
Standard Mixer Output Mute Device Number 16 Instance ID testString Output 1	GETD 16 SMMUTEOUT testString 1\x0A
Standard Mixer Output Mute Device Number 16 Instance ID testString Output 42	GETD 16 SMMUTEOUT testString 42\x0A
TI Auto Answer Device Number 1 Instance ID testString	GETD 1 TIAUTOANSWER testString\x0A
TI Auto Answer Device Number 16 Instance ID testString	GETD 16 TIAUTOANSWER testString\x0A
TI Caller ID Device Number 1 Instance ID testString	GETD 1 TICIDUSER testString\x0A
TI Caller ID Device Number 16 Instance ID testString	GETD 16 TICIDUSER testString\x0A
TI Hook Device Number 1 Instance ID testString	GETD 1 TIHOOKSTATE testString\x0A
TI Hook Device Number 16 Instance ID testString	GETD 16 TIHOOKSTATE testString\x0A
TI Last Number Device Number 1 Instance ID testString	GETD 1 TILASTNUM testString\x0A
TI Last Number Device Number 16 Instance ID testString	GETD 16 TILASTNUM testString\x0A
TI Phone Echo Cancellation Device Number 1 Instance ID testString	GETD 1 TIRXLEC testString\x0A
TI Phone Echo Cancellation Device Number 16 Instance ID testString	GETD 16 TIRXLEC testString\x0A
TI Phone Receive Level Device Number 1 Instance ID testString	GETD 1 TIRXLVL testString\x0A
TI Phone Receive Level Device Number 16 Instance ID testString	GETD 16 TIRXLVL testString\x0A
TI Phone Receive Mute Device Number 1 Instance ID testString	GETD 1 TIRXMUTE testString\x0A
TI Phone Receive Mute Device Number 16 Instance ID testString	GETD 16 TIRXMUTE testString\x0A
TI Phone Transmit Level Device Number 1 Instance ID testString	GETD 1 TITXLVL testString\x0A
TI Phone Transmit Level Device Number 16 Instance ID testString	GETD 16 TITXLVL testString\x0A

Global Scripter Module Communication Sheet

TI Phone Transmit Mute Device Number 1 Instance ID testString	GETD 1 TITXMUTE testString\x0A
TI Phone Transmit Mute Device Number 16 Instance ID testString	GETD 16 TITXMUTE testString\x0A
VoIP Auto Answer Device Number 1 Instance ID testString Line 1	GETD 1 VOIPAAENABLE testString 1\x0A
VoIP Auto Answer Device Number 1 Instance ID testString Line 2	GETD 1 VOIPAAENABLE testString 2\x0A
VoIP Auto Answer Device Number 16 Instance ID testString Line 1	GETD 16 VOIPAAENABLE testString 1\x0A
VoIP Auto Answer Device Number 16 Instance ID testString Line 2	GETD 16 VOIPAAENABLE testString 2\x0A
VoIP Caller ID Device Number 1 Instance ID testString Line 1	GETD 1 VOIPCIDUSER testString 1\x0A
VoIP Caller ID Device Number 1 Instance ID testString Line 2	GETD 1 VOIPCIDUSER testString 2\x0A
VoIP Caller ID Device Number 16 Instance ID testString Line 1	GETD 16 VOIPCIDUSER testString 1\x0A
VoIP Caller ID Device Number 16 Instance ID testString Line 2	GETD 16 VOIPCIDUSER testString 2\x0A
VoIP Hook Device Number 1 Instance ID testString Line 1	GETD 1 VOIPHOOKSTATE testString 1\x0A
VoIP Hook Device Number 1 Instance ID testString Line 2	GETD 1 VOIPHOOKSTATE testString 2\x0A
VoIP Hook Device Number 16 Instance ID testString Line 1	GETD 16 VOIPHOOKSTATE testString 1\x0A
VoIP Hook Device Number 16 Instance ID testString Line 2	GETD 16 VOIPHOOKSTATE testString 2\x0A
VoIP Last Number Device Number 1 Instance ID testString Line 1	GETD 1 VOIPLASTNUM testString 1\x0A
VoIP Last Number Device Number 1 Instance ID testString Line 2	GETD 1 VOIPLASTNUM testString 2\x0A
VoIP Last Number Device Number 16 Instance ID testString Line 1	GETD 16 VOIPLASTNUM testString 1\x0A
VoIP Last Number Device Number 16 Instance ID testString Line 2	GETD 16 VOIPLASTNUM testString 2\x0A
VoIP Receive Level Device Number 1 Instance ID testString Line 1	GETD 1 VOIPRXLVL testString 1\x0A
VoIP Receive Level Device Number 1 Instance ID testString Line 2	GETD 1 VOIPRXLVL testString 2\x0A
VoIP Receive Level Device Number 16 Instance ID testString Line 1	GETD 16 VOIPRXLVL testString 1\x0A

Global Scripter Module Communication Sheet

VoIP Receive Level Device Number 16 Instance ID testString Line 2	GETD 16 VOIPRXLVL testString 2\x0A
VoIP Receive Mute Device Number 1 Instance ID testString Line 1	GETD 1 VOIPRXMUTE testString 1\x0A
VoIP Receive Mute Device Number 1 Instance ID testString Line 2	GETD 1 VOIPRXMUTE testString 2\x0A
VoIP Receive Mute Device Number 16 Instance ID testString Line 1	GETD 16 VOIPRXMUTE testString 1\x0A
VoIP Receive Mute Device Number 16 Instance ID testString Line 2	GETD 16 VOIPRXMUTE testString 2\x0A
VoIP Ring Indicator Device Number 1 Instance ID testString Line 1	GETD 1 VOIPRISTATE testString 1\x0A
VoIP Ring Indicator Device Number 1 Instance ID testString Line 2	GETD 1 VOIPRISTATE testString 2\x0A
VoIP Ring Indicator Device Number 16 Instance ID testString Line 1	GETD 16 VOIPRISTATE testString 1\x0A
VoIP Ring Indicator Device Number 16 Instance ID testString Line 2	GETD 16 VOIPRISTATE testString 2\x0A
VoIP Transmit Level Device Number 1 Instance ID testString Line 1	GETD 1 VOIPTXLVL testString 1\x0A
VoIP Transmit Level Device Number 1 Instance ID testString Line 2	GETD 1 VOIPTXLVL testString 2\x0A
VoIP Transmit Level Device Number 16 Instance ID testString Line 1	GETD 16 VOIPTXLVL testString 1\x0A
VoIP Transmit Level Device Number 16 Instance ID testString Line 2	GETD 16 VOIPTXLVL testString 2\x0A
VoIP Transmit Mute Device Number 1 Instance ID testString Line 1	GETD 1 VOIPTXMUTE testString 1\x0A
VoIP Transmit Mute Device Number 1 Instance ID testString Line 2	GETD 1 VOIPTXMUTE testString 2\x0A
VoIP Transmit Mute Device Number 16 Instance ID testString Line 1	GETD 16 VOIPTXMUTE testString 1\x0A
VoIP Transmit Mute Device Number 16 Instance ID testString Line 2	GETD 16 VOIPTXMUTE testString 2\x0A