
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Other
Manufacturer: BRG Precision Products
Firmware Version: N/A
Model(s): OT440

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_0_0	12/9/2019	Initial Version

Module Notes

- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from 1 to '99, and Broadcast. If Device ID is set to 'Broadcast', status is unavailable.
Example: InterfaceName.DeviceID = '1'
- Status is not supported.

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='OT440')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='OT440')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value	Value
LongDurationTimer	'Enable'	'Disable'
# LongDurationTimer example InterfaceName.Set('LongDurationTimer', 'Enable')		
Command	Value	
ResetTimer	None	
# ResetTimer example InterfaceName.Set('ResetTimer', None)		
Command	Value	Value
TimerControl	'Start / Pause'	'Stop'
# TimerControl example InterfaceName.Set('TimerControl', 'Start / Pause')		
Command	Value	
TimerEndTime	None	
Qualifier Key	Qualifier Value	
'Seconds'	0 to 59 in steps of 1	
Qualifier Key	Qualifier Value	
'Minutes'	0 to 59 in steps of 1	
Qualifier Key	Qualifier Value	
'Hours'	0 to 23 in steps of 1	
# TimerEndTime example InterfaceName.Set('TimerEndTime', None, {'Seconds': 59, 'Minutes': 59, 'Hours': 23})		
Command	Value	
TimerStartTime	None	
Qualifier Key	Qualifier Value	
'Seconds'	0 to 59 in steps of 1	
Qualifier Key	Qualifier Value	
'Minutes'	0 to 59 in steps of 1	
Qualifier Key	Qualifier Value	
'Hours'	0 to 23 in steps of 1	
# TimerStartTime example InterfaceName.Set('TimerStartTime', None, {'Seconds': 59, 'Minutes': 59, 'Hours': 23})		

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

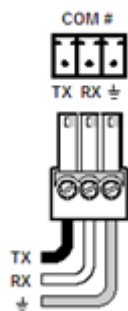

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

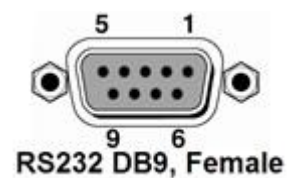

Appendix A. Set Commands

Long Duration Timer Disable	*!01640xxxxxxxxxxxxxxxxxxxxxxxxxxxx#
Long Duration Timer Enable	*!01641xxxxxxxxxxxxxxxxxxxxxxxxxxxx#
Reset Timer None	*!0163xxxxxxxxxxxxxxxxxxxxxxxxxxxx#
Timer Control Start / Pause	*!0161xxxxxxxxxxxxxxxxxxxxxxxxxxxx#
Timer Control Stop	*!0162xxxxxxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 0 Seconds 0 Hours 0	*!015200000xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 0 Seconds 0 Hours 23	*!015200023xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 0 Seconds 59 Hours 0	*!015259000xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 0 Seconds 59 Hours 23	*!015259023xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 59 Seconds 0 Hours 0	*!015200590xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 59 Seconds 0 Hours 23	*!0152005923xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 59 Seconds 59 Hours 0	*!015259590xxxxxxxxxxxxxxxxxxxxxxxx#
Timer End Time None Minutes 59 Seconds 59 Hours 23	*!0152595923xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 0 Seconds 0 Hours 0	*!015300000xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 0 Seconds 0 Hours 23	*!015300023xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 0 Seconds 59 Hours 0	*!015359000xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 0 Seconds 59 Hours 23	*!015359023xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 59 Seconds 0 Hours 0	*!015300590xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 59 Seconds 0 Hours 23	*!0153005923xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 59 Seconds 59 Hours 0	*!015359590xxxxxxxxxxxxxxxxxxxxxxxx#
Timer Start Time None Minutes 59 Seconds 59 Hours 23	*!0153595923xxxxxxxxxxxxxxxxxxxxxxxx#