

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Audio Processor
Manufacturer: Bryston
Firmware Version: N/A
Model(s): BDA-3

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_0_0	10/24/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='BDA-3')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='BDA-3')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='BDA-3')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command BypassMode	Value 'HDMI 1' 'HDMI 4'	Value 'HDMI 2'	Value 'HDMI 3'
# BypassMode example InterfaceName.Set('BypassMode', 'HDMI 1')			
Command Input	Value 'Opto (TOSLINK)' 'HDMI 3' 'SPDIF 2' 'USB 2'	Value 'HDMI 1' 'HDMI 4' 'AES/EBU'	Value 'HDMI 2' 'SPDIF 1' 'USB 1'
# Input example InterfaceName.Set('Input', 'Opto (TOSLINK)')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioMute	Value 'On'	Value 'Off'
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)		
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command Input	Value 'Opto (TOSLINK)' 'HDMI 3' 'SPDIF 2' 'USB 2'	Value 'HDMI 1' 'HDMI 4' 'AES/EBU' 'USB 1'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)		
Command Power	Value 'On'	Value 'Off'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)		

Cable and Adapter Requirements

Captive Screw to 3.5 mm TRS connector

Notes for the Device

- RS-485 communication can be used with an RS232 to RS485 interface.

Serial communication

Port Type: RS-232, RS-485

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

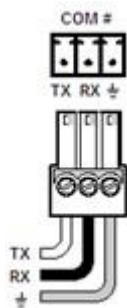

Signal	Main Cable	Pin	Signal
RXD	←	R	TXD
TXD	→	T	RXD
GND	→	S	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Audio Mute Off	#30MMUT00\x0D
Audio Mute On	#30MMUT01\x0D
Bypass Mode HDMI 1	#30PTHD01\x0D
Bypass Mode HDMI 2	#30PTHD02\x0D
Bypass Mode HDMI 3	#30PTHD03\x0D
Bypass Mode HDMI 4	#30PTHD04\x0D
Input AES/EBU	#30MSRC07\x0D
Input HDMI 1	#30MSRC01\x0D
Input HDMI 2	#30MSRC02\x0D
Input HDMI 3	#30MSRC03\x0D
Input HDMI 4	#30MSRC04\x0D
Input Opto (TOSLINK)	#30MSRC00\x0D
Input SPDIF 1	#30MSRC05\x0D
Input SPDIF 2	#30MSRC06\x0D
Input USB 1	#30MSRC08\x0D
Input USB 2	#30MSRC09\x0D
Power Off	#30MPWR00\x0D
Power On	#30MPWR01\x0D

Appendix B. Update Commands (Serial)

Audio Mute	#30MMUTQS\x0D
Input	#30MSRCQS\x0D
Power	#30MPWRQS\x0D

Appendix A. Set Commands

Audio Mute Off	%2330MMUT00.
Audio Mute On	%2330MMUT01.
Bypass Mode HDMI 1	%2330PTHD01.
Bypass Mode HDMI 2	%2330PTHD02.
Bypass Mode HDMI 3	%2330PTHD03.
Bypass Mode HDMI 4	%2330PTHD04.
Input AES/EBU	%2330MSRC07.
Input HDMI 1	%2330MSRC01.
Input HDMI 2	%2330MSRC02.
Input HDMI 3	%2330MSRC03.
Input HDMI 4	%2330MSRC04.
Input Opto (TOSLINK)	%2330MSRC00.
Input SPDIF 1	%2330MSRC05.
Input SPDIF 2	%2330MSRC06.
Input USB 1	%2330MSRC08.
Input USB 2	%2330MSRC09.
Power Off	%2330MPWR00.
Power On	%2330MPWR01.

Appendix B. Update Commands

Audio Mute	%2330MMUTQS.
Input	%2330MSRCQS.
Power	%2330MPWRQS.