

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Christie
Firmware Version: N/A
Model(s): FHD553-XE, FHD553-XE-H, FHD553-XE-HR, FHD553-XE-R

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0000-b010	1.4.1

Version History

Module Version	Date	Notes
1_0_1_0	10/12/2017	Added Daisy Chain control for Serial. Updated module to Rev. B
1_0_0_0	3/14/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly for serial control only. Default value is '1'. Device ID ranges from '1' to '25' or 'Broadcast'.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='FHD553-XE')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='FHD553-XE')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='FHD553-XE')</code>

Set Commands - Serial

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Fullscreen'	Value '4:3'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# AspectRatio example InterfaceName.Set('AspectRatio', 'Native', {'Device ID': 'Broadcast'})			
Command AutoImage	Value None		
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# AutoImage example InterfaceName.Set('AutoImage', None, {'Device ID': 'Broadcast'})			
Command Input	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# Input example InterfaceName.Set('Input', 'VGA', {'Device ID': 'Broadcast'})			
Command KeyLock	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# KeyLock example InterfaceName.Set('KeyLock', 'On', {'Device ID': 'Broadcast'})			
Command MenuNavigation	Value 'Up' 'Right' 'Menu'	Value 'Down' 'Enter'	Value 'Left' 'Exit'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# MenuNavigation example			

Global Scripter Module Communication Sheet

InterfaceName.Set('MenuNavigation', 'Up', {'Device ID': 'Broadcast'})			
Command PIPInput	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# PIPInput example InterfaceName.Set('PIPInput', 'VGA', {'Device ID': 'Broadcast'})			
Command PIPPosition	Value 'Bottom Left' 'Top Right'	Value 'Bottom Right'	Value 'Top Left'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# PIPPosition example InterfaceName.Set('PIPPosition', 'Bottom Left', {'Device ID': 'Broadcast'})			
Command PIPSize	Value 'Off' 'Large'	Value 'Small' 'Side by Side'	Value 'Medium'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# PIPSize example InterfaceName.Set('PIPSize', 'Off', {'Device ID': 'Broadcast'})			
Command PIPSwap	Value None		
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# PIPSwap example InterfaceName.Set('PIPSwap', None, {'Device ID': 'Broadcast'})			
Command Power	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# Power example InterfaceName.Set('Power', 'On', {'Device ID': 'Broadcast'})			
Command VideoWall	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'	Qualifier Value 'Broadcast'	
# VideoWall example InterfaceName.Set('VideoWall', 'On', {'Device ID': 'Broadcast'})			

Status Available - Serial

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Fullscreen'	Value '4:3'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
# AspectRatio examples InterfaceName.Update('AspectRatio', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('AspectRatio', {'Device ID': '1'}) InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
# Input examples InterfaceName.Update('Input', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Input', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command KeyLock	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		

Global Scripter Module Communication Sheet

<pre># KeyLock examples InterfaceName.Update('KeyLock', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('KeyLock', {'Device ID': '1'}) InterfaceName.SubscribeStatus('KeyLock', None, FeedbackHandler)</pre>			
Command PIPIInput	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
<pre># PIPInput examples InterfaceName.Update('PIPIInput', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('PIPIInput', {'Device ID': '1'}) InterfaceName.SubscribeStatus('PIPIInput', None, FeedbackHandler)</pre>			
Command PIPPosition	Value 'Bottom Left' 'Top Right'	Value 'Bottom Right'	Value 'Top Left'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
<pre># PIPPosition examples InterfaceName.Update('PIPPosition', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('PIPPosition', {'Device ID': '1'}) InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)</pre>			
Command PIPSize	Value 'Off' 'Large'	Value 'Small' 'Side by Side'	Value 'Medium'
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
<pre># PIPSize examples InterfaceName.Update('PIPSize', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('PIPSize', {'Device ID': '1'}) InterfaceName.SubscribeStatus('PIPSize', None, FeedbackHandler)</pre>			
Command Power	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		
<pre># Power examples InterfaceName.Update('Power', {'Device ID': '1'}) Value = InterfaceName.ReadStatus('Power', {'Device ID': '1'}) InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoWall	Value 'On'	Value 'Off'	
Qualifier Key 'Device ID'	Qualifier Value '1' – '25'		

```
# VideoWall examples
InterfaceName.Update('VideoWall', {'Device ID': '1'})
Value = InterfaceName.ReadStatus('VideoWall', {'Device ID': '1'})
InterfaceName.SubscribeStatus('VideoWall', None, FeedbackHandler)
```

Set Commands - Ethernet

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Fullscreen'	Value '4:3'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Native')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Input	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
# Input example InterfaceName.Set('Input', 'VGA')			
Command KeyLock	Value 'On'	Value 'Off'	
# KeyLock example InterfaceName.Set('KeyLock', 'On')			
Command MenuNavigation	Value 'Up' 'Right' 'Menu'	Value 'Down' 'Enter'	Value 'Left' 'Exit'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command PIPIInput	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
# PIPInput example InterfaceName.Set('PIPIInput', 'VGA')			
Command PIPPosition	Value 'Bottom Left' 'Top Right'	Value 'Bottom Right'	Value 'Top Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Bottom Left')			

Global Scripter Module Communication Sheet

Command PIPSize	Value 'Off' 'Large'	Value 'Small' 'Side by Side'	Value 'Medium'
# PIPSize example InterfaceName.Set('PIPSize', 'Off')			
Command PIPSwap	Value None		
# PIPSwap example InterfaceName.Set('PIPSwap', None)			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoWall	Value 'On'	Value 'Off'	
# VideoWall example InterfaceName.Set('VideoWall', 'On')			

Status Available – Ethernet

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Native' 'Letterbox'	Value 'Fullscreen'	Value '4:3'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command KeyLock	Value 'On'	Value 'Off'	
# KeyLock examples InterfaceName.Update('KeyLock') Value = InterfaceName.ReadStatus('KeyLock') InterfaceName.SubscribeStatus('KeyLock', None, FeedbackHandler)			
Command PIInput	Value 'VGA' 'HDMI 2'	Value 'Digital DVI' 'DisplayPort'	Value 'HDMI 1' 'OPS'

<pre># PIPInput examples InterfaceName.Update('PIPInput') Value = InterfaceName.ReadStatus('PIPInput') InterfaceName.SubscribeStatus('PIPInput', None, FeedbackHandler)</pre>			
Command PIPPosition	Value 'Bottom Left' 'Top Right'	Value 'Bottom Right'	Value 'Top Left'
<pre># PIPPosition examples InterfaceName.Update('PIPPosition') Value = InterfaceName.ReadStatus('PIPPosition') InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)</pre>			
Command PIPSize	Value 'Off' 'Large'	Value 'Small' 'Side by Side'	Value 'Medium'
<pre># PIPSize examples InterfaceName.Update('PIPSize') Value = InterfaceName.ReadStatus('PIPSize') InterfaceName.SubscribeStatus('PIPSize', None, FeedbackHandler)</pre>			
Command Power	Value 'On'	Value 'Off'	
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoWall	Value 'On'	Value 'Off'	
<pre># VideoWall examples InterfaceName.Update('VideoWall') Value = InterfaceName.ReadStatus('VideoWall') InterfaceName.SubscribeStatus('VideoWall', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

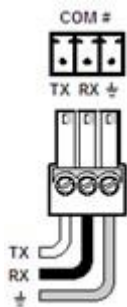

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND



Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	No
Multi-Connection	No
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Aspect Ratio 4:3 Device ID 1	\x07\x01\x02ASP\x02\x08\x0D
Aspect Ratio 4:3 Device ID 9	\x07\x09\x02ASP\x02\x08\x0D
Aspect Ratio Fullscreen Device ID 1	\x07\x01\x02ASP\x01\x08\x0D
Aspect Ratio Fullscreen Device ID 9	\x07\x09\x02ASP\x01\x08\x0D
Aspect Ratio Letterbox Device ID 1	\x07\x01\x02ASP\x03\x08\x0D
Aspect Ratio Letterbox Device ID 9	\x07\x09\x02ASP\x03\x08\x0D
Aspect Ratio Native Device ID 1	\x07\x01\x02ASP\x00\x08\x0D
Aspect Ratio Native Device ID 9	\x07\x09\x02ASP\x00\x08\x0D
Auto Image None Device ID 1	\x07\x01\x02ADJ\x00\x08\x0D
Auto Image None Device ID 9	\x07\x09\x02ADJ\x00\x08\x0D
Input Digital DVI Device ID 1	\x07\x01\x02MIN\x01\x08\x0D
Input Digital DVI Device ID 9	\x07\x09\x02MIN\x01\x08\x0D
Input DisplayPort Device ID 1	\x07\x01\x02MIN\x0D\x08\x0D
Input DisplayPort Device ID 9	\x07\x09\x02MIN\x0D\x08\x0D
Input HDMI 1 Device ID 1	\x07\x01\x02MIN\x09\x08\x0D
Input HDMI 1 Device ID 9	\x07\x09\x02MIN\x09\x08\x0D
Input HDMI 2 Device ID 1	\x07\x01\x02MIN\x0A\x08\x0D
Input HDMI 2 Device ID 9	\x07\x09\x02MIN\x0A\x08\x0D
Input OPS Device ID 1	\x07\x01\x02MIN\x0E\x08\x0D
Input OPS Device ID 9	\x07\x09\x02MIN\x0E\x08\x0D
Input VGA Device ID 1	\x07\x01\x02MIN\x00\x08\x0D
Input VGA Device ID 9	\x07\x09\x02MIN\x00\x08\x0D
Key Lock Off Device ID 1	\x07\x01\x02KLC\x00\x08\x0D
Key Lock Off Device ID 9	\x07\x09\x02KLC\x00\x08\x0D
Key Lock On Device ID 1	\x07\x01\x02KLC\x01\x08\x0D
Key Lock On Device ID 9	\x07\x09\x02KLC\x01\x08\x0D
Menu Navigation Down Device ID 1	\x07\x01\x02RCU\x03\x08\x0D
Menu Navigation Down Device ID 9	\x07\x09\x02RCU\x03\x08\x0D
Menu Navigation Enter Device ID 1	\x07\x01\x02RCU\x06\x08\x0D
Menu Navigation Enter Device ID 9	\x07\x09\x02RCU\x06\x08\x0D
Menu Navigation Exit Device ID 1	\x07\x01\x02RCU\x07\x08\x0D
Menu Navigation Exit Device ID 9	\x07\x09\x02RCU\x07\x08\x0D
Menu Navigation Left Device ID 1	\x07\x01\x02RCU\x04\x08\x0D
Menu Navigation Left Device ID 9	\x07\x09\x02RCU\x04\x08\x0D
Menu Navigation Menu Device ID 1	\x07\x01\x02RCU\x00\x08\x0D
Menu Navigation Menu Device ID 9	\x07\x09\x02RCU\x00\x08\x0D
Menu Navigation Right Device ID 1	\x07\x01\x02RCU\x05\x08\x0D
Menu Navigation Right Device ID 9	\x07\x09\x02RCU\x05\x08\x0D
Menu Navigation Up Device ID 1	\x07\x01\x02RCU\x02\x08\x0D
Menu Navigation Up Device ID 9	\x07\x09\x02RCU\x02\x08\x0D
PIP Input Digital DVI Device ID 1	\x07\x01\x02PIN\x01\x08\x0D
PIP Input Digital DVI Device ID 9	\x07\x09\x02PIN\x01\x08\x0D

Global Scripter Module Communication Sheet

PIP Input DisplayPort Device ID 1	\x07\x01\x02PIN\x0D\x08\x0D
PIP Input DisplayPort Device ID 9	\x07\x09\x02PIN\x0D\x08\x0D
PIP Input HDMI 1 Device ID 1	\x07\x01\x02PIN\x09\x08\x0D
PIP Input HDMI 1 Device ID 9	\x07\x09\x02PIN\x09\x08\x0D
PIP Input HDMI 2 Device ID 1	\x07\x01\x02PIN\x0A\x08\x0D
PIP Input HDMI 2 Device ID 9	\x07\x09\x02PIN\x0A\x08\x0D
PIP Input OPS Device ID 1	\x07\x01\x02PIN\x0E\x08\x0D
PIP Input OPS Device ID 9	\x07\x09\x02PIN\x0E\x08\x0D
PIP Input VGA Device ID 1	\x07\x01\x02PIN\x00\x08\x0D
PIP Input VGA Device ID 9	\x07\x09\x02PIN\x00\x08\x0D
PIP Position Bottom Left Device ID 1	\x07\x01\x02PPO\x00\x08\x0D
PIP Position Bottom Left Device ID 9	\x07\x09\x02PPO\x00\x08\x0D
PIP Position Bottom Right Device ID 1	\x07\x01\x02PPO\x01\x08\x0D
PIP Position Bottom Right Device ID 9	\x07\x09\x02PPO\x01\x08\x0D
PIP Position Top Left Device ID 1	\x07\x01\x02PPO\x02\x08\x0D
PIP Position Top Left Device ID 9	\x07\x09\x02PPO\x02\x08\x0D
PIP Position Top Right Device ID 1	\x07\x01\x02PPO\x03\x08\x0D
PIP Position Top Right Device ID 9	\x07\x09\x02PPO\x03\x08\x0D
PIP Size Large Device ID 1	\x07\x01\x02PSC\x03\x08\x0D
PIP Size Large Device ID 9	\x07\x09\x02PSC\x03\x08\x0D
PIP Size Medium Device ID 1	\x07\x01\x02PSC\x02\x08\x0D
PIP Size Medium Device ID 9	\x07\x09\x02PSC\x02\x08\x0D
PIP Size Off Device ID 1	\x07\x01\x02PSC\x00\x08\x0D
PIP Size Off Device ID 9	\x07\x09\x02PSC\x00\x08\x0D
PIP Size Side by Side Device ID 1	\x07\x01\x02PSC\x04\x08\x0D
PIP Size Side by Side Device ID 9	\x07\x09\x02PSC\x04\x08\x0D
PIP Size Small Device ID 1	\x07\x01\x02PSC\x01\x08\x0D
PIP Size Small Device ID 9	\x07\x09\x02PSC\x01\x08\x0D
PIP Swap None Device ID 1	\x07\x01\x02SWA\x00\x08\x0D
PIP Swap None Device ID 9	\x07\x09\x02SWA\x00\x08\x0D
Power Off Device ID 1	\x07\x01\x02POW\x00\x08\x0D
Power Off Device ID 9	\x07\x09\x02POW\x00\x08\x0D
Power On Device ID 1	\x07\x01\x02POW\x01\x08\x0D
Power On Device ID 9	\x07\x09\x02POW\x01\x08\x0D
Video Wall Off Device ID 1	\x07\x01\x02VWS\x00\x08\x0D
Video Wall Off Device ID 9	\x07\x09\x02VWS\x00\x08\x0D
Video Wall On Device ID 1	\x07\x01\x02VWS\x01\x08\x0D
Video Wall On Device ID 9	\x07\x09\x02VWS\x01\x08\x0D

Appendix B. Query Commands (Serial)

Aspect Ratio Device ID 1	\x07\x01\x01ASP\x08\x0D
Aspect Ratio Device ID 9	\x07\x09\x01ASP\x08\x0D
Input Device ID 1	\x07\x01\x01MIN\x08\x0D
Input Device ID 9	\x07\x09\x01MIN\x08\x0D
Key Lock Device ID 1	\x07\x01\x01KLC\x08\x0D
Key Lock Device ID 9	\x07\x09\x01KLC\x08\x0D
PIP Input Device ID 1	\x07\x01\x01PIN\x08\x0D
PIP Input Device ID 9	\x07\x09\x01PIN\x08\x0D
PIP Position Device ID 1	\x07\x01\x01PPO\x08\x0D
PIP Position Device ID 9	\x07\x09\x01PPO\x08\x0D
PIP Size Device ID 1	\x07\x01\x01PSC\x08\x0D
PIP Size Device ID 9	\x07\x09\x01PSC\x08\x0D
Power Device ID 1	\x07\x01\x01POW\x08\x0D
Power Device ID 9	\x07\x09\x01POW\x08\x0D
Video Wall Device ID 1	\x07\x01\x01VWS\x08\x0D
Video Wall Device ID 9	\x07\x09\x01VWS\x08\x0D

Appendix C. Set Commands (Ethernet)

Commands below only works when device ID is set to '1'. To send commands to device with a different ID, change the 2nd byte of each string to the ID which matches the device.

Aspect Ratio 4:3	\x07\x01\x02ASP\x02\x08\x0D
Aspect Ratio Fullscreen	\x07\x01\x02ASP\x01\x08\x0D
Aspect Ratio Letterbox	\x07\x01\x02ASP\x03\x08\x0D
Aspect Ratio Native	\x07\x01\x02ASP\x00\x08\x0D
Auto Image None	\x07\x01\x02ADJ\x00\x08\x0D
Input Digital DVI	\x07\x01\x02MIN\x01\x08\x0D
Input DisplayPort	\x07\x01\x02MIN\x0D\x08\x0D
Input HDMI 1	\x07\x01\x02MIN\x09\x08\x0D
Input HDMI 2	\x07\x01\x02MIN\x0A\x08\x0D
Input OPS	\x07\x01\x02MIN\x0E\x08\x0D
Input VGA	\x07\x01\x02MIN\x00\x08\x0D
Key Lock Off	\x07\x01\x02KLC\x00\x08\x0D
Key Lock On	\x07\x01\x02KLC\x01\x08\x0D
Menu Navigation Down	\x07\x01\x02RCU\x03\x08\x0D
Menu Navigation Enter	\x07\x01\x02RCU\x06\x08\x0D
Menu Navigation Exit	\x07\x01\x02RCU\x07\x08\x0D
Menu Navigation Left	\x07\x01\x02RCU\x04\x08\x0D
Menu Navigation Menu	\x07\x01\x02RCU\x00\x08\x0D
Menu Navigation Right	\x07\x01\x02RCU\x05\x08\x0D
Menu Navigation Up	\x07\x01\x02RCU\x02\x08\x0D
PIP Input Digital DVI	\x07\x01\x02PIN\x01\x08\x0D
PIP Input DisplayPort	\x07\x01\x02PIN\x0D\x08\x0D
PIP Input HDMI 1	\x07\x01\x02PIN\x09\x08\x0D
PIP Input HDMI 2	\x07\x01\x02PIN\x0A\x08\x0D
PIP Input OPS	\x07\x01\x02PIN\x0E\x08\x0D
PIP Input VGA	\x07\x01\x02PIN\x00\x08\x0D
PIP Position Bottom Left	\x07\x01\x02PPO\x00\x08\x0D
PIP Position Bottom Right	\x07\x01\x02PPO\x01\x08\x0D
PIP Position Top Left	\x07\x01\x02PPO\x02\x08\x0D
PIP Position Top Right	\x07\x01\x02PPO\x03\x08\x0D
PIP Size Large	\x07\x01\x02PSC\x03\x08\x0D
PIP Size Medium	\x07\x01\x02PSC\x02\x08\x0D
PIP Size Off	\x07\x01\x02PSC\x00\x08\x0D
PIP Size Side by Side	\x07\x01\x02PSC\x04\x08\x0D
PIP Size Small	\x07\x01\x02PSC\x01\x08\x0D
PIP Swap None	\x07\x01\x02SWA\x00\x08\x0D
Power Off	\x07\x01\x02POW\x00\x08\x0D
Power On	\x07\x01\x02POW\x01\x08\x0D
Video Wall Off	\x07\x01\x02VWS\x00\x08\x0D
Video Wall On	\x07\x01\x02VWS\x01\x08\x0D

Appendix D. Query Commands (Ethernet)

Commands below only works when device ID is set to '1'. To send commands to device with a different ID, change the 2nd byte of each string to the ID which matches the device.

Aspect Ratio	\x07\x01\x01ASP\x08\x0D
Input	\x07\x01\x01MIN\x08\x0D
Key Lock	\x07\x01\x01KLC\x08\x0D
PIP Input	\x07\x01\x01PIN\x08\x0D
PIP Position	\x07\x01\x01PPO\x08\x0D
PIP Size	\x07\x01\x01PSC\x08\x0D
Power	\x07\x01\x01POW\x08\x0D
Video Wall	\x07\x01\x01VWS\x08\x0D