

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): Boxer 2K20, Boxer 2K25, Boxer 2K30

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.04.0001-b002	2.3.1.3

Version History

Module Version	Date	Notes
1_1_0_0	10/17/2019	Fixed Input Command and updated to current standards
1_0_1_0	6/27/2018	Fixed Input, Lamp Selection, Power and Shutter statuses.
1_0_0_0	2/13/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='Boxer 2K20')
SerialOverEthernetClass
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='Boxer 2K20')
EthernetClass
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='Boxer 2K20')

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format with Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command	Value		
AutoImage	None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Sensor'	'Front IR Keypad'	'Rear IR Keypad'	'Wired Keypad'
	'IR over HDBaseT'		
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On', {'Sensor': 'Front IR Keypad'})			
Command	Value	Value	
Freeze	'On'	'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command	Value		
Input	'1' – '43'		
# Input example InterfaceName.Set('Input', '1')			
Command	Value	Value	Value
InputPortConfiguration	'One-Port'	'Two-Port'	'Four-Port Columns'
	'Four-Port Quadrants'		
# InputPortConfiguration example InterfaceName.Set('InputPortConfiguration', 'One-Port')			
Command	Value	Value	Value
LampSelection	'A1'	'A2'	'A3'
	'B1'	'B2'	'B3'
# LampSelection example InterfaceName.Set('LampSelection', 'A1')			
Command	Value	Value	
OnScreenDisplay	'On'	'Off'	
# OnScreenDisplay example InterfaceName.Set('OnScreenDisplay', 'On')			
Command	Value	Value	
Power	'On'	'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command	Value	Value	
Shutter	'Open'	'Close'	
# Shutter example InterfaceName.Set('Shutter', 'Open')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})  
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})  
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},  
FeedbackHandler)
```

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)  
Value = InterfaceName.ReadStatus(Command)  
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)  
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	Qualifier Value
'Sensor'	'Front IR Keypad' 'IR over HDBaseT'	'Rear IR Keypad'	'Wired Keypad'
# ExecutiveMode example InterfaceName.Update('ExecutiveMode', {'Sensor': 'Front IR Keypad'}) Value = InterfaceName.ReadStatus('ExecutiveMode', {'Sensor': 'Front IR Keypad'}) InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command	Value	Value	
Freeze	'On'	'Off'	
# Freeze example InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command	Value		
Input	'1' – '43'		
# Input example InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value		
LampHours	Hours		
Qualifier Key	Qualifier Value		
'Number'	'1' – '6'		
# LampHours example InterfaceName.Update('LampHours', {'Number': '1'}) Value = InterfaceName.ReadStatus('LampHours', {'Number': '1'}) InterfaceName.SubscribeStatus('LampHours', None, FeedbackHandler)			
Command	Value	Value	Value
LampSelection	'A1' 'B1'	'A2' 'B2'	'A3' 'B3'
# LampSelection example InterfaceName.Update('LampSelection')			

Global Scripter Module Communication Sheet

Revision: 10/17/2019

<pre>Value = InterfaceName.ReadStatus('LampSelection') InterfaceName.SubscribeStatus('LampSelection', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Cooling Down'	Value 'Off'	Value 'Warming Up'
<pre># Power example InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command Shutter	Value 'Open'	Value 'Close'	
<pre># Shutter example InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

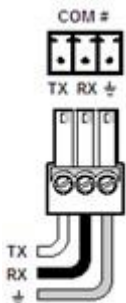

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

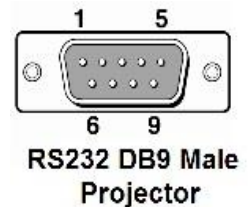

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Auto Image None	(ASU)
Executive Mode Off Sensor Front IR Keypad	(KEN+FRNT 0)
Executive Mode Off Sensor IR over HDBaseT	(KEN+HDBT 0)
Executive Mode Off Sensor Rear IR Keypad	(KEN+REAR 0)
Executive Mode Off Sensor Wired Keypad	(KEN+WIRE 0)
Executive Mode On Sensor Front IR Keypad	(KEN+FRNT 1)
Executive Mode On Sensor IR over HDBaseT	(KEN+HDBT 1)
Executive Mode On Sensor Rear IR Keypad	(KEN+REAR 1)
Executive Mode On Sensor Wired Keypad	(KEN+WIRE 1)
Freeze Off	(FRZ 0)
Freeze On	(FRZ 1)
Input 1	(SIN 1)
Input 43	(SIN 43)
Input Port Configuration Four-Port Columns	(SIN+PORT 3)
Input Port Configuration Four-Port Quadrants	(SIN+PORT 4)
Input Port Configuration One-Port	(SIN+PORT 1)
Input Port Configuration Two-Port	(SIN+PORT 2)
Lamp Selection A1	(LOP 1)
Lamp Selection A2	(LOP 2)
Lamp Selection A3	(LOP 3)
Lamp Selection B1	(LOP 4)
Lamp Selection B2	(LOP 5)
Lamp Selection B3	(LOP 6)
On Screen Display Off	(OSD 0)
On Screen Display On	(OSD 1)
Power Off	(PWR 0)
Power On	(PWR 1)
Shutter Close	(SHU 1)
Shutter Open	(SHU 0)

Appendix B. Update Commands

Executive Mode Sensor Front IR Keypad	(KEN+FRNT?)
Executive Mode Sensor IR over HDBaseT	(KEN+HDBT?)
Executive Mode Sensor Rear IR Keypad	(KEN+REAR?)
Executive Mode Sensor Wired Keypad	(KEN+WIRE?)
Freeze	(FRZ?)
Input	(SIN?)
Lamp Hours Number 1	(HIS+LMP1?)
Lamp Hours Number 6	(HIS+LMP6?)
Lamp Selection	(LOP?)
Power	(PWR?)
Shutter	(SHU?)