

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): DHD630-GS, DWU630-GS

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.08.0002-b001	1.4.2

Version History

Module Version	Date	Notes
1_0_2_0	5/9/2018	Added EthernetClass support. Fixed Input and VideoMute status.
1_0_1_0	2/16/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DHD630-GS')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DHD630-GS')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 3002, Model='DHD630-GS')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Auto' 'LetterBox' 'Full Height'	Value 'Native' 'Full Size'	Value '4:3' 'Full Width'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Auto')			
Command ClosedCaption	Value 'CC1'	Value 'CC2'	Value 'Off'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'CC1')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command Input	Value 'VGA' 'HDMI 2'	Value 'BNC' 'DVI-D'	Value 'HDMI 1' 'HDBaseT'
# Input example InterfaceName.Set('Input', 'VGA')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '1')			
Command LightSourceMode	Value 'Normal'	Value 'High'	Value 'Eco'
# LightSourceMode example InterfaceName.Set('LightSourceMode', 'Normal')			
Command MenuNavigation	Value 'Up' 'Right' 'Exit'	Value 'Down' 'Enter'	Value 'Left' 'Menu'
# MenuNavigation example InterfaceName.Set('MenuNavigation', 'Up')			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

PIPIInput	'VGA' 'HDMI 2'	'BNC' 'DVI-D'	'HDMI 1' 'HDBaseT'
# PIPInput example InterfaceName.Set('PIPIInput', 'VGA')			
Command PIPMode	Value 'On'	Value 'Off'	
# PIPMode example InterfaceName.Set('PIPMode', 'On')			
Command PIPPosition	Value 'Left Vertical Center' 'Bottom Center' 'Top Left'	Value 'Top Center' 'Bottom Right' 'Top Right'	Value 'Right Vertical Center' 'Bottom Left'
# PIPPosition example InterfaceName.Set('PIPPosition', 'Left Vertical Center')			
Command PIPSize	Value 'Small'	Value 'Medium'	Value 'Large'
# PIPSize example InterfaceName.Set('PIPSize', 'Small')			
Command PIPSwap	Value 'String'		
# PIPSwap example InterfaceName.Set('PIPSwap', 'String')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AspectRatio	Value 'Auto' 'LetterBox' 'Full Height'	Value 'Native' 'Full Size'	Value '4:3' 'Full Width'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command ClosedCaption	Value 'CC1'	Value 'CC2'	Value 'Off'
# ClosedCaption examples InterfaceName.Update('ClosedCaption') Value = InterfaceName.ReadStatus('ClosedCaption') InterfaceName.SubscribeStatus('ClosedCaption', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'VGA' 'HDMI 2'	Value 'BNC' 'DVI-D'	Value 'HDMI 1' 'HDBaseT'

Global Scripter Module Communication Sheet

<pre># Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
LightSourceMode	'Normal'	'High'	'Eco'
<pre># LightSourceMode examples InterfaceName.Update('LightSourceMode') Value = InterfaceName.ReadStatus('LightSourceMode') InterfaceName.SubscribeStatus('LightSourceMode', None, FeedbackHandler)</pre>			
Command	Value		
OperationHours	0 –		
<pre># OperationHours examples InterfaceName.Update('OperationHours') Value = InterfaceName.ReadStatus('OperationHours') InterfaceName.SubscribeStatus('OperationHours', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PIPIInput	'VGA'	'BNC'	'HDMI 1'
	'HDMI 2'	'DVI-D'	'HDBaseT'
<pre># PIPInput examples InterfaceName.Update('PIPIInput') Value = InterfaceName.ReadStatus('PIPIInput') InterfaceName.SubscribeStatus('PIPIInput', None, FeedbackHandler)</pre>			
Command	Value	Value	
PIPMODE	'On'	'Off'	
<pre># PIPMode examples InterfaceName.Update('PIPMODE') Value = InterfaceName.ReadStatus('PIPMODE') InterfaceName.SubscribeStatus('PIPMODE', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PIPPosition	'Left Vertical Center'	'Top Center'	'Right Vertical Center'
	'Bottom Center'	'Bottom Right'	'Bottom Left'
	'Top Left'	'Top Right'	
<pre># PIPPosition examples InterfaceName.Update('PIPPosition') Value = InterfaceName.ReadStatus('PIPPosition') InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)</pre>			
Command	Value	Value	Value
PIPSize	'Small'	'Medium'	'Large'
<pre># PIPSize examples InterfaceName.Update('PIPSize') Value = InterfaceName.ReadStatus('PIPSize') InterfaceName.SubscribeStatus('PIPSize', None, FeedbackHandler)</pre>			
Command	Value	Value	
Power	'On'	'Off'	

```
# Power examples
InterfaceName.Update('Power')
Value = InterfaceName.ReadStatus('Power')
InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)
```

Command	Value	Value
VideoMute	'On'	'Off'

```
# VideoMute examples
InterfaceName.Update('VideoMute')
Value = InterfaceName.ReadStatus('VideoMute')
InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)
```

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 115200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

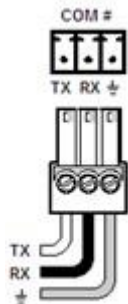

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

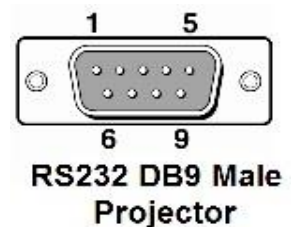

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	3002
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 4:3	(SZP 2)
Aspect Ratio Auto	(SZP 0)
Aspect Ratio Full Height	(SZP 6)
Aspect Ratio Full Size	(SZP 4)
Aspect Ratio Full Width	(SZP 5)
Aspect Ratio LetterBox	(SZP 3)
Aspect Ratio Native	(SZP 1)
Closed Caption CC1	(CLC 1)
Closed Caption CC2	(CLC 2)
Closed Caption Off	(CLC 0)
Freeze Off	(FRZ 0)
Freeze On	(FRZ 1)
Input BNC	(SIN+MAIN 2)
Input DVI-D	(SIN+MAIN 5)
Input HDBaseT	(SIN+MAIN 8)
Input HDMI 1	(SIN+MAIN 3)
Input HDMI 2	(SIN+MAIN 4)
Input VGA	(SIN+MAIN 1)
Keypad 0	(KEY 36)
Keypad 9	(KEY 34)
Light Source Mode Eco	(LPM 3)
Light Source Mode High	(LPM 1)
Light Source Mode Normal	(LPM 0)
Menu Navigation Down	(KEY 42)
Menu Navigation Enter	(KEY 40)
Menu Navigation Exit	(KEY 20)
Menu Navigation Left	(KEY 39)
Menu Navigation Menu	(KEY 19)
Menu Navigation Right	(KEY 41)
Menu Navigation Up	(KEY 38)
PIP Input BNC	(SIN+PIP 2)
PIP Input DVI-D	(SIN+PIP 5)
PIP Input HDBaseT	(SIN+PIP 8)
PIP Input HDMI 1	(SIN+PIP 3)
PIP Input HDMI 2	(SIN+PIP 4)
PIP Input VGA	(SIN+PIP 1)

Global Scripter Module Communication Sheet

Revision: 5/9/2018

PIP Mode Off	(PIP 0)
PIP Mode On	(PIP 1)
PIP Position Bottom Center	(PPP 3)
PIP Position Bottom Left	(PPP 5)
PIP Position Bottom Right	(PPP 4)
PIP Position Left Vertical Center	(PPP 0)
PIP Position Right Vertical Center	(PPP 2)
PIP Position Top Center	(PPP 1)
PIP Position Top Left	(PPP 6)
PIP Position Top Right	(PPP 7)
PIP Size Large	(PHS 2)
PIP Size Medium	(PHS 1)
PIP Size Small	(PHS 0)
PIP Swap None	(PPS)
Power Off	(PWR 0)
Power On	(PWR 1)
Video Mute Off	(SHU 0)
Video Mute On	(SHU 1)

Appendix B. Update Commands

Aspect Ratio	(SZP?)
Closed Caption	(CLC?)
Freeze	(FRZ?)
Input	(SIN+MAIN?)
Light Source Mode	(LPM?)
Operation Hours	(LIF+TPHS?)
PIP Input	(SIN+PIP?)
PIP Mode	(PIP?)
PIP Position	(PPP?)
PIP Size	(PHS?)
Power	(PWR?)
Video Mute	(SHU?)