

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): LWU601i, LW651i, LWU701i, LW751i, LX801i, LWU601i-D, LWU720i, LWU620i, LHD720i, LWU720i-D

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.01.0000-b010	2.1.0

Version History

Module Version	Date	Notes
1_2_1_0	12/18/2018	Internal update, no functional change.
1_2_0_0	10/16/2018	Updated module to Rev. B1. Added models: models LWU620i, LHD720i, LWU720i and LWU720i-D
1_0_0_1	10/3/2017	Updated module to Rev. B
1_0_0_0	2/7/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required for Ethernet control, devicePassword must be set accordingly.
Example: `InterfaceName.devicePassword = 'extron'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='LWU601i')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='LWU601i')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='LWU601i')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value '4:3' '14:9'	Value '16:9' 'Normal'	Value '16:10' 'Native' ¹
# AspectRatio example InterfaceName.Set('AspectRatio', '4:3')			
Command AVMute	Value 'On'	Value 'Off'	
# AVMute example InterfaceName.Set('AVMute', 'On')			
Command ClosedCaption	Value 'On'	Value 'Off'	Value 'Auto'
# ClosedCaption example InterfaceName.Set('ClosedCaption', 'On')			
Command ClosedCaptionChannel	Value '1' – '4'		
# ClosedCaptionChannel example InterfaceName.Set('ClosedCaptionChannel', '1')			
Command ClosedCaptionMode	Value 'Captions'	Value 'Text'	
# ClosedCaptionMode example InterfaceName.Set('ClosedCaptionMode', 'Captions')			
Command EcoMode	Value 'On'	Value 'Off'	
# EcoMode example InterfaceName.Set('EcoMode', 'On')			
Command Focus	Value 'In'	Value 'Out'	
# Focus example InterfaceName.Set('Focus', 'In')			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze example InterfaceName.Set('Freeze', 'On')			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

Revision: 10/16/2018

Input	'Computer'	'LAN'	'HDMI 1'
	'HDMI 2'	'HDBaseT'	'Video'
	'SDI' ²	'DisplayPort'	
# Input example InterfaceName.Set('Input', 'Computer')			
Command Mute	Value 'On'	Value 'Off'	
# Mute example InterfaceName.Set('Mute', 'On')			
Command PbyPMainArea	Value 'Left'	Value 'Right'	
# PbyPMainArea example InterfaceName.Set('PbyPMainArea', 'Left')			
Command PbyPMainSize	Value 'Small'	Value 'Middle'	Value 'Large'
# PbyPMainSize example InterfaceName.Set('PbyPMainSize', 'Small')			
Command PbyPPIPSwap	Value None		
# PbyPPIPSwap example InterfaceName.Set('PbyPPIPSwap', None)			
Command PbyPSource	Value 'Computer'	Value 'HDMI 1'	Value 'HDMI 2'
	'HDBaseT'	'Video'	'SDI' ²
	'DisplayPort'		
Qualifier Key 'Area'	Qualifier Value 'Right'	Qualifier Value 'Left'	
# PbyPSource example InterfaceName.Set('PbyPSource', 'Computer', {'Area': 'Right'})			
Command PIPMMainArea	Value 'Primary'	Value 'Secondary'	
# PIPMainArea example InterfaceName.Set('PIPMMainArea', 'Primary')			
Command PIPMMode	Value 'PIP'	Value 'PbyP'	Value 'Off'
# PIPMode example InterfaceName.Set('PIPMMode', 'PIP')			
Command PIPPosition	Value 'Top Left'	Value 'Top Right'	Value 'Bottom Left'
	'Bottom Right'		
# PIPPosition example			

Global Scripter Module Communication Sheet

InterfaceName.Set('PIPPosition', 'Top Left')			
Command PIPSource	Value 'Computer' 'HDBaseT' 'DisplayPort'	Value 'HDMI 1' 'Video'	Value 'HDMI 2' 'SDI' ²
Qualifier Key 'Area'	Qualifier Value 'Primary'	Qualifier Value 'Secondary'	
# PIPSource example InterfaceName.Set('PIPSource', 'Computer', {'Area': 'Primary'})			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command Shutter	Value 'On'	Value 'Off'	
# Shutter example InterfaceName.Set('Shutter', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			
Command VolumeStep	Value 'Increment'	Value 'Decrement'	
Qualifier Key 'Input'	Qualifier Value 'Computer' 'HDMI 2' 'DisplayPort' 'SDI' ²	Qualifier Value 'LAN' 'HDBaseT' 'Standby'	Qualifier Value 'HDMI 1' 'Video' 'All'
# VolumeStep example InterfaceName.Set('VolumeStep', 'Increment', {'Input': 'Computer'})			
Command Zoom	Value 'In'	Value 'Out'	
# Zoom example InterfaceName.Set('Zoom', 'In')			

¹ This state is not available on the LX801i.

² This state is only available on the LWU701i.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'4:3' '14:9'	'16:9' 'Normal'	'16:10' 'Native' ¹
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	Value
AVMute	'On'	'Off'	
# AVMute examples InterfaceName.Update('AVMute') Value = InterfaceName.ReadStatus('AVMute') InterfaceName.SubscribeStatus('AVMute', None, FeedbackHandler)			
Command	Value	Value	Value
ClosedCaption	'On'	'Off'	'Auto'
# ClosedCaption examples InterfaceName.Update('ClosedCaption') Value = InterfaceName.ReadStatus('ClosedCaption') InterfaceName.SubscribeStatus('ClosedCaption', None, FeedbackHandler)			
Command	Value		
ClosedCaptionChannel	'1' – '4'		
# ClosedCaptionChannel examples InterfaceName.Update('ClosedCaptionChannel') Value = InterfaceName.ReadStatus('ClosedCaptionChannel') InterfaceName.SubscribeStatus('ClosedCaptionChannel', None, FeedbackHandler)			
Command	Value	Value	
ClosedCaptionMode	'Captions'	'Text'	
# ClosedCaptionMode examples InterfaceName.Update('ClosedCaptionMode')			

Global Scripter Module Communication Sheet

Value = InterfaceName.ReadStatus('ClosedCaptionMode') InterfaceName.SubscribeStatus('ClosedCaptionMode', None, FeedbackHandler)			
Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command DeviceStatus	Value 'Normal' 'Lamp Error' 'Cold Error' 'Lens Shift Error'	Value 'Cover Error' 'Temperature Error' 'Filter Error' 'AC Blackout Error'	Value 'Fan Error' 'Air Flow Error' 'Shutter Error'
# DeviceStatus examples InterfaceName.Update('DeviceStatus') Value = InterfaceName.ReadStatus('DeviceStatus') InterfaceName.SubscribeStatus('DeviceStatus', None, FeedbackHandler)			
Command EcoMode	Value 'On'	Value 'Off'	
# EcoMode examples InterfaceName.Update('EcoMode') Value = InterfaceName.ReadStatus('EcoMode') InterfaceName.SubscribeStatus('EcoMode', None, FeedbackHandler)			
Command FilterUsage	Value Hours		
# FilterUsage examples InterfaceName.Update('FilterUsage') Value = InterfaceName.ReadStatus('FilterUsage') InterfaceName.SubscribeStatus('FilterUsage', None, FeedbackHandler)			
Command Freeze	Value 'On'	Value 'Off'	
# Freeze examples InterfaceName.Update('Freeze') Value = InterfaceName.ReadStatus('Freeze') InterfaceName.SubscribeStatus('Freeze', None, FeedbackHandler)			
Command Input	Value 'Computer' 'HDMI 2' 'SDI' ²	Value 'LAN' 'HDBaseT' 'DisplayPort'	Value 'HDMI 1' 'Video'
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command LampUsage	Value Hours		

Global Scripter Module Communication Sheet

<pre># LampUsage examples InterfaceName.Update('LampUsage') Value = InterfaceName.ReadStatus('LampUsage') InterfaceName.SubscribeStatus('LampUsage', None, FeedbackHandler)</pre>			
Command Mute	Value 'On'	Value 'Off'	
<pre># Mute examples InterfaceName.Update('Mute') Value = InterfaceName.ReadStatus('Mute') InterfaceName.SubscribeStatus('Mute', None, FeedbackHandler)</pre>			
Command PbyPMainArea	Value 'Left'	Value 'Right'	
<pre># PbyPMainArea examples InterfaceName.Update('PbyPMainArea') Value = InterfaceName.ReadStatus('PbyPMainArea') InterfaceName.SubscribeStatus('PbyPMainArea', None, FeedbackHandler)</pre>			
Command PbyPMainSize	Value 'Small'	Value 'Middle'	Value 'Large'
<pre># PbyPMainSize examples InterfaceName.Update('PbyPMainSize') Value = InterfaceName.ReadStatus('PbyPMainSize') InterfaceName.SubscribeStatus('PbyPMainSize', None, FeedbackHandler)</pre>			
Command PbyPSource	Value 'Computer' 'HDBaseT' 'DisplayPort'	Value 'HDMI 1' 'Video'	Value 'HDMI 2' 'SDI' ²
Qualifier Key 'Area'	Qualifier Value 'Right'	Qualifier Value 'Left'	
<pre># PbyPSource examples InterfaceName.Update('PbyPSource', {'Area': 'Right'}) Value = InterfaceName.ReadStatus('PbyPSource', {'Area': 'Right'}) InterfaceName.SubscribeStatus('PbyPSource', None, FeedbackHandler)</pre>			
Command PIPMMainArea	Value 'Primary'	Value 'Secondary'	
<pre># PIPMainArea examples InterfaceName.Update('PIPMMainArea') Value = InterfaceName.ReadStatus('PIPMMainArea') InterfaceName.SubscribeStatus('PIPMMainArea', None, FeedbackHandler)</pre>			
Command PIPMode	Value 'PIP'	Value 'PbyP'	Value 'Off'
<pre># PIPMode examples InterfaceName.Update('PIPMode') Value = InterfaceName.ReadStatus('PIPMode') InterfaceName.SubscribeStatus('PIPMode', None, FeedbackHandler)</pre>			
Command	Value	Value	Value

Global Scripter Module Communication Sheet

PIPPosition	'Top Left'	'Top Right'	'Bottom Left'
	'Bottom Right'		
# PIPPosition examples InterfaceName.Update('PIPPosition') Value = InterfaceName.ReadStatus('PIPPosition') InterfaceName.SubscribeStatus('PIPPosition', None, FeedbackHandler)			
Command PIPSource	Value 'Computer'	Value 'HDMI 1'	Value 'HDMI 2'
	'HDBaseT'	'Video'	'SDI' ²
	'DisplayPort'		
Qualifier Key 'Area'	Qualifier Value 'Primary'	Qualifier Value 'Secondary'	
# PIPSource examples InterfaceName.Update('PIPSource', {'Area': 'Primary'}) Value = InterfaceName.ReadStatus('PIPSource', {'Area': 'Primary'}) InterfaceName.SubscribeStatus('PIPSource', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	Value 'Cooling Down'
# Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)			
Command Shutter	Value 'On'	Value 'Off'	
# Shutter examples InterfaceName.Update('Shutter') Value = InterfaceName.ReadStatus('Shutter') InterfaceName.SubscribeStatus('Shutter', None, FeedbackHandler)			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)			
Command VolumeStatus	Value 0 – 48		
Qualifier Key 'Input'	Qualifier Value 'Computer'	Qualifier Value 'LAN'	Qualifier Value 'HDMI 1'
	'HDMI 2'	'HDBaseT'	'Video'
	'DisplayPort'	'Standby'	'SDI' ²
	'All'		
# VolumeStatus examples InterfaceName.Update('VolumeStatus', {'Input': 'Computer'})			

```
Value = InterfaceName.ReadStatus('VolumeStatus', {'Input': 'Computer'})  
InterfaceName.SubscribeStatus('VolumeStatus', None, FeedbackHandler)
```

¹ This state is not available on the LX801i.

² This state is only available on the LWU701i.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Refer to User Manual to perform the following:

Eco Mode needs to be set to normal.

Standby mode needs to be set to normal.

Serial communication

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

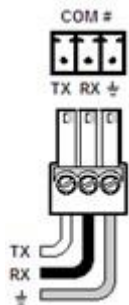

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

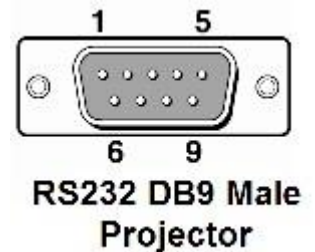

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	23
Logon Credentials Supported:	Yes
Multi-Connection	Undetermined
Capabilities:	
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Refer to User Manual to perform the following:

Eco Mode needs to be set to normal.

Standby mode needs to be set to normal.

Appendix A. Set Commands

Aspect Ratio 14:9	\xBE\xEF\x03\x06\x00\xCE\xD6\x01\x00\x08 \x09\x00
Aspect Ratio 16:10	\xBE\xEF\x03\x06\x00>\xD6\x01\x00\x08 \x0A\x00
Aspect Ratio 16:9	\xBE\xEF\x03\x06\x00\x0E\xD1\x01\x00\x08 \x01\x00
Aspect Ratio 4:3	\xBE\xEF\x03\x06\x00\x9E\xD0\x01\x00\x08 \x00\x00
Aspect Ratio Native	\xBE\xEF\x03\x06\x00^\xD7\x01\x00\x08 \x08\x00
Aspect Ratio Normal	\xBE\xEF\x03\x06\x00^\xDD\x01\x00\x08 \x10\x00
AV Mute Off	\xBE\xEF\x03\x06\x00\xFE\xF0\x01\x00\xA0 \x00\x00
AV Mute On	\xBE\xEF\x03\x06\x00n\xF1\x01\x00\xA0 \x01\x00
Closed Caption Auto	\xBE\xEF\x03\x06\x00\x9Ac\x01\x00\x007\x02\x00
Closed Caption Channel 1	\xBE\xEF\x03\x06\x00\xD2b\x01\x00\x027\x01\x00
Closed Caption Channel 4	\xBE\xEF\x03\x06\x00\x82a\x01\x00\x027\x04\x00
Closed Caption Mode Captions	\xBE\xEF\x03\x06\x00\x06c\x01\x00\x017\x00\x00
Closed Caption Mode Text	\xBE\xEF\x03\x06\x00\x96b\x01\x00\x017\x01\x00
Closed Caption Off	\xBE\xEF\x03\x06\x00\xFAB\x01\x00\x007\x00\x00
Closed Caption On	\xBE\xEF\x03\x06\x00jc\x01\x00\x007\x01\x00
Eco Mode Off	\xBE\xEF\x03\x06\x00;#\x01\x00\x003\x00\x00
Eco Mode On	\xBE\xEF\x03\x06\x00xAB"\x01\x00\x003\x01\x00
Focus In	\xBE\xEF\x03\x06\x00j\x93\x04\x00\x00\$\x00\x00
Focus Out	\xBE\xEF\x03\x06\x00\xBB\x92\x05\x00\x00\$\x00\x00
Freeze Off	\xBE\xEF\x03\x06\x00\x83\xD2\x01\x00\x020\x00\x00
Freeze On	\xBE\xEF\x03\x06\x00\x13\xD3\x01\x00\x020\x01\x00
Input Computer	\xBE\xEF\x03\x06\x00\xFE\xD2\x01\x00\x00 \x00\x00
Input DisplayPort	\xBE\xEF\x03\x06\x00\xCE\xDF\x01\x00\x00 \x13\x00
Input HDBaseT	\xBE\xEF\x03\x06\x00\xAE\xDE\x01\x00\x00 \x11\x00
Input HDMI 1	\xBE\xEF\x03\x06\x00\x0E\xD2\x01\x00\x00 \x03\x00
Input HDMI 2	\xBE\xEF\x03\x06\x00n\xD6\x01\x00\x00 \x0D\x00
Input LAN	\xBE\xEF\x03\x06\x00\xCE\xD5\x01\x00\x00 \x0B\x00
Input SDI	\xBE\xEF\x03\x06\x00^\xDE\x01\x00\x00 \x12\x00
Input Video	\xBE\xEF\x03\x06\x00n\xD3\x01\x00\x00 \x01\x00
Mute Off	\xBE\xEF\x03\x06\x00F\xD3\x01\x00\x02 \x00\x00
Mute On	\xBE\xEF\x03\x06\x00\xD6\xD2\x01\x00\x02 \x01\x00
PbyP Main Area Left	\xBE\xEF\x03\x06\x00z&\x01\x00\x13#\x00\x00
PbyP Main Area Right	\xBE\xEF\x03\x06\x00\xEA'\x01\x00\x13#\x01\x00
PbyP Main Size Large	\xBE\xEF\x03\x06\x00\x92G\x01\x00\x11#\x81\x00
PbyP Main Size Middle	\xBE\xEF\x03\x06\x00\x02F\x01\x00\x11#\x80\x00
PbyP Main Size Small	\xBE\xEF\x03\x06\x00\xF2\x07\x01\x00\x11#\x7F\x00

Global Scripter Module Communication Sheet

Revision: 10/16/2018

PbyP PIP Swap None	\xBE\xEF\x03\x06\x00\x01'\x06\x00\x16#\x00\x00
PbyP Source Computer Area Left	\xBE\xEF\x03\x06\x00\xF2&\x01\x00\x15#\x00\x00
PbyP Source Computer Area Right	\xBE\xEF\x03\x06\x00\x86'\x01\x00\x12#\x00\x00
PbyP Source DisplayPort Area Left	\xBE\xEF\x03\x06\x00\xC2+\x01\x00\x15#\x13\x00
PbyP Source DisplayPort Area Right	\xBE\xEF\x03\x06\x00\xB6*\x01\x00\x12#\x13\x00
PbyP Source HDBaseT Area Left	\xBE\xEF\x03\x06\x00\xA2*\x01\x00\x15#\x11\x00
PbyP Source HDBaseT Area Right	\xBE\xEF\x03\x06\x00\xD6+\x01\x00\x12#\x11\x00
PbyP Source HDMI 1 Area Left	\xBE\xEF\x03\x06\x00\x02&\x01\x00\x15#\x03\x00
PbyP Source HDMI 1 Area Right	\xBE\xEF\x03\x06\x00v'\x01\x00\x12#\x03\x00
PbyP Source HDMI 2 Area Left	\xBE\xEF\x03\x06\x00b"\x01\x00\x15#\x0D\x00
PbyP Source HDMI 2 Area Right	\xBE\xEF\x03\x06\x00\x16#\x01\x00\x12#\x0D\x00
PbyP Source SDI Area Left	\xBE\xEF\x03\x06\x00R*\x01\x00\x15#\x12\x00
PbyP Source SDI Area Right	\xBE\xEF\x03\x06\x00&+\x01\x00\x12#\x12\x00
PbyP Source Video Area Left	\xBE\xEF\x03\x06\x00b'\x01\x00\x15#\x01\x00
PbyP Source Video Area Right	\xBE\xEF\x03\x06\x00\x16&\x01\x00\x12#\x01\x00
PIP Main Area Primary	\xBE\xEF\x03\x06\x002"\x01\x00\x05#\x00\x00
PIP Main Area Secondary	\xBE\xEF\x03\x06\x00xA2#\x01\x00\x05#\x01\x00
PIP Mode Off	\xBE\xEF\x03\x06\x00>&\x01\x00\x10#\x00\x00
PIP Mode PbyP	\xBE\xEF\x03\x06\x00\xAE'\x01\x00\x10#\x01\x00
PIP Mode PIP	\xBE\xEF\x03\x06\x00^'\x01\x00\x10#\x02\x00
PIP Position Bottom Left	\xBE\xEF\x03\x06\x00b"\x01\x00\x01#\x02\x00
PIP Position Bottom Right	\xBE\xEF\x03\x06\x00\xF2#\x01\x00\x01#\x03\x00
PIP Position Top Left	\xBE\xEF\x03\x06\x00\x02#\x01\x00\x01#\x00\x00
PIP Position Top Right	\xBE\xEF\x03\x06\x00\x92"\x01\x00\x01#\x01\x00
PIP Source Computer Area Primary	\xBE\xEF\x03\x06\x00\xCE#\x01\x00\x04#\x00\x00
PIP Source Computer Area Secondary	\xBE\xEF\x03\x06\x00F#\x01\x00\x02#\x00\x00
PIP Source DisplayPort Area Primary	\xBE\xEF\x03\x06\x00\xFE.\x01\x00\x04#\x13\x00
PIP Source DisplayPort Area Secondary	\xBE\xEF\x03\x06\x00v.\x01\x00\x02#\x13\x00
PIP Source HDBaseT Area Primary	\xBE\xEF\x03\x06\x00\x9E/\x01\x00\x04#\x11\x00
PIP Source HDBaseT Area Secondary	\xBE\xEF\x03\x06\x00\x16/\x01\x00\x02#\x11\x00
PIP Source HDMI 1 Area Primary	\xBE\xEF\x03\x06\x00>#\x01\x00\x04#\x03\x00
PIP Source HDMI 1 Area Secondary	\xBE\xEF\x03\x06\x00\xB6#\x01\x00\x02#\x03\x00
PIP Source HDMI 2 Area Primary	\xBE\xEF\x03\x06\x00^'\x01\x00\x04#\x0D\x00
PIP Source HDMI 2 Area Secondary	\xBE\xEF\x03\x06\x00\xD6'\x01\x00\x02#\x0D\x00
PIP Source SDI Area Primary	\xBE\xEF\x03\x06\x00n/\x01\x00\x04#\x12\x00
PIP Source SDI Area Secondary	\xBE\xEF\x03\x06\x00\xE6/\x01\x00\x02#\x12\x00
PIP Source Video Area Primary	\xBE\xEF\x03\x06\x00^"\x01\x00\x04#\x01\x00
PIP Source Video Area Secondary	\xBE\xEF\x03\x06\x00\xD6"\x01\x00\x02#\x01\x00
Power Off	\xBE\xEF\x03\x06\x00*\xD3\x01\x00\x00'\x00\x00

Global Scripter Module Communication Sheet

Revision: 10/16/2018

Power On	\xBE\xEF\x03\x06\x00\xBA\xD2\x01\x00\x00` \x01\x00
Shutter Off	\xBE\xEF\x03\x06\x00\xF3\x93\x01\x00\x05\$\x00\x00
Shutter On	\xBE\xEF\x03\x06\x00c\x92\x01\x00\x05\$\x01\x00
Video Mute Off	\xBE\xEF\x03\x06\x00\xFB\xD8\x01\x00 0\x00\x00
Video Mute On	\xBE\xEF\x03\x06\x00k\xD9\x01\x00 0\x01\x00
Volume Step Increment Input All	\xBE\xEF\x03\x06\x00\xAB\xC3\x04\x00P \x00\x00
Volume Step Increment Input Computer	\xBE\xEF\x03\x06\x00\xAB\xCC\x04\x00` \x00\x00
Volume Step Increment Input DisplayPort	\xBE\xEF\x03\x06\x00g\xE1\x04\x00\xF5 \x00\x00
Volume Step Increment Input HDBaseT	\xBE\xEF\x03\x06\x00\xA7\xEA\x04\x00\xD5 \x00\x00
Volume Step Increment Input HDMI 1	\xBE\xEF\x03\x06\x00\xEF\xCC\x04\x00c \x00\x00
Volume Step Increment Input HDMI 2	\xBE\xEF\x03\x06\x00\x07\xCE\x04\x00m \x00\x00
Volume Step Increment Input LAN	\xBE\xEF\x03\x06\x00\x8F\xCE\x04\x00k \x00\x00
Volume Step Increment Input SDI	\xBE\xEF\x03\x06\x00\xA7\xE5\x04\x00\xE5 \x00\x00
Volume Step Increment Input Standby	\xBE\xEF\x03\x06\x00\xBF\xCF\x04\x00o \x00\x00
Volume Step Increment Input Video	\xBE\xEF\x03\x06\x00W\xCD\x04\x00a \x00\x00
Zoom In	\xBE\xEF\x03\x06\x00\x96\x92\x04\x00\x01\$\x00\x00
Zoom Out	\xBE\xEF\x03\x06\x00G\x93\x05\x00\x01\$\x00\x00

Appendix B. Update Commands

Aspect Ratio	\xBE\xEF\x03\x06\x00\xAD\xD0\x02\x00\x08 \x00\x00
AV Mute	\xBE\xEF\x03\x06\x00\xCD\xF0\x02\x00\xA0 \x00\x00
Closed Caption	\xBE\xEF\x03\x06\x00\xC9b\x02\x00\x007\x00\x00
Closed Caption Channel	\xBE\xEF\x03\x06\x00qc\x02\x00\x027\x00\x00
Closed Caption Mode	\xBE\xEF\x03\x06\x005c\x02\x00\x017\x00\x00
Device Status	\xBE\xEF\x03\x06\x00\xD9\xD8\x02\x00 ` \x00\x00
Eco Mode	\xBE\xEF\x03\x06\x00\x08#\x02\x00\x003\x00\x00
Filter Usage	\xBE\xEF\x03\x06\x00\xC2\xF0\x02\x00\xA0\x10\x00\x00
Freeze	\xBE\xEF\x03\x06\x00\xB0\xD2\x02\x00\x020\x00\x00
Input	\xBE\xEF\x03\x06\x00\xCD\xD2\x02\x00\x00 \x00\x00
Lamp Usage	\xBE\xEF\x03\x06\x00\xC2\xFF\x02\x00\x90\x10\x00\x00
Mute	\xBE\xEF\x03\x06\x00u\xD3\x02\x00\x02 \x00\x00
PbyP Main Area	\xBE\xEF\x03\x06\x00I&\x02\x00\x13#\x00\x00
PbyP Main Size	\xBE\xEF\x03\x06\x00\xF1'\x02\x00\x11#\x00\x00
PbyP Source Area Left	\xBE\xEF\x03\x06\x00\xC1&\x02\x00\x15#\x00\x00
PbyP Source Area Right	\xBE\xEF\x03\x06\x00\xB5'\x02\x00\x12#\x00\x00
PIP Main Area	\xBE\xEF\x03\x06\x00\x01"\x02\x00\x05#\x00\x00
PIP Mode	\xBE\xEF\x03\x06\x00\x0D&\x02\x00\x10#\x00\x00
PIP Position	\xBE\xEF\x03\x06\x001#\x02\x00\x01#\x00\x00
PIP Source Area Primary	\xBE\xEF\x03\x06\x00\xFD#\x02\x00\x04#\x00\x00
PIP Source Area Secondary	\xBE\xEF\x03\x06\x00u#\x02\x00\x02#\x00\x00
Power	\xBE\xEF\x03\x06\x00\x19\xD3\x02\x00\x00` \x00\x00
Shutter	\xBE\xEF\x03\x06\x00\xC0\x93\x02\x00\x05\$\x00\x00
Video Mute	\xBE\xEF\x03\x06\x00\xC8\xD8\x02\x00 0\x00\x00
Volume Status Input All	\xBE\xEF\x03\x06\x00\xCD\xC3\x02\x00P \x00\x00
Volume Status Input Computer	\xBE\xEF\x03\x06\x00\xCD\xCC\x02\x00` \x00\x00
Volume Status Input DisplayPort	\xBE\xEF\x03\x06\x00\x01\xE1\x02\x00\xF5 \x00\x00
Volume Status Input HDBaseT	\xBE\xEF\x03\x06\x00\xC1\xEA\x02\x00\xD5 \x00\x00
Volume Status Input HDMI 1	\xBE\xEF\x03\x06\x00\x89\xCC\x02\x00c \x00\x00
Volume Status Input HDMI 2	\xBE\xEF\x03\x06\x00a\xCE\x02\x00m \x00\x00
Volume Status Input LAN	\xBE\xEF\x03\x06\x00\xE9\xCE\x02\x00k \x00\x00
Volume Status Input SDI	\xBE\xEF\x03\x06\x00\xC1\xE5\x02\x00\xE5 \x00\x00
Volume Status Input Standby	\xBE\xEF\x03\x06\x00\xD9\xCF\x02\x00o \x00\x00
Volume Status Input Video	\xBE\xEF\x03\x06\x001\xCD\x02\x00a \x00\x00