

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): LX1000, LW600, LX900, LX1200

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_1_0_0	1/11/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

AspectRatio1	'Normal'	'Full'	
AspectRatioLX1200	'Normal'	'Wide'	
AutoImage	None		
ExecutiveMode	'Off'	'Mode 2'	'Mode 1'
Freeze	'On'	'Off'	
Input	'Input 1 Analog' 'Input 2 Analog' 'Input 2 YPbPr' 'Input 3 HDCP' 'Input 3 SDI-1' 'Input 3 YPbPr' 'Input 4 HDCP' 'Input 4 SDI-1' 'Input 4 YPbPr'	'Input 1 Digital' 'Input 2 Video' 'Input 3 Analog' 'Input 3 S-Video' 'Input 3 SDI-2' 'Input 4 Analog' 'Input 4 S-Video' 'Input 4 SDI-2'	'Input 1 HDCP' 'Input 2 S-Video' 'Input 3 Digital' 'Input 3 SCART' 'Input 3 Video' 'Input 4 Digital' 'Input 4 SCART' 'Input 4 Video'
LampMode	'Normal'	'ECO'	'Auto'
LampSelect	'Full'	'Half'	
Power	'On'	'Off'	
VideoMute	'On'	'Off'	

Status Available:

AspectRatio1	'Normal'	'Full'	
AspectRatioLX1200	'Normal'	'Wide'	
ConnectionStatus	'Connected'	'Disconnected'	
DeviceStatus	'Normal'	'Power Failure'	'Cooling Down in process due to abnormal temperature'
	'Standby after Cooling Down due to abnormal temperature'	'Invalid RS-232C Command'	'Power Save/Cooling Down in process'
	'Power Save'	'Cooling Down in process after turned Off due to lamp failure'	'Standby after Cooling Down due to lamp failure'
	'Cooling Down in process after Power Off due to Shutter management'	'Standby after Cooling Down due to Shutter management'	
ExecutiveMode	'Off'	'Mode 2'	'Mode 1'
FilterUsage	Hours		
Freeze	'On'	'Off'	
Input	'Input 1 Analog'	'Input 1 Digital'	'Input 1 HDCP'
	'Input 2 Analog'	'Input 2 Video'	'Input 2 S-Video'
	'Input 2 YPbPr'	'Input 3 Analog'	'Input 3 Digital'
	'Input 3 HDCP'	'Input 3 S-Video'	'Input 3 SCART'
	'Input 3 SDI-1'	'Input 3 SDI-2'	'Input 3 Video'
	'Input 3 YPbPr'	'Input 4 Analog'	'Input 4 Digital'
	'Input 4 HDCP'	'Input 4 S-Video'	'Input 4 SCART'
	'Input 4 SDI-1'	'Input 4 SDI-2'	'Input 4 Video'
	'Input 4 YPbPr'		
LampMode	'Normal'	'ECO'	'Auto'
LampSelect	'Full'	'Half'	
LampUsage	Hours		
['Lamp']	'1' – '2'		
OperationHours	Hours		
Power	'On'	'Off'	'Cooling Down'
	'Warming Up'		
VideoMute	'On'	'Off'	

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: 1
Flow Control: None

Pin Assignments Diagram:

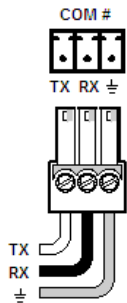

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

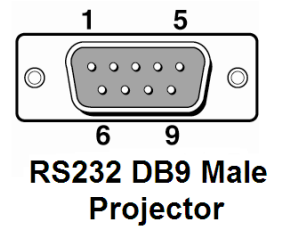

General Notes:

Appendix A. Set Commands

Aspect Ratio Normal	CF SCREEN NORMAL\x0D
Aspect Ratio Wide	CF SCREEN WIDE\x0D
Aspect Ratio Full	CF SCREEN FULL\x0D
Auto Image None	C89\x0D
Executive Mode Mode 1	CF KEYDIS KEY\x0D
Executive Mode Mode 2	CF KEYDIS RC\x0D
Executive Mode Off	CF KEYDIS NONE\x0D
Freeze Off	C44\x0D
Freeze On	C43\x0D
Input Input 1 Analog	CF INPUT1 ANALOG\x0D
Input Input 1 Digital	CF INPUT1 DIGITAL\x0D
Input Input 1 HDCP	CF INPUT1 HDCP\x0D
Input Input 2 Analog	CF INPUT2 ANALOG\x0D
Input Input 2 S-Video	CF INPUT2 S-VIDEO\x0D
Input Input 2 Video	CF INPUT2 VIDEO\x0D
Input Input 2 YPbPr	CF INPUT2 YPBPR\x0D
Input Input 3 Analog	CF INPUT3 ANALOG\x0D
Input Input 3 Digital	CF INPUT3 DIGITAL\x0D
Input Input 3 HDCP	CF INPUT3 ANALOG\x0D
Input Input 3 SCART	CF INPUT3 SCART\x0D
Input Input 3 SDI-1	CF INPUT3 SDI1\x0D
Input Input 3 SDI-2	CF INPUT3 SDI2\x0D
Input Input 3 S-Video	CF INPUT3 S-VIDEO\x0D
Input Input 3 Video	CF INPUT3 VIDEO\x0D
Input Input 3 YPbPr	CF INPUT3 YPBPR\x0D
Input Input 4 Analog	CF INPUT4 ANALOG\x0D
Input Input 4 Digital	CF INPUT4 DIGITAL\x0D
Input Input 4 HDCP	CF INPUT4 HDCP\x0D
Input Input 4 SCART	CF INPUT4 SCART\x0D
Input Input 4 SDI-1	CF INPUT4 SDI1\x0D
Input Input 4 SDI-2	CF INPUT4 SDI2\x0D
Input Input 4 S-Video	CF INPUT4 S-VIDEO\x0D
Input Input 4 Video	CF INPUT4 VIDEO\x0D
Input Input 4 YPbPr	CF INPUT4 YPBPR\x0D
Lamp Mode Auto	CF AUTOLAMPCTRL AUTO \x0D
Lamp Mode ECO	CF AUTOLAMPCTRL ECO \x0D
Lamp Mode Normal	CF AUTOLAMPCTRL NORMAL \x0D
Lamp Select Full	CF LAMPMODE FULL \x0D
Lamp Select Half	CF LAMPMODE HALF \x0D
Power Off	C01\x0D
Power On	C00\x0D
Video Mute Off	C0E\x0D
Video Mute On	C0D\x0D

Appendix B. Query Commands

Aspect Ratio	CR SCREEN\x0D
Executive Mode	CR KEYDIS\x0D
Filter Usage	CR FILH\x0D
Freeze	CR FREEZE\x0D
Input	CR INPUT\x0D
Lamp Mode	CR AUTOLAMPCTRL\x0D
Lamp Select	CR LAMPMODE\x0D
Lamp Usage Lamp 1	CR LAMPH\x0D
Lamp Usage Lamp 2	CR LAMPH\x0D
Operation Hours	CR PROJH\x0D
Power	CR STATUS\x0D
Video Mute	CR VMUTE\x0D