

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Video Projector
Manufacturer: Christie
Firmware Version: N/A
Model(s): LW555, LX505, LX605

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.05.0000-b007	2.01.0002-b005	1.3.0

Version History

Module Version	Date	Notes
1_0_1_0	6/1/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.connectionCounter = 5

Control Commands, States, and Qualifiers:

AspectRatio	'Normal' 'True'	'Wide' 'Custom'	'Full'
AudioMute	'Off'	'On'	
ExecutiveMode	'Off'	'Mode 2'	'Mode 1'
Freeze	'On'	'Off'	
InputSelect	'Input 1' 'Input 4'	'Input 2'	'Input 3'
InputSource1	'Input 1 Digital' 'Input 1 HDCP'	'Input 1 Analog'	'Input 1 SCART'
InputSource2	'Input 2 Video'	'Input 2 YPBPR'	'Input 2 Analog'
InputSource3	'Input 3 Video'	'Input 3 S-Video'	'Input 3 YPBPR'
InputSource4	'Input 4 Network'		
LampMode	'ECO 2' 'ECO 1'	'Auto'	'Normal'
MenuNavigation	'Right' 'Down'	'Left' 'Select'	'Up'
OnScreenDisplay	'On'	'Off'	
Power	'On'	'Off'	
VideoMute	'On'	'Off'	
Volume	0 to 63 in steps of 1		

Status Available:

AspectRatio	'Normal' 'True'	'Wide' 'Custom'	'Full'
AudioMute	'Off'	'On'	
ConnectionStatus	'Connected'	'Disconnected'	
DeviceStatus	'Normal' 'Standby after Cooling Down due to abnormal temperature' 'Power Save' 'Cooling Down in process after Power Off due to Shutter management'	'Power Failure' 'Invalid RS-232C Command' 'Cooling Down in process after turned Off due to lamp failure' 'Standby after Cooling Down due to Shutter management'	'Cooling Down in process due to abnormal temperature' 'Power Save/Cooling Down in process' 'Standby after Cooling Down due to lamp failure'
ExecutiveMode	'Off'	'Mode 2'	'Mode 1'
FilterUsage	Hours		
Freeze	'On'	'Off'	
InputSelect	'Input 1' 'Input 4'	'Input 2'	'Input 3'
InputSource1	'Input 1 Digital' 'Input 1 HDCP'	'Input 1 Analog'	'Input 1 SCART'
InputSource2	'Input 2 Video'	'Input 2 YPBPR'	'Input 2 Analog'
InputSource3	'Input 3 Video'	'Input 3 S-Video'	'Input 3 YPBPR'
InputSource4	'Input 4 Network'		
LampMode	'ECO 2' 'ECO 1'	'Auto'	'Normal'
LampUsage	Hours		
OperationHours	Hours		
Power	'On' 'Cooling Down'	'Off'	'Warming Up'
VideoMute	'On'	'Off'	
Volume	0 to 63 in steps of 1		

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 19200


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

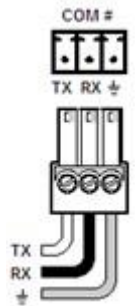

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

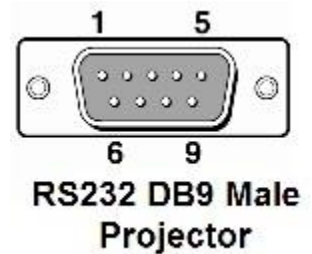

General Notes:

Network communication:

When configuring the Ethernet interface, be sure the device settings match that of the GS interface settings.

Port Type:	Ethernet
Default Port:	10000
Logon Credentials Supported:	Yes
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Yes

Ethernet Module Configuration Description:

Please refer to user manual for settings and changes to the network communication

Notes for the Device:

Appendix A. Set Commands

Aspect Ratio Custom	CF SCREEN CUSTOM\x0D
Aspect Ratio Full	CF SCREEN FULL\x0D
Aspect Ratio Normal	CF SCREEN NORMAL\x0D
Aspect Ratio True	CF SCREEN TRUE\x0D
Aspect Ratio Wide	CF SCREEN WIDE\x0D
Audio Mute Off	CF MUTE OFF\x0D
Audio Mute On	CF MUTE ON\x0D
Executive Mode Mode 1	CF KEYDIS KEY\x0D
Executive Mode Mode 2	CF KEYDIS RC\x0D
Executive Mode Off	CF KEYDIS NONE\x0D
Freeze Off	CF FREEZE OFF\x0D
Freeze On	CF FREEZE ON\x0D
Input Select Input 1	CF INPUT 1\x0D
Input Select Input 2	CF INPUT 2\x0D
Input Select Input 3	CF INPUT 3\x0D
Input Select Input 4	CF INPUT 4\x0D
Input Source 1 Input 1 Analog	CF INPUT1 ANALOG\x0D
Input Source 1 Input 1 Digital	CF INPUT1 DIGITAL\x0D
Input Source 1 Input 1 HDCP	CF INPUT1 HDCP\x0D
Input Source 1 Input 1 SCART	CF INPUT1 SCART\x0D
Input Source 2 Input 2 Analog	CF INPUT2 ANALOG\x0D
Input Source 2 Input 2 Video	CF INPUT2 VIDEO\x0D
Input Source 2 Input 2 YPBPR	CF INPUT2 YPBPR\x0D
Input Source 3 Input 3 S-Video	CF INPUT3 S-VIDEO\x0D
Input Source 3 Input 3 Video	CF INPUT3 VIDEO\x0D
Input Source 3 Input 3 YPBPR	CF INPUT3 YPBPR\x0D
Input Source 4 Input 4 Network	CF INPUT4 NETWORK\x0D
Lamp Mode Auto	CF LAMPMODE AUTO\x0D
Lamp Mode ECO 1	CF LAMPMODE ECO1\x0D
Lamp Mode ECO 2	CF LAMPMODE ECO2\x0D
Lamp Mode Normal	CF LAMPMODE NORMAL\x0D
Menu Navigation Down	CF KEYEMU DOWN\x0D
Menu Navigation Left	CF KEYEMU LEFT\x0D
Menu Navigation Right	CF KEYEMU RIGHT\x0D
Menu Navigation Select	CF KEYEMU SELECT\x0D
Menu Navigation Up	CF KEYEMU UP\x0D
On Screen Display Off	CF MENU OFF\x0D
On Screen Display On	CF MENU ON\x0D
Power Off	CF POWER OFF\x0D
Power On	CF POWER ON\x0D
Video Mute Off	C0E\x0D
Video Mute On	C0D\x0D
Volume 0	CF VOLUME 000\x0D
Volume 63	CF VOLUME 063\x0D

Appendix B. Query Commands

Aspect Ratio	CR SCREEN\x0D
Audio Mute	CR MUTE\x0D
Executive Mode	CR KEYDIS\x0D
Filter Usage	CR FILH\x0D
Freeze	CR FREEZE\x0D
Input Select	CR INPUT\x0D
Input Source 1	CR SRCINP1\x0D
Input Source 2	CR SRCINP2\x0D
Input Source 3	CR SRCINP3\x0D
Input Source 4	CR SRCINP4\x0D
Lamp Mode	CR LAMPMODE\x0D
Lamp Usage	CR LAMPH\x0D
Operation Hours	CR PROJH\x0D
Power	CR STATUS\x0D
Video Mute	CR VMUTE\x0D
Volume	CR VOLUME\x0D