

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Lighting Control
Manufacturer: Clipsal
Firmware Version: N/A
Model(s): 5500PACA

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.3

Version History

Module Version	Date	Notes
1_0_1_0	3/28/2017	Initial Version

Module Notes

- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

Power	'On' 'Off'
['Group']	1 to 255 in steps of 1

Status Available:

N/A

Cable and Adapter Requirements:

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device:

Serial communication:

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None

Stop Bits: One

Flow Control: None

Pin Assignments Diagram

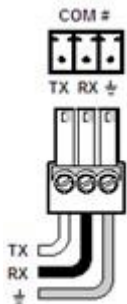

Signal	Main Cable	Pin	Signal
TxD	↗	2	TxD
RxD	↖	3	RxD
GND	—	5	GND



General Notes:

Appendix A. Set Commands

Power Off Group 1	\0538000101\x0D
Power Off Group 255	\05380001FF\x0D
Power On Group 1	\0538007901\x0D
Power On Group 255	\05380079FF\x0D