

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Controller
Manufacturer: CoolAutomation
Firmware Version: N/A
Model(s): CoolMasterNet

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_0_0	10/26/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: InterfaceName.connectionCounter = 5

Supported Classes and Examples

SerialClass

```
InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='CoolMasterNet')
```

SerialOverEthernetClass

```
InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001,  
Model='CoolMasterNet')
```

EthernetClass

```
InterfaceName = ModuleName.EthernetClass('192.168.254.254', 10102, Model='CoolMasterNet')
```

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command FanSpeed	Value 'Low' 'Top'	Value 'Medium' 'Auto'	Value 'High'
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# FanSpeed example InterfaceName.Set('FanSpeed', 'Low', {'Line': 'L1', 'Indoor Unit': 999})			
Command LockMode	Value 'Lock Power, Lock Operation Mode, Lock Temperature' 'Unlock Power' 'Lock Temperature'	Value 'Unlock Power, Unlock Operation Mode, Unlock Temperature' 'Lock Operation Mode' 'Unlock Temperature'	Value 'Lock Power' 'Unlock Operation Mode'
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# LockMode example InterfaceName.Set('LockMode', 'Lock Power, Lock Operation Mode, Lock Temperature', {'Line': 'L1', 'Indoor Unit': 999})			
Command OperationMode	Value 'Cool' 'Dry'	Value 'Heat' 'Auto'	Value 'Fan'
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4'	Qualifier Value 'L2' 'L5'	Qualifier Value 'L3' 'L6'

Global Scripter Module Communication Sheet

	'L7'	'L8'	
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# OperationMode example InterfaceName.Set('OperationMode', 'Cool', {'Line': 'L1', 'Indoor Unit': 999})			
Command Power	Value 'On'	Value 'Off'	
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# Power example InterfaceName.Set('Power', 'On', {'Line': 'L1', 'Indoor Unit': 999})			
Command Temperature	Value 0 to 99 in steps of 0.1		
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# Temperature example InterfaceName.Set('Temperature', 99, {'Line': 'L1', 'Indoor Unit': 999})			

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command ConnectionStatus	Value 'Connected'	Value 'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command FanSpeed	Value 'Low' 'Top'	Value 'Medium' 'Auto'	Value 'High'
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# FanSpeed examples InterfaceName.Update('FanSpeed', {'Line': 'L1', 'Indoor Unit': 999}) Value = InterfaceName.ReadStatus('FanSpeed', {'Line': 'L1', 'Indoor Unit': 999}) InterfaceName.SubscribeStatus('FanSpeed', None, FeedbackHandler)			
Command Heartbeat			
# Heartbeat examples InterfaceName.Update('Heartbeat') Value = InterfaceName.ReadStatus('Heartbeat') InterfaceName.SubscribeStatus('Heartbeat', None, FeedbackHandler)			
Command LockMode	Value	Value	Value

Global Scripter Module Communication Sheet

	'Lock Power, Lock Operation Mode, Lock Temperature'	'Unlock Power, Unlock Operation Mode, Unlock Temperature'	'Lock Power, Unlock Operation Mode, Unlock Temperature'
	'Lock Power, Unlock Operation Mode, Lock Temperature'	'Lock Power, Lock Operation Mode, Unlock Temperature'	'Unlock Power, Unlock Operation Mode, Lock Temperature'
	'Unlock Power, Lock Operation Mode, Unlock Temperature'	'Unlock Power, Lock Operation Mode, Lock Temperature'	
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# LockMode examples InterfaceName.Update('LockMode', {'Line': 'L1', 'Indoor Unit': 999}) Value = InterfaceName.ReadStatus('LockMode', {'Line': 'L1', 'Indoor Unit': 999}) InterfaceName.SubscribeStatus('LockMode', None, FeedbackHandler)			
Command OperationMode	Value 'Cool' 'Dry'	Value 'Heat' 'Auto'	Value 'Fan'
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
# OperationMode examples InterfaceName.Update('OperationMode', {'Line': 'L1', 'Indoor Unit': 999}) Value = InterfaceName.ReadStatus('OperationMode', {'Line': 'L1', 'Indoor Unit': 999}) InterfaceName.SubscribeStatus('OperationMode', None, FeedbackHandler)			
Command Power	Value 'On'	Value 'Off'	
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		

Global Scripter Module Communication Sheet

<pre># Power examples InterfaceName.Update('Power', {'Line': 'L1', 'Indoor Unit': 999}) Value = InterfaceName.ReadStatus('Power', {'Line': 'L1', 'Indoor Unit': 999}) InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command Temperature	Value 0 to 99 in steps of 0.1		
Qualifier Key 'Line'	Qualifier Value 'L1' 'L4' 'L7'	Qualifier Value 'L2' 'L5' 'L8'	Qualifier Value 'L3' 'L6'
Qualifier Key 'Indoor Unit'	Qualifier Value 1 to 999 in steps of 1		
<pre># Temperature examples InterfaceName.Update('Temperature', {'Line': 'L1', 'Indoor Unit': 999}) Value = InterfaceName.ReadStatus('Temperature', {'Line': 'L1', 'Indoor Unit': 999}) InterfaceName.SubscribeStatus('Temperature', None, FeedbackHandler)</pre>			

Cable and Adapter Requirements

Captive Screw to Male DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

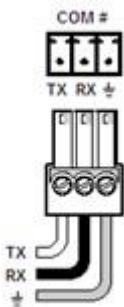

Signal	Main Cable	Pin	Signal
TxD		2	TxD
RxD		3	RxD
GND		5	GND

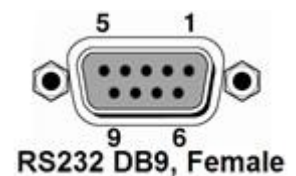

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	10102
Logon Credentials Supported:	No
Multi-Connection	Yes
Capabilities:	
Port Changeability:	Yes

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Fan Speed Auto Line L1 Indoor Unit 1	fspeed L1.001 a\x0D\x0A
Fan Speed Auto Line L1 Indoor Unit 999	fspeed L1.999 a\x0D\x0A
Fan Speed Auto Line L2 Indoor Unit 1	fspeed L2.001 a\x0D\x0A
Fan Speed Auto Line L2 Indoor Unit 999	fspeed L2.999 a\x0D\x0A
Fan Speed Auto Line L3 Indoor Unit 1	fspeed L3.001 a\x0D\x0A
Fan Speed Auto Line L3 Indoor Unit 999	fspeed L3.999 a\x0D\x0A
Fan Speed Auto Line L4 Indoor Unit 1	fspeed L4.001 a\x0D\x0A
Fan Speed Auto Line L4 Indoor Unit 999	fspeed L4.999 a\x0D\x0A
Fan Speed Auto Line L5 Indoor Unit 1	fspeed L5.001 a\x0D\x0A
Fan Speed Auto Line L5 Indoor Unit 999	fspeed L5.999 a\x0D\x0A
Fan Speed Auto Line L6 Indoor Unit 1	fspeed L6.001 a\x0D\x0A
Fan Speed Auto Line L6 Indoor Unit 999	fspeed L6.999 a\x0D\x0A
Fan Speed Auto Line L7 Indoor Unit 1	fspeed L7.001 a\x0D\x0A
Fan Speed Auto Line L7 Indoor Unit 999	fspeed L7.999 a\x0D\x0A
Fan Speed Auto Line L8 Indoor Unit 1	fspeed L8.001 a\x0D\x0A
Fan Speed Auto Line L8 Indoor Unit 999	fspeed L8.999 a\x0D\x0A
Fan Speed High Line L1 Indoor Unit 1	fspeed L1.001 h\x0D\x0A
Fan Speed High Line L1 Indoor Unit 999	fspeed L1.999 h\x0D\x0A
Fan Speed High Line L2 Indoor Unit 1	fspeed L2.001 h\x0D\x0A
Fan Speed High Line L2 Indoor Unit 999	fspeed L2.999 h\x0D\x0A
Fan Speed High Line L3 Indoor Unit 1	fspeed L3.001 h\x0D\x0A
Fan Speed High Line L3 Indoor Unit 999	fspeed L3.999 h\x0D\x0A
Fan Speed High Line L4 Indoor Unit 1	fspeed L4.001 h\x0D\x0A
Fan Speed High Line L4 Indoor Unit 999	fspeed L4.999 h\x0D\x0A
Fan Speed High Line L5 Indoor Unit 1	fspeed L5.001 h\x0D\x0A
Fan Speed High Line L5 Indoor Unit 999	fspeed L5.999 h\x0D\x0A
Fan Speed High Line L6 Indoor Unit 1	fspeed L6.001 h\x0D\x0A
Fan Speed High Line L6 Indoor Unit 999	fspeed L6.999 h\x0D\x0A
Fan Speed High Line L7 Indoor Unit 1	fspeed L7.001 h\x0D\x0A
Fan Speed High Line L7 Indoor Unit 999	fspeed L7.999 h\x0D\x0A
Fan Speed High Line L8 Indoor Unit 1	fspeed L8.001 h\x0D\x0A
Fan Speed High Line L8 Indoor Unit 999	fspeed L8.999 h\x0D\x0A
Fan Speed Low Line L1 Indoor Unit 1	fspeed L1.001 l\x0D\x0A
Fan Speed Low Line L1 Indoor Unit 999	fspeed L1.999 l\x0D\x0A
Fan Speed Low Line L2 Indoor Unit 1	fspeed L2.001 l\x0D\x0A
Fan Speed Low Line L2 Indoor Unit 999	fspeed L2.999 l\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Fan Speed Low Line L3 Indoor Unit 1	fspeed L3.001 1\x0D\x0A
Fan Speed Low Line L3 Indoor Unit 999	fspeed L3.999 1\x0D\x0A
Fan Speed Low Line L4 Indoor Unit 1	fspeed L4.001 1\x0D\x0A
Fan Speed Low Line L4 Indoor Unit 999	fspeed L4.999 1\x0D\x0A
Fan Speed Low Line L5 Indoor Unit 1	fspeed L5.001 1\x0D\x0A
Fan Speed Low Line L5 Indoor Unit 999	fspeed L5.999 1\x0D\x0A
Fan Speed Low Line L6 Indoor Unit 1	fspeed L6.001 1\x0D\x0A
Fan Speed Low Line L6 Indoor Unit 999	fspeed L6.999 1\x0D\x0A
Fan Speed Low Line L7 Indoor Unit 1	fspeed L7.001 1\x0D\x0A
Fan Speed Low Line L7 Indoor Unit 999	fspeed L7.999 1\x0D\x0A
Fan Speed Low Line L8 Indoor Unit 1	fspeed L8.001 1\x0D\x0A
Fan Speed Low Line L8 Indoor Unit 999	fspeed L8.999 1\x0D\x0A
Fan Speed Medium Line L1 Indoor Unit 1	fspeed L1.001 m\x0D\x0A
Fan Speed Medium Line L1 Indoor Unit 999	fspeed L1.999 m\x0D\x0A
Fan Speed Medium Line L2 Indoor Unit 1	fspeed L2.001 m\x0D\x0A
Fan Speed Medium Line L2 Indoor Unit 999	fspeed L2.999 m\x0D\x0A
Fan Speed Medium Line L3 Indoor Unit 1	fspeed L3.001 m\x0D\x0A
Fan Speed Medium Line L3 Indoor Unit 999	fspeed L3.999 m\x0D\x0A
Fan Speed Medium Line L4 Indoor Unit 1	fspeed L4.001 m\x0D\x0A
Fan Speed Medium Line L4 Indoor Unit 999	fspeed L4.999 m\x0D\x0A
Fan Speed Medium Line L5 Indoor Unit 1	fspeed L5.001 m\x0D\x0A
Fan Speed Medium Line L5 Indoor Unit 999	fspeed L5.999 m\x0D\x0A
Fan Speed Medium Line L6 Indoor Unit 1	fspeed L6.001 m\x0D\x0A
Fan Speed Medium Line L6 Indoor Unit 999	fspeed L6.999 m\x0D\x0A
Fan Speed Medium Line L7 Indoor Unit 1	fspeed L7.001 m\x0D\x0A
Fan Speed Medium Line L7 Indoor Unit 999	fspeed L7.999 m\x0D\x0A
Fan Speed Medium Line L8 Indoor Unit 1	fspeed L8.001 m\x0D\x0A
Fan Speed Medium Line L8 Indoor Unit 999	fspeed L8.999 m\x0D\x0A
Fan Speed Top Line L1 Indoor Unit 1	fspeed L1.001 t\x0D\x0A
Fan Speed Top Line L1 Indoor Unit 999	fspeed L1.999 t\x0D\x0A
Fan Speed Top Line L2 Indoor Unit 1	fspeed L2.001 t\x0D\x0A
Fan Speed Top Line L2 Indoor Unit 999	fspeed L2.999 t\x0D\x0A
Fan Speed Top Line L3 Indoor Unit 1	fspeed L3.001 t\x0D\x0A
Fan Speed Top Line L3 Indoor Unit 999	fspeed L3.999 t\x0D\x0A
Fan Speed Top Line L4 Indoor Unit 1	fspeed L4.001 t\x0D\x0A
Fan Speed Top Line L4 Indoor Unit 999	fspeed L4.999 t\x0D\x0A
Fan Speed Top Line L5 Indoor Unit 1	fspeed L5.001 t\x0D\x0A
Fan Speed Top Line L5 Indoor Unit 999	fspeed L5.999 t\x0D\x0A
Fan Speed Top Line L6 Indoor Unit 1	fspeed L6.001 t\x0D\x0A

Global Scripser Module Communication Sheet

Revision: 10/26/2018

Fan Speed Top Line L6 Indoor Unit 999	fspeed L6.999 t\x0D\x0A
Fan Speed Top Line L7 Indoor Unit 1	fspeed L7.001 t\x0D\x0A
Fan Speed Top Line L7 Indoor Unit 999	fspeed L7.999 t\x0D\x0A
Fan Speed Top Line L8 Indoor Unit 1	fspeed L8.001 t\x0D\x0A
Fan Speed Top Line L8 Indoor Unit 999	fspeed L8.999 t\x0D\x0A
Lock Mode Lock Operation Mode Line L1 Indoor Unit 1	lock L1.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L1 Indoor Unit 999	lock L1.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L2 Indoor Unit 1	lock L2.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L2 Indoor Unit 999	lock L2.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L3 Indoor Unit 1	lock L3.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L3 Indoor Unit 999	lock L3.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L4 Indoor Unit 1	lock L4.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L4 Indoor Unit 999	lock L4.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L5 Indoor Unit 1	lock L5.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L5 Indoor Unit 999	lock L5.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L6 Indoor Unit 1	lock L6.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L6 Indoor Unit 999	lock L6.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L7 Indoor Unit 1	lock L7.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L7 Indoor Unit 999	lock L7.999 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L8 Indoor Unit 1	lock L8.001 +m\x0D\x0A
Lock Mode Lock Operation Mode Line L8 Indoor Unit 999	lock L8.999 +m\x0D\x0A
Lock Mode Lock Power Line L1 Indoor Unit 1	lock L1.001 +o\x0D\x0A
Lock Mode Lock Power Line L1 Indoor Unit 999	lock L1.999 +o\x0D\x0A
Lock Mode Lock Power Line L2 Indoor Unit 1	lock L2.001 +o\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Lock Mode Lock Power Line L2 Indoor Unit 999	lock L2.999 +o\x0D\x0A
Lock Mode Lock Power Line L3 Indoor Unit 1	lock L3.001 +o\x0D\x0A
Lock Mode Lock Power Line L3 Indoor Unit 999	lock L3.999 +o\x0D\x0A
Lock Mode Lock Power Line L4 Indoor Unit 1	lock L4.001 +o\x0D\x0A
Lock Mode Lock Power Line L4 Indoor Unit 999	lock L4.999 +o\x0D\x0A
Lock Mode Lock Power Line L5 Indoor Unit 1	lock L5.001 +o\x0D\x0A
Lock Mode Lock Power Line L5 Indoor Unit 999	lock L5.999 +o\x0D\x0A
Lock Mode Lock Power Line L6 Indoor Unit 1	lock L6.001 +o\x0D\x0A
Lock Mode Lock Power Line L6 Indoor Unit 999	lock L6.999 +o\x0D\x0A
Lock Mode Lock Power Line L7 Indoor Unit 1	lock L7.001 +o\x0D\x0A
Lock Mode Lock Power Line L7 Indoor Unit 999	lock L7.999 +o\x0D\x0A
Lock Mode Lock Power Line L8 Indoor Unit 1	lock L8.001 +o\x0D\x0A
Lock Mode Lock Power Line L8 Indoor Unit 999	lock L8.999 +o\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L1 Indoor Unit 1	lock L1.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L1 Indoor Unit 999	lock L1.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L2 Indoor Unit 1	lock L2.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L2 Indoor Unit 999	lock L2.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L3 Indoor Unit 1	lock L3.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L3 Indoor Unit 999	lock L3.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L4 Indoor Unit 1	lock L4.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L4 Indoor Unit 999	lock L4.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L5 Indoor Unit 1	lock L5.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L5 Indoor Unit 999	lock L5.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L6 Indoor Unit 1	lock L6.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L6 Indoor Unit 999	lock L6.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L7 Indoor Unit 1	lock L7.001 +\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L7 Indoor Unit 999	lock L7.999 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L8 Indoor Unit 1	lock L8.001 +\x0D\x0A
Lock Mode Lock Power, Lock Operation Mode, Lock Temperature Line L8 Indoor Unit 999	lock L8.999 +\x0D\x0A
Lock Mode Lock Temperature Line L1 Indoor Unit 1	lock L1.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L1 Indoor Unit 999	lock L1.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L2 Indoor Unit 1	lock L2.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L2 Indoor Unit 999	lock L2.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L3 Indoor Unit 1	lock L3.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L3 Indoor Unit 999	lock L3.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L4 Indoor Unit 1	lock L4.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L4 Indoor Unit 999	lock L4.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L5 Indoor Unit 1	lock L5.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L5 Indoor Unit 999	lock L5.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L6 Indoor Unit 1	lock L6.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L6 Indoor Unit 999	lock L6.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L7 Indoor Unit 1	lock L7.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L7 Indoor Unit 999	lock L7.999 +t\x0D\x0A
Lock Mode Lock Temperature Line L8 Indoor Unit 1	lock L8.001 +t\x0D\x0A
Lock Mode Lock Temperature Line L8 Indoor Unit 999	lock L8.999 +t\x0D\x0A
Lock Mode Unlock Operation Mode Line L1 Indoor Unit 1	lock L1.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L1 Indoor Unit 999	lock L1.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L2 Indoor Unit 1	lock L2.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L2 Indoor Unit 999	lock L2.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L3 Indoor Unit 1	lock L3.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L3 Indoor Unit 999	lock L3.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L4 Indoor Unit 1	lock L4.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L4 Indoor Unit 999	lock L4.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L5 Indoor Unit 1	lock L5.001 -m\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Lock Mode Unlock Operation Mode Line L5 Indoor Unit 999	lock L5.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L6 Indoor Unit 1	lock L6.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L6 Indoor Unit 999	lock L6.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L7 Indoor Unit 1	lock L7.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L7 Indoor Unit 999	lock L7.999 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L8 Indoor Unit 1	lock L8.001 -m\x0D\x0A
Lock Mode Unlock Operation Mode Line L8 Indoor Unit 999	lock L8.999 -m\x0D\x0A
Lock Mode Unlock Power Line L1 Indoor Unit 1	lock L1.001 -o\x0D\x0A
Lock Mode Unlock Power Line L1 Indoor Unit 999	lock L1.999 -o\x0D\x0A
Lock Mode Unlock Power Line L2 Indoor Unit 1	lock L2.001 -o\x0D\x0A
Lock Mode Unlock Power Line L2 Indoor Unit 999	lock L2.999 -o\x0D\x0A
Lock Mode Unlock Power Line L3 Indoor Unit 1	lock L3.001 -o\x0D\x0A
Lock Mode Unlock Power Line L3 Indoor Unit 999	lock L3.999 -o\x0D\x0A
Lock Mode Unlock Power Line L4 Indoor Unit 1	lock L4.001 -o\x0D\x0A
Lock Mode Unlock Power Line L4 Indoor Unit 999	lock L4.999 -o\x0D\x0A
Lock Mode Unlock Power Line L5 Indoor Unit 1	lock L5.001 -o\x0D\x0A
Lock Mode Unlock Power Line L5 Indoor Unit 999	lock L5.999 -o\x0D\x0A
Lock Mode Unlock Power Line L6 Indoor Unit 1	lock L6.001 -o\x0D\x0A
Lock Mode Unlock Power Line L6 Indoor Unit 999	lock L6.999 -o\x0D\x0A
Lock Mode Unlock Power Line L7 Indoor Unit 1	lock L7.001 -o\x0D\x0A
Lock Mode Unlock Power Line L7 Indoor Unit 999	lock L7.999 -o\x0D\x0A
Lock Mode Unlock Power Line L8 Indoor Unit 1	lock L8.001 -o\x0D\x0A
Lock Mode Unlock Power Line L8 Indoor Unit 999	lock L8.999 -o\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L1 Indoor Unit 1	lock L1.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L1 Indoor Unit 999	lock L1.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L2 Indoor Unit 1	lock L2.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L2 Indoor Unit 999	lock L2.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L3 Indoor Unit 1	lock L3.001 -\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L3 Indoor Unit 999	lock L3.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L4 Indoor Unit 1	lock L4.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L4 Indoor Unit 999	lock L4.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L5 Indoor Unit 1	lock L5.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L5 Indoor Unit 999	lock L5.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L6 Indoor Unit 1	lock L6.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L6 Indoor Unit 999	lock L6.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L7 Indoor Unit 1	lock L7.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L7 Indoor Unit 999	lock L7.999 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L8 Indoor Unit 1	lock L8.001 -\x0D\x0A
Lock Mode Unlock Power, Unlock Operation Mode, Unlock Temperature Line L8 Indoor Unit 999	lock L8.999 -\x0D\x0A
Lock Mode Unlock Temperature Line L1 Indoor Unit 1	lock L1.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L1 Indoor Unit 999	lock L1.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L2 Indoor Unit 1	lock L2.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L2 Indoor Unit 999	lock L2.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L3 Indoor Unit 1	lock L3.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L3 Indoor Unit 999	lock L3.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L4 Indoor Unit 1	lock L4.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L4 Indoor Unit 999	lock L4.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L5 Indoor Unit 1	lock L5.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L5 Indoor Unit 999	lock L5.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L6 Indoor Unit 1	lock L6.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L6 Indoor Unit 999	lock L6.999 -t\x0D\x0A

Global Scripter Module Communication Sheet

Revision: 10/26/2018

Lock Mode Unlock Temperature Line L7 Indoor Unit 1	lock L7.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L7 Indoor Unit 999	lock L7.999 -t\x0D\x0A
Lock Mode Unlock Temperature Line L8 Indoor Unit 1	lock L8.001 -t\x0D\x0A
Lock Mode Unlock Temperature Line L8 Indoor Unit 999	lock L8.999 -t\x0D\x0A
Operation Mode Auto Line L1 Indoor Unit 1	auto L1.001\x0D\x0A
Operation Mode Auto Line L1 Indoor Unit 999	auto L1.999\x0D\x0A
Operation Mode Auto Line L2 Indoor Unit 1	auto L2.001\x0D\x0A
Operation Mode Auto Line L2 Indoor Unit 999	auto L2.999\x0D\x0A
Operation Mode Auto Line L3 Indoor Unit 1	auto L3.001\x0D\x0A
Operation Mode Auto Line L3 Indoor Unit 999	auto L3.999\x0D\x0A
Operation Mode Auto Line L4 Indoor Unit 1	auto L4.001\x0D\x0A
Operation Mode Auto Line L4 Indoor Unit 999	auto L4.999\x0D\x0A
Operation Mode Auto Line L5 Indoor Unit 1	auto L5.001\x0D\x0A
Operation Mode Auto Line L5 Indoor Unit 999	auto L5.999\x0D\x0A
Operation Mode Auto Line L6 Indoor Unit 1	auto L6.001\x0D\x0A
Operation Mode Auto Line L6 Indoor Unit 999	auto L6.999\x0D\x0A
Operation Mode Auto Line L7 Indoor Unit 1	auto L7.001\x0D\x0A
Operation Mode Auto Line L7 Indoor Unit 999	auto L7.999\x0D\x0A
Operation Mode Auto Line L8 Indoor Unit 1	auto L8.001\x0D\x0A
Operation Mode Auto Line L8 Indoor Unit 999	auto L8.999\x0D\x0A
Operation Mode Cool Line L1 Indoor Unit 1	cool L1.001\x0D\x0A
Operation Mode Cool Line L1 Indoor Unit 999	cool L1.999\x0D\x0A
Operation Mode Cool Line L2 Indoor Unit 1	cool L2.001\x0D\x0A
Operation Mode Cool Line L2 Indoor Unit 999	cool L2.999\x0D\x0A
Operation Mode Cool Line L3 Indoor Unit 1	cool L3.001\x0D\x0A
Operation Mode Cool Line L3 Indoor Unit 999	cool L3.999\x0D\x0A
Operation Mode Cool Line L4 Indoor Unit 1	cool L4.001\x0D\x0A
Operation Mode Cool Line L4 Indoor Unit 999	cool L4.999\x0D\x0A
Operation Mode Cool Line L5 Indoor Unit 1	cool L5.001\x0D\x0A
Operation Mode Cool Line L5 Indoor Unit 999	cool L5.999\x0D\x0A
Operation Mode Cool Line L6 Indoor Unit 1	cool L6.001\x0D\x0A
Operation Mode Cool Line L6 Indoor Unit 999	cool L6.999\x0D\x0A
Operation Mode Cool Line L7 Indoor Unit 1	cool L7.001\x0D\x0A
Operation Mode Cool Line L7 Indoor Unit 999	cool L7.999\x0D\x0A
Operation Mode Cool Line L8 Indoor Unit 1	cool L8.001\x0D\x0A
Operation Mode Cool Line L8 Indoor Unit 999	cool L8.999\x0D\x0A
Operation Mode Dry Line L1 Indoor Unit 1	dry L1.001\x0D\x0A

Global Scripter Module Communication Sheet

Operation Mode Dry Line L1 Indoor Unit 999	dry L1.999\x0D\x0A
Operation Mode Dry Line L2 Indoor Unit 1	dry L2.001\x0D\x0A
Operation Mode Dry Line L2 Indoor Unit 999	dry L2.999\x0D\x0A
Operation Mode Dry Line L3 Indoor Unit 1	dry L3.001\x0D\x0A
Operation Mode Dry Line L3 Indoor Unit 999	dry L3.999\x0D\x0A
Operation Mode Dry Line L4 Indoor Unit 1	dry L4.001\x0D\x0A
Operation Mode Dry Line L4 Indoor Unit 999	dry L4.999\x0D\x0A
Operation Mode Dry Line L5 Indoor Unit 1	dry L5.001\x0D\x0A
Operation Mode Dry Line L5 Indoor Unit 999	dry L5.999\x0D\x0A
Operation Mode Dry Line L6 Indoor Unit 1	dry L6.001\x0D\x0A
Operation Mode Dry Line L6 Indoor Unit 999	dry L6.999\x0D\x0A
Operation Mode Dry Line L7 Indoor Unit 1	dry L7.001\x0D\x0A
Operation Mode Dry Line L7 Indoor Unit 999	dry L7.999\x0D\x0A
Operation Mode Dry Line L8 Indoor Unit 1	dry L8.001\x0D\x0A
Operation Mode Dry Line L8 Indoor Unit 999	dry L8.999\x0D\x0A
Operation Mode Fan Line L1 Indoor Unit 1	fan L1.001\x0D\x0A
Operation Mode Fan Line L1 Indoor Unit 999	fan L1.999\x0D\x0A
Operation Mode Fan Line L2 Indoor Unit 1	fan L2.001\x0D\x0A
Operation Mode Fan Line L2 Indoor Unit 999	fan L2.999\x0D\x0A
Operation Mode Fan Line L3 Indoor Unit 1	fan L3.001\x0D\x0A
Operation Mode Fan Line L3 Indoor Unit 999	fan L3.999\x0D\x0A
Operation Mode Fan Line L4 Indoor Unit 1	fan L4.001\x0D\x0A
Operation Mode Fan Line L4 Indoor Unit 999	fan L4.999\x0D\x0A
Operation Mode Fan Line L5 Indoor Unit 1	fan L5.001\x0D\x0A
Operation Mode Fan Line L5 Indoor Unit 999	fan L5.999\x0D\x0A
Operation Mode Fan Line L6 Indoor Unit 1	fan L6.001\x0D\x0A
Operation Mode Fan Line L6 Indoor Unit 999	fan L6.999\x0D\x0A
Operation Mode Fan Line L7 Indoor Unit 1	fan L7.001\x0D\x0A
Operation Mode Fan Line L7 Indoor Unit 999	fan L7.999\x0D\x0A
Operation Mode Fan Line L8 Indoor Unit 1	fan L8.001\x0D\x0A
Operation Mode Fan Line L8 Indoor Unit 999	fan L8.999\x0D\x0A
Operation Mode Heat Line L1 Indoor Unit 1	heat L1.001\x0D\x0A
Operation Mode Heat Line L1 Indoor Unit 999	heat L1.999\x0D\x0A
Operation Mode Heat Line L2 Indoor Unit 1	heat L2.001\x0D\x0A
Operation Mode Heat Line L2 Indoor Unit 999	heat L2.999\x0D\x0A
Operation Mode Heat Line L3 Indoor Unit 1	heat L3.001\x0D\x0A
Operation Mode Heat Line L3 Indoor Unit 999	heat L3.999\x0D\x0A
Operation Mode Heat Line L4 Indoor Unit 1	heat L4.001\x0D\x0A
Operation Mode Heat Line L4 Indoor Unit 999	heat L4.999\x0D\x0A

Global Scripter Module Communication Sheet

Operation Mode Heat Line L5 Indoor Unit 1	heat L5.001\x0D\x0A
Operation Mode Heat Line L5 Indoor Unit 999	heat L5.999\x0D\x0A
Operation Mode Heat Line L6 Indoor Unit 1	heat L6.001\x0D\x0A
Operation Mode Heat Line L6 Indoor Unit 999	heat L6.999\x0D\x0A
Operation Mode Heat Line L7 Indoor Unit 1	heat L7.001\x0D\x0A
Operation Mode Heat Line L7 Indoor Unit 999	heat L7.999\x0D\x0A
Operation Mode Heat Line L8 Indoor Unit 1	heat L8.001\x0D\x0A
Operation Mode Heat Line L8 Indoor Unit 999	heat L8.999\x0D\x0A
Power Off Line L1 Indoor Unit 1	off L1.001\x0D\x0A
Power Off Line L1 Indoor Unit 999	off L1.999\x0D\x0A
Power Off Line L2 Indoor Unit 1	off L2.001\x0D\x0A
Power Off Line L2 Indoor Unit 999	off L2.999\x0D\x0A
Power Off Line L3 Indoor Unit 1	off L3.001\x0D\x0A
Power Off Line L3 Indoor Unit 999	off L3.999\x0D\x0A
Power Off Line L4 Indoor Unit 1	off L4.001\x0D\x0A
Power Off Line L4 Indoor Unit 999	off L4.999\x0D\x0A
Power Off Line L5 Indoor Unit 1	off L5.001\x0D\x0A
Power Off Line L5 Indoor Unit 999	off L5.999\x0D\x0A
Power Off Line L6 Indoor Unit 1	off L6.001\x0D\x0A
Power Off Line L6 Indoor Unit 999	off L6.999\x0D\x0A
Power Off Line L7 Indoor Unit 1	off L7.001\x0D\x0A
Power Off Line L7 Indoor Unit 999	off L7.999\x0D\x0A
Power Off Line L8 Indoor Unit 1	off L8.001\x0D\x0A
Power Off Line L8 Indoor Unit 999	off L8.999\x0D\x0A
Power On Line L1 Indoor Unit 1	on L1.001\x0D\x0A
Power On Line L1 Indoor Unit 999	on L1.999\x0D\x0A
Power On Line L2 Indoor Unit 1	on L2.001\x0D\x0A
Power On Line L2 Indoor Unit 999	on L2.999\x0D\x0A
Power On Line L3 Indoor Unit 1	on L3.001\x0D\x0A
Power On Line L3 Indoor Unit 999	on L3.999\x0D\x0A
Power On Line L4 Indoor Unit 1	on L4.001\x0D\x0A
Power On Line L4 Indoor Unit 999	on L4.999\x0D\x0A
Power On Line L5 Indoor Unit 1	on L5.001\x0D\x0A
Power On Line L5 Indoor Unit 999	on L5.999\x0D\x0A
Power On Line L6 Indoor Unit 1	on L6.001\x0D\x0A
Power On Line L6 Indoor Unit 999	on L6.999\x0D\x0A
Power On Line L7 Indoor Unit 1	on L7.001\x0D\x0A
Power On Line L7 Indoor Unit 999	on L7.999\x0D\x0A
Power On Line L8 Indoor Unit 1	on L8.001\x0D\x0A

Global Scripter Module Communication Sheet

Power On Line L8 Indoor Unit 999	on L8.999\x0D\x0A
Temperature 0 Line L1 Indoor Unit 1	temp L1.001 0.0\x0D\x0A
Temperature 0 Line L1 Indoor Unit 999	temp L1.999 0.0\x0D\x0A
Temperature 0 Line L2 Indoor Unit 1	temp L2.001 0.0\x0D\x0A
Temperature 0 Line L2 Indoor Unit 999	temp L2.999 0.0\x0D\x0A
Temperature 0 Line L3 Indoor Unit 1	temp L3.001 0.0\x0D\x0A
Temperature 0 Line L3 Indoor Unit 999	temp L3.999 0.0\x0D\x0A
Temperature 0 Line L4 Indoor Unit 1	temp L4.001 0.0\x0D\x0A
Temperature 0 Line L4 Indoor Unit 999	temp L4.999 0.0\x0D\x0A
Temperature 0 Line L5 Indoor Unit 1	temp L5.001 0.0\x0D\x0A
Temperature 0 Line L5 Indoor Unit 999	temp L5.999 0.0\x0D\x0A
Temperature 0 Line L6 Indoor Unit 1	temp L6.001 0.0\x0D\x0A
Temperature 0 Line L6 Indoor Unit 999	temp L6.999 0.0\x0D\x0A
Temperature 0 Line L7 Indoor Unit 1	temp L7.001 0.0\x0D\x0A
Temperature 0 Line L7 Indoor Unit 999	temp L7.999 0.0\x0D\x0A
Temperature 0 Line L8 Indoor Unit 1	temp L8.001 0.0\x0D\x0A
Temperature 0 Line L8 Indoor Unit 999	temp L8.999 0.0\x0D\x0A
Temperature 99 Line L1 Indoor Unit 1	temp L1.001 99.0\x0D\x0A
Temperature 99 Line L1 Indoor Unit 999	temp L1.999 99.0\x0D\x0A
Temperature 99 Line L2 Indoor Unit 1	temp L2.001 99.0\x0D\x0A
Temperature 99 Line L2 Indoor Unit 999	temp L2.999 99.0\x0D\x0A
Temperature 99 Line L3 Indoor Unit 1	temp L3.001 99.0\x0D\x0A
Temperature 99 Line L3 Indoor Unit 999	temp L3.999 99.0\x0D\x0A
Temperature 99 Line L4 Indoor Unit 1	temp L4.001 99.0\x0D\x0A
Temperature 99 Line L4 Indoor Unit 999	temp L4.999 99.0\x0D\x0A
Temperature 99 Line L5 Indoor Unit 1	temp L5.001 99.0\x0D\x0A
Temperature 99 Line L5 Indoor Unit 999	temp L5.999 99.0\x0D\x0A
Temperature 99 Line L6 Indoor Unit 1	temp L6.001 99.0\x0D\x0A
Temperature 99 Line L6 Indoor Unit 999	temp L6.999 99.0\x0D\x0A
Temperature 99 Line L7 Indoor Unit 1	temp L7.001 99.0\x0D\x0A
Temperature 99 Line L7 Indoor Unit 999	temp L7.999 99.0\x0D\x0A
Temperature 99 Line L8 Indoor Unit 1	temp L8.001 99.0\x0D\x0A
Temperature 99 Line L8 Indoor Unit 999	temp L8.999 99.0\x0D\x0A

Appendix B. Update Commands

Heartbeat	set verbose\x0D\x0A
Lock Mode Line L1 Indoor Unit 1	lock L1.001\x0D\x0A
Lock Mode Line L1 Indoor Unit 999	lock L1.999\x0D\x0A
Lock Mode Line L2 Indoor Unit 1	lock L2.001\x0D\x0A
Lock Mode Line L2 Indoor Unit 999	lock L2.999\x0D\x0A
Lock Mode Line L3 Indoor Unit 1	lock L3.001\x0D\x0A
Lock Mode Line L3 Indoor Unit 999	lock L3.999\x0D\x0A
Lock Mode Line L4 Indoor Unit 1	lock L4.001\x0D\x0A
Lock Mode Line L4 Indoor Unit 999	lock L4.999\x0D\x0A
Lock Mode Line L5 Indoor Unit 1	lock L5.001\x0D\x0A
Lock Mode Line L5 Indoor Unit 999	lock L5.999\x0D\x0A
Lock Mode Line L6 Indoor Unit 1	lock L6.001\x0D\x0A
Lock Mode Line L6 Indoor Unit 999	lock L6.999\x0D\x0A
Lock Mode Line L7 Indoor Unit 1	lock L7.001\x0D\x0A
Lock Mode Line L7 Indoor Unit 999	lock L7.999\x0D\x0A
Lock Mode Line L8 Indoor Unit 1	lock L8.001\x0D\x0A
Lock Mode Line L8 Indoor Unit 999	lock L8.999\x0D\x0A
Power Line L1 Indoor Unit 1	ls L1.001\x0D\x0A
Power Line L1 Indoor Unit 999	ls L1.999\x0D\x0A
Power Line L2 Indoor Unit 1	ls L2.001\x0D\x0A
Power Line L2 Indoor Unit 999	ls L2.999\x0D\x0A
Power Line L3 Indoor Unit 1	ls L3.001\x0D\x0A
Power Line L3 Indoor Unit 999	ls L3.999\x0D\x0A
Power Line L4 Indoor Unit 1	ls L4.001\x0D\x0A
Power Line L4 Indoor Unit 999	ls L4.999\x0D\x0A
Power Line L5 Indoor Unit 1	ls L5.001\x0D\x0A
Power Line L5 Indoor Unit 999	ls L5.999\x0D\x0A
Power Line L6 Indoor Unit 1	ls L6.001\x0D\x0A
Power Line L6 Indoor Unit 999	ls L6.999\x0D\x0A
Power Line L7 Indoor Unit 1	ls L7.001\x0D\x0A
Power Line L7 Indoor Unit 999	ls L7.999\x0D\x0A
Power Line L8 Indoor Unit 1	ls L8.001\x0D\x0A
Power Line L8 Indoor Unit 999	ls L8.999\x0D\x0A