

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Satellite Receiver
Manufacturer: Comm-Tec
Firmware Version: N/A
Model(s): ProTUNE HD/S, ProTUNE HD

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.01.0000-b004	2.01.0000-b003	1.0.5

Version History

Module Version	Date	Notes
1_0_0_0	7/20/2016	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example:
InterfaceName.Unidirectional = 'True'
- ConnectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example:
InterfaceName.ConnectionCounter = 5

Control Commands, States, and Qualifiers:

AspectRatio	'Auto' '16:9'	'4:3 Letter Box'	'4:3 Pan Scan'
AudioMute	'On'	'Off'	
Channel	'Up'	'Down'	
ExecutiveMode	'On'	'Off'	
Freeze	None		
Keypad	'0' – '9'		
MenuNavigation	'Menu' 'Left' 'Back' 'Guide'	'Up' 'Right' 'OK'	'Down' 'Select' 'Info'
Power	'On'	'Off'	
Resolution	'Source' '480p' '720p 50Hz' '1080i 60Hz'	'Native' '576i' '720p 60Hz'	'480i' '576p' '1080i 50Hz'
Transport	'Play' 'FFwd' 'Previous' 'List' 'V-OUT'	'Pause' 'Rew' 'Record' 'Format'	'Stop' 'Next' 'USB' 'Red'
TunerMode	'Radio'	'TV'	
Volume	0 to 63 in steps of 1		

Status Available:

AspectRatio	'Auto' '16:9'	'4:3 Letter Box'	'4:3 Pan Scan'
AudioMute	'On'	'Off'	
ConnectionStatus	'Connected'	'Disconnected'	
ExecutiveMode	'On'	'Off'	
Power	'On'	'Off'	
Resolution	'Source' '480p' '720p 50Hz' '1080i 60Hz'	'Native' '576i' '720p 60Hz'	'480i' '576p' '1080i 50Hz'
TunerMode	'Radio'	'TV'	
Volume	0 to 63 in steps of 1		

Cable and Adapter Requirements:

Captive screw to Male DB9 RS232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 19200
Data Bits: 8

Parity: None
Stop Bits: 1
Flow Control: None

Pin Assignments Diagram:

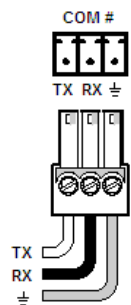

Please refer manufacturer for pin assignment details

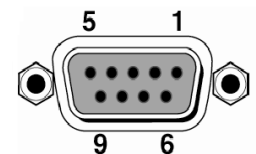

**RS232 DB9, Female
Satellite Receiver**

General Notes:

Network communication:

When configuring the Ethernet driver, be sure device settings match that of the GC configuration.

Port Type:	Ethernet
Default Port:	10001
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Driver Configuration Description:

Please refer to user manual for settings and changes to the network communication parameters.

Notes for the Device:
