

This document provides additional assistance with wiring your Extron IPL PRO enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instruction, refer to the user's manual for the specific Extron IPL PRO enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: TV Tuner
Manufacturer: Contemporary Research
Firmware Version: N/A
Model(s): 232-MTA

Tested on the Following Software and Firmware Versions:

IP Link Pro Control Processor Firmware	Touch Link Panel Firmware	GS Version
2.04.0000-b007	2.01.0001-b001	1.2.2

Version History

Module Version	Date	Notes
1_0_0_0	2/8/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'. Example: InterfaceName.Unidirectional = 'True'
- connectionCounter variable must be set the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15. Example: InterfaceName.connectionCounter = 5
- DeviceID variable must be set accordingly. Default value is '1'. Device ID ranges from '1' to '9' and 'Broadcast'. Example: InterfaceName.DeviceID = '1'
- For Serial Over Ethernet support, SerialOverEthernetClass must be used. Example: InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', PortNum, Model='ModelName')

Control Commands, States, and Qualifiers:

AudioMute	'On'	'Off'	
AVMute	'On'	'Off'	
Channel	1 to 126 in steps of 1		
ExecutiveMode	'Off'	'Channel'	'Select'
	'Channel & Select'	'Mute A/V'	'Channel & Mute A/V'
	'Select & Mute A/V'	'All'	
Power	'On'	'Off'	
TuneMode	'CATV'	'Broadcast'	'HRC'
	'IRC'		
VideoMute	'On'	'Off'	
Volume	0 to 63 in steps of 1		

Status Available:

AudioMute	'On'	'Off'
Channel	1 to 126 in steps of 1	
ConnectionStatus	'Connected'	'Disconnected'
Power	'On'	'Off'
VideoMute	'On'	'Off'
Volume	0 to 63 in steps of 1	

Cable and Adapter Requirements:

Captive Screw to Female DB9 RS-232 Serial Cable


Notes for the Device:

Serial communication:


Port Type: RS-232
Baud Rate: 9600
Data Bits: 8

Parity: None
Stop Bits: One
Flow Control: None

Pin Assignments Diagram

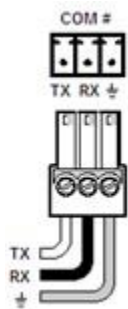

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND	→	5	GND

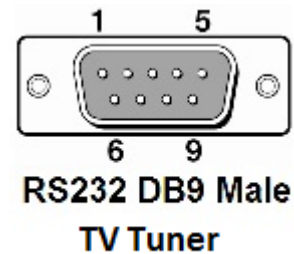

General Notes:

Appendix A. Set Commands

Audio Mute Off	>1VX\x0D
Audio Mute On	>1VM\x0D
AV Mute Off	>1XX\x0D
AV Mute On	>1XM\x0D
Channel 1	>1TC=1\x0D
Channel 126	>1TC=126\x0D
Executive Mode All	>1S4=7\x0D
Executive Mode Channel	>1S4=1\x0D
Executive Mode Channel & Mute A/V	>1S4=5\x0D
Executive Mode Channel & Select	>1S4=3\x0D
Executive Mode Mute A/V	>1S4=4\x0D
Executive Mode Off	>1S4=0\x0D
Executive Mode Select	>1S4=2\x0D
Executive Mode Select & Mute A/V	>1S4=6\x0D
Power Off	>1P0\x0D
Power On	>1P1\x0D
Tune Mode Broadcast	>1S0=1\x0D
Tune Mode CATV	>1S0=0\x0D
Tune Mode HRC	>1S0=2\x0D
Tune Mode IRC	>1S0=3\x0D
Video Mute Off	>1TC=255\x0D
Video Mute On	>1TC=0\x0D
Volume 0	>1VL0\x0D
Volume 63	>1VL63\x0D

Appendix B. Query Commands

Power	>1ST\x0D
Volume	>1SV\x0D