
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Switcher
Manufacturer: Extron
Firmware Version: N/A
Model(s): DTP T SW4 HD 4K

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_1_2_0	11/2/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- For best status performance, do not enable input auto switching.

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='DTP T SW4 HD 4K')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='DTP T SW4 HD 4K')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command ContactTallyMode	Value 'Default' '1-4 ME, 5-6 SS'	Value 'Advanced'	Value '1-6 ME'
# ContactTallyMode example InterfaceName.Set('ContactTallyMode', 'Default')			
Command ExecutiveMode	Value 'On'	Value 'Off'	
# ExecutiveMode example InterfaceName.Set('ExecutiveMode', 'On')			
Command HDCPInputAuthorization	Value 'On'	Value 'Off'	
Qualifier Key 'Input'	Qualifier Value '1' – '4'		
# HDCPInputAuthorization example InterfaceName.Set('HDCPInputAuthorization', 'On', {'Input': '1'})			
Command Input	Value '0' – '4'		
# Input example InterfaceName.Set('Input', '1')			
Command TallyPort ¹	Value 'Open'	Value 'Closed'	
Qualifier Key 'Port'	Qualifier Value '1' – '6'		
# TallyPort example InterfaceName.Set('TallyPort', 'Open', {'Port': '1'})			
Command VideoMute	Value 'Off'	Value 'On'	Value 'On with Sync'
# VideoMute example InterfaceName.Set('VideoMute', 'Off')			

¹ For this command the following conditions apply:

- Only ports 5 and 6 can be controlled when Contact Tally Mode is set to Default.
- All ports can be controlled when Contact Tally Mode is set to Advanced
- None of the ports can be controlled when Contact Tally Mode is set to 1-6 ME or 1-4ME, or 5-6 SS.

Status Available

For all commands except for AudioMute, AutoSwitchMode, ContactPort, ContactTallyMode, HDCPInputAuthorization, InputSignalStatus, TallyPort, and VideoMute, Update should be called only once since the command's status will be updated automatically as the device's status changes. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value
AudioMute	'On'	'Off'
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)		
Command	Value	Value
AutoSwitchMode	'On'	'Off'
# AutoSwitchMode examples InterfaceName.Update('AutoSwitchMode') Value = InterfaceName.ReadStatus('AutoSwitchMode') InterfaceName.SubscribeStatus('AutoSwitchMode', None, FeedbackHandler)		
Command	Value	Value
ConnectionStatus	'Connected'	'Disconnected'
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)		
Command	Value	Value
ContactPort	'Open'	'Closed'
Qualifier Key	Qualifier Value	
'Port'	'1' – '6'	
# ContactPort examples InterfaceName.Update('ContactPort', {'Port': '1'}) Value = InterfaceName.ReadStatus('ContactPort', {'Port': '1'}) InterfaceName.SubscribeStatus('ContactPort', None, FeedbackHandler)		
Command	Value	Value
		Value

Global Scripter Module Communication Sheet

ContactTallyMode	'Default'	'Advanced'	'1-6 ME'
	'1-4 ME, 5-6 SS'		
# ContactTallyMode examples InterfaceName.Update('ContactTallyMode') Value = InterfaceName.ReadStatus('ContactTallyMode') InterfaceName.SubscribeStatus('ContactTallyMode', None, FeedbackHandler)			
Command	Value	Value	
ExecutiveMode	'On'	'Off'	
# ExecutiveMode examples InterfaceName.Update('ExecutiveMode') Value = InterfaceName.ReadStatus('ExecutiveMode') InterfaceName.SubscribeStatus('ExecutiveMode', None, FeedbackHandler)			
Command	Value	Value	
HDCPInputAuthorization	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Input'	'1' – '4'		
# HDCPInputAuthorization examples InterfaceName.Update('HDCPInputAuthorization', {'Input': '1'}) Value = InterfaceName.ReadStatus('HDCPInputAuthorization', {'Input': '1'}) InterfaceName.SubscribeStatus('HDCPInputAuthorization', None, FeedbackHandler)			
Command	Value		
Input	'0' – '4'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
InputSignalStatus	'Active'	'Not Active'	
Qualifier Key	Qualifier Value		
'Input'	'1' – '4'		
# InputSignalStatus examples InterfaceName.Update('InputSignalStatus', {'Input': '1'}) Value = InterfaceName.ReadStatus('InputSignalStatus', {'Input': '1'}) InterfaceName.SubscribeStatus('InputSignalStatus', None, FeedbackHandler)			
Command	Value	Value	
TallyPort	'Open'	'Closed'	
Qualifier Key	Qualifier Value		
'Port'	'1' – '6'		
# TallyPort examples InterfaceName.Update('TallyPort', {'Port': '1'}) Value = InterfaceName.ReadStatus('TallyPort', {'Port': '1'}) InterfaceName.SubscribeStatus('TallyPort', None, FeedbackHandler)			
Command	Value	Value	Value
VideoMute	'Off'	'On'	'On with Sync'

```
# VideoMute examples
InterfaceName.Update('VideoMute')
Value = InterfaceName.ReadStatus('VideoMute')
InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)
```

Cable and Adapter Requirements

Captive Screw to Captive Screw Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

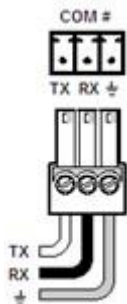

Signal	Main Cable	Signal
TxD		TxD
RxD		RxD
GND		GND

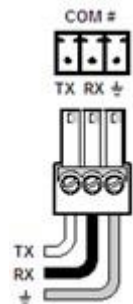

Appendix A. Set Commands

Audio Mute Off	0Z
Audio Mute On	1Z
Contact Tally Mode 1-4 ME, 5-6 SS	w3MODE\x0D
Contact Tally Mode 1-6 ME	w2MODE\x0D
Contact Tally Mode Advanced	w1MODE\x0D
Contact Tally Mode Default	w0MODE\x0D
Executive Mode Off	0X
Executive Mode On	1X
HDCP Input Authorization Off Input 1	wE1*0HDCP\x0D
HDCP Input Authorization Off Input 4	wE4*0HDCP\x0D
HDCP Input Authorization On Input 1	wE1*1HDCP\x0D
HDCP Input Authorization On Input 4	wE4*1HDCP\x0D
Input 0	0!
Input 4	4!
Tally Port Closed Port 1	w1*1TALY\x0D
Tally Port Closed Port 6	w6*1TALY\x0D
Tally Port Open Port 1	w1*0TALY\x0D
Tally Port Open Port 6	w6*0TALY\x0D
Video Mute Off	0B
Video Mute On	1B
Video Mute On with Sync	2B

Appendix B. Update Commands

Audio Mute	Z
Auto Switch Mode	72#
Contact Port Port 1	S
Contact Port Port 6	S
Contact Tally Mode	wMODE\x0D
Executive Mode	X
HDCP Input Authorization Input 1	wEHDCP\x0D
HDCP Input Authorization Input 4	wEHDCP\x0D
Input	I
Input Signal Status Input 1	\x1BLS\x0D
Input Signal Status Input 4	\x1BLS\x0D
Tally Port Port 1	wTALY\x0D
Tally Port Port 6	wTALY\x0D
Video Mute	B