
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: NEC
Firmware Version: N/A
Model(s): C751Q, C861Q, C981Q

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.00.0000-b022	2.0.0

Version History

Module Version	Date	Notes
1_0_0_0	9/26/2018	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- DeviceID variable must be set accordingly. Default value is '1'. DeviceID ranges from '1' - '100', 'Group A' - 'Group J' and 'Broadcast'. If DeviceID is set to 'Broadcast', status is unavailable.
Example: `InterfaceName.DeviceID = '1'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='C751Q')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='C751Q')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 7142, Model='C751Q')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio	Value 'Normal' 'Zoom'	Value 'Full' 'Dynamic' ¹	Value 'Wide' ¹ '1:1'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Normal')			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command AutoImage	Value None		
# AutoImage example InterfaceName.Set('AutoImage', None)			
Command Input	Value 'DisplayPort 1' 'HDMI 2' 'Option'	Value 'DisplayPort 2' 'HDMI 3'	Value 'HDMI 1' 'MP'
# Input example InterfaceName.Set('Input', 'DisplayPort 1')			
Command PictureMode	Value 'sRGB' 'REC-Bt709' 'DICOM SIM'	Value 'Adobe RGB SIM' 'High Bright' 'Programmable 1'	Value 'DCI SIM' 'Full' 'Programmable 2'
# PictureMode example InterfaceName.Set('PictureMode', 'sRGB')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			

Command	Value
Volume	0 to 100 in steps of 1
# Volume example InterfaceName.Set('Volume', 100)	

¹ Only supported when the following Input states are being used: HDMI 1, HDMI 2, and HDMI 3.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	Value
AspectRatio	'Normal'	'Full'	'Wide' ¹
	'Zoom'	'Dynamic' ¹	'1:1'
# AspectRatio examples InterfaceName.Update('AspectRatio') Value = InterfaceName.ReadStatus('AspectRatio') InterfaceName.SubscribeStatus('AspectRatio', None, FeedbackHandler)			
Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'DisplayPort 1'	'DisplayPort 2'	'HDMI 1'
	'HDMI 2'	'HDMI 3'	'MP'
	'Option'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			

Global Scripter Module Communication Sheet

Command PictureMode	Value 'sRGB' 'REC-Bt709' 'DICOM SIM'	Value 'Adobe RGB SIM' 'High Bright' 'Programmable 1'	Value 'DCI SIM' 'Full' 'Programmable 2'
<pre># PictureMode examples InterfaceName.Update('PictureMode') Value = InterfaceName.ReadStatus('PictureMode') InterfaceName.SubscribeStatus('PictureMode', None, FeedbackHandler)</pre>			
Command Power	Value 'On' 'Suspend'	Value 'Off'	Value 'Stand-by'
<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>			
Command VideoMute	Value 'On'	Value 'Off'	
<pre># VideoMute examples InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>			
Command Volume	Value 0 to 100 in steps of 1		
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>			

¹ Only supported when the following Input states are being used: HDMI 1, HDMI 2, and HDMI 3.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

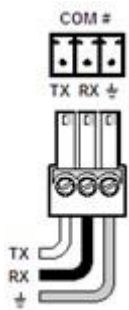

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

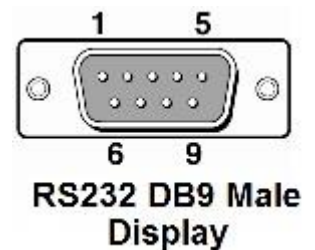

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	7142
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	Undetermined

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Aspect Ratio 1:1	\x010\x010E0A\x0202700007\x036\x0D
Aspect Ratio Dynamic	\x010\x010E0A\x0202700006\x037\x0D
Aspect Ratio Full	\x010\x010E0A\x0202700002\x033\x0D
Aspect Ratio Normal	\x010\x010E0A\x0202700001\x030\x0D
Aspect Ratio Wide	\x010\x010E0A\x0202700003\x032\x0D
Aspect Ratio Zoom	\x010\x010E0A\x0202700004\x035\x0D
Audio Mute Off	\x010\x010E0A\x02008D0002\x03J\x0D
Audio Mute On	\x010\x010E0A\x02008D0001\x03I\x0D
Auto Image None	\x010\x010E0A\x02001E0000\x03@\x0D
Input DisplayPort 1	\x010\x010E0A\x020060000F\x03D\x0D
Input DisplayPort 2	\x010\x010E0A\x0200600010\x033\x0D
Input HDMI 1	\x010\x010E0A\x0200600011\x032\x0D
Input HDMI 2	\x010\x010E0A\x0200600012\x031\x0D
Input HDMI 3	\x010\x010E0A\x0200600082\x038\x0D
Input MP	\x010\x010E0A\x0200600087\x03=\x0D
Input Option	\x010\x010E0A\x020060000D\x03F\x0D
Picture Mode Adobe RGB SIM	\x010\x010E0A\x0210510002\x033\x0D
Picture Mode DCI SIM	\x010\x010E0A\x0210510003\x032\x0D
Picture Mode DICOM SIM	\x010\x010E0A\x0210510007\x036\x0D
Picture Mode Full	\x010\x010E0A\x0210510006\x037\x0D
Picture Mode High Bright	\x010\x010E0A\x0210510005\x034\x0D
Picture Mode Programmable 1	\x010\x010E0A\x0210510008\x039\x0D
Picture Mode Programmable 2	\x010\x010E0A\x0210510009\x038\x0D
Picture Mode REC-Bt709	\x010\x010E0A\x0210510004\x035\x0D
Picture Mode sRGB	\x010\x010E0A\x0210510001\x030\x0D
Power Off	\x010\x010A0C\x02C203D60004\x036\x0D
Power On	\x010\x010A0C\x02C203D60001\x033\x0D
Video Mute Off	\x010\x010E0A\x0210B60002\x03C\x0D
Video Mute On	\x010\x010E0A\x0210B60001\x03@\x0D
Volume 0	\x010\x010E0A\x0200620000\x030\x0D
Volume 100	\x010\x010E0A\x0200620064\x032\x0D

Appendix B. Update Commands

Aspect Ratio	\x010\x010C06\x020270\x03@\x0D
Audio Mute	\x010\x010C06\x02008D\x039\x0D
Input	\x010\x010C06\x020060\x03C\x0D
Picture Mode	\x010\x010C06\x021051\x03@\x0D
Power	\x010\x010A06\x0201D6\x034\x0D
Video Mute	\x010\x010C06\x0210B6\x030\x0D
Volume	\x010\x010C06\x020062\x03A\x0D