

This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Display
Manufacturer: Sony
Firmware Version: N/A
Model(s): FWD-55BZ30E, FWD-49BZ30E, FWD-65BZ35D, FWD-55BZ35D, FWD-55BZ20D, FWD-49BZ20D, FWD-65BZ40E, FWD-55BZ40E, FWD-55BZ35E, FWD-65BZ35E

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
2.06.0001-b003	1.4.1

Version History

Module Version	Date	Notes
1_0_0_0	11/3/2017	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='FWD-55BZ30E')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='FWD-55BZ30E')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 20060, Model='FWD-55BZ30E')</code>

Set Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AspectRatio ¹	Value 'Wide Zoom' 'Normal'	Value 'Full' 'Full 1' ³	Value 'Zoom' 'Full 2' ³
Qualifier Key 'Input'	Qualifier Value 'TV' 'Component' 'HDMI 3'	Qualifier Value 'Video 1' 'HDMI 1' 'HDMI 4'	Qualifier Value 'Video 2' 'HDMI 2' 'PC'
# AspectRatio example InterfaceName.Set('AspectRatio', 'Wide Zoom', {'Input': 'TV'})			
Command AudioMute	Value 'On'	Value 'Off'	
# AudioMute example InterfaceName.Set('AudioMute', 'On')			
Command Channel	Value 'Up'	Value 'Down'	
# Channel example InterfaceName.Set('Channel', 'Up')			
Command Input	Value 'TV' 'Component' 'HDMI 3' 'Screen Mirroring' ²	Value 'Video 1' 'HDMI 1' 'HDMI 4'	Value 'Video 2' 'HDMI 2' 'PC'
# Input example InterfaceName.Set('Input', 'TV')			
Command Keypad	Value '0' – '9'		
# Keypad example InterfaceName.Set('Keypad', '0')			
Command MenuNavigation	Value 'Left' 'Down' 'Enter'	Value 'Right' 'Home' 'Options'	Value 'Up' 'Return'
# MenuNavigation example			

Global Scripter Module Communication Sheet

Revision: 11/3/2017

InterfaceName.Set('MenuNavigation', 'Left')			
Command PictureinPicture ²	Value 'On'	Value 'Off'	
# PictureinPicture example InterfaceName.Set('PictureinPicture', 'On')			
Command PictureMode ¹	Value 'Vivid' 'Custom' 'Game'	Value 'Standard' 'Cine2' 'Graphics'	Value 'Cinema' 'Sports'
# PictureMode example InterfaceName.Set('PictureMode', 'Vivid')			
Command Power	Value 'On'	Value 'Off'	
# Power example InterfaceName.Set('Power', 'On')			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			
Command Volume	Value 0 to 100 in steps of 1		
# Volume example InterfaceName.Set('Volume', 100)			

¹ Only available for Serial Control.

² Only available for Ethernet Control.

³ Only available when input is set to PC.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus, VideoMute do not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'}, FeedbackHandler)
FeedbackHandler will be called only when the specified qualifier gets a new status.
```

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command	Value	Value	
AudioMute	'On'	'Off'	
# AudioMute examples InterfaceName.Update('AudioMute') Value = InterfaceName.ReadStatus('AudioMute') InterfaceName.SubscribeStatus('AudioMute', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus examples Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	Value
Input	'TV'	'Video 1'	'Video 2'
	'Component'	'HDMI 1'	'HDMI 2'
	'HDMI 3'	'HDMI 4'	'PC'
	'Screen Mirroring'		
# Input examples InterfaceName.Update('Input') Value = InterfaceName.ReadStatus('Input') InterfaceName.SubscribeStatus('Input', None, FeedbackHandler)			
Command	Value	Value	
PictureinPicture ¹	'On'	'Off'	
# PictureinPicture examples InterfaceName.Update('PictureinPicture') Value = InterfaceName.ReadStatus('PictureinPicture') InterfaceName.SubscribeStatus('PictureinPicture', None, FeedbackHandler)			
Command	Value	Value	
Power	'On'	'Off'	

Global Scripter Module Communication Sheet

<pre># Power examples InterfaceName.Update('Power') Value = InterfaceName.ReadStatus('Power') InterfaceName.SubscribeStatus('Power', None, FeedbackHandler)</pre>		
Command VideoMute ¹	Value 'On'	Value 'Off'
<pre># VideoMute examples Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)</pre>		
Command Volume	Value 0 to 100 in steps of 1	
<pre># Volume examples InterfaceName.Update('Volume') Value = InterfaceName.ReadStatus('Volume') InterfaceName.SubscribeStatus('Volume', None, FeedbackHandler)</pre>		

¹ Only available for Ethernet Control.

Cable and Adapter Requirements

Captive Screw to 3.5mm TRS RS-232 Serial Cable

Notes for the Device

Serial communication

Port Type: RS-232

Baud Rate: 9600


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

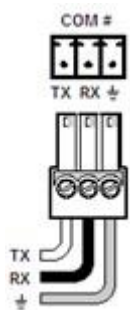

Signal	Main Cable	Pin	Signal
RXD	←	T	TXD
TXD	→	R	RXD
GND	→	S	GND

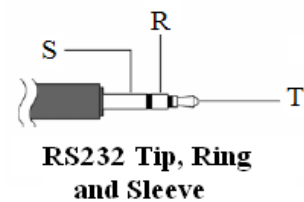

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface

Port Type:	Ethernet
Default Port:	20060
Logon Credentials Supported:	No
Multi-Connection Capabilities:	Undetermined
Port Changeability:	No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands (Serial)

Aspect Ratio Full	\x8C\x00D\x03\x01\x01\xD5
Aspect Ratio Full 1	\x8C\x00D\x03\x01\x06\xDA
Aspect Ratio Full 2	\x8C\x00D\x03\x01\x07\xDB
Aspect Ratio Normal	\x8C\x00D\x03\x01\x03\xD7
Aspect Ratio Wide Zoom	\x8C\x00D\x03\x01\x00\xD4
Aspect Ratio Zoom	\x8C\x00D\x03\x01\x02\xD6
Audio Mute Off	\x8C\x00\x06\x03\x01\x00\x96
Audio Mute On	\x8C\x00\x06\x03\x01\x01\x97
Channel Down	\x8C\x00g\x03\x01\x11\x08
Channel Up	\x8C\x00g\x03\x01\x10\x07
Input Component	\x8C\x00\x02\x03\x03\x01\x95
Input HDMI 1	\x8C\x00\x02\x03\x04\x01\x96
Input HDMI 2	\x8C\x00\x02\x03\x04\x02\x97
Input HDMI 3	\x8C\x00\x02\x03\x04\x03\x98
Input HDMI 4	\x8C\x00\x02\x03\x04\x04\x99
Input PC	\x8C\x00\x02\x03\x05\x01\x97
Input TV	\x8C\x00\x02\x02\x01\x91
Input Video 1	\x8C\x00\x02\x03\x02\x01\x94
Input Video 2	\x8C\x00\x02\x03\x02\x02\x95
Keypad 0	\x8C\x00g\x03\x01\x09\x00
Keypad 9	\x8C\x00g\x03\x01\x08\xFF
Menu Navigation Down	\x8C\x00g\x03\x01ul
Menu Navigation Enter	\x8C\x00g\x03\x01e\
Menu Navigation Home	\x8C\x00g\x03\x01`W
Menu Navigation Left	\x8C\x00g\x03\x014+
Menu Navigation Options	\x8C\x00g\x03\x976\xC3
Menu Navigation Return	\x8C\x00g\x03\x97#\xB0
Menu Navigation Right	\x8C\x00g\x03\x013*
Menu Navigation Up	\x8C\x00g\x03\x01tk
Picture Mode Cine2	\x8C\x00 \x03\x01\x06\xB6
Picture Mode Cinema	\x8C\x00 \x03\x01\x02\xB2
Picture Mode Custom	\x8C\x00 \x03\x01\x03\xB3
Picture Mode Game	\x8C\x00 \x03\x01\x08\xB8
Picture Mode Graphics	\x8C\x00 \x03\x01\x09\xB9
Picture Mode Sports	\x8C\x00 \x03\x01\x07\xB7
Picture Mode Standard	\x8C\x00 \x03\x01\x01\xB1
Picture Mode Vivid	\x8C\x00 \x03\x01\x00\xB0
Power Off	\x8C\x00\x01\x02\x01\x90 \x8C\x00\x00\x02\x00\x8E
Power On	\x8C\x00\x00\x02\x01\x8F
Video Mute Off	\x8C\x00\x0D\x03\x01\x00\x9D
Video Mute On	\x8C\x00\x0D\x03\x01\x01\x9E

Volume 0	\x8C\x00\x05\x03\x01\x00\x95
Volume 100	\x8C\x00\x05\x03\x01d\xF9

Appendix B. Query Commands (Serial)

Audio Mute	\x83\x00\x06\xFF\xFF\x87
Input	\x83\x00\x02\xFF\xFF\x83
Power	\x83\x00\x00\xFF\xFF\x81
Volume	\x83\x00\x05\xFF\xFF\x86

Appendix C. Set Commands (Ethernet)

Audio Mute Off	*SCAMUT0000000000000000\x0A
Audio Mute On	*SCAMUT0000000000000001\x0A
Channel Down	*SCIRCC0000000000000034\x0A
Channel Up	*SCIRCC0000000000000033\x0A
Input Component	*SCINPT0000000400000001\x0A
Input HDMI 1	*SCINPT0000000100000001\x0A
Input HDMI 2	*SCINPT0000000100000002\x0A
Input HDMI 3	*SCINPT0000000100000003\x0A
Input HDMI 4	*SCINPT0000000100000004\x0A
Input PC	*SCINPT0000000600000001\x0A
Input Screen Mirroring	*SCINPT0000000500000001\x0A
Input TV	*SCINPT0000000000000000\x0A
Input Video 1	*SCINPT0000000300000001\x0A
Input Video 2	*SCINPT0000000300000002\x0A
Keypad 0	*SCIRCC0000000000000027\x0A
Keypad 9	*SCIRCC0000000000000026\x0A
Menu Navigation Down	*SCIRCC0000000000000010\x0A
Menu Navigation Enter	*SCIRCC0000000000000013\x0A
Menu Navigation Home	*SCIRCC0000000000000006\x0A
Menu Navigation Left	*SCIRCC0000000000000012\x0A
Menu Navigation Options	*SCIRCC0000000000000007\x0A
Menu Navigation Return	*SCIRCC0000000000000008\x0A
Menu Navigation Right	*SCIRCC0000000000000011\x0A
Menu Navigation Up	*SCIRCC0000000000000009\x0A
Picture in Picture Off	*SCPIPI0000000000000000\x0A
Picture in Picture On	*SCPIPI0000000000000001\x0A
Power Off	*SCPOWR0000000000000000\x0A
Power On	*SCPOWR0000000000000001\x0A
Video Mute Off	*SCPMUT0000000000000000\x0A
Video Mute On	*SCPMUT0000000000000001\x0A
Volume 0	*SCVOLU0000000000000000\x0A

Volume 100	*SCVOLU0000000000000000100\x0A
------------	--------------------------------

Appendix D. Query Commands (Ethernet)

Audio Mute	*SEAMUT#####\x0A
Input	*SEINPT#####\x0A
Picture in Picture	*SEPIPI#####\x0A
Power	*SEPOWR#####\x0A
Video Mute	*SEPMUT#####\x0A
Volume	*SEVOLU#####\x0A