
This document provides additional assistance with wiring your Extron IP Link Pro Control Processor to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific IP Link Pro Control Processor or the documentation supplied by the manufacturer of the controlled device.

For more information on using Global Scriptor Modules, refer to the "[Guide to Using Scriptor Modules](#)" document.

Device Specifications

Device Type: Streaming Media
Manufacturer: Vaddio
Firmware Version: N/A
Model(s): AV Bridge MATRIX PRO

Tested on the Following Software and Firmware Versions

IP Link Pro Control Processor Firmware	Global Scriptor Version
3.06.0001-b002	2.3.1

Version History

Module Version	Date	Notes
1_0_2_0	5/1/2020	Initial Version

Module Notes

- Unidirectional variable must be set to 'True' if status is not required. Default value is 'False'.
Example: `InterfaceName.Unidirectional = 'True'`
- connectionCounter variable must be set to the number of queries that will be sent to the device before displaying 'Disconnected' if no response is received. Default value is 15.
Example: `InterfaceName.connectionCounter = 5`
- If login credentials are required, devicePassword and deviceUsername must be set accordingly. devicePassword and deviceUsername default values are password and admin respectively.
Example: `InterfaceName.devicePassword = 'extron'`

Supported Classes and Examples

SerialClass
<code>InterfaceName = ModuleName.SerialClass(ProcessorName, 'COM1', Model='AV Bridge MATRIX PRO')</code>
SerialOverEthernetClass
<code>InterfaceName = ModuleName.SerialOverEthernetClass('192.168.254.254', 2001, Model='AV Bridge MATRIX PRO')</code>
EthernetClass
<code>InterfaceName = ModuleName.EthernetClass('192.168.254.254', 23, Model='AV Bridge MATRIX PRO')</code>

Control Commands

Format with Qualifier:

```
InterfaceName.Set(Command, Value, {'Qualifier Key': 'Qualifier Value'})
```

Format without Qualifier:

```
InterfaceName.Set(Command, Value)
```

Command AudioCrosspointGain ^{1, 2}	Value -12 to 12 in steps of 0.1		
Qualifier Key 'Input'	Qualifier Value 'Line In 1' 'Line In 4' 'EasyMIC 2' 'USB Playback'	Qualifier Value 'Line In 2' 'Auto Mic Mix' 'EasyMIC 3' 'HDMI'	Qualifier Value 'Line In 3' 'EasyMIC 1' 'EasyMIC 4'
Qualifier Key 'Output'	Qualifier Value 'Line Out 1' 'Line Out 4'	Qualifier Value 'Line Out 2' 'USB Record'	Qualifier Value 'Line Out 3' 'HDMI'
# AudioCrosspointGain example InterfaceName.Set('AudioCrosspointGain', 12, {'Input': 'Line In 1', 'Output': 'Line Out 1'})			
Command AudioMatrixTieCommand 1, 2	Value None		
Qualifier Key 'Input'	Qualifier Value 'Line In 1' 'Line In 4' 'EasyMIC 2' 'USB Playback'	Qualifier Value 'Line In 2' 'Auto Mic Mix' 'EasyMIC 3' None	Qualifier Value 'Line In 3' 'EasyMIC 1' 'EasyMIC 4' 'HDMI'
Qualifier Key 'Output'	Qualifier Value 'Line Out 1' 'Line Out 4'	Qualifier Value 'Line Out 2' 'USB Record'	Qualifier Value 'Line Out 3' 'HDMI'
# AudioMatrixTieCommand example InterfaceName.Set('AudioMatrixTieCommand', None, {'Input': 'Line In 1', 'Output': 'Line Out 1'})			
Command AutoFocus ³	Value 'On'	Value 'Off'	
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
# AutoFocus example InterfaceName.Set('AutoFocus', 'On', {'Camera': '1'})			
Command EasyMICMute ⁴	Value 'On'	Value 'Off'	
Qualifier Key 'Channel'	Qualifier Value '1' – '4'		
# EasyMICMute example InterfaceName.Set('EasyMICMute', 'On', {'Channel': '1'})			
Command EasyMICVolume ⁴	Value -42 to 6 in steps of 0.1		
Qualifier Key 'Channel'	Qualifier Value '1' – '4'		
# EasyMICVolume example InterfaceName.Set('EasyMICVolume', 6, {'Channel': '1'})			

Global Scripter Module Communication Sheet

Revision: 5/1/2020

Command Focus ^{3,5}	Value 'Near'	Value 'Far'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
Qualifier Key 'Speed'	Qualifier Value '1' – '8'		
# Focus example InterfaceName.Set('Focus', 'Near', {'Camera': '1', 'Speed': '1'})			
Command LineInMute ⁴	Value 'On'	Value 'Off'	
Qualifier Key 'Channel'	Qualifier Value '1' – '4'	Qualifier Value 'HDMI'	
# LineInMute example InterfaceName.Set('LineInMute', 'On', {'Channel': '1'})			
Command LineInVolume ⁴	Value -50 to 20 in steps of 0.1		
Qualifier Key 'Channel'	Qualifier Value '1' – '4'	Qualifier Value 'HDMI'	
# LineInVolume example InterfaceName.Set('LineInVolume', 20, {'Channel': '1'})			
Command LineOutMute ⁴	Value 'On'	Value 'Off'	
Qualifier Key 'Channel'	Qualifier Value '1' – '4'	Qualifier Value 'HDMI'	
# LineOutMute example InterfaceName.Set('LineOutMute', 'On', {'Channel': '1'})			
Command LineOutVolume ⁴	Value -50 to 20 in steps of 0.1		
Qualifier Key 'Channel'	Qualifier Value '1' – '4'	Qualifier Value 'HDMI'	
# LineOutVolume example InterfaceName.Set('LineOutVolume', 20, {'Channel': '1'})			
Command MasterMute	Value 'On'	Value 'Off'	
# MasterMute example InterfaceName.Set('MasterMute', 'On')			
Command MasterVolume	Value -50 to 20 in steps of 0.1		
# MasterVolume example InterfaceName.Set('MasterVolume', 20)			
Command Pan ^{3,5}	Value 'Left'	Value 'Right'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
Qualifier Key 'Speed'	Qualifier Value '1' – '24'		
# Pan example InterfaceName.Set('Pan', 'Left', {'Camera': '1', 'Speed': '1'})			
Command PIP	Value 'On'	Value 'Off'	
# PIP example InterfaceName.Set('PIP', 'On')			
Command PIPIInput	Value '1' – '4'		

Global Scripter Module Communication Sheet

Revision: 5/1/2020

# PIPInput example InterfaceName.Set('PIPInput', '1')			
Command PresetRecall ³	Value '1' – '16'		
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
# PresetRecall example InterfaceName.Set('PresetRecall', '1', {'Camera': '1'})			
Command PresetSave ³	Value '1' – '16'		
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
# PresetSave example InterfaceName.Set('PresetSave', '1', {'Camera': '1'})			
Command ProgramInput	Value '1' – '4'	Value 'Stream Input'	
# ProgramInput example InterfaceName.Set('ProgramInput', '1')			
Command Standby ³	Value 'On'	Value 'Off'	
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
# Standby example InterfaceName.Set('Standby', 'On', {'Camera': '1'})			
Command StreamInput	Value '1' – '4'		
# StreamInput example InterfaceName.Set('StreamInput', '1')			
Command Tilt ^{3,5}	Value 'Up'	Value 'Down'	Value 'Stop'
Qualifier Key 'Camera'	Qualifier Value '1' – '3'		
Qualifier Key 'Speed'	Qualifier Value '1' – '20'		
# Tilt example InterfaceName.Set('Tilt', 'Up', {'Camera': '1', 'Speed': '1'})			
Command USBMute ⁴	Value 'On'	Value 'Off'	
Qualifier Key 'Channel'	Qualifier Value 'Record'	Qualifier Value 'Playback'	
# USBMute example InterfaceName.Set('USBMute', 'On', {'Channel': 'Record'})			
Command USBVolume ⁴	Value -42 to 6 in steps of 0.1		
Qualifier Key 'Channel'	Qualifier Value 'Record'	Qualifier Value 'Playback'	
# USBVolume example InterfaceName.Set('USBVolume', 6, {'Channel': 'Record'})			
Command VideoMute	Value 'On'	Value 'Off'	
# VideoMute example InterfaceName.Set('VideoMute', 'On')			
Command Zoom ^{3,5}	Value 'In'	Value 'Out'	Value 'Stop'

Global Scripter Module Communication Sheet

Revision: 5/1/2020

Qualifier Key 'Camera'	Qualifier Value '1' – '3'
Qualifier Key 'Speed'	Qualifier Value '1' – '7'
# Zoom example InterfaceName.Set('Zoom', 'In', {'Camera': '1', 'Speed': '1'})	

¹ Requires Input parameter to be set.

² Requires Output parameter to be set.

³ Requires Camera parameter to be set.

⁴ Requires Channel parameter to be set.

⁵ Requires Speed parameter to be set. This will not affect Stop commands.

Status Available

For all commands, call Update to receive the latest status. ConnectionStatus does not support the Update function and is triggered by the device providing a successful response to other Update function calls.

Format with Qualifier:

```
InterfaceName.Update(Command, {'Qualifier Key': 'Qualifier Value'})
Value = InterfaceName.ReadStatus(Command, {'Qualifier Key': 'Qualifier Value'})
InterfaceName.SubscribeStatus(Command, {'Qualifier Key': 'Qualifier Value'},
```

FeedbackHandler)

FeedbackHandler will be called only when the specified qualifier gets a new status.

Format without Qualifier:

```
InterfaceName.Update(Command)
Value = InterfaceName.ReadStatus(Command)
InterfaceName.SubscribeStatus(Command, None, FeedbackHandler)
FeedbackHandler will be called when any qualifier gets a new status.
```

Command AudioCrosspointGain ^{1,2}	Value -12 to 12 in steps of 0.1		
Qualifier Key 'Input'	Qualifier Value 'Line In 1' 'Line In 4' 'EasyMIC 2' 'USB Playback'	Qualifier Value 'Line In 2' 'Auto Mic Mix' 'EasyMIC 3' 'HDMI'	Qualifier Value 'Line In 3' 'EasyMIC 1' 'EasyMIC 4'
Qualifier Key 'Output'	Qualifier Value 'Line Out 1' 'Line Out 4'	Qualifier Value 'Line Out 2' 'USB Record'	Qualifier Value 'Line Out 3' 'HDMI'
# AudioCrosspointGain example InterfaceName.Update('AudioCrosspointGain', {'Input': 'Line In 1', 'Output': 'Line Out 1'}) Value = InterfaceName.ReadStatus('AudioCrosspointGain', {'Input': 'Line In 1', 'Output': 'Line Out 1'}) InterfaceName.SubscribeStatus('AudioCrosspointGain', None, FeedbackHandler)			
Command AudioInputTieStatus ^{1,2}	Value 'Tied'	Value 'Untied'	
Qualifier Key 'Input'	Qualifier Value 'Line In 1' 'Line In 4' 'EasyMIC 2' 'USB Playback'	Qualifier Value 'Line In 2' 'Auto Mic Mix' 'EasyMIC 3' 'HDMI'	Qualifier Value 'Line In 3' 'EasyMIC 1' 'EasyMIC 4'
Qualifier Key 'Output'	Qualifier Value 'Line Out 1' 'Line Out 4'	Qualifier Value 'Line Out 2' 'USB Record'	Qualifier Value 'Line Out 3' 'HDMI'
# AudioInputTieStatus example InterfaceName.Update('AudioInputTieStatus', {'Input': 'Line In 1', 'Output': 'Line Out 1'}) Value = InterfaceName.ReadStatus('AudioInputTieStatus', {'Input': 'Line In 1', 'Output': 'Line Out 1'}) InterfaceName.SubscribeStatus('AudioInputTieStatus', None, FeedbackHandler)			
Command AudioOutputTieStatus ²	Value 'Line In 1' 'Line In 4' 'EasyMIC 2' 'USB Playback'	Value 'Line In 2' 'Auto Mic Mix' 'EasyMIC 3' 'None'	Value 'Line In 3' 'EasyMIC 1' 'EasyMIC 4' 'HDMI'
Qualifier Key 'Output'	Qualifier Value 'Line Out 1'	Qualifier Value 'Line Out 2'	Qualifier Value 'Line Out 3'

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

	'Line Out 4'	'USB Record'	'HDMI'
# AudioOutputTieStatus example InterfaceName.Update('AudioOutputTieStatus', {'Output': 'Line Out 1'}) Value = InterfaceName.ReadStatus('AudioOutputTieStatus', {'Output': 'Line Out 1'}) InterfaceName.SubscribeStatus('AudioOutputTieStatus', None, FeedbackHandler)			
Command	Value	Value	
ConnectionStatus	'Connected'	'Disconnected'	
# ConnectionStatus example Value = InterfaceName.ReadStatus('ConnectionStatus') InterfaceName.SubscribeStatus('ConnectionStatus', None, FeedbackHandler)			
Command	Value	Value	
EasyMICMute ³	'On'	'Off'	
Qualifier Key	Qualifier Value		
'Channel'	'1' – '4'		
# EasyMICMute example InterfaceName.Update('EasyMICMute', {'Channel': '1'}) Value = InterfaceName.ReadStatus('EasyMICMute', {'Channel': '1'}) InterfaceName.SubscribeStatus('EasyMICMute', None, FeedbackHandler)			
Command	Value		
EasyMICVolume ³	-42 to 6 in steps of 0.1		
Qualifier Key	Qualifier Value		
'Channel'	'1' – '4'		
# EasyMICVolume example InterfaceName.Update('EasyMICVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('EasyMICVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('EasyMICVolume', None, FeedbackHandler)			
Command	Value	Value	
LineInMute ³	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'1' – '4'	'HDMI'	
# LineInMute example InterfaceName.Update('LineInMute', {'Channel': '1'}) Value = InterfaceName.ReadStatus('LineInMute', {'Channel': '1'}) InterfaceName.SubscribeStatus('LineInMute', None, FeedbackHandler)			
Command	Value		
LineInVolume ³	-50 to 20 in steps of 0.1		
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'1' – '4'	'HDMI'	
# LineInVolume example InterfaceName.Update('LineInVolume', {'Channel': '1'}) Value = InterfaceName.ReadStatus('LineInVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('LineInVolume', None, FeedbackHandler)			
Command	Value	Value	
LineOutMute ³	'On'	'Off'	
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'1' – '4'	'HDMI'	
# LineOutMute example InterfaceName.Update('LineOutMute', {'Channel': '1'}) Value = InterfaceName.ReadStatus('LineOutMute', {'Channel': '1'}) InterfaceName.SubscribeStatus('LineOutMute', None, FeedbackHandler)			
Command	Value		
LineOutVolume ³	-50 to 20 in steps of 0.1		
Qualifier Key	Qualifier Value	Qualifier Value	
'Channel'	'1' – '4'	'HDMI'	
# LineOutVolume example InterfaceName.Update('LineOutVolume', {'Channel': '1'})			

Global Scripter Module Communication Sheet

Revision: 5/1/2020

Value = InterfaceName.ReadStatus('LineOutVolume', {'Channel': '1'}) InterfaceName.SubscribeStatus('LineOutVolume', None, FeedbackHandler)		
Command MasterMute	Value 'On'	Value 'Off'
# MasterMute example InterfaceName.Update('MasterMute') Value = InterfaceName.ReadStatus('MasterMute') InterfaceName.SubscribeStatus('MasterMute', None, FeedbackHandler)		
Command MasterVolume	Value -50 to 20 in steps of 0.1	
# MasterVolume example InterfaceName.Update('MasterVolume') Value = InterfaceName.ReadStatus('MasterVolume') InterfaceName.SubscribeStatus('MasterVolume', None, FeedbackHandler)		
Command ProgramInput	Value '1' – '4'	Value 'Stream Input'
# ProgramInput example InterfaceName.Update('ProgramInput') Value = InterfaceName.ReadStatus('ProgramInput') InterfaceName.SubscribeStatus('ProgramInput', None, FeedbackHandler)		
Command StreamInput	Value '1' – '4'	
# StreamInput example InterfaceName.Update('StreamInput') Value = InterfaceName.ReadStatus('StreamInput') InterfaceName.SubscribeStatus('StreamInput', None, FeedbackHandler)		
Command USBMute ³	Value 'On'	Value 'Off'
Qualifier Key 'Channel'	Qualifier Value 'Record'	Qualifier Value 'Playback'
# USBMute example InterfaceName.Update('USBMute', {'Channel': 'Record'}) Value = InterfaceName.ReadStatus('USBMute', {'Channel': 'Record'}) InterfaceName.SubscribeStatus('USBMute', None, FeedbackHandler)		
Command USBVolume ³	Value -42 to 6 in steps of 0.1	
Qualifier Key 'Channel'	Qualifier Value 'Record'	Qualifier Value 'Playback'
# USBVolume example InterfaceName.Update('USBVolume', {'Channel': 'Record'}) Value = InterfaceName.ReadStatus('USBVolume', {'Channel': 'Record'}) InterfaceName.SubscribeStatus('USBVolume', None, FeedbackHandler)		
Command VideoMute	Value 'On'	Value 'Off'
# VideoMute example InterfaceName.Update('VideoMute') Value = InterfaceName.ReadStatus('VideoMute') InterfaceName.SubscribeStatus('VideoMute', None, FeedbackHandler)		

¹ Requires Input parameter to be set.

² Requires Output parameter to be set.

³ Requires Channel parameter to be set.

Cable and Adapter Requirements

Captive Screw to Female DB9 RS-232 Cable

Notes for the Device

Default User Name: admin

Default Password: password

Serial communication

Port Type: RS-232

Baud Rate: 38400


Data Bits: 8

Parity: None


Stop Bits: One

Flow Control: None

Pin Assignments Diagram

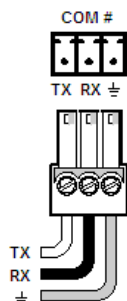

Signal	Main Cable	Pin	Signal
TxD	→	2	RxD
RxD	←	3	TxD
GND		5	GND

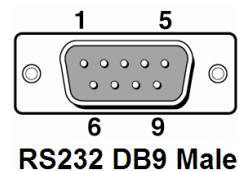

Network communication

When configuring the Ethernet module, be sure device settings match those of the Global Scripter ethernet interface.

Port Type: Ethernet

Default Port: 23

Logon Credentials Supported: Yes

Default Username: admin

Default Password: password

Multi-Connection Yes

Capabilities:

Port Changeability: No

Ethernet Module Configuration Description

Please refer to user manual for settings and changes to the network communication

Notes for the Device

Appendix A. Set Commands

Audio Crosspoint Gain 12 Input Auto Mic Mix Output HDMI	audio hdmi_out crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output HDMI	audio hdmi_out crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input Auto Mic Mix Output Line Out 1	audio line_out_1 crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output Line Out 1	audio line_out_1 crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input Auto Mic Mix Output Line Out 2	audio line_out_2 crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output Line Out 2	audio line_out_2 crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input Auto Mic Mix Output Line Out 3	audio line_out_3 crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output Line Out 3	audio line_out_3 crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input Auto Mic Mix Output Line Out 4	audio line_out_4 crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output Line Out 4	audio line_out_4 crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input Auto Mic Mix Output USB Record	audio usb_record crosspoint-gain auto_mic_mix set 12.0\x0D
Audio Crosspoint Gain -12 Input Auto Mic Mix Output USB Record	audio usb_record crosspoint-gain auto_mic_mix set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 1 Output	audio usb_record crosspoint-gain easy_mic_1 set

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

USB Record	12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 1 Output USB Record	audio usb_record crosspoint-gain easy_mic_1 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_2 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_2 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_2 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_2 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 2 Output USB Record	audio usb_record crosspoint-gain easy_mic_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 2 Output USB Record	audio usb_record crosspoint-gain easy_mic_2 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 3 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 3 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_3 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 3 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_3 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 3 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_3 set -12.0\x0D
Audio Crosspoint Gain 12 Input EasyMIC 3 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_3 set -12.0\x0D

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

Audio Crosspoint Gain 12 Input EasyMIC 3 Output USB Record	audio usb_record crosspoint-gain easy_mic_3 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 3 Output USB Record	audio usb_record crosspoint-gain easy_mic_3 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input EasyMIC 4 Output USB Record	audio usb_record crosspoint-gain easy_mic_4 set 12.0*0D
Audio Crosspoint Gain -12 Input EasyMIC 4 Output USB Record	audio usb_record crosspoint-gain easy_mic_4 set -12.0*0D
Audio Crosspoint Gain 12 Input HDMI Output HDMI	audio hdmi_out crosspoint-gain hdmi_in set 12.0*0D
Audio Crosspoint Gain -12 Input HDMI Output HDMI	audio hdmi_out crosspoint-gain hdmi_in set -12.0*0D
Audio Crosspoint Gain 12 Input HDMI Output Line Out 1	audio line_out_1 crosspoint-gain hdmi_in set 12.0*0D
Audio Crosspoint Gain -12 Input HDMI Output Line Out 1	audio line_out_1 crosspoint-gain hdmi_in set -12.0*0D
Audio Crosspoint Gain 12 Input HDMI Output Line Out 2	audio line_out_2 crosspoint-gain hdmi_in set 12.0*0D
Audio Crosspoint Gain -12 Input HDMI Output Line Out 2	audio line_out_2 crosspoint-gain hdmi_in set -12.0*0D
Audio Crosspoint Gain 12 Input HDMI Output Line Out 3	audio line_out_3 crosspoint-gain hdmi_in set 12.0*0D
Audio Crosspoint Gain -12 Input HDMI Output Line Out 3	audio line_out_3 crosspoint-gain hdmi_in set -12.0*0D
Audio Crosspoint Gain 12 Input HDMI Output Line Out 4	audio line_out_4 crosspoint-gain hdmi_in set 12.0*0D
Audio Crosspoint Gain -12 Input HDMI Output Line Out 4	audio line_out_4 crosspoint-gain hdmi_in set -12.0*0D

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

Audio Crosspoint Gain 12 Input HDMI Output USB Record	audio usb_record crosspoint-gain hdmi_in set 12.0\x0D
Audio Crosspoint Gain -12 Input HDMI Output USB Record	audio usb_record crosspoint-gain hdmi_in set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output HDMI	audio hdmi_out crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output HDMI	audio hdmi_out crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 1 Output USB Record	audio usb_record crosspoint-gain line_in_1 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 1 Output USB Record	audio usb_record crosspoint-gain line_in_1 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output HDMI	audio hdmi_out crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output HDMI	audio hdmi_out crosspoint-gain line_in_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output	audio line_out_4 crosspoint-gain line_in_2 set -

Global Scripter Module Communication Sheet

Revision: 5/1/2020

Line Out 4	12.0\x0D
Audio Crosspoint Gain 12 Input Line In 2 Output USB Record	audio usb_record crosspoint-gain line_in_2 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 2 Output USB Record	audio usb_record crosspoint-gain line_in_2 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output HDMI	audio hdmi_out crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output HDMI	audio hdmi_out crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 3 Output USB Record	audio usb_record crosspoint-gain line_in_3 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 3 Output USB Record	audio usb_record crosspoint-gain line_in_3 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output HDMI	audio hdmi_out crosspoint-gain line_in_4 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 4 Output HDMI	audio hdmi_out crosspoint-gain line_in_4 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_4 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 4 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_4 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_4 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 4 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_4 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_4 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 4 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_4 set - 12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_4 set 12.0\x0D

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

Audio Crosspoint Gain -12 Input Line In 4 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_4 set -12.0\x0D
Audio Crosspoint Gain 12 Input Line In 4 Output USB Record	audio usb_record crosspoint-gain line_in_4 set 12.0\x0D
Audio Crosspoint Gain -12 Input Line In 4 Output USB Record	audio usb_record crosspoint-gain line_in_4 set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output HDMI	audio hdmi_out crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output HDMI	audio hdmi_out crosspoint-gain usb_playback set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output Line Out 1	audio line_out_1 crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output Line Out 1	audio line_out_1 crosspoint-gain usb_playback set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output Line Out 2	audio line_out_2 crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output Line Out 2	audio line_out_2 crosspoint-gain usb_playback set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output Line Out 3	audio line_out_3 crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output Line Out 3	audio line_out_3 crosspoint-gain usb_playback set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output Line Out 4	audio line_out_4 crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output Line Out 4	audio line_out_4 crosspoint-gain usb_playback set -12.0\x0D
Audio Crosspoint Gain 12 Input USB Playback Output USB Record	audio usb_record crosspoint-gain usb_playback set 12.0\x0D
Audio Crosspoint Gain -12 Input USB Playback Output USB Record	audio usb_record crosspoint-gain usb_playback set -12.0\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output HDMI	audio hdmi_out route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output Line Out 1	audio line_out_1 route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output Line Out 2	audio line_out_2 route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output Line Out 3	audio line_out_3 route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output Line Out 4	audio line_out_4 route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input Auto Mic Mix Output USB Record	audio usb_record route set auto_mic_mix\x0D
Audio Matrix Tie Command None Input EasyMIC 1 Output HDMI	audio hdmi_out route set easy_mic_1\x0D
Audio Matrix Tie Command None Input EasyMIC 1 Output Line Out 1	audio line_out_1 route set easy_mic_1\x0D
Audio Matrix Tie Command None Input EasyMIC 1	audio line_out_2 route set easy_mic_1\x0D

Global Scriptor Module Communication Sheet

Output Line Out 2	
Audio Matrix Tie Command None Input EasyMIC 1 Output Line Out 3	audio line_out_3 route set easy_mic_1\x0D
Audio Matrix Tie Command None Input EasyMIC 1 Output Line Out 4	audio line_out_4 route set easy_mic_1\x0D
Audio Matrix Tie Command None Input EasyMIC 1 Output USB Record	audio usb_record route set easy_mic_1\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output HDMI	audio hdmi_out route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output Line Out 1	audio line_out_1 route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output Line Out 2	audio line_out_2 route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output Line Out 3	audio line_out_3 route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output Line Out 4	audio line_out_4 route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 2 Output USB Record	audio usb_record route set easy_mic_2\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output HDMI	audio hdmi_out route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output Line Out 1	audio line_out_1 route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output Line Out 2	audio line_out_2 route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output Line Out 3	audio line_out_3 route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output Line Out 4	audio line_out_4 route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 3 Output USB Record	audio usb_record route set easy_mic_3\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output HDMI	audio hdmi_out route set easy_mic_4\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output Line Out 1	audio line_out_1 route set easy_mic_4\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output Line Out 2	audio line_out_2 route set easy_mic_4\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output Line Out 3	audio line_out_3 route set easy_mic_4\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output Line Out 4	audio line_out_4 route set easy_mic_4\x0D
Audio Matrix Tie Command None Input EasyMIC 4 Output USB Record	audio usb_record route set easy_mic_4\x0D
Audio Matrix Tie Command None Input HDMI Output HDMI	audio hdmi_out route set hdmi_in\x0D
Audio Matrix Tie Command None Input HDMI Output Line Out 1	audio line_out_1 route set hdmi_in\x0D

Global Scriptor Module Communication Sheet

Audio Matrix Tie Command None Input HDMI Output Line Out 2	audio line_out_2 route set hdmi_in\x0D
Audio Matrix Tie Command None Input HDMI Output Line Out 3	audio line_out_3 route set hdmi_in\x0D
Audio Matrix Tie Command None Input HDMI Output Line Out 4	audio line_out_4 route set hdmi_in\x0D
Audio Matrix Tie Command None Input HDMI Output USB Record	audio usb_record route set hdmi_in\x0D
Audio Matrix Tie Command None Input Line In 1 Output HDMI	audio hdmi_out route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 1 Output Line Out 1	audio line_out_1 route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 1 Output Line Out 2	audio line_out_2 route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 1 Output Line Out 3	audio line_out_3 route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 1 Output Line Out 4	audio line_out_4 route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 1 Output USB Record	audio usb_record route set line_in_1\x0D
Audio Matrix Tie Command None Input Line In 2 Output HDMI	audio hdmi_out route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 2 Output Line Out 1	audio line_out_1 route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 2 Output Line Out 2	audio line_out_2 route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 2 Output Line Out 3	audio line_out_3 route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 2 Output Line Out 4	audio line_out_4 route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 2 Output USB Record	audio usb_record route set line_in_2\x0D
Audio Matrix Tie Command None Input Line In 3 Output HDMI	audio hdmi_out route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 3 Output Line Out 1	audio line_out_1 route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 3 Output Line Out 2	audio line_out_2 route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 3 Output Line Out 3	audio line_out_3 route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 3 Output Line Out 4	audio line_out_4 route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 3 Output USB Record	audio usb_record route set line_in_3\x0D
Audio Matrix Tie Command None Input Line In 4 Output HDMI	audio hdmi_out route set line_in_4\x0D
Audio Matrix Tie Command None Input Line In 4	audio line_out_1 route set line_in_4\x0D

Global Scripter Module Communication Sheet

Output Line Out 1	
Audio Matrix Tie Command None Input Line In 4 Output Line Out 2	audio line_out_2 route set line_in_4\x0D
Audio Matrix Tie Command None Input Line In 4 Output Line Out 3	audio line_out_3 route set line_in_4\x0D
Audio Matrix Tie Command None Input Line In 4 Output Line Out 4	audio line_out_4 route set line_in_4\x0D
Audio Matrix Tie Command None Input Line In 4 Output USB Record	audio usb_record route set line_in_4\x0D
Audio Matrix Tie Command None Input None Output HDMI	audio hdmi_out route set \x0D
Audio Matrix Tie Command None Input None Output Line Out 1	audio line_out_1 route set \x0D
Audio Matrix Tie Command None Input None Output Line Out 2	audio line_out_2 route set \x0D
Audio Matrix Tie Command None Input None Output Line Out 3	audio line_out_3 route set \x0D
Audio Matrix Tie Command None Input None Output Line Out 4	audio line_out_4 route set \x0D
Audio Matrix Tie Command None Input None Output USB Record	audio usb_record route set \x0D
Audio Matrix Tie Command None Input USB Playback Output HDMI	audio hdmi_out route set usb_playback\x0D
Audio Matrix Tie Command None Input USB Playback Output Line Out 1	audio line_out_1 route set usb_playback\x0D
Audio Matrix Tie Command None Input USB Playback Output Line Out 2	audio line_out_2 route set usb_playback\x0D
Audio Matrix Tie Command None Input USB Playback Output Line Out 3	audio line_out_3 route set usb_playback\x0D
Audio Matrix Tie Command None Input USB Playback Output Line Out 4	audio line_out_4 route set usb_playback\x0D
Audio Matrix Tie Command None Input USB Playback Output USB Record	audio usb_record route set usb_playback\x0D
Auto Focus Off Camera 1	camera 1 focus mode manual\x0D
Auto Focus Off Camera 3	camera 3 focus mode manual\x0D
Auto Focus On Camera 1	camera 1 focus mode auto\x0D
Auto Focus On Camera 3	camera 3 focus mode auto\x0D
EasyMIC Mute Off Channel 1	audio easy_mic_1 mute off\x0D
EasyMIC Mute Off Channel 4	audio easy_mic_4 mute off\x0D
EasyMIC Mute On Channel 1	audio easy_mic_1 mute on\x0D
EasyMIC Mute On Channel 4	audio easy_mic_4 mute on\x0D
EasyMIC Volume -42 Channel 1	audio easy_mic_1 volume set -42.0\x0D
EasyMIC Volume -42 Channel 4	audio easy_mic_4 volume set -42.0\x0D
EasyMIC Volume 6 Channel 1	audio easy_mic_1 volume set 6.0\x0D
EasyMIC Volume 6 Channel 4	audio easy_mic_4 volume set 6.0\x0D
Focus Far Camera 1 Speed 1	camera 1 focus far 1\x0D

**Global Scriptor Module
Communication Sheet**

Revision: 5/1/2020

Focus Far Camera 1 Speed 8	camera 1 focus far 8\x0D
Focus Far Camera 3 Speed 1	camera 3 focus far 1\x0D
Focus Far Camera 3 Speed 8	camera 3 focus far 8\x0D
Focus Near Camera 1 Speed 1	camera 1 focus near 1\x0D
Focus Near Camera 1 Speed 8	camera 1 focus near 8\x0D
Focus Near Camera 3 Speed 1	camera 3 focus near 1\x0D
Focus Near Camera 3 Speed 8	camera 3 focus near 8\x0D
Focus Stop Camera 1 Speed 1	camera 1 focus stop \x0D
Focus Stop Camera 1 Speed 8	camera 1 focus stop \x0D
Focus Stop Camera 3 Speed 1	camera 3 focus stop \x0D
Focus Stop Camera 3 Speed 8	camera 3 focus stop \x0D
Line In Mute Off Channel 1	audio line_in_1 mute off\x0D
Line In Mute Off Channel 4	audio line_in_4 mute off\x0D
Line In Mute Off Channel HDMI	audio hdmi_in mute off\x0D
Line In Mute On Channel 1	audio line_in_1 mute on\x0D
Line In Mute On Channel 4	audio line_in_4 mute on\x0D
Line In Mute On Channel HDMI	audio hdmi_in mute on\x0D
Line In Volume 20 Channel 1	audio line_in_1 volume set 20.0\x0D
Line In Volume 20 Channel 4	audio line_in_4 volume set 20.0\x0D
Line In Volume 20 Channel HDMI	audio hdmi_in volume set 20.0\x0D
Line In Volume -50 Channel 1	audio line_in_1 volume set -50.0\x0D
Line In Volume -50 Channel 4	audio line_in_4 volume set -50.0\x0D
Line In Volume -50 Channel HDMI	audio hdmi_in volume set -50.0\x0D
Line Out Mute Off Channel 1	audio line_out_1 mute off\x0D
Line Out Mute Off Channel 4	audio line_out_4 mute off\x0D
Line Out Mute Off Channel HDMI	audio hdmi_out mute off\x0D
Line Out Mute On Channel 1	audio line_out_1 mute on\x0D
Line Out Mute On Channel 4	audio line_out_4 mute on\x0D
Line Out Mute On Channel HDMI	audio hdmi_out mute on\x0D
Line Out Volume 20 Channel 1	audio line_out_1 volume set 20.0\x0D
Line Out Volume 20 Channel 4	audio line_out_4 volume set 20.0\x0D
Line Out Volume 20 Channel HDMI	audio hdmi_out volume set 20.0\x0D
Line Out Volume -50 Channel 1	audio line_out_1 volume set -50.0\x0D
Line Out Volume -50 Channel 4	audio line_out_4 volume set -50.0\x0D
Line Out Volume -50 Channel HDMI	audio hdmi_out volume set -50.0\x0D
Master Mute Off	audio master mute off\x0D
Master Mute On	audio master mute on\x0D
Master Volume 20	audio master volume set 20.0\x0D
Master Volume -50	audio master volume set -50.0\x0D
Pan Left Camera 1 Speed 1	camera 1 pan left 1\x0D
Pan Left Camera 1 Speed 24	camera 1 pan left 24\x0D
Pan Left Camera 3 Speed 1	camera 3 pan left 1\x0D
Pan Left Camera 3 Speed 24	camera 3 pan left 24\x0D
Pan Right Camera 1 Speed 1	camera 1 pan right 1\x0D

**Global Scriptor Module
Communication Sheet**

Revision: 5/1/2020

Pan Right Camera 1 Speed 24	camera 1 pan right 24\x0D
Pan Right Camera 3 Speed 1	camera 3 pan right 1\x0D
Pan Right Camera 3 Speed 24	camera 3 pan right 24\x0D
Pan Stop Camera 1 Speed 1	camera 1 pan stop \x0D
Pan Stop Camera 1 Speed 24	camera 1 pan stop \x0D
Pan Stop Camera 3 Speed 1	camera 3 pan stop \x0D
Pan Stop Camera 3 Speed 24	camera 3 pan stop \x0D
PIP Input 1	video stream pip inset input1\x0D
PIP Input 4	video stream pip inset input4\x0D
PIP Off	video stream pip off\x0D
PIP On	video stream pip on\x0D
Preset Recall 1 Camera 1	camera 1 preset recall 1\x0D
Preset Recall 1 Camera 3	camera 3 preset recall 1\x0D
Preset Recall 16 Camera 1	camera 1 preset recall 16\x0D
Preset Recall 16 Camera 3	camera 3 preset recall 16\x0D
Preset Save 1 Camera 1	camera 1 preset store 1\x0D
Preset Save 1 Camera 3	camera 3 preset store 1\x0D
Preset Save 16 Camera 1	camera 1 preset store 16\x0D
Preset Save 16 Camera 3	camera 3 preset store 16\x0D
Program Input 1	video program source set input1\x0D
Program Input 4	video program source set input4\x0D
Program Input Stream Input	video program source set stream\x0D
Standby Off Camera 1	camera 1 standby off\x0D
Standby Off Camera 3	camera 3 standby off\x0D
Standby On Camera 1	camera 1 standby on\x0D
Standby On Camera 3	camera 3 standby on\x0D
Stream Input 1	video stream source set input1\x0D
Stream Input 4	video stream source set input4\x0D
Tilt Down Camera 1 Speed 1	camera 1 tilt down 1\x0D
Tilt Down Camera 1 Speed 20	camera 1 tilt down 20\x0D
Tilt Down Camera 3 Speed 1	camera 3 tilt down 1\x0D
Tilt Down Camera 3 Speed 20	camera 3 tilt down 20\x0D
Tilt Stop Camera 1 Speed 1	camera 1 tilt stop \x0D
Tilt Stop Camera 1 Speed 20	camera 1 tilt stop \x0D
Tilt Stop Camera 3 Speed 1	camera 3 tilt stop \x0D
Tilt Stop Camera 3 Speed 20	camera 3 tilt stop \x0D
Tilt Up Camera 1 Speed 1	camera 1 tilt up 1\x0D
Tilt Up Camera 1 Speed 20	camera 1 tilt up 20\x0D
Tilt Up Camera 3 Speed 1	camera 3 tilt up 1\x0D
Tilt Up Camera 3 Speed 20	camera 3 tilt up 20\x0D
USB Mute Off Channel Playback	audio usb_playback mute off\x0D
USB Mute Off Channel Record	audio usb_record mute off\x0D
USB Mute On Channel Playback	audio usb_playback mute on\x0D
USB Mute On Channel Record	audio usb_record mute on\x0D

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

USB Volume -42 Channel Playback	audio usb_playback volume set -42.0\x0D
USB Volume -42 Channel Record	audio usb_record volume set -42.0\x0D
USB Volume 6 Channel Playback	audio usb_playback volume set 6.0\x0D
USB Volume 6 Channel Record	audio usb_record volume set 6.0\x0D
Video Mute Off	video mute off\x0D
Video Mute On	video mute on\x0D
Zoom In Camera 1 Speed 1	camera 1 zoom in 1\x0D
Zoom In Camera 1 Speed 7	camera 1 zoom in 7\x0D
Zoom In Camera 3 Speed 1	camera 3 zoom in 1\x0D
Zoom In Camera 3 Speed 7	camera 3 zoom in 7\x0D
Zoom Out Camera 1 Speed 1	camera 1 zoom out 1\x0D
Zoom Out Camera 1 Speed 7	camera 1 zoom out 7\x0D
Zoom Out Camera 3 Speed 1	camera 3 zoom out 1\x0D
Zoom Out Camera 3 Speed 7	camera 3 zoom out 7\x0D
Zoom Stop Camera 1 Speed 1	camera 1 zoom stop \x0D
Zoom Stop Camera 1 Speed 7	camera 1 zoom stop \x0D
Zoom Stop Camera 3 Speed 1	camera 3 zoom stop \x0D
Zoom Stop Camera 3 Speed 7	camera 3 zoom stop \x0D

Appendix B. Update Commands

Audio Crosspoint Gain Input Auto Mic Mix Output HDMI	audio hdmi_out crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input Auto Mic Mix Output Line Out 1	audio line_out_1 crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input Auto Mic Mix Output Line Out 2	audio line_out_2 crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input Auto Mic Mix Output Line Out 3	audio line_out_3 crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input Auto Mic Mix Output Line Out 4	audio line_out_4 crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input Auto Mic Mix Output USB Record	audio usb_record crosspoint-gain auto_mic_mix get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 1 Output USB Record	audio usb_record crosspoint-gain easy_mic_1 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 2 Output USB Record	audio usb_record crosspoint-gain easy_mic_2 get\x0D
Audio Crosspoint Gain Input EasyMIC 3 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_3 get\x0D
Audio Crosspoint Gain Input EasyMIC 3 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_3 get\x0D
Audio Crosspoint Gain Input EasyMIC 3 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_3 get\x0D
Audio Crosspoint Gain Input EasyMIC 3 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_3 get\x0D
Audio Crosspoint Gain Input EasyMIC 3 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_3 get\x0D

Global Scriptor Module Communication Sheet

Revision: 5/1/2020

Audio Crosspoint Gain Input EasyMIC 3 Output USB Record	audio usb_record crosspoint-gain easy_mic_3 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output HDMI	audio hdmi_out crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output Line Out 1	audio line_out_1 crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output Line Out 2	audio line_out_2 crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output Line Out 3	audio line_out_3 crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output Line Out 4	audio line_out_4 crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input EasyMIC 4 Output USB Record	audio usb_record crosspoint-gain easy_mic_4 get\x0D
Audio Crosspoint Gain Input HDMI Output HDMI	audio hdmi_out crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input HDMI Output Line Out 1	audio line_out_1 crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input HDMI Output Line Out 2	audio line_out_2 crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input HDMI Output Line Out 3	audio line_out_3 crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input HDMI Output Line Out 4	audio line_out_4 crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input HDMI Output USB Record	audio usb_record crosspoint-gain hdmi_in get\x0D
Audio Crosspoint Gain Input Line In 1 Output HDMI	audio hdmi_out crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 1 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 1 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 1 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 1 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 1 Output USB Record	audio usb_record crosspoint-gain line_in_1 get\x0D
Audio Crosspoint Gain Input Line In 2 Output HDMI	audio hdmi_out crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 2 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 2 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 2 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 2 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 2 Output USB Record	audio usb_record crosspoint-gain line_in_2 get\x0D
Audio Crosspoint Gain Input Line In 3 Output HDMI	audio hdmi_out crosspoint-gain line_in_3 get\x0D
Audio Crosspoint Gain Input Line In 3 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_3 get\x0D
Audio Crosspoint Gain Input Line In 3 Output Line	audio line_out_2 crosspoint-gain line_in_3

Global Scriptor Module Communication Sheet

Out 2	get\x0D
Audio Crosspoint Gain Input Line In 3 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_3 get\x0D
Audio Crosspoint Gain Input Line In 3 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_3 get\x0D
Audio Crosspoint Gain Input Line In 3 Output USB Record	audio usb_record crosspoint-gain line_in_3 get\x0D
Audio Crosspoint Gain Input Line In 4 Output HDMI	audio hdmi_out crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input Line In 4 Output Line Out 1	audio line_out_1 crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input Line In 4 Output Line Out 2	audio line_out_2 crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input Line In 4 Output Line Out 3	audio line_out_3 crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input Line In 4 Output Line Out 4	audio line_out_4 crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input Line In 4 Output USB Record	audio usb_record crosspoint-gain line_in_4 get\x0D
Audio Crosspoint Gain Input USB Playback Output HDMI	audio hdmi_out crosspoint-gain usb_playback get\x0D
Audio Crosspoint Gain Input USB Playback Output Line Out 1	audio line_out_1 crosspoint-gain usb_playback get\x0D
Audio Crosspoint Gain Input USB Playback Output Line Out 2	audio line_out_2 crosspoint-gain usb_playback get\x0D
Audio Crosspoint Gain Input USB Playback Output Line Out 3	audio line_out_3 crosspoint-gain usb_playback get\x0D
Audio Crosspoint Gain Input USB Playback Output Line Out 4	audio line_out_4 crosspoint-gain usb_playback get\x0D
Audio Crosspoint Gain Input USB Playback Output USB Record	audio usb_record crosspoint-gain usb_playback get\x0D
Audio Output Tie Status Output HDMI	audio hdmi_out route get\x0D
Audio Output Tie Status Output Line Out 1	audio line_out_1 route get\x0D
Audio Output Tie Status Output Line Out 2	audio line_out_2 route get\x0D
Audio Output Tie Status Output Line Out 3	audio line_out_3 route get\x0D
Audio Output Tie Status Output Line Out 4	audio line_out_4 route get\x0D
Audio Output Tie Status Output USB Record	audio usb_record route get\x0D
EasyMIC Mute Channel 1	audio easy_mic_1 mute get\x0D
EasyMIC Mute Channel 4	audio easy_mic_4 mute get\x0D
EasyMIC Volume Channel 1	audio easy_mic_1 volume get\x0D
EasyMIC Volume Channel 4	audio easy_mic_4 volume get\x0D
Line In Mute Channel 1	audio line_in_1 mute get\x0D
Line In Mute Channel 4	audio line_in_4 mute get\x0D
Line In Mute Channel HDMI	audio hdmi_in mute get\x0D
Line In Volume Channel 1	audio line_in_1 volume get\x0D
Line In Volume Channel 4	audio line_in_4 volume get\x0D
Line In Volume Channel HDMI	audio hdmi_in volume get\x0D

Global Scriptor Module Communication Sheet

Line Out Mute Channel 1	audio line_out_1 mute get\x0D
Line Out Mute Channel 4	audio line_out_4 mute get\x0D
Line Out Mute Channel HDMI	audio hdmi_out mute get\x0D
Line Out Volume Channel 1	audio line_out_1 volume get\x0D
Line Out Volume Channel 4	audio line_out_4 volume get\x0D
Line Out Volume Channel HDMI	audio hdmi_out volume get\x0D
Master Mute	audio master mute get\x0D
Master Volume	audio master volume get\x0D
Program Input	video program source get\x0D
Stream Input	video stream source get\x0D
USB Mute Channel Playback	audio usb_playback mute get\x0D
USB Mute Channel Record	audio usb_record mute get\x0D
USB Volume Channel Playback	audio usb_playback volume get\x0D
USB Volume Channel Record	audio usb_record volume get\x0D
Video Mute	video mute get\x0D