


### INSTALLATION

• RGBW AQUAFLEX • RGBW STARFLEX

#### Warnings:


1. Verify electrical plan first.
2. Read all installation instructions before beginning installation.
3. With the constant development of our products please check our website ([www.modalight.com](http://www.modalight.com)) for any possible changes to the installation of this product.
4. Ensure power is switched off.
5. Avoid high temperatures.
6. Connect all MODA LIGHT product before applying power.
7. Use only MODA LIGHT approved connectors, accessories, and power supplies.

1

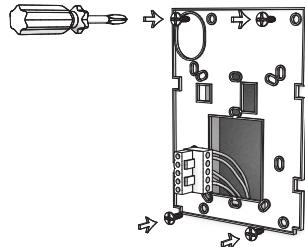

Prewire KANDI TOUCH power supply to 100-240v AC power source  
Be sure to not invert the + (Brown) and the - (Blue) primary cables  
Mount KANDI TOUCH backplate to suitable electrical box

2

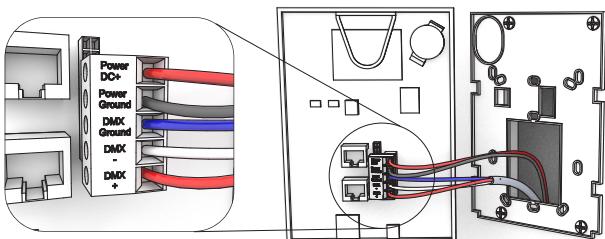


Connect 6v DC power supply to KANDI TOUCH  
and wiring for LD180

Use Belden 9842 24 AWG 2 pair cable to connect  
KANDI TOUCH (or DMX compatible device) to LD180  
Max run length for Belden 9842 is 500ft  
use suitable repeater for longer runs

2.A

CAT5 connection (Optional)

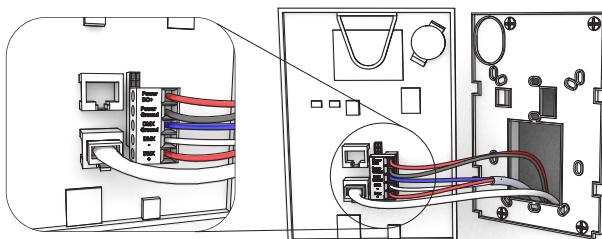


Allows for control through network and synchronization

#### WARNING:


Do not use molex (green connector) in combination with  
power over ethernet (top CAT5 port)

3

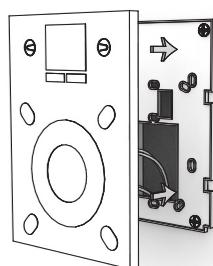

Mount KANDI TOUCH onto backplate  
then slide down to lock in place

4






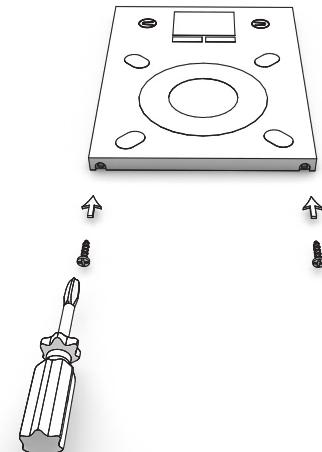


Screw in bottom retaining screws to secure  
KANDI TOUCH to backplate

All MODA LIGHT products should be installed by a Licensed Electrician to local & national code. Do not modify, adapt or cut any MODA LIGHT components, plugs or accessories. Any modifications will void the warranty and may create a potential safety hazard. Do not put on the same circuit as inductive loads. Incorrect wiring will result in irreparable permanent damage to the LEDs and fixture. MODA LIGHT tests all products before shipping, and will not replace items that have been destroyed by incorrect wiring or handling. Ensure electrical circuit is switched off before wiring. See MODA LIGHT terms and conditions for product limited warranty.

### INSTALLATION



- RGBW AQUAFLEX • RGBW STARFLEX

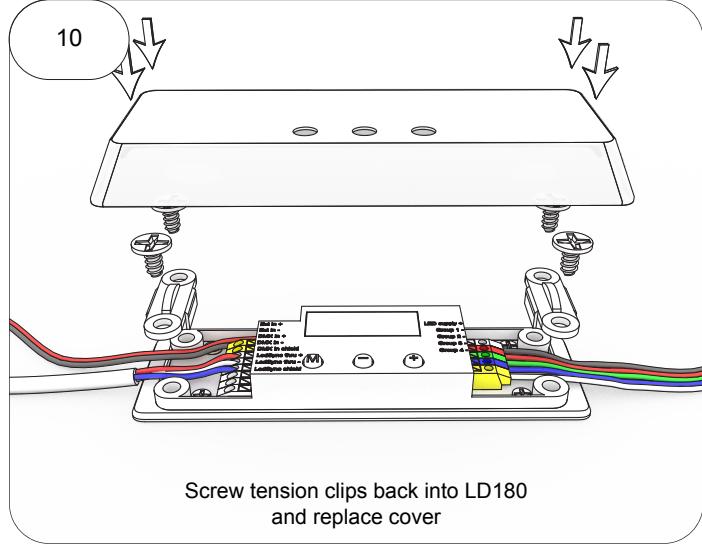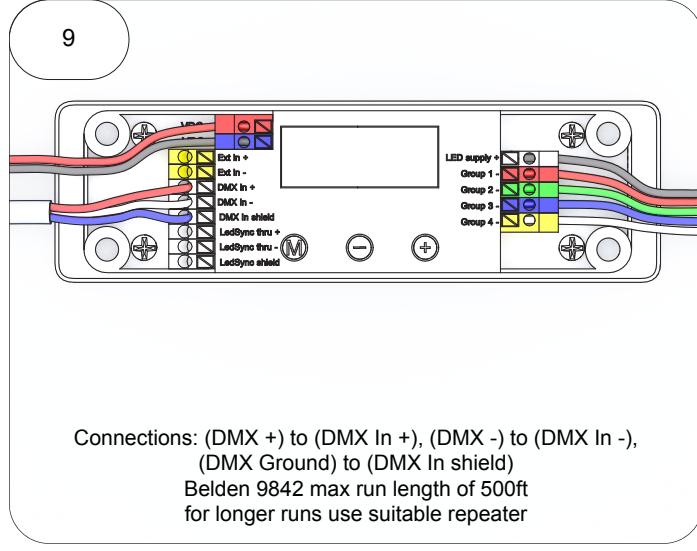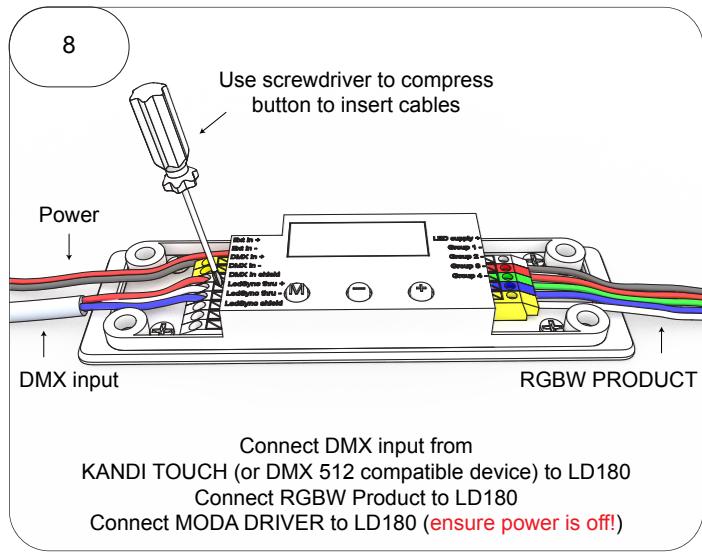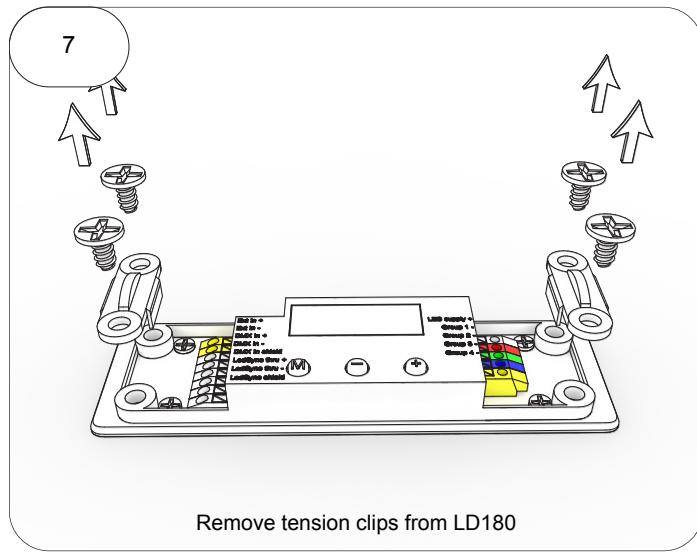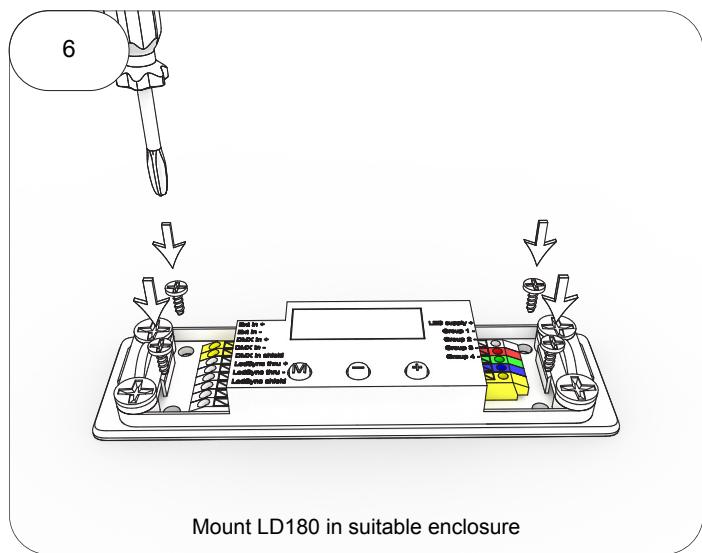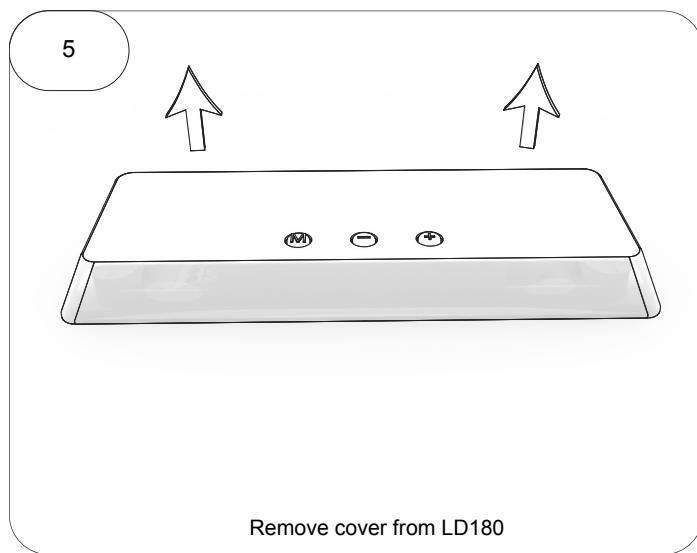

All MODA LIGHT products should be installed by a Licensed Electrician to local & national code. Do not modify, adapt or cut any MODA LIGHT components, plugs or accessories. Any modifications will void the warranty and may create a potential safety hazard. Do not put on the same circuit as inductive loads. Incorrect wiring will result in irreparable permanent damage to the LEDs and fixture. MODA LIGHT tests all products before shipping, and will not replace items that have been destroyed by incorrect wiring or handling. Ensure electrical circuit is switched off before wiring. See MODA LIGHT terms and conditions for product limited warranty.

### INSTALLATION

- RGBW AQUAFLEX • RGBW STARFLEX

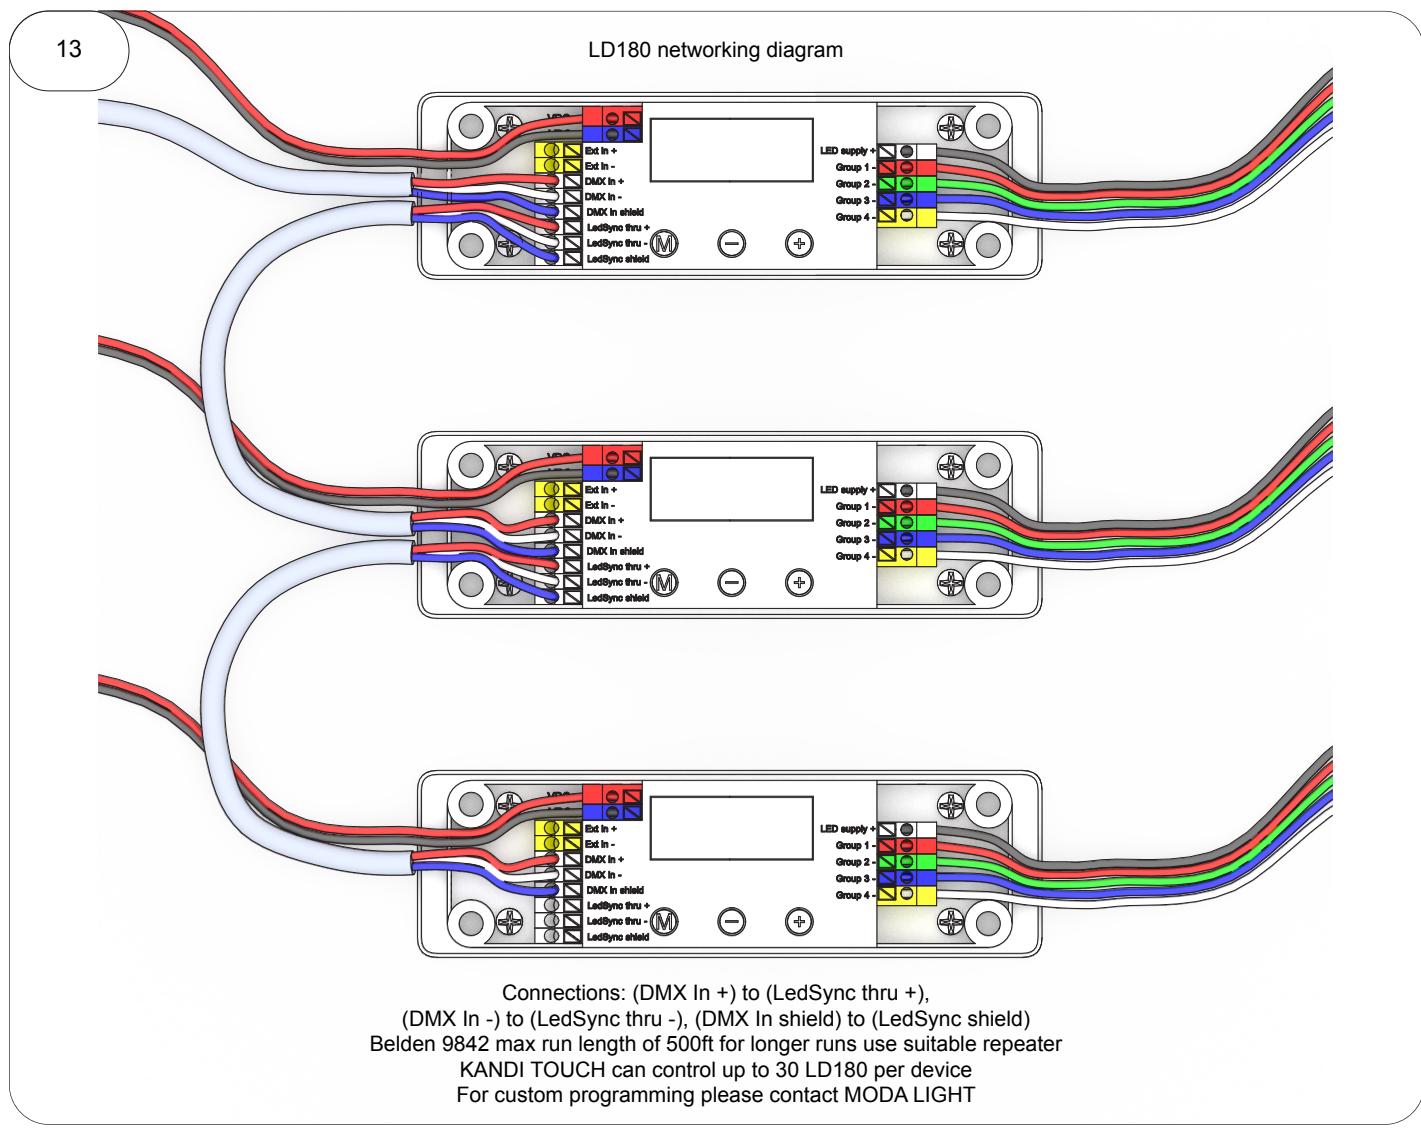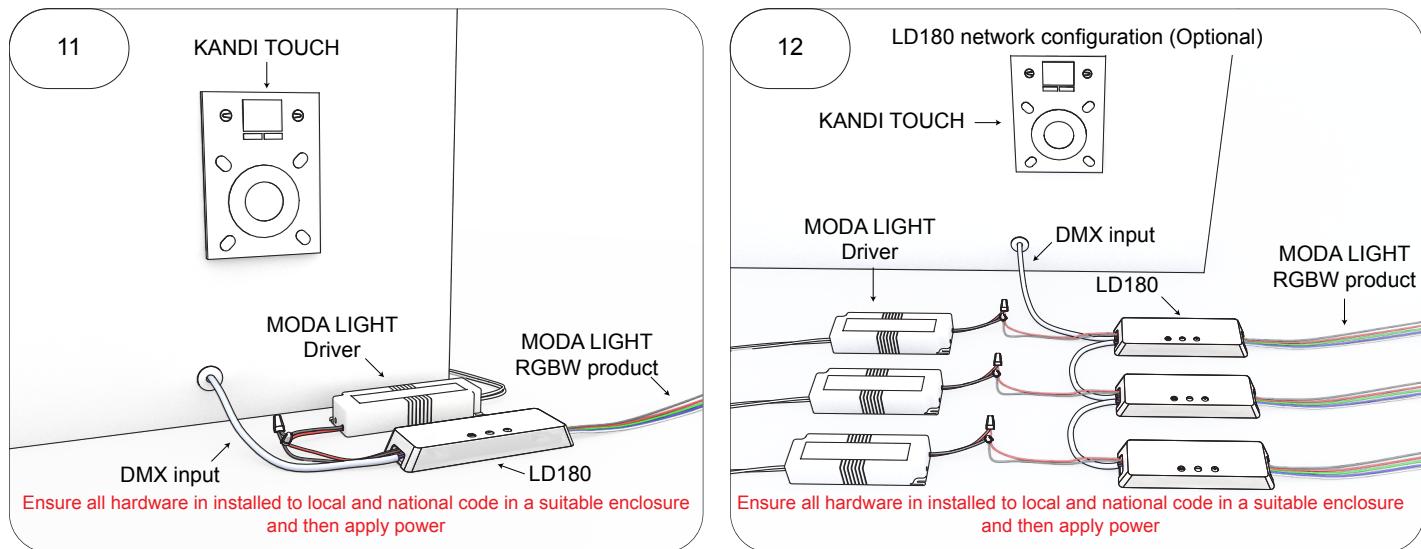

All MODA LIGHT products should be installed by a Licensed Electrician to local & national code. Do not modify, adapt or cut any MODA LIGHT components, plugs or accessories. Any modifications will void the warranty and may create a potential safety hazard. Do not put on the same circuit as inductive loads. Incorrect wiring will result in irreparable permanent damage to the LEDs and fixture. MODA LIGHT tests all products before shipping, and will not replace items that have been destroyed by incorrect wiring or handling. Ensure electrical circuit is switched off before wiring. See MODA LIGHT terms and conditions for product limited warranty.