


MOCHI rzmong – LB40 / F40-inspired sticker sheet

case_luar_lcd_23_40mm_smooth_v3 · A4 · scale 1:1 · WHITE vinyl (primary)
Original fan design – not affiliated with Liberty Walk, Ferrari or Dasai. All sponsor names are made up.

PRINT AT 100 % / "ACTUAL SIZE" (no "fit to page"). The bar must measure 50 mm.

VARIAN PCB CARRIER · case_luar_lcd_23_40mm_pcb.stl · potongan -P bebas grille speaker & slot saklar

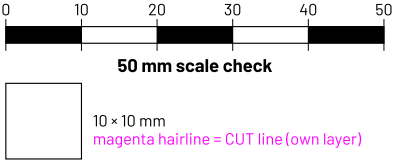

17 splitter top



6 wing top



7R endplate R



7L endplate L



13-P vent PCB



13-P spare



1 roundel



1 roundel



1 spare



9 tail-lights



9L-P



11 shield



11 spare



8 strut



8 strut



14a



14b



15a-P



15b



15c



16F alt F



16F alt F



16R-P



16R-P



16C alt centre



16C-P



10 plate



10 spare



10 plate



10 spare



5R skirt R(-X)



5L skirt L(+X)



18 splitter edge



4R NACA R



4L NACA L



2 sponsor



2 sponsor



2 spare



3 sponsor



3 sponsor



3 spare



19 grille



9 spare



12 deck louvre



14a spare



14b spare



15a-P



15b spare



15c spare



7R spare



7L spare



4R spare



4L spare



5R spare



5L spare



18 spare



19 spare



NOTES · Numbers = placement-guide keys (placement_guide.png / STICKER_GUIDE.md). L = car's LEFT (+X), R = car's RIGHT (-X); the screen is the front.
Material: WHITE gloss printable vinyl (primary) + clear gloss laminate; or white waterslide decal paper + clear coat. Clear vinyl prints NO white: white parts become see-through (OK only on a white case).
Black parts have 0.5 mm bleed past the cut line; floating decals have a 0.3 mm white vinyl margin (invisible on a white case). Labels and this text are printed but not cut.
Curved areas: dome stripes 14/15 are segmented – lay segments end-to-end along the centre line; or use the 2 mm ALT stripes 16. Warm vinyl with a hair-dryer on curves. All other pieces sit on flat faces.

VARIAN PCB CARRIER untuk case_luar_lcd_23_40mm_pcb.stl + tatakan_GMT130_fit_pcb.stl

Potongan bertanda -P sudah dipotong ulang supaya tidak menutup grille speaker di atap (15 lubang Ø1.5) dan slot saklar + counterbore di dinding belakang (jarak bebas ±1 mm).
Ventilasi -P lebih pendek (rear end berhenti ±1 mm sebelum lubang grille), strip kubah belakang -P mulai di belakang grille, tail-light pod +X -P punya takik untuk saklar.
Pod/panel lain sama persis dengan set asli. Spare di bawah ini untuk pod sisi +X (kiri mobil). Jangan tempel tambahan (21) di atas grille atau slot saklar.

9L-P spare +X



– area below is intentionally blank: trim it off and reuse the vinyl –