



XLi Series Operation Manual

Models: XLi 800, XLi 1500, XLi 2500, XLi 3500



Obtaining Other Language Versions: To obtain information in another language about the use of this product, please contact your local Crown Distributor. If you need assistance locating your local distributor, please contact Crown at 574-294-8000.

This manual does not include all of the details of design, production, or variations of the equipment. Nor does it cover every possible situation which may arise during installation, operation or maintenance.

The information provided in this manual was deemed accurate as of the publication date. However, updates to this information may have occurred. To obtain the latest version of this manual, please visit the Crown website at www.crownaudio.com.

Later versions of this manual and additional information about this product may be available at the Crown website at www.crownaudio.com.

Trademark Notice: Crown and Crown Audio are registered trademarks of Crown International. Other trademarks are the property of their respective owners.

©2012 by Harman International. 1718 W. Mishawaka Rd., Elkhart, Indiana 46517-9439 U.S.A.
Telephone: 574-294-8000

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Use the mains plug to disconnect the apparatus from the mains.
16. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.**
17. **WARNING: THIS APPLIANCE SHALL BE CONNECTED TO A MAINS SOCKET OUTLET WITH A PROTECTIVE EARTHING CONNECTION.**
 18. **DO NOT EXPOSE THIS EQUIPMENT TO DRIPPING OR SPLASHING AND ENSURE THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, ARE PLACED ON THE EQUIPMENT.**
19. **THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.**

 **TO PREVENT ELECTRIC SHOCK DO NOT REMOVE TOP OR BOTTOM COVERS. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

 **TO COMPLETELY DISCONNECT THIS EQUIPMENT FROM THE AC MAINS, DISCONNECT THE POWER SUPPLY CORD PLUG FROM THE AC RECEPTACLE. THE MAINS PLUG OF THE POWER SUPPLY CORD SHALL REMAIN READILY OPERABLE.**

WARNING: PAY ATTENTION TO A PROCEDURE, PRACTICE, CONDITION OR THE LIKE, IF NOT CORRECTLY PERFORMED OR ADHERED TO, COULD RESULT IN PERSONAL INJURY OR DEATH.

CAUTION: PAY ATTENTION TO PROCEDURE, PRACTICE, CONDITION OR THE LIKE, IF NOT CORRECTLY PERFORMED OR ADHERED TO, COULD RESULT IN DAMAGE OR DESTRUCTION TO PART OR ALL OF THE COMPONENT.

WATCH FOR THESE SYMBOLS:



The lightning bolt triangle is used to alert the user to the risk of electric shock.



The exclamation point triangle is used to alert the user to important operating or maintenance instructions.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



IMPORTANT

XLi Series amplifiers require Class 2 output wiring.

MAGNETIC FIELD

CAUTION! Do not locate sensitive high-gain equipment such as preamplifiers or tape decks directly above or below the unit. Because this amplifier has a high power density, it has a strong magnetic field which can induce hum into unshielded devices that are located nearby. The field is strongest just above and below the unit.

If an equipment rack is used, we recommend locating the amplifier(s) in the bottom of the rack and the preamplifier or other sensitive equipment at the top.

FCC COMPLIANCE NOTICE

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

DECLARATION OF CONFORMITY

Issued By: Harman International.
1718 W. Mishawaka Rd.
Elkhart, IN 46517 U.S.A.

European Representative's Name and Address:

David J. Budge
10 Harvest Close
Yateley
GU46 6YS
United Kingdom

Equipment Type: Commercial Audio Power Amplifiers

Family Name: XLi

Model Names: XLi 800, XLi 1500, XLi 2500, XLi 3500

EMC Standards:

EN 55103-1:1997 Electromagnetic Compatibility - Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 1: Emissions

EN 55103-1:1997 Magnetic Field Emissions-Annex A @ 10 cm and 20 cm

EN 61000-3-2:2001 Limits for Harmonic Current Emissions (equipment input current less than or equal to 16 A per phase)

EN 61000-3-3:2002 Limitation of Voltage Fluctuations and Flicker in Low-Voltage Supply Systems Rated Current less than or equal to 16A

EN 55022:2003 Limits and Methods of Measurement of Radio Disturbance Characteristics of ITE: Radiated, Class B Limits; Conducted, Class A

EN 55103-2:1997 Electromagnetic Compatibility - Product Family Standard for Audio, Video, Audio-Visual and Entertainment Lighting Control Apparatus for Professional Use, Part 2: Immunity

EN 61000-4-2:2001 Electrostatic Discharge Immunity (Environment E2-Criteria B, 4k V Contact, 8k V Air Discharge)

EN 61000-4-3:2001 Radiated, Radio-Frequency, Electromagnetic Immunity (Environment E2, criteria A)

EN 61000-4-4:2001 Electrical Fast Transient/Burst Immunity (Criteria B)

EN 61000-4-5:2001 Surge Immunity (Criteria B)

EN 61000-4-6:2003 Immunity to Conducted Disturbances Induced by Radio-Frequency Fields (Criteria A)

EN 61000-4-11:2001 Voltage Dips, Short Interruptions and Voltage Variation

Safety Standard:

IEC 60065: 2001 7th Ed. Safety Requirements - Audio Video and Similar Electronic Apparatus

I certify that the product identified above conforms to the requirements of the EMC Council Directive 89/336/EEC as amended by 92/31/EEC, and the Low Voltage Directive 73/23/EES as amended by 93/68/EEC.92/31/EEC, and the Low Voltage Directive 73/23/EES as amended by 93/68/EEC.

Signed




Terry Davenport
Director of Manufacturing

Date of Issue: March 1, 2012


Due to line current harmonics, we recommend that you contact your supply authority before connection.

Front Panel Features

XLi Series Power Amplifiers

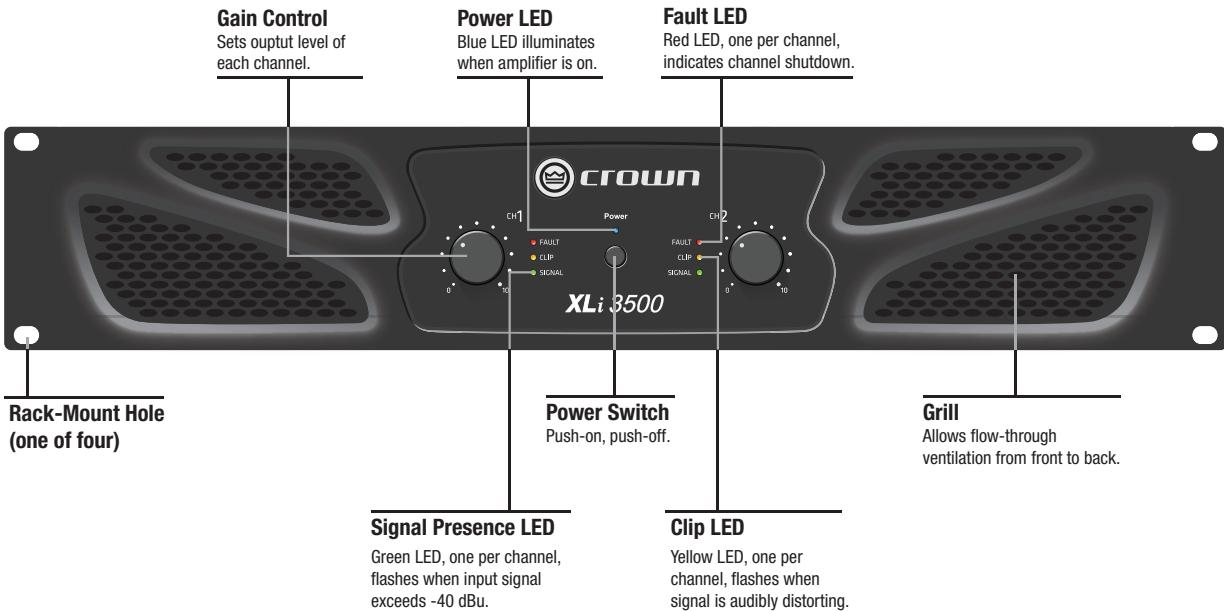

Back Panel Features

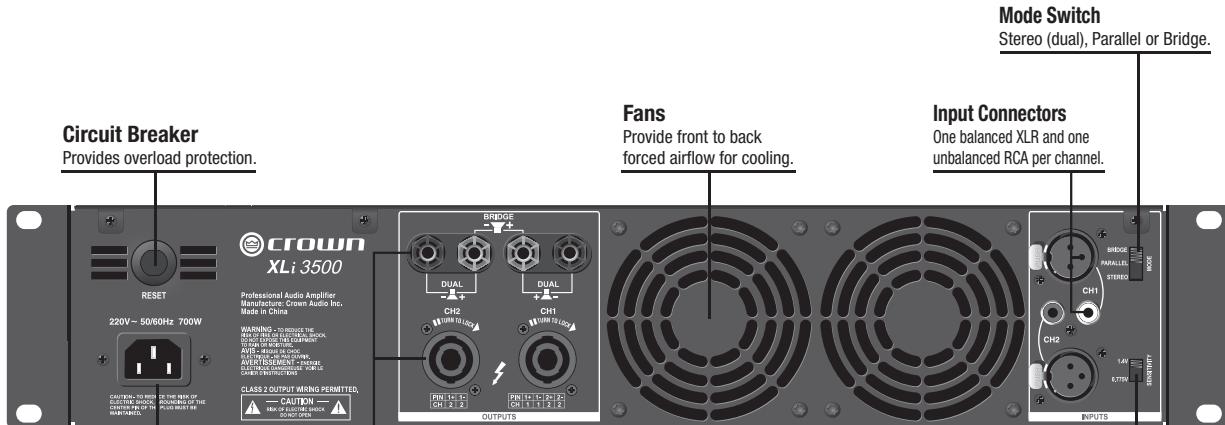


Cordset rating: 10A, 250V

Cable Coating Material: Environmental Protection PVC, copper core PBT

Wiring


Stereo (Dual) Wiring Using the Speakon® Connectors

1. See Figure 3. On the back panel, set the Output Mode Switch to STEREO.
2. Wire the speakers to the Speakon® connectors as shown.

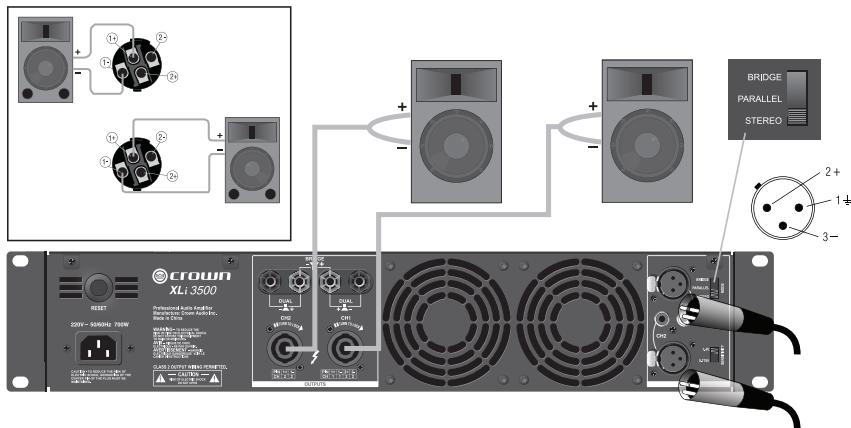

Stereo (Dual) Wiring Using the Binding Post Connectors

1. See Figure 4. On the back panel, set the Output Mode Switch to STEREO.
2. Wire the speakers to the binding post connectors as shown.

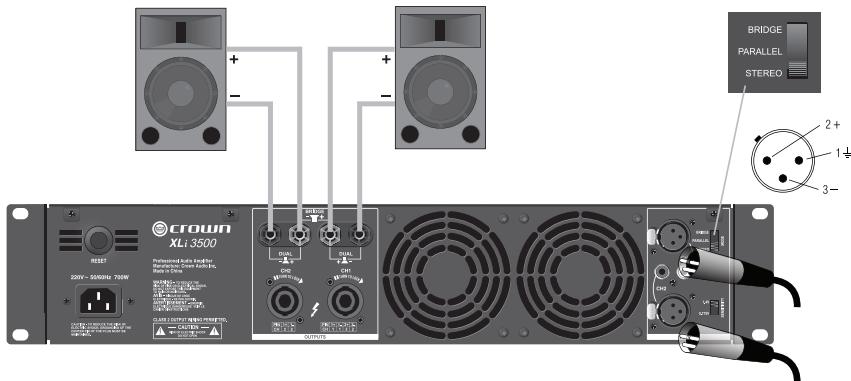


Setup

Bridge-Mono Wiring Using the Speakon® Connectors

Bridge-mono mode doubles the output power of the amplifier.


1. See Figure 5. On the back panel, set the Output Mode Switch to BRIDGE.
2. Wire the speaker to the Speakon® connector as shown.
3. Only the Channel 1 Gain Control works in Bridge-mono mode.

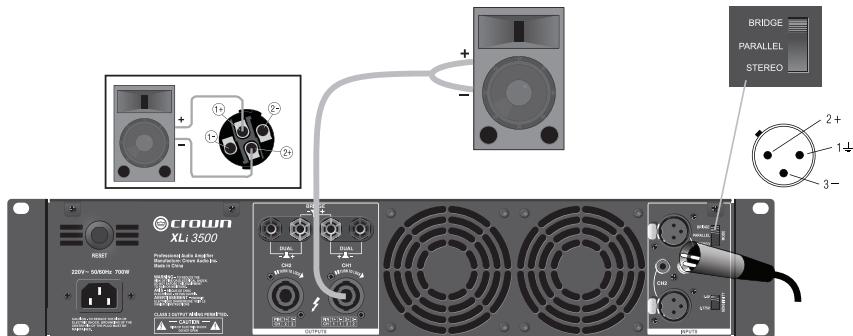

Bridge-Mono Wiring Using the Binding Post Connectors

Bridge-mono mode doubles the output power of the amplifier.

1. See Figure 5. On the back panel, set the Output Mode Switch to BRIDGE.
2. Wire the speaker to the binding post connectors as shown.
3. Only the Channel 1 Gain Control works in Bridge-mono mode.

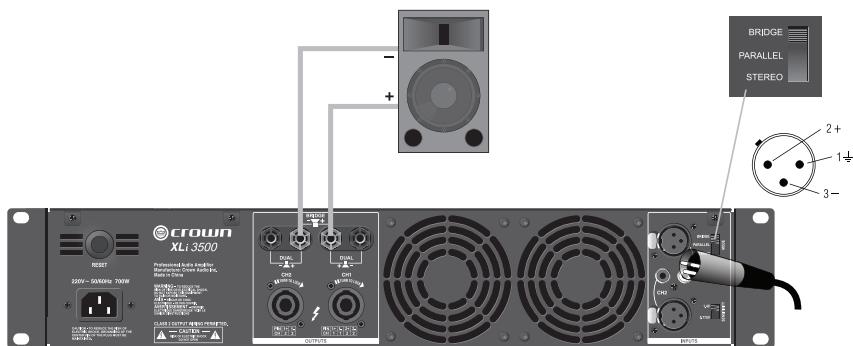


Wiring

Parallel Wiring Using the Speakon® Connectors

With this wiring, a signal sent to one of the input connectors is paralleled to both channels so that it is reproduced by both speakers.


1. See Figure 7. On the back panel, set the Output Mode Switch to PARALLEL.
2. Wire the speakers to the Speakon® connectors as shown.

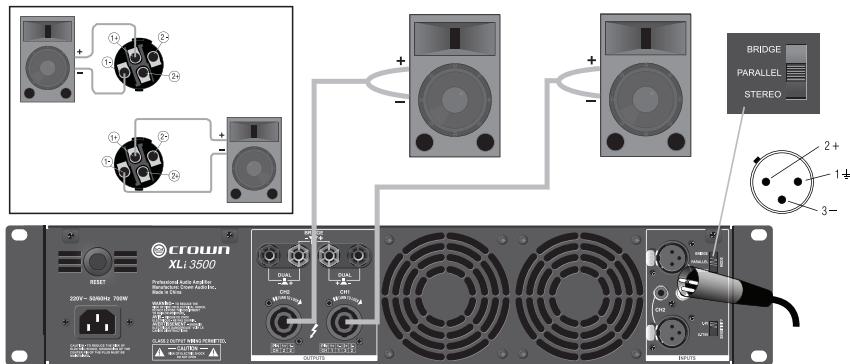

Parallel Wiring Using the Binding Post Connectors

With this wiring, a signal sent to one of the input connectors is paralleled to both channels so that it is reproduced by both speakers.

1. See Figure 8. On the back panel, set the Output Mode Switch to PARALLEL.
2. Wire the speakers to the binding post connectors as shown.

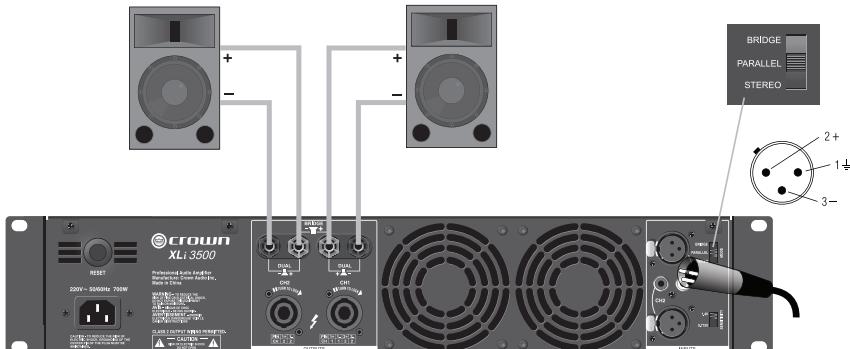

Specifications

Guaranteed Minimum Power	XLi 800	XLi 1500	XLi 2500	XLi 3500
1 kHz (EIA) with 0.5% THD				
4 ohm stereo (per channel)	300W	450W	750W	1350W
8 ohm stereo (per channel)	200W	330W	500W	1000W
8 ohm bridge mono	600W	900W	1500W	2700W
Performance				
Frequency Response (at 1 Watt)	20Hz - 20kHz, +0/-1dB			
Total Harmonic Distortion (THD)	< 0.5%, 20 Hz - 20 kHz			
Intermodulation Distortion (IMD) 60 Hz and 7 kHz at 4:1, from full rated output to -30 dB	= / < 0.35%			
Slew Rate	>10V/us			
Voltage Gain	29dB	31dB	33dB	36dB
Damping Factor (8 ohms), 10 Hz - 400 Hz	> 200			
Signal-to-Noise Ratio (below rated power, 20 Hz to 20 kHz, A-weighted)	> 100 dB			
Crosstalk (below rated power) At 1 kHz	-75 dB			
At 20 kHz	-59 dB			
Input Sensitivity for full rated power at 8 ohms	0.775V or 1.4V			
Input Impedance (nominal) Balanced	20 k ohms			
Unbalanced	10 k ohms			
Connectors, Controls and Indicators				
Input Connectors	One balanced XLR and one unbalanced RCA per channel			
Output Connectors (Speaker Connectors)	4-POLE Speakon® and one pair Binding Post per channel			
Front Panel Controls	Power on/off switch, one gain control per channel			
Rear Panel Controls	Output mode switch: stereo (dual), parallel or bridge Input sensitivity switch: 0.775V or 1.4V			
Power Indicator	One blue LED			
Signal Indicator	One green LED per channel			
Clip (peak) Indicator	One yellow LED per channel			
Fault Indicator	One red LED per channel			
Construction				
Protection	Protection against short circuits, no-load, on/off muting, RF interference. Stable into reactive or mismatched loads			
Ventilation	Flow-through ventilation from front to back			
Cooling	Internal heat sinks with forced air. Fan cooled, speed regulated, thermal protection			
Dimensions (W x H x D)	19" x 3.5" x 12.4" (482 mm x 89 mm x 315 mm)			19" x 3.5" x 14.4" (482 x 89 x 366 mm)
Net Weight	25.1 lb (11.4 kg)	28.0 lb (12.7 kg)	29.7 lb (13.5 kg)	43.0 lb (19.5 kg)
Shipping Weight	29.5 lb (13.4 kg)	32.4 lb (14.7 kg)	34.2 lb (15.5 kg)	47.4 lb (21.5 kg)

Warranty

SUMMARY OF WARRANTY

Crown International, 1718 West Mishawaka Road, Elkhart, Indiana 46517-4095 U.S.A. warrants to you, the ORIGINAL PURCHASER and ANY SUBSEQUENT OWNER of each NEW Crown product, for a period of one (1) year from the date of purchase by the original purchaser (the "warranty period") that the new Crown product is free of defects in materials and workmanship. We further warrant the new Crown product regardless of the reason for failure, except as excluded in this Warranty.

**Warranty is only valid within the United States of America. For information on Warranty outside of the U.S.A, please contact your local distributor.*

ITEMS EXCLUDED FROM THIS CROWN WARRANTY

This Crown Warranty is in effect only for failure of a new Crown product which occurred within the Warranty Period. It does not cover any product which has been damaged because of any intentional misuse, accident, negligence, or loss which is covered under any of your insurance contracts. This Crown Warranty also does not extend to the new Crown product if the serial number has been defaced, altered, or removed.

WHAT THE WARRANTOR WILL DO

We will remedy any defect, regardless of the reason for failure (except as excluded), by repair, replacement, or refund. We may not elect refund unless you agree, or unless we are unable to provide replacement, and repair is not practical or cannot be timely made. If a refund is elected, then you must make the defective or malfunctioning product available to us free and clear of all liens or other encumbrances. The refund will be equal to the actual purchase price, not including interest, insurance, closing costs, and other finance charges less a reasonable depreciation on the product from the date of original purchase. Warranty work can only be performed at our authorized service centers or at the factory. Warranty work for some products can only be performed at our factory. We will remedy the defect and ship the product from the service center or our factory within a reasonable time after receipt of the defective product at our authorized service center or our factory. All expenses in remedying the defect, including surface shipping costs in the United States, will be borne by us. (You must bear the expense of shipping the product between any foreign country and the port of entry in the United States including the return shipment, and all taxes, duties, and other customs fees for such foreign shipments.)

HOW TO OBTAIN WARRANTY SERVICE

You must notify us of your need for warranty service within the warranty period. All components must be shipped in a factory pack, which, if needed, may be obtained from us free of charge. Corrective action will be taken within a reasonable time of the date of receipt of the defective product by us or our authorized service center. If the repairs made by us or our authorized service center are not satisfactory, notify us or our authorized service center immediately.

DISCLAIMER OF CONSEQUENTIAL AND INCIDENTAL DAMAGES

YOU ARE NOT ENTITLED TO RECOVER FROM US ANY INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN THE NEW CROWN PRODUCT. THIS INCLUDES ANY DAMAGE TO ANOTHER PRODUCT OR PRODUCTS RESULTING FROM SUCH A DEFECT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY ALTERATIONS

No person has the authority to enlarge, amend, or modify this Crown Warranty. This Crown Warranty is not extended by the length of time which you are deprived of the use of the new Crown product. Repairs and replacement parts provided under the terms of this Crown Warranty shall carry only the unexpired portion of this Crown Warranty.

DESIGN CHANGES

We reserve the right to change the design of any product from time to time without notice and with no obligation to make corresponding changes in products previously manufactured.

LEGAL REMEDIES OF PURCHASER

THIS CROWN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. No action to enforce this Crown Warranty shall be commenced after expiration of the warranty period.

THIS STATEMENT OF WARRANTY SUPERSEDES ANY OTHERS CONTAINED IN THIS MANUAL FOR CROWN PRODUCTS. 07/12

