Microprocessor Systems Lab 4: Analog Conversion & MAC

Nick Choi

Samuel Deslandes

10/31/16

1 Introduction

2 Methods

2.1 Software

The code for parts 1, 2 and 3 can be found in the appendix below. All code was uploaded and run on the 8051 through the programming/debugging USB port.

2.1.1 Part 1

The purpose of this program is to create a digital voltmeter using the analog to digital converter (ADC) on the 8051. When the pushbutton is pressed, an A-D conversion begins, and the result is used to calculate a voltage which is then displayed on the terminal.

Configurations for the ADC can be found in the REFOCN, ADC0CF, and ADC0CN registers, as well as the AMX0SL and AMX0CF registers for selecting the mode of operation of the analog input pins and which pins are selected for use. In the REF0CN SFR, bit1 enables the bias generator; this must be enabled. Bit0 of this SFR enables the internal reference buffer, which sets VREF0 to 2.4V. When using an external voltage source as a reference, this bit should be disabled. For this section the internal voltage reference was used. For the purposes of this lab, only one analog input operating in single-ended mode was needed, therefore the AMX0SL and AMX0CF registers did not require any modification; using the reset values of these SFRs results in AIN0.0 selected with the desired mode of operation. The ADC0CF SFR, sets the gain for the input voltage (AIN0.0) and the sampling rate for conversion process. The sampling rate can be calculated as a function of SYSCLK and the value loaded into AD0SC (bit3-bit7 of this SFR) using the following equation:

$$AD0SC = \frac{SYSCLK}{2 \times CLK_{SAR0}} - 1$$

where CLK_{SAR0} is the sampling rate.

Bits0-2 of this SFR are used to set the gain. For this lab a gain of 1 was used with AD0SC set to 23, resulting in a sampling rate of approximately 1MHz. Lastly ADC0 must be enabled via bt7 of the ADC0CN, which is also bit addressable as AD0EN.

For starting conversions, the pushbutton was connected as an external interrupt source as was previously done in lab 2. To do this, /INT0 must be routed to a port pin (P0.2 in this case) via the crossbar (XBR1) and external interrupts must be enabled. This can be done by setting the EA and EX0 bit addresses. Because only one conversion per button press was desired, /INT0 was set to be triggered on a negative falling edge by setting the IT0 bit address.

UART0 was also used to display the output onto the terminal, which is enabled in the XBR0 SFR. For configuring the ports, TX (P0.0) must be configured for push-pull, and RX (P0.1) and /INT0 (P0.2) must be set for open-drain with high impedance. This can be set in the P0MDOUT and P0 SFRs.

The code for this section follows a simple routine in which the program waits for a flag set by the /INT0 ISR to go high, then starts a conversion, and uses the result to calculate

a voltage which is then printed to the terminal along with various statistics. Before starting the A-D conversion the conversion complete interrupt flag (AD0INT) must be cleared; As its name implies this bit is set by the hardware once the conversion is complete. To begin the conversion, set the AD0BUSY, then wait for the conversion to be completed by polling AD0INT. At this point the result of the conversion can be obtained by reading the 16bit SFR ADC0. The result of the conversion is the ratio of the input voltage between 0 and VREF0 mapped to a value between 0 and 4095. The result can be converted back into a voltage using the following equation:

$$V_{in} = \frac{ADC0}{4096} \times VREF0$$
where $VREF0 = 2.4V$

In order to display the max, min, and average voltage over the past 16 samples each value is stored in an array of integers of size 16. When the array is filled, using modular arithmetic the oldest entry in the array is updated with the newest sample. Using this array the max, min, and average can easily be calculated by traversing the array. Once these statistics have been calculated, the voltage values are displayed in decimal form, along with the raw result of the conversion displayed in hex.

2.1.2 Part 2

The program for this section follows a simple routine in which the result of an A-D conversion is sent directly to the DAC to be converted back to an analog signal.

The initialization for the ADC was similar to the previous section, the only difference being that VREF0 is now defined by an external voltage source. To do this bit0 of the REF0CN register must be cleared. Once REF0CN is configured, the only initialization necessary for DAC0 is setting bit7 of the DAC0CN register; this enables the DAC0 output pin.

The routine for this program continuously performs A-D conversions, outputting the result to the DAC by loading it into the 16bit SRF "DAC0".

2.1.3 Part 3

The code for this section follows a similar procedure to that of the previous section, while introducing the MAC to implement a digital filter. As was done previously, an analog input is read in using the ADC, the result is passed through the filter, and the filtered result was then output through the DAC.

The filter used can be described by the difference equation:

```
y(k) = 0.31250000x(k) + 0.31250000x(k-2) + 0.24038462x(k-1) + 0.29687500y(k-1) where y(k) is the current output y(k-1) is the previous output x(k) is the current sample x(k-1) is the previous sample and x(k-2) is the sample before the privous sample
```

After the analog input was read in through the ADC, the variables storing the previous sample values were updated, and an offset value was subtracted form current sample. This was needed because the function generator input was set to a 3Vpp wave with a 1.5V offset, such that the wave ranged from 0-3V.

Next, the accumulator was cleared, and the MAC set to operate in integer multiply-accumulate mode. This can be set in the MAC0CF SFR. At this point values can be loaded into the MAC. Since the MAC was operating in integer mode, the coefficients were multiplied by a large constant (2^{10}) ; The final result was normalized in the accumulator via right bit-shift operations once the calculations were complete.

First, the MAC0A register was loaded with the decimal value 320 (0.3125 \times 2¹⁰), then MAC0BH loaded with the high 8 bits of the current sample and MAC0BL with the lower 8 bits of the current sample. This represented the 0.31250000x(k) portion of the above difference equation. Next, MAC0BH and MAC0BL were similarly loaded with the sample before the previous sample, representing the 0.31250000x(k-1) portion of the equation. After this, MAC0A was loaded with the decimal value $246~(\approx 0.24038462\times 2^{10})$, and MAC0BH and MAC0BL with the previous sample, representing 0.24038462x(k-1). Lastly, MAC0A was loaded with the 304 (0.296875 \times 2¹⁰), and MAC0BH and MAC0BL with the previous output, representing the final part of the equation 0.29687500y(k-1). These products are summed in the accumulator and as mentioned before, were normalized by performing 10 right bit-shit operations. This was accomplished using a for loop and setting the "MAC0CF" register to 0x30, which executes a single shift of the value in the accumulator to the right.

Values are stored in the accumulator using 5 8bit registers, "MAC0ACC0" - "MAC0ACC3" and an overflow register "MAC0OVR". After the bit-shift operations, the desired result can be found in registers "MAC0ACC0" and "MAC0ACC1". The values in these registers were compiled into a single 16bit variable and the offset originally subtracted from the current sample is added back in. This final result is then output to DAC0.

2.2 Hardware

The hardware for section 1 involved using the potentiometer module to vary the voltage input the ADIN0.0 for the A-D conversions. Rather than using the pins on the 60pin bus, the Analog I/O terminal block (J20) was used. A schematic for this can be viewed in the appendix below. The output of the potentiometer was connected to pin 5 on the terminal block (AIN0.0), and pin 8 (ADNG) was connected to a common ground on the board.

Section 2 called for the use of a function generator and an oscilloscope, as well as an external voltage source for VREF0. The 3V reference voltage was generated using the potentiometer module, and was connected to pin 7 on the terminal block (VREF0). The function generator was set to generate a 3Vpp sinusoidal wave with 1.5V offset. This was connected to AIN0.0 on the terminal block (pin 5) using a banana cable. The output from DAC0 (pin 3 on the terminal block) was connected to the oscilloscope also using a banana cable. As was done before, AGND was connect to a universal ground. A schematic for this can be viewed in the appendix section below.

The hardware for section 3 was identical to that of the previous section.

3 Results

4 Conclusion

5 Appendices

5.1 Analog I/O Terminal block

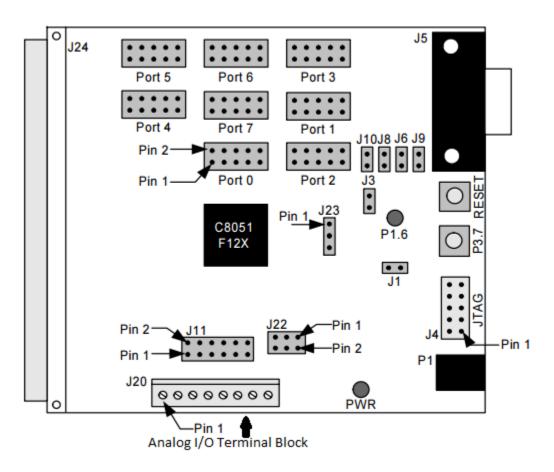


Figure 1: C8051F120 Targer Board layout

Pin#	Description
1	CP0+
2	CP0-
3	DAC0
4	DAC1
5	AIN0.0
6	AIN0.1
7	VREF0
8	AGND (Analog Ground)

Table 1: J20 Terminal Block reference table

5.2 Modified putget.h

```
putget.h
// Title:
                          Microcontroller Development: putchar() & getchar() functions.
// Author:
// Date Created:
                          03.25.2006
// Date Last Modified:
                          03.25.2006
// Description:
                          \verb|http://chaokhun.kmitl.ac.th/~kswichit/easy1/easy1_3.htm||
                          C8051F120
// Target:
// Tool Chain:
                         KEIL C51
   putchar()
void putchar (char c)
    while (!TIO);
    TI0=0;
    SBUF0 = c;
}
   getchar()
char getchar (void)
    char c;
    while (!RIO);
    RI0 = 0;
    c = SBUF0;
// Echoing the get character back to the terminal is not normally part of getchar()
      putchar(c);
                      // echo to terminal
    return SBUF0;
}
```

5.3 Part 1

5.3.1 Circuit Schematic for section 1

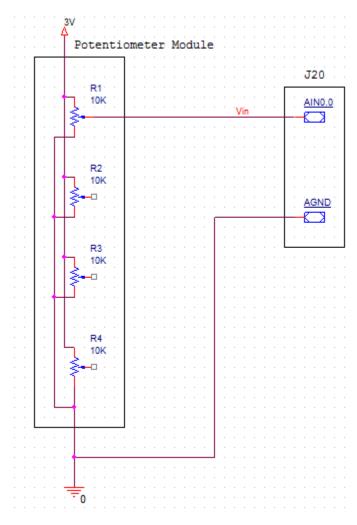


Figure 2: Circuit schematic for part 1

5.3.2 Code for part 1

```
// Nick Choi and Sam Deslandes
// Code for section 1 of Lab 4.
// This program acts as a digital voltmeter using the ADC, displaying the voltage in decimal
     and hex to the terminal.
// Includes
#include <c8051f120.h>
#include <stdio.h>
#include "putget.h"
// Global Constants
                                         // External oscillator frequency in Hz
#define EXTCLK
                    22118400
#define SYSCLK
                    49766400
                                         // Output of PLL derived from (EXTCLK * 9/4)
#define BAUDRATE
                    115200
                                         // UART baud rate in bps
char butpress = 0;
// Function Prototypes
void main(void);
void SYSCLK_INIT(void);
void PORT_INIT(void);
void UART0_INIT(void);
void ADC0_INIT(void);
void display(int* start, char div);
void BUTPRESS_ISR(void) __interrupt 0;
// MAIN Routine
void main (void)
    int ADCdata;
  int dataArray [16] = \{0\};
  char num_entries = 0;
  char size = 0;
  int i;
   WDTCN = 0xDE;
                                         // Disable the watchdog timer
   WDTCN = 0xAD;
    PORT_INIT();
                                         // Initialize the Crossbar and GPIO
    SYSCLK_INIT();
                                         // Initialize the oscillator
    UARTO_INIT();
                                         // Initialize UARTO
  ADC0_INIT();
  SFRPAGE = LEGACY_PAGE;
                           // /INTO triggered on negative falling edge
  IT0 = 1;
 SFRPAGE = UARTO_PAGE;
                                       // Direct output to UARTO
    printf("\033[2J");
                                         // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\n\");
  while (1)
    {
        if (butpress) {
      but press = 0;
      //printf("button pressed\n\r");
      AD0INT = 0;
                           // Clear conversion interrupt flag
      AD0BUSY = 1;
                             // Start conversion
                             // Wait for conversion to end
      while (!AD0INT);
```

```
// Get result of conversion (using 16bit register)
     ADCdata = ADC0;
      printf_fast_f("Result: %.6f\t0x%x\n\r",(ADCdata/4096.)*2.43,ADCdata);
     dataArray[num_entries%16] = ADCdata;
     num_entries += 1;
      // algorithm for # of relevant entries in array (for averaging)
      size = num_entries;
      if (num_entries > 15){
       size = 16;
      display (dataArray, size);
}
void display(int* start, char div){
  float sum=0;
  char i;
  int min = 4095;
  int max = 0;
  for (i = 0; i < div; i++)
    // Get min value in array
    if(*(start+i) < min)
     min = *(start+i);
    // Get max value in array
   if(*(start+i) > max){
     \max = *(start+i);
    // Sum entries in array
   sum += *(start+i);
  printf_fast_f ("Average is %.6f\t0x%x\n\r",((sum/div)/4096.)*2.43, sum/div);
void BUTPRESS_ISR(void) __interrupt 0{
  butpress = 1;
  SYSCLK\_Init
// Initialize the system clock to use a 22.1184MHz crystal as its clock source
//
void SYSCLK_INIT(void)
    int i;
   char SFRPAGE_SAVE;
   SFRPAGE\_SAVE = SFRPAGE;
                                       // Save Current SFR page
   SFRPAGE = CONFIG_PAGE;
                                       // Start ext osc with 22.1184MHz crystal
   OSCXCN = 0x67;
   for (i=0; i < 256; i++);
                                       // Wait for the oscillator to start up
   while (!(OSCXCN \& 0x80));
   CLKSEL = 0x01;
   OSCICN = 0 \times 00;
```

```
SFRPAGE = CONFIG_PAGE;
    PLL0CN = 0x04;
    SFRPAGE = LEGACY_PAGE;
    FLSCL = 0 \times 10;
    SFRPAGE = CONFIG_PAGE;
    PLL0CN = 0 \times 01;
    PLL0DIV = 0x04;
    PLL0FLT = 0x01;
    PLLOMUL = 0 \times 09;
    \quad \text{for} \; (\; i = 0; \;\; i \; < \; 2 \, 5 \, 6; \;\; i + +); \\
    PLL0CN \mid = 0 \times 02;
    while (!(PLLOCN & 0x10));
    CLKSEL = 0 \times 02;
    SFRPAGE = SFRPAGE\_SAVE;
                                            // Restore SFR page
}
   PORT_Init
   Configure the Crossbar and GPIO ports
void PORT_INIT(void)
{
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                            // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
             = 0x04;
                                            // Enable UARTO
    XBR0
    XBR1
              = 0 \times 04;
                                 // /INTO routed to port pin
    XBR2
                                             // Enable Crossbar and weak pull-up
             = 0 \times 40;
    POMDOUT \mid = 0 \times 01;
                                             // Set TX0 on P0.0 pin to push-pull
  P0
                                      // Additionally, set P0.0=0, P0.1=1, and P0.2=1.
            = 0 \times 06;
  EA
                           // Enable global interrupts
                           // Enable external interrupts
  EX0
         = 1:
  SFRPAGE = SFRPAGE\_SAVE;
                                          // Restore SFR page
   UART0_Init
// Configure the UARTO using Timer1, for <baudrate> and 8-N-1
void UART0_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                             // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
    TMOD
           \&= ^{\circ}0 xF0;
                                             // Timer1, Mode 2, 8-bit reload
           = 0x20;
    TMOD
             = -(SYSCLK/BAUDRATE/16);
                                             // Set Timer1 reload baudrate value T1 Hi Byte
    TH1
    CKCON = 0 \times 10;
                                             // Timer1 uses SYSCLK as time base
            = TH1;
    TL1
    TR1
             = 1;
                                             // Start Timer1
    SFRPAGE = UARTO_PAGE;
                                             // Mode 1, 8-bit UART, enable RX
    SCON0 = 0 \times 50;
                                             // SMOD0 = 1
    SSTA0
            = 0 \times 10;
    TI0
             = 1;
                                             // Indicate TX0 ready
    SFRPAGE = SFRPAGE\_SAVE;
                                            // Restore SFR page
```

5.4 Schematic for parts 3 and 4

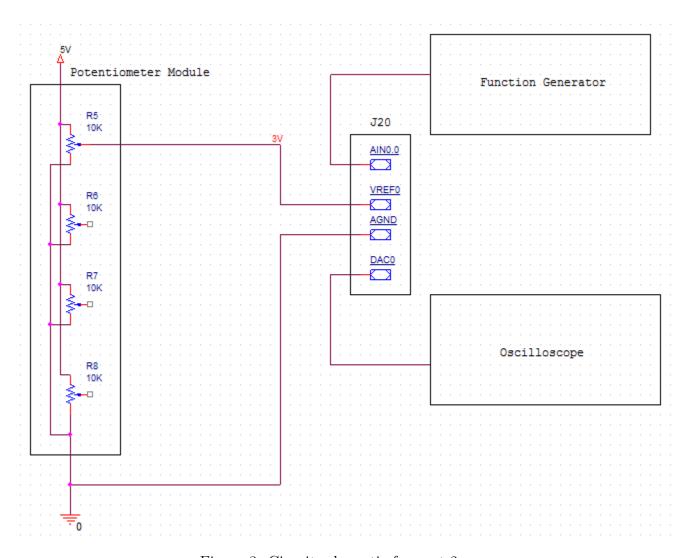


Figure 3: Circuit schematic for part 2

5.5 Part 3

5.5.1 Code for part 3

```
// Nick Choi and Sam Deslandes
// Code for section 3 of Lab 4.
// This program takes the conversions generated by ADC, and output them through DAC. The
    output mirrors the input.
// Includes
#include <c8051f120.h>
#include <stdio.h>
#include "putget.h"
// Global Constants
#define EXTCLK
                    22118400
                                         // External oscillator frequency in Hz
                                         // Output of PLL derived from (EXTCLK * 9/4)
#define SYSCLK
                    49766400
                                         // UART baud rate in bps
#define BAUDRATE
                    115200
char butpress = 0;
// Function Prototypes
void main(void);
void SYSCLK_INIT(void);
void PORT_INIT(void);
void UART0_INIT(void);
void ADC0_INIT(void);
void DAC0_INIT(void);
// MAIN Routine
void main (void)
   WDTCN = 0xDE;
                                         // Disable the watchdog timer
   WDTCN = 0xAD;
    PORT_INIT();
                                         // Initialize the Crossbar and GPIO
                                         // Initialize the oscillator
    SYSCLK_INIT();
    UARTO_INIT();
                                         // Initialize UARTO
  ADC0_INIT();
  DACO_INIT();
  SFRPAGE = UARTO_PAGE;
                                       // Direct output to UARTO
    printf("\033[2J");
                                         // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\n\r");
  while (1)
    {
        AD0INT = 0;
                            // Clear conversion interrupt flag
    AD0BUSY = 1;
                          // Start conversion
                          // Wait for conversion to end
    while (!AD0INT);
    DAC0 = ADC0;
                        // Get data form conversion and output directly to DAC
// SYSCLK_Init
   Initialize the system clock to use a 22.1184MHz crystal as its clock source
```

```
void SYSCLK_INIT(void)
    int i;
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                            // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
    OSCXCN = 0x67;
                                             // Start ext osc with 22.1184MHz crystal
    for (i=0; i < 256; i++);
                                            // Wait for the oscillator to start up
    while (!(OSCXCN & 0x80));
    CLKSEL = 0 \times 01;
OSCICN = 0 \times 00;
    SFRPAGE = CONFIG_PAGE;
    PLL0CN = 0 \times 04;
    SFRPAGE = LEGACY_PAGE;
    FLSCL = 0x10;
    SFRPAGE = CONFIG_PAGE;
    PLL0CN \mid = 0 \times 01;
    PLL0DIV \ = \ 0\,x04\ ;
    PLL0FLT = 0x01;
    PLLOMUL = 0x09;
    for (i=0; i < 256; i++);
    PLL0CN = 0 \times 02;
    while (!(PLL0CN & 0x10));
    CLKSEL = 0 \times 02;
    SFRPAGE = SFRPAGE\_SAVE;
                                           // Restore SFR page
}
  PORT_Init
// Configure the Crossbar and GPIO ports
void PORT_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                            // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
                                            // Enable UARTO
    XBR0
             = 0 \times 04;
                                 // /INTO routed to port pin
    XBR1
              = 0 \times 04;
    XBR2
              = 0x40;
                                            // Enable Crossbar and weak pull-up
                                             // Set TX0 on P0.0 pin to push-pull
    POMDOUT \mid = 0x01;
            = 0 \times 02;
                                      // Additionally, set P0.0=0, P0.1=1
 SFRPAGE = SFRPAGE\_SAVE;
                                          // Restore SFR page
// UART0_Init
// Configure the UARTO using Timer1, for <baudrate> and 8-N-1
//
void UARTO_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE.SAVE = SFRPAGE;
                                            // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
   T\!M\!O\!D \quad \&= \ \tilde{\ } 0\,xF0\,;
    TMOD = 0x20;
                                            // Timer1, Mode 2, 8-bit reload
```

```
// Set Timer1 reload baudrate value T1 Hi Byte
            = -(SYSCLK/BAUDRATE/16);
    CKCON = 0 \times 10;
                                          // Timer1 uses SYSCLK as time base
    TL1
           = TH1;
    TR1
            = 1;
                                          // Start Timer1
    SFRPAGE = UARTO_PAGE;
                                          // Mode 1, 8-bit UART, enable RX
    SCON0 = 0x50;
                                          // SMOD0 = 1
    SSTA0
           = 0x10;
                                          // Indicate TX0 ready
    TI0
            = 1:
   SFRPAGE = SFRPAGE\_SAVE;
                                          // Restore SFR page
}
   ADC0_Init
void ADC0_INIT(void){
  char SFRPAGE.SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
 SFRPAGE = ADC0\_PAGE;
                                   //\ \mathrm{turn} on internal ref buffer and bias generator, \mathrm{vref0}
  REF0CN \mid = 0 \times 02;
     is ref voltage
  ADC0CF = 0xB8;
                             // AD0SC = 23 for SARclk of 1Mhz, Gain = 1
 AD0EN = 1;
                           // enable ADC0
    SFRPAGE = SFRPAGE\_SAVE;
                                         // Restore SFR page
}
void DAC0_INIT(void){
  char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
 SFRPAGE = DACO\_PAGE;
  REF0CN \mid = 0 \times 02;
                                  // turn on bias generator, but not internal reference
      buffer. vref comes from external source
 DACOCN = 0x80;
                            // enable DAC0
    SFRPAGE = SFRPAGE\_SAVE;
                                         // Restore SFR page
}
       Part 4
5.6
5.6.1 Code for part 4
// Nick Choi and Sam Deslandes
// Code for section 4 of Lab 4.
// This program utilizes the MAC to filter a signal received through the ADC, then sends the
     filtered signal out through the DAC.
// The digital filter acts as a notch filter, in whihch at a certain frequency the frequency
    response goes to zero.
```

Includes #include <c8051f120.h> #include <stdio.h> #include "putget.h" // Global Constants #define EXTCLK // External oscillator frequency in Hz 22118400 // Output of PLL derived from (EXTCLK * 9/4) #define SYSCLK 49766400 // UART baud rate in bps #define BAUDRATE 115200 #define OFFSET 1502 // Offset value = (Offset voltage/Vref) *4069

```
Function Prototypes
void main(void);
void SYSCLK_INIT(void);
void PORT_INIT(void);
void UART0_INIT(void);
void ADC0_INIT(void);
void DAC0_INIT(void);
void ADC_read(void);
// MAIN Routine
void main (void)
 char i;
 signed int curr\_ADC = 0;
 signed int past_ADC = 0;
 signed int pastest_ADC = 0;
 signed int past_DAC = 0;
 signed int result;
   WDTCN = 0xDE;
                                         // Disable the watchdog timer
   WDTCN = 0xAD;
   PORT_INIT();
                                         // Initialize the Crossbar and GPIO
   SYSCLK_INIT();
                                         // Initialize the oscillator
   UARTO_INIT();
                                         // Initialize UARTO
 ADC0_INIT();
 DACO_INIT();
 SFRPAGE = UARTO_PAGE;
                                       // Direct output to UARTO
    printf("\033[2J");
                                         // Erase screen & move cursor to home position
    printf("Test of the printf() function.\n\n\r");
  while (1)
   SFRPAGE = ADCO\_PAGE;
   ADC_read();
                              // start new conversion
   pastest\_ADC = past\_ADC;
                                // update previous inputs
   past_ADC = curr_ADC;
   curr\_ADC = ADC0;
                            // get new sample
   SFRPAGE = MAC0\_PAGE;
   MAC0CF = 0x08;
                            // clear accumulator, integer mode, multiply and accumulate
   curr_ADC -= OFFSET;
                                 // subtract 1.5V offset
                          // .3125*2^10 (scaled integer)
   MAC0A = 320;
   MACOBH = curr\_ADC >> 8;
                              // load MACOB with current sample (k)
   MACOBL = curr\_ADC;
   MACOBH = pastest\_ADC >> 8;
                                // load MACOB with 2nd previous sample (k-2)
   MACOBL = pastest\_ADC;
                                     // .24038462*2^10 (scaled integer)
   MAC0A = 246;
   MACOBH = past\_ADC >> 8;
                              // load MACOB with previous sample (k-1)
   MACOBL = past\_ADC;
   MAC0A = 304;
                         // load MACOA with .296875*2^10 (scaled integer)
```

```
MACOBH = past_DAC >> 8;
                                // load MACOB with previous output (k-1)
    MACOBL = past_DAC;
    SFRPAGE = MACO.PAGE;
                                 // shift right 10 times
    for (i=0; i<10; i++)
     MACOCF = 0x30;
    SFRPAGE = MACO\_PAGE;
                                 // dummy op, then get results
    result = MACOACC1<<8 | MACOACC0;
    result += OFFSET;
                                          // add back in 1.5V offset
    SFRPAGE = DACO\_PAGE;
                               // output result to DAC
    DAC0 = result;
                               // update previous output
    past_DAC = DAC0;
  }
}
void ADC_read(void){
                        // Clear conversion interrupt flag
  AD0INT = 0;
  AD0BUSY = 1;
                          // Start conversion
  while (!AD0INT);
                          // Wait for conversion to end
  SYSCLK_Init
// Initialize the system clock to use a 22.1184MHz crystal as its clock source
void SYSCLK_INIT(void)
    int i;
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                            // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
                                            // Start ext osc with 22.1184MHz crystal
    OSCXCN = 0x67;
    for (i=0; i < 256; i++);
                                            // Wait for the oscillator to start up
    while (!(OSCXCN \& 0x80));
    \begin{array}{ll} \text{CLKSEL} &=& 0 \times 01 \; ; \\ \text{OSCICN} &=& 0 \times 00 \; ; \end{array}
    SFRPAGE = CONFIG_PAGE;
    PLL0CN = 0x04;
    SFRPAGE = LEGACY_PAGE;
    FLSCL = 0x10;
    SFRPAGE = CONFIG_PAGE;
    PLLOCN = 0x01;
    PLL0DIV = 0x04;
    PLL0FLT = 0x01;
    PLLOMUL = 0x09;
    for (i=0; i < 256; i++);
    PLL0CN = 0 \times 02;
    while (!(PLL0CN & 0x10));
    CLKSEL = 0x02;
    SFRPAGE = SFRPAGE\_SAVE;
                                            // Restore SFR page
}
   PORT_Init
```

```
Configure the Crossbar and GPIO ports
void PORT_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
                                          // Save Current SFR page
    SFRPAGE = CONFIG_PAGE;
                                          // Enable UARTO
    XBR0
             = 0 \times 04;
                                // /INTO routed to port pin
    XBR1
             = 0 \times 04;
                                          // Enable Crossbar and weak pull-up
    XBR2
             = 0x40;
                                           // Set TX0 on P0.0 pin to push-pull
   POMDOUT \mid = 0 \times 01;
           = 0 \times 02;
                                    // Additionally, set P0.0=0, P0.1=1
 SFRPAGE = SFRPAGE\_SAVE;
                                        // Restore SFR page
   UART0_Init
// Configure the UARTO using Timer1, for <baudrate> and 8-N-1
void UARTO_INIT(void)
    char SFRPAGE_SAVE;
    SFRPAGE.SAVE = SFRPAGE;
                                           // Save Current SFR page
    SFRPAGE = TIMER01\_PAGE;
   TMOD &= ^{\circ}0 \times F0;
          = 0x20;
                                           // Timer1, Mode 2, 8-bit reload
   TMOD
            = -(SYSCLK/BAUDRATE/16);
                                           // Set Timer1 reload baudrate value T1 Hi Byte
    TH1
    CKCON = 0 \times 10;
                                           // Timer1 uses SYSCLK as time base
    TL1
            = TH1;
    TR1
            = 1;
                                           // Start Timer1
    SFRPAGE = UARTO_PAGE;
                                           // Mode 1, 8-bit UART, enable RX
    SCON0 = 0 \times 50;
                                           // SMOD0 = 1
// Indicate TX0 ready
    SSTA0
            = 0x10;
    TI0
            = 1:
   SFRPAGE = SFRPAGE\_SAVE;
                                           // Restore SFR page
}
void ADC0_INIT(void){
  char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
 SFRPAGE = ADC0\_PAGE;
  REF0CN \mid = 0x02;
                                    // turn on internal ref buffer and bias generator, vref0
      is ref voltage
  ADC0CF = 0xB8;
                              // AD0SC = 23 for SARclk of 1Mhz, Gain = 1
 AD0EN = 1;
                            // enable ADC0
    SFRPAGE = SFRPAGE\_SAVE;
                                          // Restore SFR page
}
void DAC0_INIT(void){
  char SFRPAGE_SAVE;
    SFRPAGE\_SAVE = SFRPAGE;
 SFRPAGE = DACO\_PAGE;
```

6 References

"MPS Lab 4," in RPI ECSE Department, 2016. [Online]. Available: http://www.rpi.edu/dept/ecse/mps/MPS_Lab_Ex4-ADC.pdf. Accessed: Oct. 30, 2016.

"C8051 Manual," in RPI ECSE Department, 1.4 ed., 2005. [Online]. Available: https://www.ecse.rpi.edu/courses/CStudio/Silabs/C8051F12x-13x.pdf. Accessed: Oct. 30, 2016.

"C8051F12x Development Kit User's Guide," in RPI ECSE Department, Rev. 0.6, May 2005. [Online]. Available: https://www.ecse.rpi.edu/courses/CStudio/Silabs/C8051F12x-DK.pdf. Accessed: Oct. 30, 2016.