

EXTENSION CORDS AND CABLE MANAGEMENT

Prevent shock, fire, crushing, water-contact and trip hazards in temporary power systems through correct distribution, GFCI/RCD

PURPOSE AND SCOPE

Prevent shock, fire, crushing, water-contact and trip hazards in temporary power systems through correct distribution, GFCI/RCD protection, suitable cords and safe routing.

KEY HAZARDS

1  ELECTRIC SHOCK	2  DAMAGED INSULATION	3  WATER	4  OVERLOAD
5  CRUSHING	6  TRIP	7  IMPROVISED JOINT	8  CABLE REEL

CRITICAL VALUES TO VERIFY IN THE FIELD

100% GFCI/RCD-protected temporary supply	0 Taped splice, exposed conductor or wet connection	Fully unwound Cable reel while loaded
---	--	--



REMEMBER - SERNEM

S

Stop and think

E

Evaluate the risk

R

Remove or reduce

N

Never assume

E

Ensure protection

M

Monitor and communicate

EXTENSION CORDS AND CABLE MANAGEMENT

Prevent shock, fire, crushing, water-contact and trip hazards in temporary power systems through correct distribution, GFCI/RCD

STANDARDS AND FIELD REQUIREMENTS

OSHA 1926.404 and 1926.405 establish GFCI/protection-program, suitable flexible-cord, mechanical-protection and strain-relief requirements for temporary circuits.

OSHA 1926.404(b)(1)

GROUND-FAULT PROTECTION

Use GFCI protection or an assured equipment-grounding program for construction receptacles.

OSHA 1926.405(a)(2)

TEMPORARY WIRING

Use temporary wiring only for permitted duration and purpose; protect it from physical damage, sharp edges and doorways.

OSHA 1926.405(g)

FLEXIBLE CORDS

Do not substitute flexible cord for fixed wiring, lift/pull by it or use unapproved splices; provide strain relief.

ÜRETİCİ TALİMATI

LOAD AND REEL

Verify cord size, current, length, IP rating and reel-unwinding requirements under load.


MINIMUM EVIDENCE BEFORE START

- ☐ Temporary-power plan
- ☐ GFCI/RCD test record
- ☐ Load and cord-size calculation
- ☐ Board and protection inspection
- ☐ Cord inventory / inspection tag
- ☐ Cable-route inspection

SUPERVISOR DISCUSSION POINTS

- Which GFCI/RCD protects this circuit?
- Where could the cord be damaged?
- Why must the reel be fully unwound?

PROTECTED TEMPORARY BOARD AND SAFE CABLE ROUTE

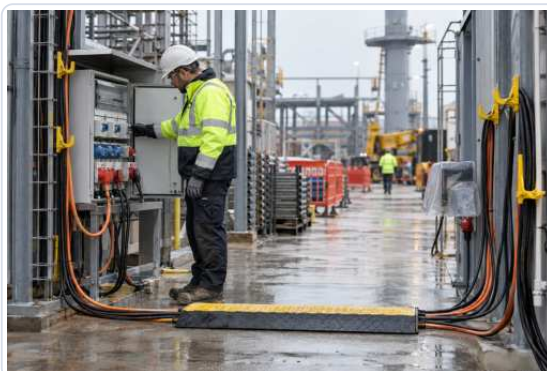

GFCI/RCD - Outdoor cord - Dry plug - Hooks - Cable ramp - Inspection

EXTENSION CORDS AND CABLE MANAGEMENT

Prevent shock, fire, crushing, water-contact and trip hazards in temporary power systems through correct distribution, GFCI/RCD

CRITICAL CONTROL MEASURES (HIERARCHY OF CONTROLS)

1. USE FIXED OR BATTERY POWER

Reduce temporary-cord use with fixed supplies or battery tools where practicable.

2. USE PROTECTED DISTRIBUTION

Use an authorized distribution board, correct protection, GFCI/RCD and suitable current capacity.

3. ELEVATE OR COVER CABLES

Route cords overhead or through suitable ramps at crossings; keep clear of water and sharp edges.

4. INSPECT, TEST AND KEEP CONNECTIONS DRY

Inspect plug, insulation and grounding before use; unwind reels and keep connections dry.

CRITICAL WARNING



Do not use taped, crushed, conductor-exposed or wet-connected cords. Isolate power, tag and remove from service.

SITE CHECKLIST (BEFORE STARTING WORK)

- | | |
|---|---|
| ☐ Board authorized | ☐ GFCI/RCD tested |
| ☐ Cord outdoor-rated | ☐ Plug and socket sound |
| ☐ Insulation intact | ☐ Reel fully unwound |
| ☐ Connections dry | ☐ Crossing ramped / elevated |
| ☐ No overload | |



EXTENSION CORDS AND CABLE MANAGEMENT

Prevent shock, fire, crushing, water-contact and trip hazards in temporary power systems through correct distribution, GFCI/RCD

ATTENDANCE AND APPROVAL

Project / Site: _____ Date: _____

Presented by: _____ Work area: _____

No	Full Name	Company / Role	Signature
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			