# **BSIM4.6.0 MOSFET Model**

# - User's Manual

Mohan V. Dunga, Xuemei (Jane) Xi, Jin He, Weidong Liu, Kanyu M. Cao, Xiaodong Jin, Jeff J. Ou, Mansun Chan,

Ali M. Niknejad, Chenming Hu

Department of Electrical Engineering and Computer Sciences
University of California, Berkeley, CA 94720

Copyright © 2006

The Regents of the University of California

All Rights Reserved

# **Developers:**

#### **BSIM4.6.0 Developers:**

- Professor Chenming Hu (**project director**), UC Berkeley
- Professor Ali M. Niknejad(project director), UC Berkeley
- Mohan V. Dunga, UC Berkeley

# **Developers of BSIM4 Previous Versions:**

- Dr. Weidong Liu, Synopsys
- Dr. Xiaodong Jin, Marvell
- Dr. Kanyu (Mark) Cao, UC Berkeley
- Dr. Jeff J. Ou, Intel
- Dr. Jin He, UC Berkeley
- Dr. Xuemei (Jane) Xi, UC Berkeley
- Mohan V. Dunga, UC Berkeley
- Professor Chenming Hu, UC Berkeley

#### **Web Sites:**

BSIM4 web site with BSIM source code and documents:

http://www-device.eecs.berkeley.edu/bsim3/~bsim4.html

Compact Model Council: http://www.eigroup.org/~CMC

#### **Technical Support:**

Mohan V. Dunga: dunga@eecs.berkeley.edu

#### **Acknowledgement:**

The development of BSIM4.6.0 benefited from the input of many BSIM users, especially the Compact Model Council (CMC) member companies. The developers would like to thank Keith Green, Tom Vrotsos, Suhail Murtaza, David Zweidinger, Britt Brooks and Doug Weiser at TI, Joe Watts and Richard Q Williams at IBM, Yu-Tai Chia, Ke-Wei Su, Chung-Kai Chung, and Y-M Sheu at TSMC, Rainer Thoma, Ivan To, Young-Bog Park and Colin McAndrew at Motorola, Paul Humphries, Geoffrey J. Coram and Andre Martinez at Analog Devices, Andre Juge and Gilles Gouget at STmicroelectronics, Mishel Matloubian at Mindspeed, Judy An at AMD, Bernd Lemaitre, Joachim Assenmacher, Laurens Weiss and Peter Klein at Infinion, Ping-Chin Yeh and Dick Dowell at HP, Shiuh-Wuu Lee, Wei-Kai Shih, Paul Packan, Siyakumar P Mudanai and Rafael Rio at Intel, Xiaodong Jin at Marvell, Weidong Liu at Synopsys, Marek Mierzwinski at Tiburon-DA, Jean-Paul MALZAC at Silvaco, Min-Chie Jeng, Ping Chen, Jushan Xie, and Zhihong Liu at Cadence, Mohamed Selim and Ahmed Ramadan at Mentor Graphics, Peter Lee, Kazunori Onozawa at Renesas, Toshiyuki Saito and Shigetaka Kumashiro at NEC, Richard Taylor at NSC, for their valuable assistance in identifying the desirable modifications and testing of the new model.

The BSIM project is partially supported by SRC and CMC.

# **Table of Contents**

Chapter 1:	Effective Oxide Thickness, Channel Length and		
	Channel Width 1-1		
1.1 Gate Dielectric Model 1-	1		
1.2 Poly-Silicon Gate Depletio	n 1-2		
1.3 Effective Channel Length a	and Width 1-5		
Chapter 2:	Threshold Voltage Model 2-1		
2.1 Long-Channel Model With	Uniform Doping 2-1		
2.2 Non-Uniform Vertical Dop	ing 2-2		
2.3 Non-Uniform Lateral Dopi	ng: Pocket (Halo) Implant 2-5		
2.4 Short-Channel and DIBL E	effects 2-6		
2.5 Narrow-Width Effect 2-9			
Chapter 3:	Channel Charge and Subthreshold Swing Models 3-		
3.1 Channel Charge Model 3	-1		
3.2 Subthreshold Swing <i>n</i> 3-5	5		
Chapter 4:	Gate Direct Tunneling Current Model 4-1		
4.1 Model selectors 4-2			
4.2 Voltage Across Oxide Vox	4-2		
4.3 Equations for Tunneling Co	urrents 4-3		
Chapter 5:	Drain Current Model 5-1		
5.1 Bulk Charge Effect 5-1			
5.2Unified Mobility Model 5	-2		
5.3Asymmetric and Bias-Depe	ndent Source/Drain Resistance Model 5-4		
5.4 Drain Current for Triode R	egion 5-5		
5.5 Velocity Saturation 5-7			
5.6Saturation Voltage <i>Vdsat</i>	5-8		
5.7Saturation-Region Output C	Conductance Model 5-10		
5 8Single-Equation Channel C	urrent Model 5-16		

5.9 New Current Saturation Mechanisms: Velocity Overshoot and Source End Velocity Limit Model 5-17

#### Chapter 6: Body Current Models 6-1

- 6.1 *Iii* Model 6-1
- 6.2 IGIDL Model 6-2

#### Chapter 7: Capacitance Model 7-1

- 7.1 General Description 7-1
- 7.2Methodology for Intrinsic Capacitance Modeling 7-3
- 7.3Charge-Thickness Capacitance Model (CTM) 7-9
- 7.4Intrinsic Capacitance Model Equations 7-13
- 7.5Fringing/Overlap Capacitance Models 7-19

#### Chapter 8: High-Speed/RF Modelsm 8-1

- 8.1Charge-Deficit Non-Quasi-Static (NQS) Model 8-1
- 8.2Gate Electrode Electrode and Intrinsic-Input Resistance (IIR) Model 8-6
- 8.3Substrate Resistance Network 8-8

#### Chapter 9: Noise Modeling 9-1

- 9.1 Flicker Noise Models 9-1
- 9.2Channel Thermal Noise 9-4
- 9.30ther Noise Sources Modeled 9-7

#### Chapter 10: Asymmetric MOS Junction Diode Models 10-1

- 10.1Junction Diode IV Model 10-1
- 10.2Junction Diode CV Model 10-6

#### Chapter 11: Layout-Dependent Parasitics Model 11-1

- 11.1 Geometry Definition 11-1
- 11.2Model Formulation and Options 11-3

#### Chapter 12: Temperature Dependence Model 12-1

12.1Temperature Dependence of Threshold Voltage 12-1

- 12.2Temperature Dependence of Mobility 12-2
- 12.3Temperature Dependence of Saturation Velocity 12-3
- 12.4Temperature Dependence of LDD Resistance 12-4
- 12.5Temperature Dependence of Junction Diode IV 12-6
- 12.6Temperature Dependence of Junction Diode CV 12-10
- 12.7Temperature Dependences of Eg and ni 12-12

#### Chapter 13: Stress Effect Model 13-1

- 13.1 Stress effect model development 13-1
- 13.2 Effective SA and SB for irregular LOD 13-2

#### Chapter 14: Well Proximity Effect Model 14-1

14.1 Well Proximity effect model 14-1

#### Chapter 15: Parameter Extraction Methodology 15-1

- 15.1Optimization strategy 15-1
- 15.2 Extraction Strategy 15-2
- 15.3Extraction Procedure 15-3

#### Appendix A: Complete Parameter List A-1

- A.1 BSIM4.0.0 Model Selectors/Controllers A-1
- A.2 Process Parameters A-3
- A.3 Basic Model Parameters A-5
- A.4 Parameters for Asymmetric and Bias-Dependent *Rds* Model A-10
- A.5 Impact Ionization Current Model Parameters A-11
- A.6 Gate-Induced Drain Leakage Model Parameters A-12
- A.7 Gate Dielectric Tunneling Current Model Parameters A-13
- A.8 Charge and Capacitance Model Parameters A-16
- A.9 High-Speed/RF Model Parameters A-18
- A.10 Flicker and Thermal Noise Model Parameters A-20
- A.11 Layout-Dependent Parasitics Model Parameters A-22
- A.12 Asymmetric Source/Drain Junction Diode Model Parameters A-24
- A.13 Temperature Dependence Parameters A-29
- A.14 Stress Effect Model Parameters A-31

A.15 Well-Proximity Effect Model Parameters A-33

A.16 dW and dL Parameters A-35

A.17 Range Parameters for Model Application A-35

A.18 Notes 1-8 A-35

Appendix B: Core Parameter List for General Parameter

Extraction B-1

Appendix C: References C-1

4

# Chapter 1: Effective Oxide Thickness, Channel Length and Channel Width

BSIM4, as the extension of BSIM3 model, addresses the MOSFET physical effects into sub-100nm regime. The continuous scaling of minimum feature size brought challenges to compact modeling in two ways: One is that to push the barriers in making transistors with shorter gate length, advanced process technologies are used such as non-uniform substrate doping. The second is its opportunities to RF applications.

To meet these challenges, BSIM4 has the following major improvements and additions over BSIM3v3: (1) an accurate new model of the intrinsic input resistance for both RF, high-frequency analog and high-speed digital applications; (2) flexible substrate resistance network for RF modeling; (3) a new accurate channel thermal noise model and a noise partition model for the induced gate noise; (4) a non-quasi-static (NQS) model that is consistent with the Rg-based RF model and a consistent AC model that accounts for the NQS effect in both transconductances and capacitances. (5) an accurate gate direct tunneling model for multiple layer gate dielectrics; (6) a comprehensive and versatile geometry-dependent parasitics model for various source/drain connections and multi-finger devices; (7) improved model for steep vertical retrograde doping profiles; (8) better model for pocket-implanted devices in Vth, bulk charge effect model, and Rout; (9) asymmetrical and bias-dependent source/drain resistance, either internal or external to the intrinsic MOSFET at the user's discretion; (10) acceptance of either the electrical or physical gate oxide thickness as the model input at the user's

choice in a physically accurate maner; (11) the quantum mechanical charge-layerthickness model for both IV and CV; (12) a more accurate mobility model for predictive modeling; (13) a gate-induced drain/source leakage (GIDL/GISL) current model, available in BSIM for the first time; (14) an improved unified flicker (1/f) noise model, which is smooth over all bias regions and considers the bulk charge effect; (15) different diode IV and CV charatistics for source and drain junctions; (16) junction diode breakdown with or without current limiting; (17) dielectric constant of the gate dielectric as a model parameter; (18) A new scalable stress effect model for process induced stress effect; device performance becoming thus a function of the active area geometry and the location of the device in the active area; (19) A unified current-saturation model that includes all mechanisms of current saturation- velocity saturation, velocity overshoot and source end velocity limit; (20) A new temperature model format that allows convenient prediction of temperature effects on saturation velocity, mobility, and S/D resistances.

#### 1.1Gate Dielectric Model

As the gate oxide thickness is vigorously scaled down, the finite charge-layer thickness can not be ignored [1]. BSIM4 models this effect in both IV and CV. For this purpose, BSM4 accepts two of the following three as the model inputs: the electrical gate oxide thickness  $TOXE^1$ , the physical gate oxide thickness TOXP, and their difference DTOX = TOXE - TOXP. Based on these parameters, the effect of effective gate oxide capacitance  $C_{oxeff}$  on IV and CV is modeled [2].

<sup>1.</sup> Capital and italic alphanumericals in this manual are model parameters.

High-k gate dielectric can be modeled as  $SiO_2$  (relative permittivity: 3.9) with an equivalent  $SiO_2$  thickness. For example, 3nm gate dielectric with a dielectric constant of 7.8 would have an equivalent oxide thickness of 1.5nm.

BSIM4 also allows the user to specify a gate dielectric constant (EPSROX) different from 3.9 (SiO<sub>2</sub>) as an alternative approach to modeling high-k dielectrics.

Figure 1-1 illustrates the algorithm and options for specifying the gate dielectric thickness and calculation of the gate dielectric capacitance for BSIM4 model evaluation.

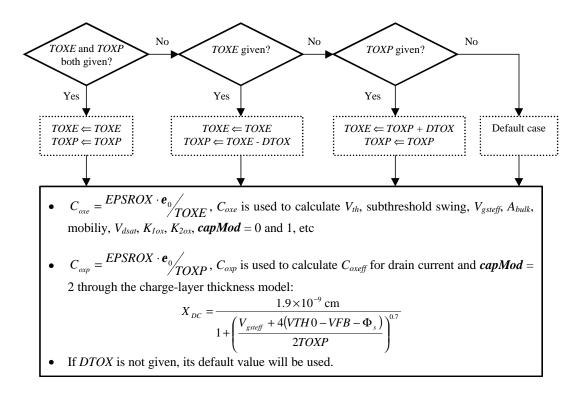


Figure 1-1. Algorithm for BSIM4 gate dielectric model.

### 1.2 Poly-Silicon Gate Depletion

When a gate voltage is applied to the poly-silicon gate, e.g. NMOS with n<sup>+</sup> poly-silicon gate, a thin depletion layer will be formed at the interface between the poly-silicon and the gate oxide. Although this depletion layer is very thin due to the high doping concentration of the poly-silicon gate, its effect cannot be ignored since the gate oxide thickness is small.

Figure 1-2 shows an NMOSFET with a depletion region in the  $n^+$  poly-silicon gate. The doping concentration in the  $n^+$  poly-silicon gate is NGATE and the doping concentration in the substrate is NSUB. The depletion width in the poly gate is  $X_p$ . The depletion width in the substrate is  $X_d$ . The positive charge near the interface of the poly-silicon gate and the gate oxide is distributed over a finite depletion region with thickness  $X_p$ . In the presence of the depletion region, the voltage drop across the gate oxide and the substrate will be reduced, because part of the gate voltage will be dropped across the depletion region in the gate. That means the effective gate voltage will be reduced.

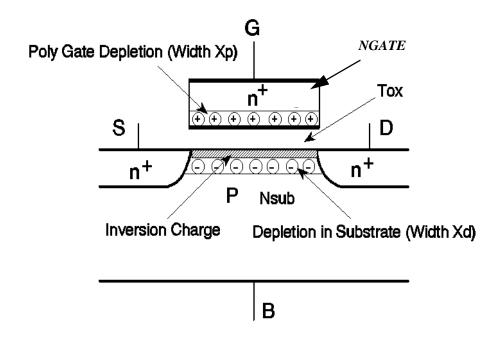


Figure 1-2. Charge distribution in a MOSFET with the poly gate depletion effect.

The device is in the strong inversion region.

The effective gate voltage can be calculated in the following manner. Assume the doping concentration in the poly gate is uniform. The voltage drop in the poly gate  $V_{poly}$  can be calculated as

$$V_{poly} = 0.5X_{poly}E_{poly} = \frac{qNGATE \cdot X_{poly}^{2}}{2\mathbf{e}_{si}}$$
(1.2.1)

where  $E_{poly}$  is the maximum electrical field in the poly gate. The boundary condition at the interface of poly gate and the gate oxide is

$$EPSROX \cdot E_{ox} = \mathbf{e}_{si} E_{poly} = \sqrt{2q \mathbf{e}_{si} NGATE \cdot V_{poly}}$$

where  $E_{ox}$  is the electric field in the gate oxide. The gate voltage satisfies

$$V_{gs} - V_{FB} - \Phi_s = V_{poly} + V_{ox}$$
 (1.2.3)

where  $V_{ox}$  is the voltage drop across the gate oxide and satisfies  $V_{ox} = E_{ox}TOXE$ .

From (1.2.1) and (1.2.2), we can obtain

$$a(V_{gs} - V_{FB} - \Phi_s - V_{poly})^2 - V_{poly} = 0$$
(1.2.4)

where

$$a = \frac{EPSROX^{2}}{2q\mathbf{e}_{si}NGATE \cdot TOXE^{2}}$$

By solving (1.2.4), we get the effective gate voltage  $V_{gse}$  which is equal to

$$V_{gse} = VFB + \Phi_{s} + \frac{q\mathbf{e}_{si}NGATE \cdot TOXE^{2}}{EPSROX^{2}} \left( \sqrt{1 + \frac{2EPSROX^{2}(V_{gs} - VFB - \Phi_{s})}{q\mathbf{e}_{si}NGATE \cdot TOXE^{2}}} - 1 \right)$$

# 1.3 Effective Channel Length and Width

The effective channel length and width used in the drain current model are given below where XL and XW are parameters to account the channel length/width offset due to mask/etch effect

$$L_{eff} = L_{drawn} + XL - 2dL$$

$$(1.3.1)$$

$$W_{eff} = \frac{W_{drawn}}{NF} + XW - 2dW$$

$$(1.3.2a)$$

$$W_{eff} = \frac{W_{drawn}}{NF} + XW - 2dW$$

$$(1.3.2b)$$

The difference between (1.3.2a) and (1.3.2b) is that the former includes bias dependencies. NF is the number of device fingers. dW and dL are modeled by

$$dW = dW' + DWG \cdot V_{gsteff} + DWB \left( \sqrt{\Phi_s - V_{bseff}} - \sqrt{\Phi_s} \right)$$

$$dW' = WINT + \frac{WL}{L^{WLN}} + \frac{WW}{W^{WWN}} + \frac{WWL}{L^{WLN}W^{WWN}}$$

$$dL = LINT + \frac{LL}{L^{LLN}} + \frac{LW}{W^{LWN}} + \frac{LWL}{L^{LLN}W^{LWN}}$$

$$(1.3.4)$$

WINT represents the traditional manner from which "delta W" is extracted (from the intercept of straight lines on a  $1/R_{ds} \sim W_{drawn}$  plot). The parameters DWG and DWB are used to account for the contribution of both gate and substrate bias effects. For dL, LINT represents the traditional manner from which "delta L" is extracted from the intercept of lines on a  $R_{ds} \sim L_{drawn}$  plot).

The remaining terms in dW and dL are provided for the convenience of the user. They are meant to allow the user to model each parameter as a function of  $W_{drawn}$ ,  $L_{drawn}$  and their product term. By default, the above geometrical dependencies for dW and dL are turned off.

MOSFET capacitances can be divided into intrinsic and extrinsic components. The intrinsic capacitance is associated with the region between the metallurgical source and drain junction, which is defined by the effective length ( $L_{active}$ ) and width ( $W_{active}$ ) when the gate to source/drain regions are under flat-band condition.  $L_{active}$  and  $W_{active}$  are defined as

$$L_{totive} = L_{trans} + XL - 2dL$$
(1.3.5)

$$W_{active} = \frac{W_{drawn}}{NF} + XW - 2dW$$

$$dL = DLC + \frac{LLC}{L^{LLN}} + \frac{LWC}{W^{LWN}} + \frac{LWLC}{L^{LLN}W^{LWN}}$$

$$dW = DWC + \frac{WLC}{L^{WLN}} + \frac{WWC}{W^{WWN}} + \frac{WWLC}{L^{WLN}W^{WWN}}$$
(1.3.8)

The meanings of DWC and DLC are different from those of WINT and LINT in the I-V model. Unlike the case of I-V, we assume that these dimensions are bias-dependent. The parameter  $dL_{eff}$  is equal to the source/drain to gate overlap length plus the difference between drawn and actual POLY CD due to processing (gate patterning, etching and oxidation) on one side.

The effective channel length  $L_{\it eff}$  for the I-V model does not necessarily carry a physical meaning. It is just a parameter used in the I-V formulation. This  $L_{\it eff}$  is therefore very sensitive to the I-V equations and also to the conduction characteristics of the LDD region relative to the channel region. A device with a large  $L_{\it eff}$  and a small parasitic resistance can have a similar current drive as another with a smaller  $L_{\it eff}$  but larger  $R_{\it ds}$ .

The  $L_{active}$  parameter extracted from capacitance is a closer representation of the metallurgical junction length (physical length). Due to the graded source/drain junction profile, the source to drain length can have a very strong bias dependence. We therefore define  $L_{active}$  to be that measured at flat-band voltage between gate to source/drain. If DWC, DLC and the length/width dependence parameters (LLC, LWC, LWLC, WLC, WLC, WWC and WWLC) are not specified in technology files, BSIM4 assumes that the DC bias-independent  $L_{eff}$  and  $W_{eff}$  will be used for the capacitnace models, and DWC, DLC, LLC, LWC, LWLC, WLC, WWC and WWLC will be set to the values of their DC counterparts.

BSIM4 uses the effective source/drain diffusion width  $W_{effcj}$  for modeling parasitics, such as source/drain resistance, gate electrode resistance, and gate-induced drain leakage (GIDL) current.  $W_{effcj}$  is defined as

$$W_{effcj} = \frac{W_{drawn}}{NF} + XW - 2 \times_{\mathbf{C}}^{\mathbf{E}} DWJ + \frac{WLC}{L^{WLN}} + \frac{WWC}{W^{WWN}} + \frac{WWLC}{L^{WLN}W^{WWN}} \dot{\dot{\mathbf{E}}}$$

Note: Any compact model has its validation limitation, so does BSIM4. BSIM4 is its own valid designation limit which is larger than the warning limit, shown in following table. For users' reference, the fatal limitation in BSIM4 is also shown.

Parameter name	Designed Limitation(m)	Warning Limitation(m)	Fatal Limitation(m)
Leff	1e-8	1e-9	0
LeffCV	1e-8	1e-9	0
Weff	1e-7	1e-9	0
WeffCV	1e-7	1e-9	0
Toxe	5e-10	1e-10	0
Toxp	5e-10	1e-10	0
Toxm	5e-10	1e-10	0

Table 1-1. BSIM4.6.0 Geometry Limitation

# **Chapter 2: Threshold Voltage Model**

# 2.1 Long-Channel Model With Uniform Doping

Accurate modeling of threshold voltage  $V_{th}$  is important for precise description of device electrical characteristics.  $V_{th}$  for long and wide MOSFETs with uniform substrate doping is given by

$$V_{th} = VFB + \Phi_s + g\sqrt{\Phi_s - V_{bs}} = VTH + Q\left(\sqrt{\Phi_s - V_{bs}} - \sqrt{\Phi_s}\right)$$

where VFB is the flat band voltage, VTH0 is the threshold voltage of the long channel device at zero substrate bias, and  $\gamma$  is the body bias coefficient given by

$$\mathbf{g} = \frac{\sqrt{2q\mathbf{e}_{si}N_{substrate}}}{C_{oxe}}$$
 (2.1.2)

where  $N_{substrate}$  is the uniform substrate doping concentration.

Equation (2.1.1) assumes that the channel doping is constant and the channel length and width are large enough. Modifications have to be made when the substrate doping concentration is not constant and/or when the channel is short, or narrow.

Consider process variation, a new instance parameter DELVTO is added to VTH0 as:

(a) If VTH0 is given,

$$(2.1.3)$$

VTH 0 = VTH 0 + DELVTO

(a) If VTH0 isn't given,

$$VFB = VFB + DELVTO$$

$$VTH \ 0 = VFB + F_s + g\sqrt{F_s}$$

# 2.2 Non-Uniform Vertical Doping

The substrate doping profile is not uniform in the vertical direction and therefore  $\gamma$  in (2.1.2) is a function of both the depth from the interface and the substrate bias. If  $N_{substrate}$  is defined to be the doping concentration (*NDEP*) at  $X_{dep0}$  (the depletion edge at  $V_{bs}=0$ ),  $V_{th}$  for non-uniform vertical doping is

$$V_{th} = V_{th,NDEP} + \frac{qD_0}{C_{oxe}} + K1_{NDEP} \left( \sqrt{\mathbf{j}_{s} - V_{bs} - \frac{qD_1}{\mathbf{e}_{si}}} - \sqrt{\mathbf{j}_{s} - V_{bs}} \right)$$

where  $K1_{NDEP}$  is the body-bias coefficient for  $N_{substrate} = NDEP$ ,

$$V_{th,NDEP} = VTH \, 0 + K \mathbf{1}_{NDEP} \left( \sqrt{\boldsymbol{j}_{s} - V_{bs}} - \sqrt{\boldsymbol{j}_{s}} \right)$$

with a definition of

$$\mathbf{j}_{s} = 0.4 + \frac{k_{B}T}{q} \ln \left( \frac{NDEP}{n_{i}} \right)$$
(2.2.3)

where  $n_i$  is the intrinsic carrier concentration in the channel region. The zero-th and 1st moments of the vertical doping profile in (2.2.1) are given by (2.2.4) and (2.2.5), respectively, as

$$D_{0} = D_{00} + D_{01} = \int_{0}^{X_{dep0}} (N(x) - NDEP) dx + \int_{X_{dep0}}^{X_{dep}} (N(x) - NDEP) dx$$

$$(2.2.4)$$

$$D_{1} = D_{10} + D_{11} = \int_{0}^{X_{dep0}} (N(x) - NDEP) x dx + \int_{X_{dep0}}^{X_{dep}} (N(x) - NDEP) x dx$$

By assuming the doping profile is a steep retrograde, it can be shown that  $D_{01}$  is approximately equal to  $-C_{01}V_{bs}$  and that  $D_{10}$  dominates  $D_{11}$ ;  $C_{01}$  represents the profile of the retrograde. Combining (2.2.1) through (2.2.5), we obtain

$$(2.2.6)$$

$$V_{th} = VTH \, 0 + K1 \left( \sqrt{\Phi_s - V_{bs}} - \sqrt{\Phi_s} \right) - K2 \cdot V_{bs}$$

where  $K2 = qC_{01} / C_{oxe}$ , and the surface potential is defined as

$$\Phi_{s} = 0.4 + \frac{k_{B}T}{q} \ln \left( \frac{NDEP}{n_{i}} \right) + PHIN$$
(2.2.7)

where

$$PHIN = -qD_{10}/\boldsymbol{e}_{si}$$

*VTH*0, *K*1, *K*2, and *PHIN* are implemented as model parameters for model flexibility. Appendix A lists the model selectors and parameters.

Detail information on the doping profile is often available for predictive modeling. Like BSIM3v3, BSIM4 allows *K*1 and *K*2 to be calculated based on such details as *NSUB*, *XT*, *VBX*, *VBM*, etc. ( with the same meanings as in BSIM3v3):

$$K1 = \boldsymbol{g}_2 - 2K2\sqrt{\Phi_s - VBM}$$

$$K2 = \frac{(\mathbf{g}_{1} - \mathbf{g}_{2})(\sqrt{\Phi_{s} - VBX} - \sqrt{\Phi_{s}})}{2\sqrt{\Phi_{s}}(\sqrt{\Phi_{s} - VBM} - \sqrt{\Phi_{s}}) + VBM}$$
(2.2.9)

where  $\gamma_1$  and  $\gamma_2$  are the body bias coefficients when the substrate doping concentration are equal to *NDEP* and *NSUB*, respectively:

$$\mathbf{g}_{1} = \frac{\sqrt{2q\mathbf{e}_{si}NDEP}}{C_{ove}}$$

$$\mathbf{g}_2 = \frac{\sqrt{2q\mathbf{e}_{si}NSUB}}{C_{oxe}}$$

VBX is the body bias when the depletion width is equal to XT, and is determined by

$$\frac{qNDEP \cdot XT^2}{2\mathbf{e}_{si}} = \Phi_s - VBX$$

# 2.3 Non-Uniform Lateral Doping: Pocket (Halo) Implant

In this case, the doping concentration near the source/drain junctions is higher than that in the middle of the channel. Therefore, as channel length becomes shorter, a  $V_{th}$  roll-up will usually result since the effective channel doping concentration gets higher, which changes the body bias effect as well. To consider these effects,  $V_{th}$  is written as

#### Non-Uniform Lateral Doping: Pocket (Halo) Implant

$$(2.3.1)$$

$$V_{th} = VTH0 + K1\left(\sqrt{\Phi_s - V_{bs}} - \sqrt{\Phi_s}\right) \cdot \sqrt{1 + \frac{LPEB}{L_{eff}}} - K2 \cdot V_{bs}$$

$$+ K1\left(\sqrt{1 + \frac{LPE0}{L_{eff}}} - 1\right)\sqrt{\Phi_s}$$

In addition, pocket implant can cause significant drain-induced threshold shift (DITS) in long-channel devices [3]:

$$\Delta V_{th}(DITS) = -nv_t \cdot \ln \left( \frac{\left(1 - e^{-V_{ds}/v_t}\right) \cdot L_{eff}}{L_{eff} + DVTP0 \cdot \left(1 + e^{-DVTP1 \cdot V_{ds}}\right)} \right)$$

For  $V_{ds}$  of interest, the above equation is simplified and implemented as for tempMod = 1:

$$DV_{th}(DITS) = -nv_{t} \times \ln \frac{x}{\xi} \frac{L_{eff}}{L_{eff}} + \frac{\ddot{0}}{DVTP0 \times (1 + e^{-DVTP1 \cdot V_{ds}})} \frac{\dot{\dot{c}}}{\dot{\theta}}$$

for tempMod = 2:

$$\Delta V_{th}(DITS) = -nv_t \cdot \ln \left( \frac{L_{eff}}{L_{eff} + DVTP0 \cdot \left(1 + e^{-DVTP1 \cdot V_{ds}}\right)} \right)$$

Note: when tempMod =2, drain-induced threshold voltage shift (DITS) due to pocket implant has no temperature dependence, so nominal temperature (TNOM) is used as equation(2.3.4). when tempMod=0 or 1, equation(2.3.3) is used.

$$DV_{th}(DITS) = -nv_{tnom} \times \ln \frac{x}{\xi} \frac{L_{eff}}{L_{eff} + DVTP 0 \times (1 + e^{-DVTP \cdot 1 \cdot V_{ds}})} \hat{\mathbf{g}}^{\dot{0}}$$

#### 2.4 Short-Channel and DIBL Effects

As channel length becomes shorter,  $V_{th}$  shows a greater dependence on channel length (SCE: short-channel effect) and drain bias (DIBL: drain-induced barrier lowering).  $V_{th}$  dependence on the body bias becomes weaker as channel length becomes shorter, because the body bias has weaker control of the depletion region. Based on the quasi 2D solution of the Poisson equation,  $V_{th}$  change due to SCE and DIBL is modeled [4]

$$\Delta V_{th}(SCE, DIBL) = -\boldsymbol{q}_{th}(L_{eff}) \cdot \left[2(V_{bi} - \Phi_s) + V_{ds}\right]$$

where  $V_{bi}$ , known as the built-in voltage of the source/drain junctions, is given by

$$V_{bi} = \frac{k_B T}{q} \ln \left( \frac{NDEP \cdot NSD}{n_i^2} \right)$$
 (2.4.2)

where *NSD* is the doping concentration of source/drain diffusions. The short-channel effect coefficient  $\theta_{th}(L_{eff})$  in (2.4.1) has a strong dependence on the channel length given by

$$q_{th}\left(L_{eff}\right) = \frac{0.5}{\cosh\left(\frac{L_{eff}}{l_t}\right) - 1}$$

 $l_t$  is referred to as the characteristic length and is given by

$$l_{t} = \sqrt{\frac{\boldsymbol{e}_{si} \cdot TOXE \cdot X_{dep}}{EPSROX \cdot \boldsymbol{h}}}$$
 (2.4.4)

with the depletion width  $X_{dep}$  equal to

$$X_{dep} = \sqrt{\frac{2\mathbf{e}_{si}(\Phi_{s} - V_{bs})}{qNDEP}}$$
 (2.4.5)

 $X_{dep}$  is larger near the drain due to the drain voltage.  $X_{dep} / \eta$  represents the average depletion width along the channel.

Note that in BSIM3v3 and [4],  $\theta_{th}(L_{\it eff})$  is approximated with the form of

$$\mathbf{q}_{th}\left(L_{eff}\right) = \exp\left(-\frac{L_{eff}}{2l_{t}}\right) + 2\exp\left(-\frac{L_{eff}}{l_{t}}\right)$$
(2.4.6)

which results in a phantom second  $V_{th}$  roll-up when  $L_{eff}$  becomes very small (e.g.  $L_{eff} < LMIN$ ). In BSIM4, the function form of (2.4.3) is implemented with no approximation.

To increase the model flexibility for different technologies, several parameters such as *DVT*0, *DVT*1, *DVT*2, *DSUB*, *ETA*0, and *ETAB* are introduced, and SCE and DIBL are modeled separately.

To model SCE, we use

$$q_{th}(SCE) = \frac{0.5 \cdot DVT0}{\cosh\left(DVT1 \cdot \frac{L_{eff}}{l_t}\right) - 1}$$

$$\Delta V_{th}(SCE) = -\boldsymbol{q}_{th}(SCE) \cdot (V_{bi} - \Phi_s)$$
(2.4.8)

with  $l_t$  changed to

$$l_{t} = \sqrt{\frac{\boldsymbol{e}_{si} \cdot TOXE \cdot X_{dep}}{EPSROX}} \cdot (1 + DVT2 \cdot V_{bs})$$

To model DIBL, we use

$$q_{th}(DIBL) = \frac{0.5}{\cosh\left(DSUB \cdot \frac{L_{eff}}{l_{to}}\right) - 1}$$

$$(2.4.11)$$

$$\Delta V_{th}(\text{DIBL}) = -\boldsymbol{q}_{th}(\text{DIBL}) \cdot (ETA0 + ETAB \cdot V_{bs}) \cdot V_{ds}$$

and  $l_{t0}$  is calculated by

 $l_{t0} = \sqrt{\frac{\boldsymbol{e}_{si} \cdot TOXE \cdot X_{dep0}}{EPSROX}}$  (2.4.12)

with

$$X_{dep0} = \sqrt{\frac{2\mathbf{e}_{si}\Phi_{s}}{qNDEP}}$$
 (2.4.13)

*DVT*1 is basically equal to  $1/(\eta)^{1/2}$ . *DVT*2 and *ETAB* account for substrate bias effects on SCE and DIBL, respectively.

#### 2.5 Narrow-Width Effect

The actual depletion region in the channel is always larger than what is usually assumed under the one-dimensional analysis due to the existence of fringing fields. This effect becomes very substantial as the channel width decreases and the depletion region underneath the fringing field becomes comparable to the "classical" depletion layer formed from the vertical field. The net result is an increase in  $V_{th}$ . This increase can be modeled as

$$\frac{\mathbf{p}qNDEP \cdot X_{dep,\text{max}}^{2}}{2C_{oxe}W_{eff}} = 3\mathbf{p} \frac{TOXE}{W_{eff}} \Phi_{s}$$

This formulation includes but is not limited to the inverse of channel width due to the fact that the overall narrow width effect is dependent on process (i.e. isolation technology).  $V_{th}$  change is given by

$$\Delta V_{th} (Narrow_width1) = (K3 + K3B \cdot V_{bs}) \frac{TOXE}{W_{eff} + W0} \Phi_s$$

In addition, we must consider the narrow width effect for small channel lengths. To do this we introduce the following

$$\Delta V_{th} (Narrow_width 2) = -\frac{0.5 \cdot DVT0W}{\cosh(DVT1W \cdot \frac{L_{eff}W_{eff}}{l_{tw}}) - 1} \cdot (V_{bi} - \Phi_s)$$

with  $l_{tw}$  given by

$$l_{tw} = \sqrt{\frac{\mathbf{e}_{si} \cdot TOXE \cdot X_{dep}}{EPSROX}} \cdot (1 + DVT2W \cdot V_{bs})$$

The complete  $V_{th}$  model implemented in SPICE is

(2.5.5)

$$\begin{split} & \boldsymbol{V_{th}} = \boldsymbol{VTH0} + \left(\boldsymbol{K_{lox}} \cdot \sqrt{\boldsymbol{\Phi_s} - \boldsymbol{V_{bseff}}} - \boldsymbol{K1} \cdot \sqrt{\boldsymbol{\Phi_s}}\right) \sqrt{1 + \frac{\boldsymbol{LPEB}}{\boldsymbol{L_{eff}}}} - \boldsymbol{K_{2ox}} \boldsymbol{V_{bseff}} \\ & + \boldsymbol{K_{lox}} \left(\sqrt{1 + \frac{\boldsymbol{LPE0}}{\boldsymbol{L_{eff}}}} - 1\right) \sqrt{\boldsymbol{\Phi_s}} + \left(\boldsymbol{K3} + \boldsymbol{K3B} \cdot \boldsymbol{V_{bseff}}\right) \frac{\boldsymbol{TOXE}}{\boldsymbol{W_{eff}}' + \boldsymbol{W0}} \boldsymbol{\Phi_s} \\ & - 0.5 \cdot \left[ \frac{\boldsymbol{DVT0W}}{\boldsymbol{cosh} \left(\boldsymbol{DVT1W} \frac{\boldsymbol{L_{eff}} \boldsymbol{W_{eff}}'}{\boldsymbol{l_{tw}}}\right) - 1} + \frac{\boldsymbol{DVT0}}{\boldsymbol{cosh} \left(\boldsymbol{DVT1} \frac{\boldsymbol{L_{eff}}}{\boldsymbol{l_t}}\right) - 1} \right] \left(\boldsymbol{V_{bi}} - \boldsymbol{\Phi_s}\right) \\ & - \frac{0.5}{\boldsymbol{cosh} \left(\boldsymbol{DSUB} \frac{\boldsymbol{L_{eff}}}{\boldsymbol{l_{to}}}\right) - 1} \left(\boldsymbol{ETA0} + \boldsymbol{ETAB} \cdot \boldsymbol{V_{bseff}}\right) \cdot \boldsymbol{V_{ds}} - \boldsymbol{nv_t} \cdot \boldsymbol{ln} \left(\frac{\boldsymbol{L_{eff}}}{\boldsymbol{L_{eff}} + \boldsymbol{DVTP0} \cdot \left(1 + \boldsymbol{e^{-DVTP1 \cdot \boldsymbol{V_{DS}}}}\right)}\right) \end{split}$$

where TOXE dependence is introduced in model parameters K1 and K2 to improve the scalibility of  $V_{th}$  model over TOXE as

$$K_{1ox} = K1 \cdot \frac{TOXE}{TOXM}$$

and

$$K_{2ox} = K2 \cdot \frac{TOXE}{TOXM}$$

Note that all  $V_{bs}$  terms are substituted with a  $V_{bseff}$  expression as shown in (2.5.8). This is needed in order to set a low bound for the body bias during simulations since unreasonable values can occur during SPICE iterations if this expression is not introduced.

$$V_{bseff} = V_{bc} + 0.5 \cdot \left[ \left( V_{bs} - V_{bc} - \boldsymbol{d}_{1} \right) + \sqrt{\left( V_{bs} - V_{bc} - \boldsymbol{d}_{1} \right)^{2} - 4 \boldsymbol{d}_{1} \cdot V_{bc}} \right]$$

where  $\delta_1 = 0.001 \, \text{V}$ , and  $V_{bc}$  is the maximum allowable  $V_{bs}$  and found from  $dV_{th}/dV_{bs} = 0$  to be

$$V_{bc} = 0.9 \left( \Phi_s - \frac{K1^2}{4K2^2} \right)$$

For positive V<sub>bs</sub>, there is need to set an upper bound for the body bias as:

$$V_{bseff} = 0.95\Phi_{s} - 0.5 \left( 0.95\Phi_{s} - V_{bseff} - \boldsymbol{d}_{1} + \sqrt{(0.95\Phi_{s} - V_{bseff} - \boldsymbol{d}_{1})^{2} + 4\boldsymbol{d}_{1}.0.95\Phi_{s}} \right)$$

# Chapter 3: Channel Charge and Subthreshold Swing Models

# 3.1 Channel Charge Model

The channel charge density in subthreshold for zero  $V_{ds}$  is written as

$$Q_{chsubs0} = \sqrt{\frac{qNDEP\mathbf{e}_{si}}{2\Phi_{s}}}v_{t} \cdot \exp\left(\frac{V_{gse} - V_{th} - Voff'}{nv_{t}}\right)$$

where

$$Voff' = VOFF + \frac{VOFFL}{L_{eff}}$$
(3.1.1a)

*VOFFL* is used to model the length dependence of *Voff'* on non-uniform channel doping profiles.

In strong inversion region, the density is expressed by

$$Q_{chs0} = C_{oxe} \cdot \left(V_{gse} - V_{th}\right) \tag{3.1.2}$$

A unified charge density model considering the charge layer thickness effect is derived for both subthreshold and inversion regions as

$$Q_{ch0} = C_{oxeff} \cdot V_{gsteff}$$

where  $C_{oxeff}$  is modeled by

$$C_{oxeff} = \frac{C_{oxe} \cdot C_{cen}}{C_{oxe} + C_{cen}} \quad with \ C_{cen} = \frac{\boldsymbol{e}_{si}}{X_{DC}}$$

and  $X_{DC}$  is given as

$$X_{DC} = \frac{1.9 \times 10^{-9} \text{ m}}{1 + \left(\frac{V_{gsteff} + 4(VTH \, 0 - VFB - \Phi_s)}{2TOXP}\right)^{0.7}}$$

In the above equations,  $V_{gsteff}$ , the effective ( $V_{gse}$ - $V_{th}$ ) used to describe the channel charge densities from subthreshold to strong inversion, is modeled by

$$V_{gsteff} = \frac{nv_{t} \ln \left\{ 1 + \exp \left[ \frac{m^{*} \left( V_{gse} - V_{th} \right)}{nv_{t}} \right] \right\}}{m^{*} + nC_{oxe} \cdot \sqrt{\frac{2\Phi_{s}}{qNDEPe_{si}}} \exp \left[ -\frac{\left( 1 - m^{*} \right) \left( V_{gse} - V_{th} \right) - Voff'}{nv_{t}} \right]}$$

where

$$m* = 0.5 + \frac{\arctan(MINV)}{\mathbf{p}}$$

#### **Channel Charge Model**

MINV is introduced to improve the accuracy of  $G_m$ ,  $G_m/I_d$  and  $G_m^2/I_d$  in the moderate inversion region.

To account for the drain bias effect, The y dependence has to be included in (3.1.3). Consider first the case of strong inversion

$$Q_{chs}(y) = C_{oxeff} \cdot \left(V_{gse} - V_{th} - A_{bulk}V_{F}(y)\right)$$
(3.1.7)

 $V_F(y)$  stands for the quasi-Fermi potential at any given point y along the channel with respect to the source. (3.1.7) can also be written as

$$Q_{chs}(y) = Q_{chs0} + \Delta Q_{chs}(y)$$
(3.1.8)

The term  $\Delta Q_{chs}(y) = -C_{oxeff}A_{bulk}V_F(y)$  is the incremental charge density introduced by the drain voltage at y.

In subthreshold region, the channel charge density along the channel from source to drain can be written as

$$Q_{chsubs}(y) = Q_{chsubs0} \cdot \exp\left(-\frac{A_{bulk}V_F(y)}{nv_t}\right)$$
(3.1.9)

Taylor expansion of (3.1.9) yields the following (keeping the first two terms)

(3.1.10)

$$Q_{chsubs}(y) = Q_{chsubs0} \left( 1 - \frac{A_{bulk}V_F(y)}{nv_t} \right)$$

Similarly, (3.1.10) is transformed into

(3.1.11)

$$Q_{chsubs}(y) = Q_{chsubs0} + \Delta Q_{chsubs}(y)$$

where  $\Delta Q_{chsubs}(y)$  is the incremental channel charge density induced by the drain voltage in the subthreshold region. It is written as

(3.1.12)

$$\Delta Q_{chsubs}(y) = -Q_{chsubs0} \cdot \frac{A_{bulk}V_F(y)}{nv_t}$$

To obtain a unified expression for the incremental channel charge density  $\Delta Q_{ch}(y)$  induced by  $V_{ds}$ , we assume  $\Delta Q_{ch}(y)$  to be

(3.1.13)

$$\Delta Q_{ch}(y) = \frac{\Delta Q_{chs}(y) \cdot \Delta Q_{chsubs}(y)}{\Delta Q_{chs}(y) + \Delta Q_{chsubs}(y)}$$

Substituting  $\Delta Q_{ch}(y)$  of (3.1.8) and (3.1.12) into (3.1.13), we obtain

(3.1.14)

$$\Delta Q_{ch}(y) = -\frac{V_F(y)}{V_b} Q_{ch0}$$

where  $V_b = (V_{gsteff} + nv_t) / A_{bulk}$ . In the model implementation, n of  $V_b$  is replaced by a typical constant value of 2. The expression for  $V_b$  now becomes

$$V_b = \frac{V_{gsteff} + 2v_t}{A_{bulk}}$$
(3.1.15)

A unified expression for  $Q_{ch}(y)$  from subthreshold to strong inversion regions is

$$Q_{ch}(y) = C_{oxeff} \cdot V_{gsteff} \cdot \left(1 - \frac{V_F(y)}{V_b}\right)$$
(3.1.16)

# 3.2 Subthreshold Swing *n*

The drain current equation in the subthreshold region can be expressed as

$$I_{ds} = I_0 \left[ 1 - \exp\left(-\frac{V_{ds}}{v_t}\right) \right] \cdot \exp\left(\frac{V_{gs} - V_{th} - V_{off}}{nv_t}\right)$$

where

$$I_{0} = \mathbf{m} \frac{W}{L} \sqrt{\frac{q \mathbf{e}_{si} NDEP}{2\Phi_{s}} v_{t}^{2}}$$

 $v_t$  is the thermal voltage and equal to  $k_BT/q$ .  $V_{off}' = VOFF + VOFFL / L_{eff}$  is the offset voltage, which determines the channel current at  $V_{gs} = 0$ . In (3.2.1), n is the

subthreshold swing parameter. Experimental data shows that the subthreshold swing is a function of channel length and the interface state density. These two mechanisms are modeled by the following

$$(3.2.3)$$

$$n = 1 + NFACTOR \cdot \frac{C_{dep}}{C_{oxe}} + \frac{Cdsc\_Term + CIT}{C_{oxe}}$$

where *Cdsc-Term*, written as

$$Cdsc\_Term = \left(CDSC + CDSCD \cdot V_{ds} + CDSCB \cdot V_{bseff}\right) \cdot \frac{0.5}{\cosh\left(DVT1\frac{L_{eff}}{l_i}\right) - 1}$$

represents the coupling capacitance between drain/source to channel. Parameters *CDSC*, *CDSCD* and *CDSCB* are extracted. Parameter *CIT* is the capacitance due to interface states. From (3.2.3), it can be seen that subthreshold swing shares the same exponential dependence on channel length as the *DIBL* effect. Parameter *NFACTOR* is close to 1 and introduced to compensate for errors in the depletion width capacitance calculation.

# Chapter 4: Gate Direct Tunneling Current Model

As the gate oxide thickness is scaled down to 3nm and below, gate leakage current due to carrier direct tunneling becomes important. This tunneling happens between the gate and silicon beneath the gate oxide. To reduce the tunneling current, high-k dielectrics are being studied to replace gate oxide. In order to maintain a good interface with substrate, multi-layer dielectric stacks are being proposed. The BSIM4 gate tunneling model has been shown to work for multi-layer gate stacks as well. The tunneling carriers can be either electrons or holes, or both, either from the conduction band or valence band, depending on (the type of the gate and) the bias regime.

In BSIM4, the gate tunneling current components include the tunneling current between gate and substrate (Igb), and the current between gate and channel (Igc), which is partitioned between the source and drain terminals by Igc = Igcs + Igcd.

The third component happens between gate and source/drain diffusion regions (*Igs* and *Igd*). Figure 4-1 shows the schematic gate tunneling current flows.

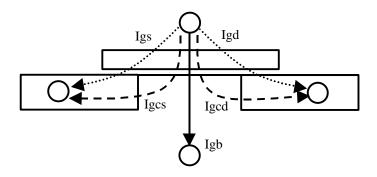


Figure 4-1. Shematic gate current components flowing between NMOST terminals in version.

## 4.1 Model selectors

Two global selectors are provided to turn on or off the tunneling components. igcMod = 1, 2 turns on Igc, Igs, and Igd; igbMod = 1 turns on Igb. When the selectors are set to zero, no gate tunneling currents are modeled. When tempMod = 2, following Vt (= kT/q) will be replaced by Vtnom(=kTnom/q)

# 4.2 Voltage Across Oxide $V_{ox}$

The oxide voltage  $V_{ox}$  is written as  $V_{ox} = V_{oxacc} + V_{oxdepinv}$  with

$$V_{oxacc} = V_{fbzb} - V_{FBeff}$$

(4.2.1b)

$$V_{oxdepinv} = K_{1ox} \sqrt{\Phi_s} + V_{gsteff}$$

(4.2.1) is valid and continuous from accumulation through depletion to inversion.  $V_{fbzb}$  is the flat-band voltage calculated from zero-bias  $V_{th}$  by

$$V_{fbzb} = V_{th} \Big|_{zeroV_{bs} and V_{ds}} - \Phi_s - K1\sqrt{\Phi_s}$$
(4.2.2)

and

$$V_{FBeff} = V_{fbzb} - 0.5 \left[ \left( V_{fbzb} - V_{gb} - 0.02 \right) + \sqrt{\left( V_{fbzb} - V_{gb} - 0.02 \right)^2 + 0.08 V_{fbzb}} \right]$$

## **4.3** Equations for Tunneling Currents

**Note:** when tempMod = 2, nominal temperature(TNOM) is used to replace the operating temperature in following gate tunneling current equations. When tempMod=0, or 1, operating temperature is still used.

### **4.3.1** Gate-to-Substrate Current (Igb = Igbacc + Igbinv)

*Igbacc*, determined by ECB (Electron tunneling from Conduction Band), is significant in accumulation and given by

$$\begin{split} Igbacc = & W_{eff} L_{eff} \cdot A \cdot T_{oxRatio} \cdot V_{gb} \cdot V_{aux} \\ & \cdot \exp \left[ -B \cdot TOXE \left( AIGBACC - BIGBACC \cdot V_{oxacc} \right) \cdot \left( 1 + CIGBACC \cdot V_{oxacc} \right) \right] \end{split}$$

where the physical constants A = 4.97232e-7 A/V<sup>2</sup>, B = 7.45669e11 (g/F- $s^2$ )<sup>0.5</sup>, and

$$T_{oxRatio} = \left(\frac{TOXREF}{TOXE}\right)^{NTOX} \cdot \frac{1}{TOXE^{2}}$$

$$V_{aux} = NIGBACC \cdot v_{t} \cdot \log \left(1 + \exp\left(-\frac{V_{gb} - V_{fbzb}}{NIGBACC \cdot v_{t}}\right)\right)$$

*Igbinv*, determined by EVB (Electron tunneling from Valence Band), is significant in inversion and given by

$$\begin{split} Igbinv &= W_{eff} L_{eff} \cdot A \cdot T_{oxRatio} \cdot V_{gb} \cdot V_{aux} \\ & \cdot \exp \left[ -B \cdot TOXE \left( AIGBINV - BIGBINV \cdot V_{oxdepinv} \right) \cdot \left( 1 + CIGBINV \cdot V_{oxdepinv} \right) \right] \end{split}$$

where 
$$A = 3.75956e-7 \text{ A/V}^2$$
,  $B = 9.82222e11 \text{ (g/F-s}^2)^{0.5}$ , and

$$V_{aux} = NIGBINV \cdot v_{t} \cdot \log \left( 1 + \exp \left( \frac{V_{oxdepinv} - EIGBINV}{NIGBINV \cdot v_{t}} \right) \right)$$

# 4.3.2 Gate-to-Channel Current ( $Igc\theta$ ) and Gate-to-S/D (Igs and Igd)

**Igc0**, determined by ECB for NMOS and HVB (Hole tunneling from Valence Band) for PMOS at Vds=0, is formulated as

$$Igc0 = W_{eff} L_{eff} \cdot A \cdot T_{oxRatio} \cdot V_{gse} \cdot V_{aux}$$

$$\cdot \exp \left[ -B \cdot TOXE \left( AIGC - BIGC \cdot V_{oxdepinv} \right) \cdot \left( 1 + CIGC \cdot V_{oxdepinv} \right) \right]$$

where A = 4.97232 A/V<sup>2</sup> for NMOS and 3.42537 A/V<sup>2</sup> for PMOS, B = 7.45669e11 (g/F-s<sup>2</sup>)<sup>0.5</sup> for NMOS and 1.16645e12 (g/F-s<sup>2</sup>)<sup>0.5</sup> for PMOS, and for igcMod = 1:

$$V_{aux} = NIGC \cdot v_t \cdot \log \left( 1 + \exp \left( \frac{V_{gse} - VTH0}{NIGC \cdot v_t} \right) \right)$$

for igcMod = 2:

$$V_{aux} = NIGC \cdot v_t \cdot \log \left( 1 + \exp \left( \frac{V_{gse} - VTH}{NIGC \cdot v_t} \right) \right)$$

*Igs* and *Igd* -- *Igs* represents the gate tunneling current between the gate and the source diffusion region, while *Igd* represents the gate tunneling current between the gate and the drain diffusion region. *Igs* and *Igd* are determined by ECB for NMOS and HVB for PMOS, respectively.

$$\begin{split} Igs &= W_{eff} DLCIG \cdot A \cdot T_{oxRatioEdge} \cdot V_{gs} \cdot V_{gs} \\ &\cdot \exp \left[ -B \cdot TOXE \cdot POXEDGE \cdot \left( AIGS - BIGS \cdot V_{gs} \right) \cdot \left( 1 + CIGS \cdot V_{gs} \right) \right] \end{split}$$

and

$$\begin{split} Igd &= W_{eff} \ DLCIGD \cdot A \cdot T_{oxRatioEdg \ e} \cdot V_{gd} \cdot V_{gd} \\ &\cdot \exp \left[ -B \cdot TOXE \cdot POXEDGE \cdot \left( AIGD - BIGD \cdot V_{gd} \right) \cdot \left( 1 + CIGD \cdot V_{gd} \right) \right] \end{split}$$

where  $A = 4.97232 \text{ A/V}^2$  for NMOS and  $3.42537 \text{ A/V}^2$  for PMOS,  $B = 7.45669e11 \text{ (g/F-s}^2)^{0.5}$  for NMOS and  $1.16645e12 \text{ (g/F-s}^2)^{0.5}$  for PMOS, and

$$T_{oxRatioEdge} = \left(\frac{TOXREF}{TOXE \cdot POXEDGE}\right)^{NTOX} \cdot \frac{1}{\left(TOXE \cdot POXEDGE\right)^{2}}$$

$$V_{gs}' = \sqrt{\left(V_{gs} - V_{fbsd}\right)^{2} + 1.0e - 4}$$

$$V_{gd}' = \sqrt{\left(V_{gd} - V_{fbsd}\right)^{2} + 1.0e - 4}$$

 $V_{fbsd}$  is the flat-band voltage between gate and S/D diffusions calculated as

If NGATE > 0.0

$$V_{fbsd} = \frac{k_B T}{q} \log \left( \frac{NGATE}{NSD} \right) + VFBSDOFF$$

Else  $V_{fbsd} = 0.0$ .

### 4.3.3 Partition of *Igc*

To consider the drain bias effect, Igc is split into two components, Igcs and Igcd, that is Igc = Igcs + Igcd, and

$$Igcs = Igc0 \cdot \frac{PIGCD \cdot V_{dseff} + \exp(-PIGCD \cdot V_{dseff}) - 1 + 1.0e - 4}{PIGCD^2 \cdot {V_{dseff}}^2 + 2.0e - 4}$$

and

$$Igcd = Igc0 \cdot \frac{1 - (PIGCD \cdot V_{dseff} + 1) \cdot \exp(-PIGCD \cdot V_{dseff}) + 1.0e - 4}{PIGCD^2 \cdot V_{dseff}^2 + 2.0e - 4}$$

Where Igc0 is Igc at V<sub>ds</sub>=0.

If the model parameter *PIGCD* is not specified, it is given by

$$PIGCD = \frac{B \cdot TOXE}{V_{gsteff}^{2}} \left( 1 - \frac{V_{dseff}}{2 \cdot V_{gsteff}} \right)$$
(4.3.8)

# **Chapter 5: Drain Current Model**

## 5.1 Bulk Charge Effect

The depletion width will not be uniform along channel when a non-zero  $V_{ds}$  is applied. This will cause  $V_{th}$  to vary along the channel. This effect is called bulk charge effect.

BSIM4 uses  $A_{bulk}$  to model the bulk charge effect. Several model parameters are introduced to account for the channel length and width dependences and bias effects.  $A_{bulk}$  is formulated by

$$A_{bulk} = \left\{1 + F\_doping \cdot \left[\frac{A0 \cdot L_{eff}}{L_{eff} + 2\sqrt{XJ \cdot X_{dep}}} \cdot \left(\frac{L_{eff}}{L_{eff} + 2\sqrt{XJ \cdot X_{dep}}}\right)^{2} + \frac{B0}{W_{eff}' + B1}\right] \cdot \right\} \frac{1}{1 + KETA \cdot V_{bseff}}$$

where the second term on the RHS is used to model the effect of non-uniform doping profiles

$$F\_doping = \frac{\sqrt{1 + LPEB/L_{eff}}K_{lox}}{2\sqrt{\Phi_s - V_{bseff}}} + K_{2ox} - K3B\frac{TOXE}{W_{eff}} + W0$$

Note that  $A_{bulk}$  is close to unity if the channel length is small and increases as the channel length increases.

## **5.2 Unified Mobility Model**

A good mobility model is critical to the accuracy of a MOSFET model. The scattering mechanisms responsible for surface mobility basically include phonons, coulombic scattering, and surface roughness. For good quality interfaces, phonon scattering is generally the dominant scattering mechanism at room temperature. In general, mobility depends on many process parameters and bias conditions. For example, mobility depends on the gate oxide thickness, substrate doping concentration, threshold voltage, gate and substrate voltages, etc. [5] proposed an empirical unified formulation based on the concept of an effective field  $E_{\it eff}$  which lumps many process parameters and bias conditions together.  $E_{\it eff}$  is defined by

$$E_{eff} = \frac{Q_B + (Q_n/2)}{\mathbf{e}_{si}}$$
 (5.2.1)

The physical meaning of  $E_{eff}$  can be interpreted as the average electric field experienced by the carriers in the inversion layer. The unified formulation of mobility is then given by

$$\mathbf{m}_{eff} = \frac{\mathbf{m}_0}{1 + (E_{eff}/E_0)^{\mathbf{n}}}$$
 (5.2.2)

For an NMOS transistor with n-type poly-silicon gate, (5.2.1) can be rewritten in a more useful form that explicitly relates  $E_{eff}$  to the device parameters

(5.2.3)

$$E_{eff} \approx \frac{V_{gs} + V_{th}}{6TOXE}$$

BSIM4 provides three different models of the effective mobility. The mobMod = 0 and 1 models are from BSIM3v3.2.2; the new mobMod = 2, a universal mobility model, is more accurate and suitable for predictive modeling.

• mobMod = 0

$$\mathbf{m}_{eff} = \frac{U0 \cdot f(L_{eff})}{1 + \left(UA + UCV_{bseff} \left(\frac{V_{gsteff} + 2V_{th}}{TOXE}\right) + UB\left(\frac{V_{gsteff} + 2V_{th}}{TOXE}\right)^{2} + UD\left(\frac{V_{th} \cdot TOXE}{V_{gsteff} + 2\sqrt{V_{th}^{2} + 0.0001}}\right)^{2}}$$

• mobMod = 1

$$\begin{split} \boldsymbol{m}_{eff} = & \frac{U0 \cdot f(L_{eff})}{1 + \left[UA \left(\frac{V_{gsteff} + 2V_{th}}{TOXE}\right) + UB \left(\frac{V_{gsteff} + 2V_{th}}{TOXE}\right)^{2}\right] \left(1 + UC \cdot V_{bseff}\right) + UD \left(\frac{V_{th} \cdot TOXE}{V_{gsteff} + 2\sqrt{V_{th}^{2} + 0.0001}}\right)^{2}} \end{split}$$

• mobMod = 2

$$\begin{split} \boldsymbol{m}_{e\!f\!f} &= \frac{U0 \cdot f\left(L_{e\!f\!f}\right)}{1 + \left(UA + UC \cdot V_{bsef\!f}\right) \left[\frac{V_{gstef\!f} + C_0 \cdot \left(VTHO - VFB - \Phi_s\right)}{TOXE}\right]^{EU} + UD \left(\frac{V_{th} \cdot TOXE}{V_{gstef\!f} + 2\sqrt{V_{th}^2 + 0.0001}}\right) \end{split}$$

where the constant  $C_0 = 2$  for NMOS and 2.5 for PMOS.

$$f(L_{eff}) = 1 - UP \cdot \exp\left(-\frac{L_{eff}}{LP}\right)$$
 (5.2.7)

## 5.3 Asymmetric and Bias-Dependent Source/ Drain Resistance Model

BSIM4 models source/drain resistances in two components: bias-independent diffusion resistance (sheet resistance) and bias-dependent LDD resistance. Accurate modeling of the bias-dependent LDD resistances is important for deep-submicron CMOS technologies. In BSIM3 models, the LDD source/drain resistance  $R_{ds}(V)$  is modeled internally through the I-V equation and symmetry is assumed for the source and drain sides. BSIM4 keeps this option for the sake of simulation efficiency. In addition, BSIM4 allows the source LDD resistance  $R_s(V)$  and the drain LDD resistance  $R_d(V)$  to be external and asymmetric (i.e.  $R_s(V)$  and  $R_d(V)$  can be connected between the external and internal source and drain nodes, respectively; furthermore,  $R_s(V)$  does not have to be equal to  $R_d(V)$ . This feature makes accurate RF CMOS simulation possible. The internal  $R_{ds}(V)$  option can be invoked by setting the model selector rdsMod = 0 (internal) and the external one for  $R_s(V)$  and  $R_d(V)$  by setting rdsMod = 1 (external).

• 
$$rdsMod = 0 \text{ (Internal } R_{ds}(V))$$
 (5.3.1)
$$R_{ds}(V) = \begin{cases} RDSWMIN + RDSW \cdot \\ PRWB \cdot \left(\sqrt{\Phi_s - V_{bseff}} - \sqrt{\Phi_s}\right) + \frac{1}{1 + PRWG \cdot V_{gsteff}} \end{bmatrix} \end{cases} / (1e6 \cdot W_{effcj})^{WR}$$

• rdsMod = 1 (External  $R_d(V)$  and  $R_s(V)$ )


#### Asymmetric and Bias-Dependent Source/Drain Resistance Model

$$R_{d}(V) = \left\{ \begin{bmatrix} RDWMIN + RDW \cdot \\ -PRWB \cdot V_{bd} + \frac{1}{1 + PRWG \cdot (V_{gd} - V_{fbsd})} \end{bmatrix} \right\} / \left[ (1e6 \cdot W_{effcj})^{WR} \cdot NF \right]$$

$$R_{s}(V) = \begin{cases} RSWMIN + RSW \cdot \\ -PRWB \cdot V_{bs} + \frac{1}{1 + PRWG \cdot (V_{gs} - V_{fbsd})} \end{cases} / [(1e6 \cdot W_{effcj})^{WR} \cdot NF]$$

 $V_{fbsd}$  is the calculated flat-band voltage between gate and source/drain as given in Section 4.3.2.

The following figure shows the schematic of source/drain resistance connection for rdsMod = 1.

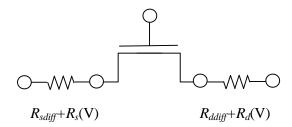

The diffusion source/drain resistance  $R_{sdiff}$  and  $R_{ddiff}$  models are given in the chapter of layout-dependence models.

## 5.4 Drain Current for Triode Region

### 5.4.1 $R_{ds}(V)=0$ or rdsMod=1 ("intrinsic case")

Both drift and diffusion currents can be modeled by

$$I_{ds}(y) = WQ_{ch}(y)\mathbf{m}_{he}(y)\frac{dV_{F}(y)}{dy}$$
(5.4.1)

where  $u_{ne}(y)$  can be written as

(5.4.2)

$$\mathbf{m}_{e(y)} = \frac{\mathbf{m}_{eff}}{1 + \frac{E_y}{E_{sat}}}$$

Substituting (5.4.2) in (5.4.1), we get

(5.4.3)

$$I_{ds}(y) = WQ_{ch0} \left(1 - \frac{V_F(y)}{V_b}\right) \frac{\mathbf{m}_{eff}}{1 + \frac{E_y}{E_{sat}}} \frac{dV_F(y)}{dy}$$

(5.4.3) is integrated from source to drain to get the expression for linear drain current. This expression is valid from the subthreshold regime to the strong inversion regime

(5.4.4)

$$I_{ds0} = \frac{W \mathbf{m}_{eff} Q_{ch0} V_{ds} \left( 1 - \frac{V_{ds}}{2V_b} \right)}{L \left( 1 + \frac{V_{ds}}{E_{sat} L} \right)}$$

## 5.4.2 $R_{ds}(V) > 0$ and rdsMod=0 ("Extrinsic case")

The drain current in this case is expressed by

$$I_{ds} = \frac{I_{dso}}{1 + \frac{R_{ds}I_{dso}}{V_{ds}}}$$
(5.4.5)

## 5.5 Velocity Saturation

Velocity saturation is modeled by [5]

$$v = \frac{\mathbf{m}_{eff} E}{1 + E/E_{sat}} \quad E < E_{sat}$$

$$= VSAT \qquad E \ge E_{sat}$$

where  $E_{sat}$  corresponds to the critical electrical field at which the carrier velocity becomes saturated. In order to have a continuous velocity model at  $E=E_{sat}$ ,  $E_{sat}$  must satisfy

(5.5.2)

$$E_{sat} = \frac{2VSAT}{\mathbf{m}_{eff}}$$

# 5.6 Saturation Voltage $V_{dsat}$

#### 5.6.1 Intrinsic case

In this case, the LDD source/drain resistances are either zero or non zero but not modeled inside the intrinsic channel region. It is easy to obtain  $V_{dsat}$  as [7]

$$V_{dsat} = \frac{E_{sat}L(V_{gsteff} + 2v_t)}{A_{bulk}E_{sat}L + V_{esteff} + 2v_t}$$
(5.6.1)

#### 5.6.2 Extrinsic Case

In this case, non-zero LDD source/drain resistance  $R_{ds}(V)$  is modeled internally through the I-V equation and symetry is assumed for the source and drain sides.  $V_{dsat}$  is obtained as [7]

$$V_{dsat} = \frac{-b - \sqrt{b^2 - 4ac}}{2a}$$
(5.6.2a)

where

$$(5.6.2b)$$

$$a = A_{bulk}^{2}W_{eff}VSATC_{oxe}R_{ds} + A_{bulk}\left(\frac{1}{I} - 1\right)$$

$$(5.6.2c)$$

$$b = -\left[ (V_{gsteff} + 2v_{t})\left(\frac{2}{I} - 1\right) + A_{bulk}E_{sat}L_{eff} + 3A_{bulk}(V_{gsteff} + 2v_{t})W_{eff}VSATC_{oxe}R_{ds} \right]$$

$$(5.6.2d)$$

$$c = (V_{gsteff} + 2v_{t})E_{sat}L_{eff} + 2(V_{gsteff} + 2v_{t})^{2}W_{eff}VSATC_{oxe}R_{ds}$$

$$(5.6.2e)$$

$$I = A1V_{gsteff} + A2$$

 $\lambda$  is introduced to model the non-saturation effects which are found for PMOSFETs.

## 5.6.3 $V_{dseff}$ Formulation

An effective  $V_{ds}$ ,  $V_{dseff}$ , is used to ensure a smooth transition near  $V_{dsat}$  from trode to saturation regions.  $V_{dseff}$  is formulated as

$$V_{dseff} = V_{dsat} - \frac{1}{2} \left[ \left( V_{dsat} - V_{ds} - \boldsymbol{d} \right) + \sqrt{\left( V_{dsat} - V_{ds} - \boldsymbol{d} \right)^2 + 4\boldsymbol{d} \cdot V_{dsat}} \right]$$

where  $\delta$  (*DELTA*) is a model parameter.

## 5.7 Saturation-Region Output Conductance Model

A typical I-V curve and its output resistance are shown in Figure 5-1. Considering only the channel current, the I-V curve can be divided into two parts: the linear region in which the current increases quickly with the drain voltage and the saturation region in which the drain current has a weaker dependence on the drain voltage. The first order derivative reveals more detailed information about the physical mechanisms which are involved in the device operation. The output resistance curve can be divided into four regions with distinct  $R_{out} \sim V_{ds}$  dependences.

The first region is the triode (or linear) region in which carrier velocity is not saturated. The output resistance is very small because the drain current has a strong dependence on the drain voltage. The other three regions belong to the saturation region. As will be discussed later, there are several physical mechanisms which affect the output resistance in the saturation region: channel length modulation (CLM), drain-induced barrier lowering (DIBL), and the substrate current induced body effect (SCBE). These mechanisms all affect the output resistance in the saturation range, but each of them dominates in a specific region. It will be shown

next that CLM dominates in the second region, DIBL in the third region, and SCBE in the fourth region.

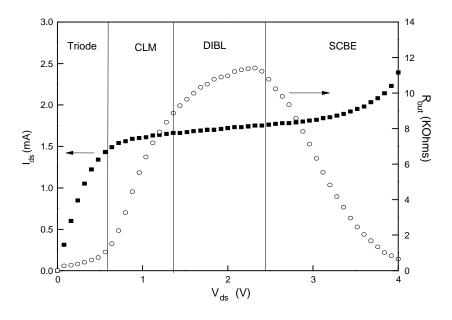


Figure 5-1. General behavior of MOSFET output resistance.

The channel current is a function of the gate and drain voltage. But the current depends on the drain voltage weakly in the saturation region. In the following, the Early voltage is introduced for the analysis of the output resistance in the saturation region:

$$I_{ds}(V_{gs}, V_{ds}) = I_{dsat}(V_{gs}, V_{dsat}) + \int_{V_{dsat}}^{V_{ds}} \frac{\partial I_{ds}(V_{gs}, V_{ds})}{\partial V_{d}} \cdot dV_{d}$$

$$= I_{dsat}(V_{gs}, V_{dsat}) \cdot \left[1 + \int_{V_{dsat}}^{V_{ds}} \frac{1}{V_{A}} \cdot dV_{d}\right]$$

where the Early voltage  $V_A$  is defined as

$$V_{A} = I_{dsat} \cdot \left[ \frac{\partial I_{ds} (V_{gs}, V_{ds})}{\partial V_{d}} \right]^{-1}$$
(5.7.2)

We assume in the following analysis that the contributions to the Early voltage from all mechanisms are independent and can be calculated separately.

#### 5.7.1 Channel Length Modulation (CLM)

If channel length modulation is the only physical mechanism to be taken into account, the Early voltage can be calculated by

$$V_{ACLM} = I_{dsat} \cdot \left[ \frac{\partial I_{ds} (V_{gs}, V_{ds})}{\partial L} \cdot \frac{\partial L}{\partial V_d} \right]^{-1}$$
(5.7.3)

Based on quasi two-dimensional analysis and through integration, we propose  $V_{ACLM}$  to be

$$V_{ACLM} = C_{clm} \cdot (V_{ds} - V_{dsat})$$
 (5.7.4)

where

$$C_{clm} = \frac{1}{PCLM} \cdot F \cdot \left( 1 + PVAG \frac{V_{gsteff}}{E_{sat} L_{eff}} \right) \left( 1 + \frac{R_{ds} \cdot I_{dso}}{V_{dseff}} \right) \left( L_{eff} + \frac{V_{dsat}}{E_{sat}} \right) \cdot \frac{1}{litl}$$

and the F factor to account for the impact of pocket implant technology is

$$F = \frac{1}{1 + FPROUT \cdot \frac{\sqrt{L_{eff}}}{V_{gsteff} + 2v_t}}$$
(5.7.6)

and *litl* in (5.7.5) is given by

$$litl = \sqrt{\frac{\mathbf{e}_{si}TOXE \cdot XJ}{EPSROX}}$$

PCLM is introduced into  $V_{ACLM}$  to compensate for the error caused by XJ since the junction depth XJ can not be determined very accurately.

## **5.7.2 Drain-Induced Barrier Lowering (DIBL)**

The Early voltage  $V_{ADIBLC}$  due to DIBL is defined as

$$V_{ADIBL} = I_{dsat} \cdot \left[ \frac{\partial I_{ds} (V_{gs}, V_{ds})}{\partial V_{th}} \cdot \frac{\partial V_{th}}{\partial V_{d}} \right]^{-1}$$
(5.7.8)

 $V_{th}$  has a linear dependence on  $V_{ds}$ . As channel length decreases,  $V_{ADIBLC}$  decreases very quickly

$$V_{ADIBL} = \frac{V_{gsteff} + 2v_{t}}{\boldsymbol{q}_{rout} \left(1 + PDIBLCB \cdot V_{bseff}\right)} \left(1 - \frac{A_{bulk}V_{dsat}}{A_{bulk}V_{dsat} + V_{gsteff} + 2v_{t}}\right) \cdot \left(1 + PVAG \frac{V_{gsteff}}{E_{sat}L_{eff}}\right)$$

where  $q_{rout}$  has a similar dependence on the channel length as the DIBL effect in  $V_{th}$ , but a separate set of parameters are used:

$$q_{rout} = \frac{PDIBLC1}{2\cosh\left(\frac{DROUT \cdot L_{eff}}{lt0}\right) - 2} + PDIBLC2$$
(5.7.10)

Parameters PDIBLC1, PDIBLC2, PDIBLCB and DROUT are introduced to correct the DIBL effect in the strong inversion region. The reason why DVT0 is not equal to PDIBLC1 and DVT1 is not equal to DROUT is because the gate voltage modulates the DIBL effect. When the threshold voltage is determined, the gate voltage is equal to the threshold voltage. But in the saturation region where the output resistance is modeled, the gate voltage is much larger than the threshold voltage. Drain induced barrier lowering may not be the same at different gate bias. PDIBLC2 is usually very small. If PDIBLC2 is put into the threshold voltage model, it will not cause any significant change. However it is an important parameter in  $V_{ADIBLC}$  for long channel devices, because PDIBLC2 will be dominant if the channel is long.

#### **5.7.3** Substrate Current Induced Body Effect (SCBE)

When the electrical field near the drain is very large (> 0.1MV/cm), some electrons coming from the source (in the case of NMOSFETs) will be energetic (hot) enough to cause impact ionization. This will generate electron-hole pairs when these energetic electrons collide with silicon atoms. The substrate current  $I_{sub}$  thus created during impact ionization will

increase exponentially with the drain voltage. A well known  $I_{sub}$  model [8] is

$$I_{sub} = \frac{A_i}{B_i} I_{ds} (V_{ds} - V_{dsat}) \exp \left( -\frac{B_i \cdot litl}{V_{ds} - V_{dsat}} \right)$$
(5.7.11)

Parameters  $A_i$  and  $B_i$  are determined from measurement.  $I_{sub}$  affects the drain current in two ways. The total drain current will change because it is the sum of the channel current as well as the substrate current. The total drain current can now be expressed as follows

$$I_{ds} = I_{ds-w/o-Isub} + I_{sub} = I_{ds-w/o-Isub} \cdot \left[ 1 + \frac{V_{ds} - V_{dsat}}{\frac{B_i}{A_i} \exp\left(\frac{B_i \cdot litl}{V_{ds} - V_{dsat}}\right)} \right]$$

The Early voltage due to the substrate current  $V_{ASCBE}$  can therefore be calculated by

$$V_{ASCBE} = \frac{B_i}{A_i} \exp\left(\frac{B_i \cdot litl}{V_{ds} - V_{dsat}}\right)$$
(5.7.13)

We can see that  $V_{ASCBE}$  is a strong function of  $V_{ds}$ . In addition, we also observe that  $V_{ASCBE}$  is small only when  $V_{ds}$  is large. This is why SCBE is important for devices with high drain voltage bias. The channel length and gate oxide dependence of  $V_{ASCBE}$  comes from  $V_{dsat}$  and litl. We replace  $B_i$  with PSCBE2 and  $A_i/B_i$  with  $PSCBE1/L_{eff}$  to get the following expression for  $V_{ASCBE}$ 

$$\frac{1}{V_{ASCBE}} = \frac{PSCBE2}{L_{eff}} \exp\left(-\frac{PSCBE1 \cdot litl}{V_{ds} - V_{dsat}}\right)$$

#### 5.7.4 Drain-Induced Threshold Shift (DITS) by Pocket Implant

It has been shown that a long-channel device with pocket implant has a smaller  $R_{out}$  than that of uniformly-doped device [3]. The  $R_{out}$  degradation factor F is given in (5.7.6). In addition, the pocket implant introduces a potential barrier at the drain end of the channel. This barrier can be lowered by the drain bias even in long-channel devices. The Early voltage due to DITS is modeled by

$$V_{ADITS} = \frac{1}{PDITS} \cdot F \cdot \left[ 1 + \left( 1 + PDITSL \cdot L_{eff} \right) \exp(PDITSD \cdot V_{ds}) \right]$$

## 5.8 Single-Equation Channel Current Model

The final channel current equation for both linear and saturation regions now becomes

$$I_{ds} = \frac{I_{ds0} \cdot NF}{1 + \frac{R_{ds}I_{ds0}}{V_{dseff}}} \left[ 1 + \frac{1}{C_{clm}} \ln \left( \frac{V_A}{V_{Asat}} \right) \right] \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ADIBL}} \right) \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ADITS}} \right) \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ASCBE}} \right) \cdot$$

where NF is the number of device fingers, and

(5.8.2)

 $V_A$  is written as

(5.8.3)

$$V_{A} = V_{Asat} + V_{ACLM}$$

where  $V_{Asat}$  is

(5.8.4)

$$V_{Asat} = \frac{E_{sat}L_{eff} + V_{dsat} + 2R_{ds}vsatC_{oxe}W_{eff}V_{gsteff} \cdot \left[1 - \frac{A_{bulk}V_{dsat}}{2\left(V_{gsteff} + 2v_{t}\right)}\right]}{R_{ds}vsatC_{oxe}W_{eff}A_{bulk} - 1 + \frac{2}{I}}$$

 $V_{Asat}$  is the Early voltage at  $V_{ds} = V_{dsat}$ .  $V_{Asat}$  is needed to have continuous drain current and output resistance expressions at the transition point between linear and saturation regions.

# 5.9 New Current Saturation Mechanisms: Velocity Overshoot and Source End Velocity Limit Model

## **5.9.1** Velocity Overshoot

In the deep-submicron region, the velocity overshoot has been observed to be a significant effect even though the supply voltage is scaled down according to the channel length. An approximate non-local velocity field expression has proven to provide a good description of this effect

$$v = v_d \left(1 + \frac{l}{E} \frac{\partial E}{\partial x}\right) = \frac{mE}{1 + E / E_c} \left(1 + \frac{l}{E} \frac{\partial E}{\partial x}\right)$$
(5.9.1)

This relationship is then substituted into (5.8.1) and the new current expression including the velocity overshoot effect is obtained:

$$I_{DS,HD} = \frac{I_{DS} \cdot \left(1 + \frac{V_{dseff}}{L_{eff} E_{sat}}\right)}{1 + \frac{V_{dseff}}{L_{eff} E_{sat}^{OV}}}$$

where

$$E_{sat}^{OV} = E_{sat} \left[ 1 + \frac{LAMBDA}{L_{eff} \cdot m_{eff}} \cdot \frac{\left(1 + \frac{V_{ds} - V_{dseff}}{Esat \cdot litl}\right)^{2} - 1}{\left(1 + \frac{V_{ds} - V_{dseff}}{Esat \cdot litl}\right)^{2} + 1} \right]$$

LAMBDA is the velocity overshoot coefficient.

### **5.9.2** Source End Velocity Limit Model

When MOSFETs come to nanoscale, because of the high electric field and strong velocity overshoot, carrier transport through the drain end of the channel is rapid. As a result, the dc current is controlled by how rapidly carriers are transported across a short low-field region near the beginning of the channel. This is known as injection velocity limits at the source end of the channel. A compact model is firstly developed to account for this current saturation mechanism.

Hydro-dynamic transportation gives the source end velocity as:

$$v_{sHD} = I_{DS,HD} / Wq_s$$
 (5.9.4)

where qs is the source end inversion charge density. Source end velocity limit gives the highest possible velocity which can be given through ballistic transport as:

$$v_{sBT} = \frac{1 - r}{1 + r} VTL$$
 (5.9.5)

where *VTL*: thermal velocity, r is the back scattering coefficient which is given:

$$r = \frac{L_{eff}}{XN \cdot L_{eff} + LC} \quad XN \ge 3.0$$

The real source end velocity should be the lower of the two, so a final Unified current expression with velocity saturation, velocity overshoot and source velocity limit can be expressed as:

$$I_{DS} = \frac{I_{DS,HD}}{\left[1 + \left(v_{sHD} / v_{sBT}\right)^{2MM}\right]^{1/2MM}}$$

where MM=2.0.

# **Chapter 6: Body Current Models**

In addition to the junction diode current and gate-to-body tunneling current, the substrate terminal current consists of the substrate current due to impact ionization ( $I_{ii}$ ), and gate-induced drain leakage and source leakage currents ( $I_{GIDL}$  and  $I_{GISL}$ ).

## 6.1 $I_{ii}$ Model

The impact ionization current model in BSIM4 is the same as that in BSIM3v3.2, and is modeled by

$$I_{ii} = \frac{ALPHA0 + ALPHA1 \cdot L_{eff}}{L_{eff}} \left( V_{ds} - V_{dseff} \right) \exp \left( \frac{BETA0}{V_{ds} - V_{dseff}} \right) \cdot I_{dsNoSCBE}$$

where parameters ALPHA0 and BETA0 are impact ionization coefficients; parameter ALPHA1 is introduced to improves the  $I_{ii}$  scalability, and

$$I_{dsNoSCBE} = \frac{I_{ds0} \cdot NF}{1 + \frac{R_{ds}I_{ds0}}{V_{dseff}}} \left[ 1 + \frac{1}{C_{clm}} \ln \left( \frac{V_A}{V_{Asat}} \right) \right] \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ADIBL}} \right) \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ADITS}} \right) \cdot \left( 1 + \frac{V_{ds} - V_{dseff}}{V_{ADITS}}$$

## 6.2 *I<sub>GIDL</sub>* and *I<sub>GISL</sub>* Model

The GIDL/GISL current and its body bias effect are modeled by [9]-[10]

$$I_{GIDL} = AGIDL \cdot W_{effCJ} \cdot Nf \cdot \frac{V_{ds} - V_{gse} - EGIDL}{3 \cdot T_{oxe}} \cdot \exp \left( -\frac{3 \cdot T_{oxe} \cdot BGIDL}{V_{ds} - V_{gse} - EGIDL} \right) \cdot \frac{V_{db}^{3}}{CGIDL + V_{db}^{3}}$$

$$I_{GISL} = AGISL \cdot W_{effCJ} \cdot Nf \cdot \frac{-V_{ds} - V_{gde} - EGISL}{3 \cdot T_{oxe}} \cdot \exp \left( -\frac{3 \cdot T_{oxe} \cdot BGISL}{-V_{ds} - V_{gde} - EGISL} \right) \cdot \frac{V_{sb}^3}{CGISL + V_{sb}^3}$$

where AGIDL, BGIDL, CGIDL and EGIDL are model parameters for the drain side and AGISL, BGISL, CGISL and EGISL are the model parameters for the source side. They are explained in Appendix A. CGIDL and CGISL account for the body-bias dependence of  $I_{GIDL}$  and  $I_{GISL}$  respectively.  $W_{effCJ}$  and Nf are the effective width of the source/drain diffusions and the number of fingers. Further explanation of  $W_{effCJ}$  and Nf can be found in the chapter of the layout-dependence model.

# **Chapter 7: Capacitance Model**

Accurate modeling of MOSFET capacitance plays equally important role as that of the DC model. This chapter describes the methodology and device physics considered in both intrinsic and extrinsic capacitance modeling in BSIM4.0.0. Complete model parameters can be found in Appendix A.

## 7.1 General Description

BSIM4.0.0 provides three options for selecting intrinsic and overlap/fringing capacitance models. These capacitance models come from BSIM3v3.2, and the BSIM3v3.2 capacitance model parameters are used without change in BSIM4. except that separate *CKAPPA* parameters are introduced for the source-side and drain-side overlap capacitances. The BSIM3v3.2 *capMod* = 1 is no longer supported in BSIM4. The following table maps the BSIM4 capacitance models to those of BSIM3v3.2.

BSIM4 capacitance models	Matched capMod in BSIM3v3.2.2
capMod = 0 (simple and piecewise model)	Intrinsic $capMod = 0 + overlap/fringing capMod = 0$
capMod = 1 (single-equation model)	Intrinsic $capMod = 2 + overlap/fringing capMod = 2$
capMod = 2 (default model; singel-equation and charge- thickness model	Intrinsic <i>capMod</i> = 3 + overlap/fringing <i>capMod</i> = 2

Table 7-1. BSIM4 capacitance model options.

BSIM4 capacitance models have the following features:

- Separate effective channel length and width are used for capacitance models.
- *capMod* = 0 uses piece-wise equations. *capMod* = 1 and 2 are smooth and single equation models; therefore both charge and capacitance are continuous and smooth over all regions.
- Threshold voltage is consistent with DC part except for capMod = 0, where a long-channel  $V_{th}$  is used. Therefore, those effects such as body bias, short/narrow channel and DIBL effects are explicitly considered in capMod = 1 and 2.
- Overlap capacitance comprises two parts: (1) a bias-independent component which models the effective overlap capacitance between the gate and the heavily doped source/drain; (2) a gate-bias dependent component between the gate and the lightly doped source/drain region.
- Bias-independent fringing capacitances are added between the gate and source as well as the gate and drain.

# 7.2 Methodology for Intrinsic Capacitance Modeling

#### 7.2.1 Basic Formulation

To ensure charge conservation, terminal charges instead of terminal voltages are used as state variables. The terminal charges  $Q_g$ ,  $Q_b$ ,  $Q_s$ , and  $Q_d$  are the charges associated with the gate, bulk, source, and drain termianls, respectively. The gate charge is comprised of mirror charges from these components: the channel charge  $(Q_{inv})$ , accumulation charge  $(Q_{acc})$  and substrate depletion charge  $(Q_{sub})$ .

The accumulation charge and the substrate charge are associated with the substrate while the channel charge comes from the source and drain terminals

$$\begin{cases} Q_g = -(Q_{sub} + Q_{inv} + Q_{acc}) \\ Q_b = Q_{acc} + Q_{sub} \\ Q_{inv} = Q_s + Q_d \end{cases}$$
 (7.2.1)

The substrate charge can be divided into two components: the substrate charge at zero source-drain bias  $(Q_{sub0})$ , which is a function of gate to substrate bias, and the additional non-uniform substrate charge in the presence of a drain bias  $(dQ_{sub})$ .  $Q_g$  now becomes

$$Q_{g} = -(Q_{inv} + Q_{acc} + Q_{sub0} + dQ_{sub})$$
 (7.2.2)

The total charge is computed by integrating the charge along the channel. The threshold voltage along the channel is modified due to the non-uniform substrate charge by

$$(7.2.3)$$

$$V_{th}(y) = V_{th}(0) + (A_{bulk} - 1)V_{y}$$

$$(7.2.4)$$

$$Q_{c} = W_{active} \int_{0}^{L_{active}} q_{c} dy = -W_{active} C_{oxe} \int_{0}^{L_{active}} (V_{gt} - A_{bulk} V_{y}) dy$$

$$Q_{g} = W_{active} \int_{0}^{L_{active}} q_{g} dy = W_{active} C_{oxe} \int_{0}^{L_{active}} (V_{gt} + V_{th} - V_{FB} - \Phi_{s} - V_{y}) dy$$

$$Q_{b} = W_{active} \int_{0}^{L_{active}} q_{b} dy = -W_{active} C_{oxe} \int_{0}^{L_{active}} (V_{th} - V_{FB} - \Phi_{s} + (A_{bulk} - 1)V_{y}) dy$$

where  $V_{gt} = V_{gse}$  -  $V_{th}$  and

$$dy = \frac{dV_{y}}{E_{y}}$$

where  $E_{y}$  is expressed in

$$I_{ds} = \frac{W_{active} \mathbf{m}_{eff} C_{oxe}}{L_{active}} \left( V_{gt} - \frac{A_{bulk}}{2} V_{ds} \right) V_{ds} = W_{active} \mathbf{m}_{eff} C_{oxe} \left( V_{gt} - A_{bulk} V_{y} \right) E_{y}$$

All capacitances are derived from the charges to ensure charge conservation. Since there are four terminals, there are altogether 16 components. For each component

$$C_{ij} = \frac{\partial Q_i}{\partial V_j}$$

where i and j denote the transistor terminals.  $C_{ij}$  satisfies

$$\sum_{i} C_{ij} = \sum_{j} C_{ij} = 0$$

#### 7.2.2 Short Channel Model

The long-channel charge model assume a constant mobility with no velocity saturation. Since no channel length modulation is considered, the channel charge remains constant in saturation region. Conventional long-channel charge models assume  $V_{dsat,CV} = V_{gt} / A_{bulk}$  and therefore is independent of channel length. If we define a drain bias,  $V_{dsat,CV}$ , for capacitance modeling, at which the channel charge becomes constant, we will find that  $V_{dsat,CV}$  in general is larger than  $V_{dsat}$  for I-V but smaller than the long-channel  $V_{dsat} = V_{gt} / A_{bulk}$ . In other words,

$$V_{dsat,IV} < V_{dsat,CV} < V_{dsat,IV} \bigg|_{Lactive \to \infty} = \frac{V_{gsteff,CV}}{A_{bulk}}$$

and  $V_{dsat,CV}$  is modeled by

$$V_{dsat,CV} = \frac{V_{gsteff,CV}}{A_{bulk} \cdot \left[1 + \left(\frac{CLC}{L_{active}}\right)^{CLE}\right]}$$
(7.2.8)

$$V_{gsteff,CV} = NOFF \cdot nv_t \cdot \ln \left[ 1 + \exp \left( \frac{V_{gse} - V_{th} - VOFFCV}{NOFF \cdot nv_t} \right) \right]$$

Model parameters CLC and CLE are introduced to consider the effect of channel-length modulation.  $A_{bulk}$  for the capacitance model is modeled by

$$A_{bulk} = \left\{1 + F\_doping \cdot \left[\frac{A0 \cdot L_{eff}}{L_{eff} + 2\sqrt{XJ \cdot X_{dep}}} \cdot + \frac{B0}{W_{eff}} \right] \cdot \right\} \frac{1}{1 + KETA \cdot V_{bseff}}$$

where

$$F_{-}doping = \frac{\sqrt{1 + LPEB/L_{eff}}K_{1ox}}{2\sqrt{\Phi_{s} - V_{bseff}}} + K_{2ox} - K3B\frac{TOXE}{W_{eff}' + W0}\Phi_{s}$$

### 7.2.3 Single Equation Formulation

Traditional MOSFET SPICE capacitance models use piece-wise equations. This can result in discontinuities and non-smoothness at transition regions. The following describes single-equation formulation for charge, capacitance and voltage modeling in  $\it capMod = 1$  and 2.

#### (a) Transition from depletion to inversion region

The biggest discontinuity is at threshold voltage where the inversion capacitance changes abruptly from zero to  $C_{oxe}$ . Concurrently, since the substrate charge is a constant, the substrate capacitance drops abruptly to

#### **Methodology for Intrinsic Capacitance Modeling**

zero at threshold voltage. The BSIM4 charge and capacitance models are formulated by substituting  $V_{gst}$  with  $V_{gsteff,CV}$  as

$$Q(V_{gst}) = Q(V_{gsteff,CV})$$
(7.2.11)

For capacitance modeling

$$C(V_{gst}) = C(V_{gsteff,CV}) \frac{\partial V_{gsteff,CV}}{V_{g,d,s,b}}$$
(7.2.12)

#### (b) Transition from accumulation to depletion region

An effective smooth flatband voltage  $V_{FBeff}$  is used for the accumulation and depletion regions.

$$(7.2.13)$$

$$V_{FBeff} = V_{fbzb} - 0.5 \left[ \left( V_{fbzb} - V_{gb} - 0.02 \right) + \sqrt{\left( V_{fbzb} - V_{gb} - 0.02 \right)^2 + 0.08 V_{fbzb}} \right]$$

where

$$V_{fbzb} = V_{th} \Big|_{zeroV_{bs} \, and \, V_{ds}} - \Phi_s - K1 \sqrt{\Phi_s}$$
 (7.2.14)

A bias-independent  $V_{th}$  is used to calculate  $V_{fbzb}$  for capMod = 1 and 2. For capMod = 0, VFBCV is used instead (refer to Appendix A).

## **Methodology for Intrinsic Capacitance Modeling**

## (c) Transition from linear to saturation region

An effective  $V_{ds}$ ,  $V_{cveff}$ , is used to smooth out the transition between linear and saturation regions.

$$V_{cveff} = V_{dsat,CV} - 0.5 V_4 + \sqrt{V_4^2 + 4 \boldsymbol{d}_4 V_{dsat,CV}} \quad where V_4 = V_{dsat,CV} - V_{ds} - \boldsymbol{d}_4; \, \boldsymbol{d}_4 = 0.02 V$$

## 7.2.4 Charge partitioning

The inversion charges are partitioned into  $Q_{inv} = Q_s + Q_d$ . The ratio of  $Q_d$  to  $Q_s$  is the charge partitioning ratio. Existing charge partitioning schemes are 0/100, 50/50 and 40/60 (XPART = 1, 0.5 and 0).

## 50/50 charge partition

This is the simplest of all partitioning schemes in which the inversion charges are assumed to be contributed equally from the source and drain terminals.

### 40/60 charge partition

This is the most physical model of the three partitioning schemes in which the channel charges are allocated to the source and drain terminals by assuming a linear dependence on channel position *y*.

(7.2.16)

$$\begin{cases} Q_{s} = W_{active} \int_{0}^{L_{active}} q_{c} \left(1 - \frac{y}{L_{active}}\right) dy \\ Q_{d} = W_{active} \int_{0}^{L_{active}} q_{c} \frac{y}{L_{active}} dy \end{cases}$$

### 0/100 charge partition

In fast transient simulations, the use of a quasi-static model may result in a large unrealistic drain current spike. This partitioning scheme is developed to artificially suppress the drain current spike by assigning all inversion charges in the saturation region to the source electrode. Notice that this charge partitioning scheme will still give drain current spikes in the linear region and aggravate the source current spike problem.

## 7.3 Charge-Thickness Capacitance Model (CTM)

Current MOSFET models in SPICE generally overestimate the intrinsic capacitance and usually are not smooth at  $V_{fb}$  and  $V_{th}$ . The discrepancy is more pronounced in thinner  $T_{ox}$  devices due to the assumption of inversion and accumulation charge being located at the interface. Numerical quantum simulation results in Figure 7-1 indicate the significant charge thickness in all regions of operation.

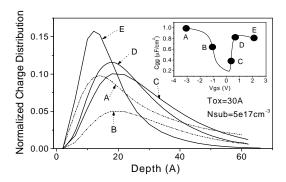


Figure 7-1. Charge distribution from numerical quantum simulations show significant charge thickness at various bias conditions shown in the inset.

CTM is a charge-based model and therefore starts with the DC charge thicknss,  $X_{DC}$ . The charge thicknss introduces a capacitance in series with  $C_{ox}$  as illustrated in Figure 7-2, resulting in an effective  $C_{oxeff}$ . Based on numerical self-consistent solution of Shrodinger, Poisson and Fermi-Dirac equations, universal and analytical  $X_{DC}$  models have been developed.  $C_{oxeff}$  can be expressed as

$$C_{oxeff} = \frac{C_{oxp} \times C_{cen}}{C_{oxp} + C_{cen}}$$
(7.3.1)

where

$$C_{cen} = \frac{e_{si}}{X_{DC}}$$

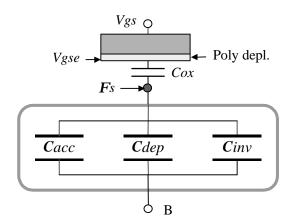


Figure 7-2. Charge-thickness capacitance concept in CTM.  $V_{\it gse}$  accounts for the poly depletion effect.

## (i) $X_{DC}$ for accumulation and depletion

The DC charge thickness in the accumulation and depletion regions can be expressed by

$$X_{DC} = \frac{1}{3} L_{debye} exp \left[ ACDE \cdot \left( \frac{NDEP}{2 \times 10^{16}} \right)^{-0.25} \cdot \frac{V_{gse} - V_{bseff} - V_{FBeff}}{TOXP} \right]$$

where  $L_{debye}$  is Debye length, and  $X_{DC}$  is in the unit of cm and  $(V_{gse} - V_{bseff} - V_{FBeff})$ / TOXP is in units of MV/cm. For numerical statislity, (7.3.2) is replaced by (7.3.3)

$$X_{DC} = X_{\text{max}} - \frac{1}{2} \left( X_0 + \sqrt{X_0^2 + 4 d_x X_{\text{max}}} \right)$$
 (7.3.3)

### **Charge-Thickness Capacitance Model (CTM)**

where

$$X_0 = X_{\text{max}} - X_{DC} - \boldsymbol{d}_x$$

and  $X_{max} = L_{debve} / 3$ ;  $\delta_x = 10^{-3} TOXE$ .

### (ii) $X_{DC}$ of inversion charge

The inversion charge layer thichness can be formulated as

$$X_{DC} = \frac{1.9 \times 10^{-9} \text{ m}}{1 + \left(\frac{V_{gsteff} + 4(VTH \, 0 - VFB - \Phi_s)}{2TOXP}\right)^{0.7}}$$

Through the VFB term, equation (7.3.4) is found to be applicable to  $N^+$  or  $P^+$  poly-Si gates and even other future gate materials.

### (iii) Body charge thickness in inversion

In inversion region, the body charge thickness effect is modeled by including the deviation of the surface potential  $\Phi_s$  (bias-dependence) from  $2\Phi_B$  [2]

$$\mathbf{j}_{d} = \Phi_{s} - 2\Phi_{B} = \mathbf{n}_{t} \ln \left( 1 + \frac{V_{gsteffCV} \cdot (V_{gsteffCV} + 2K_{lox} \sqrt{2\Phi_{B}})}{MOIN \cdot K_{lox}^{2} \mathbf{n}_{t}} \right)$$

The channel charge density is therefore derived as

$$q_{inv} = -C_{oxeff} \times \left(V_{gsteff,CV} - \boldsymbol{j}_{d}\right)_{eff}$$
 (7.3.6)

where

$$(7.3.7)$$

$$(V_{gsteff,CV} - \boldsymbol{j}_{d})_{eff} = 0.5 \cdot \left[ (V_{gsteff,CV} - \boldsymbol{j}_{d} - 0.001) + \sqrt{(V_{gsteff,CV} - \boldsymbol{j}_{d} - 0.001)^{2} + V_{gsteff,CV} \cdot 0.004} \right]$$

## 7.4 Intrinsic Capacitance Model Equations

## $7.4.1 \ capMod = 0$

## **Accumulation region**

$$Q_g = W_{active} L_{active} C_{oxe} (V_{gs} - V_{bs} - VFBCV)$$
 
$$Q_{sub} = -Q_g$$
 
$$Q_{inv} = 0$$

## **Subthreshold region**

$$\begin{aligned} Q_{sub0} &= -W_{active} L_{active} C_{oxe} \cdot \frac{K_{lox}^{2}}{2} \left( -1 + \sqrt{1 + \frac{4(V_{gs} - VFBCV - V_{bs})}{K_{lox}^{2}}} \right) \\ Q_{g} &= -Q_{sub0} \\ Q_{inv} &= 0 \end{aligned}$$

### **Strong inversion region**

$$V_{dsat,cv} = \frac{V_{gs} - V_{th}}{A_{bulk}'}$$

$$A_{bulk}' = A_{bulk} \left( 1 + \left( \frac{CLC}{L_{eff}} \right)^{CLE} \right)$$

$$V_{th} = VFBCV + \Phi_s + K_{lox} \sqrt{\Phi_s - V_{bseff}}$$

## Linear region

$$Q_{g} = C_{oxe}W_{active}L_{active} \left(V_{gs} - VFBCV - \Phi_{s} - \frac{V_{ds}}{2} + \frac{A_{bulk}'V_{ds}^{2}}{12\left(V_{gs} - V_{th} - \frac{A_{bulk}'V_{ds}}{2}\right)}\right)$$

$$Q_{b} = C_{oxe} W_{active} L_{active} \left( VFBCV - V_{th} - \Phi_{s} + \frac{(1 - A_{bulk}')V_{ds}}{2} - \frac{(1 - A_{bulk}')A_{bulk}'V_{ds}^{2}}{12\left(V_{gs} - V_{th} - \frac{A_{bulk}'V_{ds}}{2}\right)} \right)$$

### 50/50 partitioning:

$$Q_{inv} = -C_{oxe}W_{active}L_{active} \left(V_{gs} - V_{th} - \Phi_s - \frac{A_{bulk}'V_{ds}}{2} + \frac{A_{bulk}'^2 V_{ds}^2}{12\left(V_{gs} - V_{th} - \frac{A_{bulk}'V_{ds}}{2}\right)}\right)$$

$$Q_s = Q_d = 0.5Q_{inv}$$

40/60 partitioning:

$$Q_{d} = -C_{oxe}W_{active}L_{active} \left( \frac{V_{gs} - V_{th}}{2} - \frac{A_{bulk} V_{ds} + \frac{A_{bulk} V_{ds} \left[ \frac{(V_{gs} - V_{th})^{2}}{6} - \frac{A_{bulk} V_{ds} (V_{gs} - V_{th})}{8} + \frac{(A_{bulk} V_{ds})^{2}}{40} \right]}{12(V_{gs} - V_{th} - \frac{A_{bulk} V_{ds}}{2})^{2}} \right)$$

$$Q_{s} = -(Q_{g} + Q_{b} + Q_{d})$$

0/100 partitioning:

$$Q_d = -C_{oxe}W_{active}L_{active}\left(\frac{V_{gs} - V_{th}}{2} + \frac{A_{bulk}'V_{ds}}{4} - \frac{(A_{bulk}'V_{ds})^2}{24}\right)$$

$$Q_s = -(Q_g + Q_b + Q_d)$$

Saturation region

$$Q_{g} = C_{oxe}W_{active}L_{active}\left(V_{gs} - VFBCV - \Phi_{s} - \frac{V_{dsat}}{3}\right)$$

$$Q_{b} = -C_{oxe}W_{active}L_{active}\left(VFBCV + \Phi_{s} - V_{th} + \frac{(1 - A_{bulk}')V_{dsat}}{3}\right)$$

50/50 partitioning:

$$Q_s = Q_d = -\frac{1}{3}C_{oxe}W_{active}L_{active}(V_{gs} - V_{th})$$

40/60 partitioning:

$$Q_{d} = -\frac{4}{15} C_{oxe} W_{active} L_{active} (V_{gs} - V_{th})$$

$$Q_{s} = -(Q_{g} + Q_{b} + Q_{d})$$

0/100 partitioning:

$$Q_d = 0$$

$$Q_s = -(Q_g + Q_b)$$

## $7.4.2 \ capMod = 1$

$$Q_g = -(Q_{inv} + Q_{acc} + Q_{sub0} + \mathbf{d}Q_{sub})$$

$$Q_b = -(Q_{acc} + Q_{sub0} + \mathbf{d}Q_{sub})$$

$$Q_{inv} = Q_s + Q_d$$

$$\begin{split} Q_{acc} &= -W_{active} L_{active} C_{oxe} \cdot \left( V_{FBeff} - V_{fbzb} \right) \\ Q_{sub0} &= -W_{active} L_{active} C_{oxe} \cdot \frac{{K_{lox}}^2}{2} \cdot \left[ -1 + \sqrt{1 + \frac{4 \left( V_{gse} - V_{FBeff} - V_{gsteff} - V_{bseff} \right)}{{K_{lox}}^2}} \, \right] \\ V_{dsat,cv} &= \frac{V_{gsteffcv}}{A_{bulk}} \end{split}$$

$$Q_{inv} = -W_{active}L_{active}C_{oxe} \cdot \left[V_{gsteff,cv} - \frac{1}{2}A_{bulk}'V_{cveff} + \frac{A_{bulk}'^2V_{cveff}^2}{12 \cdot \left(V_{gsteff,cv} - \frac{A_{bulk}'^2V_{cveff}}{2}\right)}\right]$$

$$\boldsymbol{dQ_{sub}} = W_{active} L_{active} C_{oxe} \cdot \left[ \frac{1 - A_{bulk}'}{2} V_{cveff} - \frac{\left(1 - A_{bulk}'\right) \cdot A_{bulk}' V_{cveff}'}{12 \cdot \left(V_{gsteff,cv} - \frac{A_{bulk}' V_{cveff}'}{2}\right)} \right]$$

50/50 charge partitioning:

$$Q_{S} = Q_{D} = -\frac{W_{active}L_{active}C_{oxe}}{2} \left[ V_{gsteff,cv} - \frac{1}{2}A_{bulk}'V_{cveff} + \frac{A_{bulk}'^{2}V_{cveff}^{2}}{12 \cdot \left(V_{gsteff,cv} - \frac{A_{bulk}'V_{cveff}}{2}\right)} \right]$$

40/60 charge partitioning:

$$Q_{S} = -\frac{W_{active}L_{active}C_{oxe}}{2\left(V_{gsteff,cv} - \frac{A_{bulk}'V_{cveff}}{2}\right)^{2}} \begin{bmatrix} V_{gsteff,cv}^{3} - \frac{4}{3}V_{gsteff,cv}^{2}A_{bulk}'V_{cveff} \\ + \frac{2}{3}V_{gsteff,cv}\left(A_{bulk}'V_{cveff}\right)^{2} - \frac{2}{15}\left(A_{bulk}'V_{cveff}\right)^{3} \end{bmatrix}$$

$$Q_{D} = -\frac{W_{active}L_{active}C_{oxe}}{2\left(V_{gsteff,cv} - \frac{A_{bulk}'V_{cveff}}{2}\right)^{2}} \begin{bmatrix} V_{gsteff,cv}^{3} - \frac{5}{3}V_{gsteff,cv}^{2}A_{bulk}'V_{cveff} \\ + V_{gsteff,cv}(A_{bulk}'V_{cveff})^{2} - \frac{1}{5}(A_{bulk}'V_{cveff})^{3} \end{bmatrix}$$

0/100 charge partitioning:

$$Q_{S} = -\frac{W_{active}L_{active}C_{oxe}}{2} \cdot \left[V_{gsteff,cv} + \frac{1}{2}A_{bulk}'V_{cveff} - \frac{A_{bulk}'^{2}V_{cveff}^{2}}{12 \cdot \left(V_{gsteff,cv} - \frac{A_{bulk}'^{2}V_{cveff}'}{2}\right)}\right]$$

$$Q_{D} = -\frac{W_{active}L_{active}C_{oxe}}{2} \cdot \left[V_{gsteff,cv} - \frac{3}{2}A_{bulk}'V_{cveff} + \frac{A_{bulk}'^{2}V_{cveff}^{2}}{4 \cdot \left(V_{gsteff,cv} - \frac{A_{bulk}'V_{dveff}}{2}\right)}\right]$$

## $7.4.3 \ capMod = 2$

$$\begin{split} Q_{acc} = & W_{active} L_{active} C_{oxeff} \cdot V_{gbacc} \\ \\ V_{gbacc} = & \frac{1}{2} \cdot \left[ V_0 + \sqrt{V_0^2 + 0.08 V_{fbzb}} \right] \\ \\ V_0 = & V_{fbzb} + V_{bxeff} - V_{es} - 0.02 \end{split}$$

$$\begin{aligned} V_{cveff} &= V_{dsat} - \frac{1}{2} \cdot \left( V_1 + \sqrt{V_1^2 + 0.08V_{dsat}} \right) \\ V_1 &= V_{dsat} - V_{ds} - 0.02 \\ V_{dsat} &= \frac{V_{gsteff,cv} - \boldsymbol{j}_d}{A_{bulk}'} \\ \boldsymbol{j}_d &= \boldsymbol{\Phi}_s - 2\boldsymbol{\Phi}_B = \boldsymbol{n}_t \ln \left( 1 + \frac{V_{gsteffCV} \cdot (V_{gsteffCV} + 2K_{lox} \sqrt{2\boldsymbol{\Phi}_B})}{MOIN \cdot K_{lox}^2 \boldsymbol{n}_t} \right) \end{aligned}$$

$$\begin{split} \left(V_{gsteff,CV} - \boldsymbol{j}_{\boldsymbol{d}}\right)_{eff} &= 0.5 \cdot \left[ \left(V_{gsteff,CV} - \boldsymbol{j}_{\boldsymbol{d}} - 0.001\right) + \sqrt{\left(V_{gsteff,CV} - \boldsymbol{j}_{\boldsymbol{d}} - 0.001\right)^2 + V_{gsteff,CV} \cdot 0.004} \right] \\ Q_{sub0} &= -W_{active} L_{active} C_{oxeff} \cdot \frac{K_{1ox}^2}{2} \cdot \left[ -1 + \sqrt{1 + \frac{4\left(V_{gse} - V_{FBeff} - V_{bseffs} - V_{gsteff,cV}\right)}{K_{1ox}^2}} \right] \end{split}$$

$$Q_{inv} = -W_{active}L_{active}C_{oxeff} \times \hat{e}_{\hat{e}}^{\hat{e}} \left(V_{gsteff,cv} - j_{d}\right)_{eff} - \frac{1}{2}A_{bulk}'V_{cveff} + \frac{A_{bulk}'^{2}V_{cveff}^{2}}{12\times \hat{c}_{\hat{e}}^{\hat{e}} \left(V_{gsteff,cv} - j_{d}\right)_{eff}} - \frac{A_{bulk}'V_{cveff}}{2} \hat{e}_{\hat{u}}^{\hat{u}\hat{u}}$$

$$\boldsymbol{dQ_{sub}} = W_{active} L_{active} C_{oxeff} \cdot \left[ \frac{1 - A_{bulk}'}{2} V_{cveff} - \frac{\left(1 - A_{bulk}'\right) \cdot A_{bulk}' V_{cveff}^2}{12 \cdot \left(V_{gsteff,cv} - \boldsymbol{j_d} - \frac{A_{bulk}' V_{cveff}}{2}\right)} \right]$$

50/50 partitioning:

$$Q_{S} = Q_{D} = -\frac{W_{active}L_{active}C_{oxeff}}{2} \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{e}}} V_{gsteff,cv} - j_{d} - \frac{1}{2}A_{bulk} V_{cveff} + \frac{A_{bulk} V_{cveff}}{12 \times \overset{\acute{e}}{\hat{e}}} (V_{gsteff,cv} - j_{d})_{eff} - \frac{A_{bulk} V_{cveff}}{\overset{\acute{e}}{\hat{e}}} - \frac{\overset{\grave{u}}{\hat{u}}}{\overset{\acute{e}}{\hat{u}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{u}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{u}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{e}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{e}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}}{\overset{\acute{e}}{\hat{e}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}} (V_{cveff}) - \frac{\overset{\acute{e}}{\hat{e}}} (V_{$$

40/60 partitioning:

$$Q_{S} = -\frac{W_{active}L_{active}C_{oxeff}}{2\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)^{3} - \frac{4}{3}\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)^{2}A_{bulk}'V_{cveff}}{2\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)^{2}A_{bulk}'V_{cveff}} + \frac{2}{3}\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)\left(A_{bulk}'V_{cveff}\right)^{2} - \frac{2}{15}\left(A_{bulk}'V_{cveff}\right)^{3}\right]$$

$$Q_{D} = -\frac{W_{active}L_{active}C_{oxeff}}{2\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)^{2} - \frac{5}{3}\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)^{2}A_{bulk}'V_{cveff}}{+\left(V_{gsteff,cv} - \boldsymbol{j}_{d}\right)\left(A_{bulk}'V_{cveff}\right)^{2} - \frac{1}{5}\left(A_{bulk}'V_{cveff}\right)^{3}}\right]$$

0/100 partitioning:

$$Q_{S} = -\frac{W_{active}L_{active}C_{oxeff}}{2} \cdot \left[ V_{gsteff,cv} - \boldsymbol{j}_{d} + \frac{1}{2}A_{bulk}'V_{cveff} - \frac{A_{bulk}'^{2}V_{cveff}^{2}}{12 \cdot \left(V_{gsteff,cv} - \boldsymbol{j}_{d} - \frac{A_{bulk}'^{2}V_{cveff}'}{2}\right)} \right]$$

$$Q_{D} = -\frac{W_{active}L_{active}C_{oxeff}}{2} \times \hat{\hat{\mathbf{e}}}_{\hat{\mathbf{e}}}^{\hat{\mathbf{e}}} \left(V_{gsteff,cv} - j_{d}\right)_{eff} - \frac{3}{2}A_{bulk}'V_{cveff} + \frac{A_{bulk}'^{2}V_{cveff}^{2}}{4 \times \hat{\mathbf{e}}} \left(V_{gsteff,cv} - j_{d}\right)_{eff} - \frac{A_{bulk}'V_{dveff}}{2} \frac{\hat{\mathbf{o}}\hat{\mathbf{u}}}{\hat{\mathbf{u}}\hat{\mathbf{u}}} \right)$$

## 7.5 Fringing/Overlap Capacitance Models

## 7.5.1 Fringing capacitance model

The fringing capacitance consists of a bias-independent outer fringing capacitance and a bias-dependent inner fringing capacitance. Only the bias-independent outer fringing capacitance (CF) is modeled. If CF is not given, it is calculated by

(7.5.1)

$$CF = \frac{2 \cdot EPSROX \cdot \varepsilon_0}{\pi} \cdot \log\left(1 + \frac{4.0e - 7}{TOXE}\right)$$

## 7.5.2 Overlap capacitance model

An accurate overlap capacitance model is essential. This is especially true for the drain side where the effect of the capacitance is amplified by the transistor gain. In old capacitance models this capacitance is assumed to be bias independent. However, experimental data show that the overlap capacitance changes with gate to source and gate to drain biases. In a single drain structure or the heavily doped S/D to gate overlap region in a LDD structure the bias dependence is the result of depleting the surface of the source and drain regions. Since the modulation is expected to be very small, we can model this region with a constant capacitance. However in LDD MOSFETs a substantial portion of the LDD region can be depleted, both in the vertical and lateral directions. This can lead to a large reduction of the overlap capacitance. This LDD region can be in accumulation or depletion. We use a single equation for both regions by using such smoothing parameters as  $V_{gs,overlap}$  and  $V_{gd,overlap}$  for the source and drain side, respectively. Unlike the case with the intrinsic capacitance, the overlap capacitances are reciprocal. In other words,  $C_{gs,overlap} = C_{sg,overlap}$ and  $C_{gd,overlap} = C_{dg,overlap}$ .

If capMod is non-zero, BSIM4 uses the bias-dependent overlap capacitance model; otherwise, a simple bias-independent model will be used.

### Bias-dependent overlap capacitance model

### (i) Source side

$$\frac{Q_{overlap,s}}{W_{active}} = CGSO \cdot V_{gs} + CGSI \left( V_{gs} - V_{gs,overlap} - \frac{CKAPPAS}{2} \left( -1 + \sqrt{1 - \frac{4V_{gs,overlap}}{CKAPPAS}} \right) \right)$$

$$V_{gs,overlap} = \frac{1}{2} \left( V_{gs} + \mathbf{d}_1 - \sqrt{(V_{gs} + \mathbf{d}_1)^2 + 4\mathbf{d}_1} \right) \quad \mathbf{d}_1 = 0.02V$$

$$(7.5.3)$$

### (ii) Drain side

$$\begin{split} \frac{Q_{overlap,d}}{W_{active}} &= CGDO \cdot V_{gd} + CGDL \\ V_{gd} - V_{gd,overlap} - \frac{CKAPPAD}{2} \\ \left( -1 + \sqrt{1 - \frac{4V_{gd,overlap}}{CKAPPAD}} \right) \end{split}$$
 (7.5.5) 
$$V_{gd,overlap} &= \frac{1}{2} \left( V_{gd} + \boldsymbol{d}_1 - \sqrt{\left( V_{gd} + \boldsymbol{d}_1 \right)^2 + 4\boldsymbol{d}_1} \right) \quad \boldsymbol{d}_1 = 0.02V \end{split}$$

### (iii) Gate Overlap Charge

$$Q_{overlap,g} = -\left(Q_{overlap,d} + Q_{overlap,s} + \left(CGBO \cdot L_{active}\right) \cdot V_{gb}\right)$$

where *CGBO* is a model parameter, which represents the gate-to-body overlap capacitance per unit channel length.

### Bias-independent overlap capacitance model

If *capMod* = 0, a bias-independent overlap capacitance model will be used. In this case, model parameters *CGSL*, *CGDL*, *CKAPPAS* and *CKAPPD* all have no effect.

The gate-to-source overlap charge is expressed by

$$Q_{overlap,s} = W_{active} \cdot CGSO \cdot V_{gs}$$

The gate-to-drain overlap charge is calculated by

$$Q_{overlap,d} = W_{active} \cdot CGDO \cdot V_{gd}$$

The gate-to-substrate overlap charge is computed by

$$Q_{overlap,b} = L_{active} \cdot CGBO \cdot V_{gb}$$

### **Default** *CGSO* **and** *CGDO*

If *CGSO* and *CGDO* (the overlap capacitances between the gate and the heavily doped source/drain regions, respectively) are not given, they will be calculated. Appendix A gives the information on how *CGSO*, *CGDO* and *CGBO* are calculated.

## **Chapter 8: High-Speed/RF Models**

As circuit speed and operating frequency rise, the need for accurate prediction of circuit performance near cut-off frequency or under very rapid transient operation becomes critical. BSIM4.0.0 provides a set of accurate and efficient high-speed/RF (radio frequency) models which consist of three modules: charge-deficit non-quasi-static (NQS) model, intrinsic-input resistance (IIR) model (bias-dependent gate resistance model), and substrate resistance network model. The charge-deficit NQS model comes from BSIM3v3.2 NQS model [11] but many improvements are added in BSIM4. The IIR model considers the effect of channel-reflected gate resistance and therefore accounts for the first-order NQS effect [12]. Thus, the charge-deficit NQS model and the IIR model should not be turned on simultaneously. These two models both work with multi-finger configuration. The substrate resistance model does not include any geometry dependence.

## 8.1 Charge-Deficit Non-Quasi-Static (NQS) Model

BSIM4 uses two separate model selectors to turn on or off the charge-deficit NQS model in transient simulation (using *trnqsMod*) and AC simulation (using *acnqsMod*). The AC NQS model does not require the internal NQS charge node that is needed for the transient NQS model. The transient and AC NQS models are developed from the same fundamental physics: the channel/gate charge response to the external signal are relaxation-time (*t*) dependent and the transcapacitances

and transconductances (such as  $G_m$ ) for AC analysis can therefore be expressed as functions of iwt.

MOSFET channel region is analogous to a bias-dependent RC distributed transmission line (Figure 8-1a). In the Quasi-Static (QS) approach, the gate capacitor node is lumped with the external source and drain nodes (Figure 8-1b). This ignores the finite time for the channel charge to build-up. One way to capture the NQS effect is to represent the channel with *n* transistors in series (Figure 8-1c), but it comes at the expense of simulation time. The BSIM4 charge-deficit NQS model uses Elmore equivalent circuit to model channel charge build-up, as illustrated in Figure 8-1d..

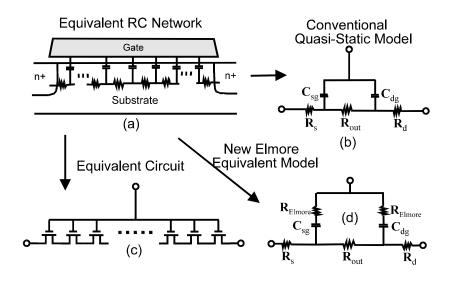


Figure 8-1. Quasi-Static and Non-Quasi-Static models for SPICE analysis.

### **8.1.1** The Transient Model

The transient charge-deficit NQS model can be turned on by setting trnqsMod = 1 and off by setting trnqsMod = 0.

Figure 8-2 shows the RC sub-circuit of charge deficit NQS model for transient simulation [13]. An internal node,  $Q_{def}(t)$ , is created to keep track of the amount of deficit/surplus channel charge necessary to reach equilibrium. The resistance R is determined from the RC time constant (t). The current source  $i_{cheq}(t)$  represents the equilibrium channel charging effect. The capacitor C is to be the value of  $C_{fact}$  (with a typical value of  $1 \times 10^{-9}$  Farad [11]) to improve simulation accuracy.  $Q_{def}$  now becomes

$$Q_{def}(t) = V_{def} \times C_{fact}$$
(8.1.1)

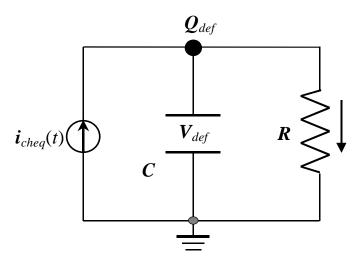


Figure 8-2. Charge deficit NQS sub-circuit for transient analysis.

Considering both the transport and charging component, the total current related to the terminals D, G and S can be written as

$$(8.1.2)$$

$$i_{D,G,S}(t) = I_{D,G,S}(DC) + \frac{\partial Q_{d,g,s}(t)}{\partial t}$$

Based on the relaxation time approach, the terminal charge and corresponding charging current are modeled by

$$Q_{def}(t) = Q_{cheq}(t) - Q_{ch}(t)$$
(8.1.3)

and

$$\frac{\partial Q_{def}(t)}{\partial t} = \frac{\partial Q_{cheq}(t)}{\partial t} - \frac{Q_{def}(t)}{t}$$
(8.1.4a)
$$(8.1.4b)$$

$$\frac{\partial Q_{d,g,s}(t)}{\partial t} = D, G, S_{xpart} \frac{Q_{def}(t)}{t}$$
 where  $D, G, S_{xpart}$  are charge deficit NQS channel charge partitioning

number for terminals D, G and S, respectively;  $D_{xpart} + S_{xpart} = 1$  and  $G_{xpart} = -1$ .

The transit time t is equal to the product of  $R_{ii}$  and  $W_{eff}L_{eff}C_{oxe}$ , where  $R_{ii}$  is the intrinsic-input resistance [12] given by

(8.1.5)

$$\frac{1}{R_{ii}} = XRCRG1 \cdot \left( \frac{I_{ds}}{V_{dseff}} + XRCRG2 \cdot \frac{W_{eff} \mathbf{m}_{eff} C_{oxeff} k_{B}T}{qL_{eff}} \right)$$

where  $C_{oxeff}$  is the effective gate dielectric capacitance calculated from the DC model. Note that  $R_{ii}$  in (8.1.5) considers both the drift and diffusion componets of the channel conduction, each of which dominates in inversion and subthreshold regions, respectively.

### 8.1.2 The AC Model

Similarly, the small-signal AC charge-deficit NQS model can be turned on by setting acnqsMod = 1 and off by setting acnqsMod = 0.

For small signals, by substituting (8.1.3) into (8.1.4b), it is easy to show that in the frequency domain,  $Q_{ch}(t)$  can be transformed into

$$\Delta Q_{ch}(t) = \frac{\Delta Q_{cheq}(t)}{1 + j\mathbf{wt}}$$
(8.1.6)

where  $\mathbf{w}$  is the angular frequency. Based on (8.1.6), it can be shown that the transcapacitances  $C_{gi}$ ,  $C_{si}$ , and  $C_{di}$  (i stands for any of the G, D, S and B terminals of the device) and the channel transconductances  $G_m$ ,  $G_{ds}$ , and  $G_{mbs}$  all become complex quantities. For example, now  $G_m$  have the form of

$$G_{m} = \frac{G_{m0}}{1 + \mathbf{w}^{2} \mathbf{t}^{2}} + j \left( -\frac{G_{m0} \cdot \mathbf{w} \mathbf{t}}{1 + \mathbf{w}^{2} \mathbf{t}^{2}} \right)$$
(8.1.7)

and

$$C_{dg} = \frac{C_{dg0}}{1 + \mathbf{w}^2 \mathbf{t}^2} + j \left( -\frac{C_{dg0} \cdot \mathbf{w} \mathbf{t}}{1 + \mathbf{w}^2 \mathbf{t}^2} \right)$$
 (8.1.8)

Those quantities with sub "0" in the above two equations are known from OP (operating point) analysis.


## 8.2 Gate Electrode Electrode and Intrinsic-Input Resistance (IIR) Model

## **8.2.1** General Description

BSIM4 provides four options for modeling gate electrode resistance (bias-independent) and intrinsic-input resistance (IIR, bias-dependent). The IIR model considers the relaxation-time effect due to the distributive RC nature of the channel region, and therefore describes the first-order non-quasi-static effect. Thus, the IIR model should not be used together with the charge-deficit NQS model at the same time. The model selector *rgateMod* is used to choose different options.


## 8.2.2 Model Option and Schematic

### <u>rgateMod</u> = 0 (zero-resistance):



In this case, no gate resistance is generated.

### <u>rgateMod</u> = 1 (constant-resistance):

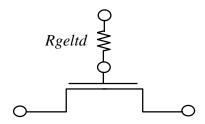


In this case, only the electode gate resistance (bias-independent) is generated by adding an internal gate node. Rgeltd is give by

(8.1.9)

$$Rgeltd = \frac{RSHG \cdot \left( XGW + \frac{W_{effcj}}{3 \cdot NGCON} \right)}{NGCON \cdot \left( L_{drawn} - XGL \right) \cdot NF}$$


Refer to Chapter 7 for the layout parameters in the above equation.

### **rgateMod** = 2 (IIR model with variable resistance):

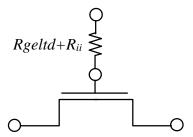

In this case, the gate resistance is the sum of the electrode gate resistance (8.1.9) and the intrinsic-input resistance  $R_{ii}$  as given by (8.1.5). An internal gate node will be generated. trnqsMod = 0 (default) and acnqsMod = 0 (default) should be selected for this case.

<u>rgateMod</u> = 3 (IIR model with two nodes):

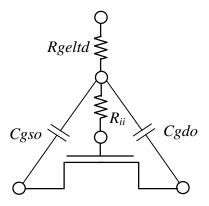

In this case, the gate electrode resistance given by (8.1.9) is in series with the intrinsic-input resistance  $R_{ii}$  as given by (8.1.5) through two internal gate nodes, so that the overlap capacitance current will not pass through the intrinsic-input resistance. trnqsMod = 0 (default) and acnqsMod = 0 (default) should be selected for this case.

## **8.3 Substrate Resistance Network**

## **8.3.1** General Description

For CMOS RF circuit simulation, it is essential to consider the high frequency coupling through the substrate. BSIM4 offers a flexible built-in substrate resistance network. This network is constructed such that little simulation efficiency penalty will result. Note that the substrate resistance parameters as listed in Appendix A should be extracted for the total device, not on a per-finger basis.

## 8.3.2 Model Selector and Topology

The model selector *rbodyMod* can be used to turn on or turn off the resistance network.

### $\underline{rbodyMod} = 0$ (Off):

No substrate resistance network is generated at all.

### *rbodyMod* = 1 (On):

All five resistances in the substrate network as shown schematically below are present simultaneously.

A minimum conductance, GBMIN, is introduced in parallel with each resistance and therefore to prevent infinite resistance values, which would otherwise cause poor convergence. In Figure 8-3, GBMIN is merged into each resistance to simplify the representation of the model topology. Note that the intrinsic model substrate reference point in this case is the internal body node **bNodePrime**, into which the impact ionization current  $I_{ii}$  and the GIDL current  $I_{GIDL}$  flow.

### <u>rbodyMod</u> = 2 (On : Scalable Substrate Network):

The schematic is similar to rbodyMod = 1 but all the five resistors in the substrate network are now scalable with a possibility of chosing either five resistors, three resistors or one resistor as the substrate network.

The resistors of the substrate network are scalable with respect to channel length (L), channel width (W) and number of fingers (NF). The scalable model allows to account for both horizontal and vertical contacts.

The scalable resistors *RBPS* and *RBPD* are evaluated through

$$RBPS = RBPS \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBPSL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBPSW} \bullet NF^{RBPSNF}$$

$$(8.1.10)$$

$$(8.1.11)$$

$$(8.1.11)$$

$$(8.1.11)$$

$$RBPD = RBPD \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBPDL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBPDW} \bullet NF^{RBPDNF}$$

The resistor *RBPB* consists of two parallel resistor paths, one to the horizontal contacts and other to the vertical contacts. These two resistances are scalable and *RBPB* is given by a parallel combination of these two resistances.

$$RBPBX = RBPBX \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBPBXL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBPBXW} \bullet NF^{RBPBNF}$$

$$RBPBY = RBPBY \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBPBYL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBPBYW} \bullet NF^{RBPBYNF}$$

$$RBPB = \frac{RBPBX}{RBPBX} \bullet RBPBY$$

The resistors *RBSB* and *RBDB* share the same scaling parameters but have different scaling prefactors. These resistors are modeled in the same way as *RBPB*. The equations for *RBSB* are shown below. The calculation for *RBDB* follows *RBSB*.

$$RBSBX = RBSBX \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBSDBXL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBSDBXW} \bullet NF^{RBSDBXNF}$$

$$RBSBX = RBSBX \ 0 \bullet \left(\frac{L}{10^{-6}}\right)^{RBSDBXL} \bullet \left(\frac{W}{10^{-6}}\right)^{RBSDBXW} \bullet NF^{RBSDBXNF}$$

$$RBSB = \frac{RBSBX}{RBSBX} \bullet RBSBY$$

$$RBSBY + RBSBY$$

The implementation of *rbodyMod* = 2 allows the user to chose between the 5-R network (with all five resistors), 3-R network (with *RBPS*, *RBPD* and *RBPB*) and 1-R network (with only *RBPB*).

If the user doesn't provide both the scaling parameters *RBSBX0* and *RBSBY0* for *RBSB* **OR** both the scaling parameters *RBDBX0* and *RBDBY0* for *RBDB*, then the conductances for both *RBSB* and *RBDB* are set to *GBMIN*. This converts the 5-R schematic to 3-R schematic where the substrate network consists of the resistors *RBPS*, *RBPD* and *RBPB*. *RBPS*, *RBPD* and *RBPB* are then calculated using (8.1.10), (8.1.11) and (8.1.12).

If the user chooses not to provide either of *RBPS0* or *RBPD0*, then the 5-R schematic is converted to 1-R network with only one resistor *RBPB*. The conductances for *RBSB* and *RBDB* are set to *GBMIN*. The resistances *RBPS* and *RBPD* are set to 1e-3 Ohm. The resistor *RBPB* is then calculated using (8.1.12).

In all other situations, 5-R network is used with the resistor values calculated from the equations aforementioned.

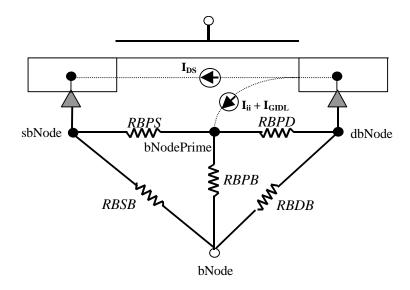


Figure 8-3. Topology with the substrate resistance network turned on.

## **Chapter 9: Noise Modeling**

The following noise sources in MOSFETs are modeled in BSIM4 for SPICE noise ananlysis: flicker noise (also known as 1/f noise), channel thermal noise and induced gate noise and their correlation, thermal noise due to physical resistances such as the source/drain, gate electrode, and substrate resistances, and shot noise due to the gate dielectric tunneling current. A complete list of the noise model parameters and explanations are given in Appendix A.

## 9.1 Flicker Noise Models

## 9.1.1 General Description

BSIM4 provides two flicker noise models. When the model selector *fnoiMod* is set to 0, a simple flicker noise model which is convenient for hand calculations is invoked. A unified physical flicker noise model, which is the default model, will be used if *fnoiMod* = 1. These two modes come from BSIM3v3, but the unified model has many improvements. For instance, it is now smooth over all bias regions and considers the bulk charge effect.

## 9.1.2 Equations

• fnoiMod = 0 (simple model)

The noise density is

$$S_{id}(f) = \frac{KF \cdot I_{ds}^{AF}}{C_{oxe} L_{eff}^{2} f^{EF}}$$

where f is device operating frequency.

### • *fnoiMod* = 1 (unified model)

The physical mechanism for the flicker noise is trapping/detrapping-related charge fluctuation in oxide traps, which results in fluctuations of both mobile carrier numbers and mobilities in the channel. The unified flicker noise model captures this physical process.

In the inversion region, the noise density is expressed as [14]

$$\begin{split} S_{id,inv}(f) = & \frac{k_B T q^2 m_{eff} I_{ds}}{C_{oxe}(L_{eff} - 2 \cdot LINTNOI)^2 A_{bulk} f^{ef} \cdot 10^{10}} \left( NOIA \cdot log \left( \frac{N_0 + N^*}{N_l + N^*} \right) + NOIB \cdot \left( N_0 - N_l \right) + \frac{NOIC}{2} \left( N_0^2 - N_l^2 \right) \right) \\ + & \frac{k_B T I_{ds}^2 \Delta L_{elm}}{W_{eff} \cdot (L_{eff} - 2 \cdot LINTNOI)^2 f^{ef} \cdot 10^{10}} \cdot \frac{NOIA + NOIB \cdot N_l + NOIC \cdot N_l^2}{\left( N_l + N^* \right)^2} \end{split}$$

where  $\mathbf{m}_{eff}$  is the effective mobility at the given bias condition, and  $L_{eff}$  and  $W_{eff}$  are the effective channel length and width, respectively. The parameter  $N_0$  is the charge density at the source side given by

$$N_0 = C_{oxe} \cdot V_{gsteff} / q$$

The parameter  $N_l$  is the charge density at the drain end given by

$$N_{l} = C_{oxe} \cdot V_{gsteff} \cdot \left(1 - \frac{A_{bulk} V_{dseff}}{V_{gsteff} + 2\mathbf{n}_{t}}\right) / q$$

$$(9.1.4)$$

 $N^*$  is given by

$$N^* = k_B T \cdot \left(C_{oxe} + C_d + CIT\right) / q^2$$

where CIT is a model parameter from DC IV and  $C_d$  is the depletion capacitance.

 $DL_{clm}$  is the channel length reduction due to channel length modulation and given by

$$\Delta L_{\text{clm}} = Litl \cdot \log \left( \frac{V_{ds} - V_{dseff}}{Litl} + EM \right)$$

$$E_{sat} = \frac{2VSAT}{\mathbf{m}_{eff}}$$
(9.1.6)

In the subthreshold region, the noise density is written as

(9.1.7)

$$S_{id,subVt}(f) = \frac{NOIA \cdot k_B T \cdot I_{ds}^2}{W_{eff} L_{eff} f^{EF} N^{*2} \cdot 10^{10}}$$

The total flicker noise density is

 $S_{id}(f) = \frac{S_{id,inv}(f) \times S_{id,subvt}(f)}{S_{id,subvt}(f) + S_{id,inv}(f)}$ (9.1.8)

## 9.2 Channel Thermal Noise

There are two channel thermal noise models in BSIM4. One is a charge-based model (default model) similar to that used in BSIM3v3.2. The other is the holistic model. These two models can be selected through the model selector *tnoiMod*.

• *tnoiMod* = 0 (charge based)

The noise current is given by

$$\overline{i_d^2} = \frac{4k_B T \Delta f}{R_{ds}(V) + \frac{L_{eff}^2}{\mathbf{m}_{eff}|Q_{inv}|}} \cdot NTNOI$$

where  $R_{ds}(V)$  is the bias-dependent LDD source/drain resistance, and the parameter NTNOI is introduced for more accurate fitting of short-channel devices.  $Q_{inv}$  is modeled by

$$Q_{inv} = W_{active} L_{active} C_{oxeff} \cdot NF \cdot \left[ V_{gsteff} - \frac{A_{bulk} V_{dseff}}{2} + \frac{A_{bulk}^2 V_{dseff}^2}{12 \cdot \left( V_{gsteff} - \frac{A_{bulk} V_{dseff}}{2} \right)} \right]$$

Figure 9-1a shows the noise source connection for tnoiMod = 0.

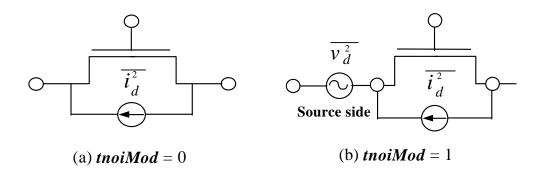


Figure 9-1. Schematic for BSIM4 channel thermal noise modeling.

### • tnoiMod = 1 (holistic)

In this thermal noise model, all the short-channel effects and velocity saturation effect incorporated in the IV model are automatically included, hency the name "holistic thermal noise model". In addition, the amplification of the channel thermal noise through  $G_m$  and  $G_{mbs}$  as well as the induced-gate noise with partial correlation to the channel thermal noise are all captured in the new "noise partition" model. Figure 9-1b shows schematically that part of the channel thermal noise source is partitioned to the source side.

The noise voltage source partitioned to the source side is given by

$$\overline{v_d^2} = 4k_B T \cdot \boldsymbol{q}_{moi}^2 \cdot \frac{V_{dseff} \Delta f}{I_{ds}}$$

and the noise current source put in the channel region with gate and body amplication is given by

$$\overline{i_d}^2 = 4k_B T \frac{V_{dseff} \Delta f}{I_{ds}} \left[ G_{ds} + \boldsymbol{b}_{moi} \cdot (G_m + G_{mbs}) \right]^2 - \overline{v_d}^2 \cdot (G_m + G_{ds} + G_{mbs})^2$$

where

(9.2.5) 
$$\mathbf{q}_{tnoi} = RNOIB \left[ 1 + TNOIB \ L_{eff} \cdot \left( \frac{V_{gsteff}}{E_{sat} L_{eff}} \right)^{2} \right]$$

and

$$\mathbf{b}_{tnoi} = RNOIA \cdot \left[ 1 + TNOIA \cdot L_{eff} \cdot \left( \frac{V_{gsteff}}{E_{sat} L_{eff}} \right)^{2} \right]$$

where *RNOIB* and *RNOIA* are model parameters with default values 0.37 and 0.577 respectively.

## 9.3 Other Noise Sources Modeled

BSIM4 also models the thermal noise due to the substrate, electrode gate, and source/drain resistances. Shot noise due to various gate tunneling components is modeled as well.

# Chapter 10: Asymmetric MOS Junction Diode Models

## 10.1 Junction Diode IV Model

In BSIM4, there are three junction diode IV models. When the IV model selector *dioMod* is set to 0 ("resistance-free"), the diode IV is modeled as resistance-free with or without breakdown depending on the parameter values of *XJBVS* or *XJBVD*. When *dioMod* is set to 1 ("breakdown-free"), the diode is modeled exactly the same way as in BSIM3v3.2 with current-limiting feature in the forward-bias region through the limiting current parameters *IJTHSFWD* or *IJTHDFWD*; diode breakdown is not modeled for *dioMod* = 1 and *XJBVS*, *XJBVD*, *BVS*, and *BVD* parameters all have no effect. When *dioMod* is set to 2 ("resistance-and-breakdown"), BSIM4 models the diode breakdown with current limiting in both forward and reverse operations. In general, setting *dioMod* to 1 produces fast convergence.

## 10.1.1 Source/Body Junction Diode

In the following, the equations for the source-side diode are given. The model parameters are shown in Appendix A.

dioMod = 0 (resistance-free)

$$I_{bs} = I_{sbs} \left[ exp \left( \frac{qV_{bs}}{NJS \cdot k_B TNOM} \right) - 1 \right] \cdot f_{breakdown} + V_{bs} \cdot G_{min}$$

where  $I_{sbs}$  is the total saturation current consisting of the components through the gate-edge  $(J_{sswgs})$  and isolation-edge sidewalls  $(J_{ssws})$  and the bottom junction  $(J_{ss})$ ,

$$I_{sbs} = A_{seff} J_{ss}(T) + P_{seff} J_{ssws}(T) + W_{effci} \cdot NF \cdot J_{sswgs}(T)$$
(10.1.2)

where the calculation of the junction area and perimeter is discussed in Chapter 11, and the temperature-dependent current density model is given in Chapter 12. In (10.1.1),  $f_{breakdown}$  is given by

$$f_{breakdown} = 1 + XJBVS \cdot \exp\left(-\frac{q \cdot \left(BVS + V_{bs}\right)}{NJS \cdot k_{B}TNOM}\right)$$

In the above equation, when XJBVS = 0, no breakdown will be modeled. If XJBVS < 0.0, it is reset to 1.0.

#### • *dioMod* = 1 (breakdown-free)

No breakdown is modeled. The exponential IV term in (10.1.4) is linearized at the limiting current *IJTHSFWD* in the forward-bias model only.

(10.1.4)

$$I_{bs} = I_{sbs} \left[ exp \left( \frac{qV_{bs}}{NJS \cdot k_B TNOM} \right) - 1 \right] + V_{bs} \cdot G_{min}$$

#### • *dioMod* = 2 (resistance-and-breakdown):

Diode breakdown is always modeled. The exponential term (10.1.5) is linearized at both the limiting current *IJTHSFWD* in the forward-bias mode and the limiting current *IJTHSREV* in the reverse-bias mode.

$$I_{bs} = I_{sbs} \left[ exp \left( \frac{qV_{bs}}{NJS \cdot k_{B}TNOM} \right) - 1 \right] \cdot f_{breakdown} + V_{bs} \cdot G_{min}$$

For dioMod = 2, if  $XJBVS \le 0.0$ , it is reset to 1.0.

## 10.1.2 Drain/Body Junction Diode

The drain-side diode has the same system of equations as those for the source-side diode, but with a separate set of model parameters as explained in detail in Appendix A.

• *dioMod* = 0 (resistance-free)

$$I_{bd} = I_{sbd} \left[ \exp \left( \frac{qV_{bd}}{NJD \cdot k_B TNOM} \right) - 1 \right] \cdot f_{breakdown} + V_{bd} \cdot G_{\min}$$

where  $I_{sbd}$  is the total saturation current consisting of the components through the gate-edge  $(J_{sswgd})$  and isolation-edge sidewalls  $(J_{sswd})$  and the bottom junction  $(J_{sd})$ ,

$$I_{sbd} = A_{deff} J_{sd}(T) + P_{deff} J_{sswd}(T) + W_{effcj} \cdot NF \cdot J_{sswgd}(T)$$

where the calculation of the junction area and perimeter is discussed in Chapter 11, and the temperature-dependent current density model is given in Chapter 12. In (10.1.6),  $f_{breakdown}$  is given by

$$f_{breakdown} = 1 + XJBVD \cdot \exp\left(-\frac{q \cdot \left(BVD + V_{bd}\right)}{NJD \cdot k_{B}TNOM}\right)$$

In the above equation, when XJBVD = 0, no breakdown will be modeled. If XJBVD < 0.0, it is reset to 1.0.

#### • dioMod = 1 (breakdown-free)

No breakdown is modeled. The exponential IV term in (10.1.9) is linearized at the limiting current *IJTHSFWD* in the forward-bias model only.

$$I_{bd} = I_{sbd} \left[ exp \left( \frac{qV_{bd}}{NJD \cdot k_B TNOM} \right) - 1 \right] + V_{bd} \cdot G_{min}$$
(10.1.9)

#### • *dioMod* = 2 (resistance-and-breakdown):

Diode breakdown is always modeled. The exponential term (10.1.10) is linearized at both the limiting current *IJTHSFWD* in the forward-bias mode and the limiting current *IJTHSREV* in the reverse-bias mode.

$$I_{bd} = I_{sbd} \left[ exp \left( \frac{qV_{bd}}{NJD \cdot k_B TNOM} \right) - 1 \right] \cdot f_{breakdown} + V_{bd} \cdot G_{min}$$

For dioMod = 2, if  $XJBVD \le 0.0$ , it is reset to 1.0.

## 10.1.3 Total Junction Source/Drain Diode Including Tunneling

Total diode current including the carrier recombination and trap-assisted tunneling current in the space-charge region is modeled by:

$$\begin{split} I_{bs\_total} &= I_{bs} \\ &- W_{effcj} \cdot NF \cdot J_{tsswgs} \cdot (T) \cdot \left[ \exp \left( \frac{-V_{bs}}{NJTSSWG \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSSWGS}{VTSSWGS - V_{bs}} \right) - 1 \right] \\ &- P_{s,deff} \cdot J_{tssws} \cdot (T) \left[ \exp \left( \frac{-V_{bs}}{NJTSSW \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSSWS}{VTSSWS - V_{bs}} \right) - 1 \right] \\ &- A_{s,deff} \cdot J_{tss} \cdot (T) \left[ \exp \left( \frac{-V_{bs}}{NJTS \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSS}{VTSS - V_{bs}} \right) - 1 \right] + g_{min} \cdot V_{bs} \end{split}$$

(10.1.12)

$$\begin{split} I_{bd\_total} &= I_{bd} \\ &- W_{effcj} \cdot NF \cdot J_{tsswgd} \cdot (T) \cdot \left[ \exp \left( \frac{-V_{bd}}{NJTSSWGD \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSSWGD}{VTSSWGD - V_{bd}} \right) - 1 \right] \\ &- P_{d,deff} \cdot J_{tsswd} \cdot (T) \left[ \exp \left( \frac{-V_{bd}}{NJTSSWD \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSSWD}{VTSSWD - V_{bd}} \right) - 1 \right] \\ &- A_{d,deff} \cdot J_{tsd} \cdot (T) \left[ \exp \left( \frac{-V_{bd}}{NJTSD \cdot (T) \cdot Vtm \cdot 0} \cdot \frac{VTSD}{VTSD - V_{bd}} \right) - 1 \right] + g \cdot_{\min} \cdot V_{bd} \end{split}$$

## 10.2 Junction Diode CV Model

Source and drain junction capacitances consist of three components: the bottom junction capacitance, sidewall junction capacitance along the isolation edge, and sidewall junction capacitance along the gate edge. An analogous set of equations are used for both sides but each side has a separate set of model parameters.

### **10.2.1 Source/Body Junction Diode**

The source-side junction capacitance can be calculated by

$$C_{bs} = A_{seff} C_{jbs} + P_{seff} C_{jbssw} + W_{effcj} \cdot NF \cdot C_{jbsswg}$$

$$(10.2.1)$$

where  $C_{jbs}$  is the unit-area bottom S/B junction capacitance,  $C_{jbssw}$  is the unit-length S/B junction sidewall capacitance along the isolation edge, and  $C_{jbsswg}$  is the unit-length S/B junction sidewall capacitance along the gate edge. The effective area and perimeters in (10.2.1) are given in Chapter 11.

## C<sub>jbs</sub> is calculated by

if 
$$V_{bs} < 0$$

$$C_{jbs} = CJS(T) \cdot \left(1 - \frac{V_{bs}}{PBS(T)}\right)^{-MJS}$$

(10.2.3)

$$C_{jbs} = CJS(T) \cdot \left(1 + MJS \cdot \frac{V_{bs}}{PBS(T)}\right)$$

## **C**<sub>ibssw</sub> is calculated by

if  $V_{bs} < 0$ 

 $C_{jbssw} = CJSWS(T) \cdot \left(1 - \frac{V_{bs}}{PBSWS(T)}\right)^{-MJSWS}$ 

otherwise

$$C_{jbssw} = CJSWS(T) \cdot \left(1 + MJSWS \cdot \frac{V_{bs}}{PBSWS(T)}\right)$$

## Cibsswg is calculated by

if  $V_{bs} < 0$ 

$$C_{jbsswg} = CJSWGS(T) \cdot \left(1 - \frac{V_{bs}}{PBSWGS(T)}\right)^{-MJSWGS}$$

$$C_{jbsswg} = CJSWGS(T) \cdot \left(1 - \frac{V_{bs}}{PBSWGS(T)}\right)^{-MJSWGS}$$

### 10.2.2 Drain/Body Junction Diode

The drain-side junction capacitance can be calculated by

$$C_{bd} = A_{deff} C_{ibd} + P_{deff} C_{ibdsw} + W_{effci} \cdot NF \cdot C_{ibdswg}$$

where  $C_{jbd}$  is the unit-area bottom D/B junciton capacitance,  $C_{jbdsw}$  is the unit-length D/B junction sidewall capacitance along the isolation edge, and  $C_{jbdswg}$  is the unit-length D/B junction sidewall capacitance along the gate edge. The effective area and perimeters in (10.2.8) are given in Chapter 11.

## $C_{ibd}$ is calculated by

if 
$$V_{bd} < 0$$

$$C_{jbd} = CJD(T) \cdot \left(1 - \frac{V_{bd}}{PBD(T)}\right)^{-MJD}$$

$$C_{jbd} = CJD(T) \cdot \left(1 + MJD \cdot \frac{V_{bd}}{PBD(T)}\right)$$
(10.2.10)

## C<sub>ibdsw</sub> is calculated by

if 
$$V_{bd} < 0$$

$$C_{jbdsw} = CJSWD(T) \cdot \left(1 - \frac{V_{bd}}{PBSWD(T)}\right)^{-MJSWD}$$

otherwise

$$C_{jbdsw} = CJSWD(T) \cdot \left(1 + MJSWD \cdot \frac{V_{bd}}{PBSWD(T)}\right)$$

## C<sub>jbdswg</sub> is calculated by

if 
$$V_{bd} < 0$$

$$C_{jbdswg} = CJSWGD(T) \cdot \left(1 - \frac{V_{bd}}{PBSWGD(T)}\right)^{-MJSWGD}$$

$$C_{jbdswg} = CJSWGD(T) \cdot \left(1 + MJSWGD \cdot \frac{V_{bd}}{PBSWGD(T)}\right)$$

# Chapter 11: Layout-Dependent Parasitics Model

BSIM4 provides a comprehensive and versatile geometry/layout-dependent parasites model [15]. It supports modeling of series (such as isolated, shared, or merged source/drain) and multi-finger device layout, or a combination of these two configurations. This model have impact on every BSIM4 sub-models except the substrate resistance network model. Note that the narrow-width effect in the per-finger device with multi-finger configuration is accounted for by this model. A complete list of model parameters and selectors can be found in Appendix A.

## 11.1 Geometry Definition

Figure 11-1 schematically shows the geometry definition for various source/drain connections and source/drain/gate contacts. The layout parameters shown in this figure will be used to calculate resistances and source/drain perimeters and areas.

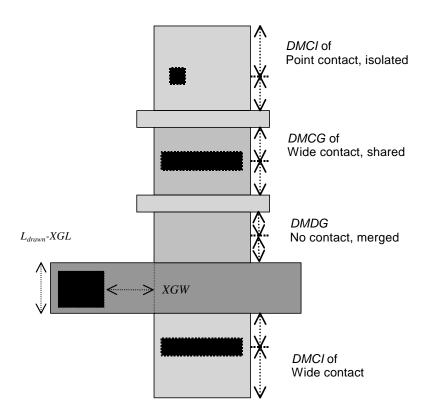


Figure 11-1. Definition for layout parameters.

## 11.2 Model Formulation and Options

### 11.2.1 Effective Junction Perimeter and Area

In the following, only the source-side case is illustrated. The same approach is used for the drain side. The effective junction perimeter on the source side is calculated by

```
If (PS \text{ is given})

if (perMod == 0)

P_{seff} = PS

else

P_{seff} = PS - W_{effcj} \cdot NF

Else

P_{seff} \text{ computed from } NF, DWJ, geoMod, DMCG, DMCI, DMDG, DMCGT, and MIN.}
```

The effective junction area on the source side is calculated by

```
If (AS is given)
A_{seff} = AS
Else
A_{seff} \text{ computed from } NF, DWJ, \textbf{geoMod}, DMCG, DMCI, DMDG, DMCGT, and MIN.}
```

In the above,  $P_{seff}$  and  $A_{seff}$  will be used to calculate junction diode IV and CV.  $P_{seff}$  does not include the gate-edge perimeter.

#### 11.2.2 Source/Drain Diffusion Resistance

The source diffusion resistance is calculated by

If (number of source squares NRS is given)

$$R_{sdiff} = NRS \cdot RSH$$

Else if (rgeoMod == 0)

Source diffusion resistance  $R_{sdiff}$  is not generated.

Else

*R*<sub>sdiff</sub> computed from *NF*, *DWJ*, *geoMod*, *DMCG*, *DMCI*, *DMDG*, *DMCGT*, *RSH*, and *MIN*.

where the number of source squares *NRS* is an instance parameter. Similarly, the drain diffusion resistance is calculated by

If (number of source squares NRD is given)

$$R_{ddiff} = NRD \cdot RSH$$

Else if (rgeoMod == 0)

Drain diffusion resistance  $R_{ddiff}$  is not generated.

Else

R<sub>ddiff</sub> computed from NF, DWJ, **geoMod**, DMCG, DMCI, DMDG, DMCGT, RSH, and MIN.

#### 11.2.3 Gate Electrode Resistance

The gate electrode resistance with multi-finger configuration is modeled by

$$Rgeltd = \frac{RSHG \cdot \left( XGW + \frac{W_{efficj}}{3 \cdot NGCON} \right)}{NGCON \cdot \left( L_{drawn} - XGL \right) \cdot NF}$$
(11.2.1)

## 11.2.4 Option for Source/Drain Connections

Table 11-1 lists the options for source/drain connections through the model selector *geoMod*.

geoMod	End source	End drain	Note
0	isolated	isolated	NF=Odd
1	isolated	shared	NF=Odd, Even
2	shared	isolated	NF=Odd, Even
3	shared	shared	NF=Odd, Even
4	isolated	merged	NF=Odd
5	shared	merged	NF=Odd, Even
6	merged	isolated	NF=Odd
7	merged	shared	NF=Odd, Even
8	merged	merged	NF=Odd
9	sha/iso	shared	NF=Even
10	shared	sha/iso	NF=Even

Table 11-1. geoMod options.

For multi-finger devices, all inside S/D diffusions are assumed shared.

## 11.2.5 Option for Source/Drain Contacts

Talbe 11-2 lists the options for source/drain contacts through the model selector *rgeoMod*.

rgeoMod	<b>End-source contact</b>	End-drain contact
0	No $R_{sdiff}$	No $R_{ddiff}$
1	wide	wide
2	wide	point
3	point	wide
4	point	point
5	wide	merged
6	point	merged
7	merged	wide
8	merged	point

Table 11-2. rgeoMod options.

# Chapter 12: Temperature Dependence Model

Accurate modeling of the temperature effects on MOSFET characteristics is important to predict circuit behavior over a range of operating temperatures (*T*). The operating temperature might be different from the nominal temperature (*TNOM*) at which the BSIM4 model parameters are extracted. This chapter presents the BSIM4 temperature dependence models for threshold voltage, mobility, saturation velocity, source/drain resistance, and junction diode IV and CV.

## 12.1 Temperature Dependence of Threshold Voltage

The temperature dependence of  $V_{th}$  is modeled by

$$(12.1.1)$$

$$V_{th}(T) = V_{th}(TNOM) + \left(KT1 + \frac{KT1L}{L_{eff}} + KT2 \cdot V_{bseff}\right) \cdot \left(\frac{T}{TNOM} - 1\right)$$

$$(12.1.2)$$

$$V_{fb}(T) = V_{fb}(TNOM) - KT1 \cdot \left(\frac{T}{TNOM} - 1\right)$$

$$(12.1.3)$$

$$VOFF(T) = VOFF(TNOM) \cdot [1 + TVOFF \cdot (T - TNOM)]$$

$$VFBSDOFF (T) = VFBSDOFF (TNOM)$$

$$\cdot [1 + TVFBSDOFF \cdot (T - TNOM)]$$

## 12.2 Temperature Dependence of Mobility

The BSIM4 mobility model parameters have the following temperature dependences depending on the model selected through **TEMPMOD**.

If TEMPMOD = 0,

$$U0(T) = U0(TNOM) \cdot (T/TNOM)^{UTE}$$

$$(12.2.1)$$

$$UA(T) = UA(TNOM) + UA1 \cdot (T/TNOM - 1)$$

$$(12.2.3)$$

$$UB(T) = UB(TNOM) + UB1 \cdot (T/TNOM - 1)$$

$$(12.2.4)$$

$$UC(T) = UC(TNOM) + UC1 \cdot (T/TNOM - 1)$$

and

$$(12.2.5)$$

$$UD(T) = UD(TNOM) + UD1 \cdot (T/TNOM - 1)$$

If TEMPMOD = 1,

$$U0(T) = U0(TNOM) \cdot (T/TNOM)^{UTE}$$

$$UA(T) = UA(TNOM)[1 + UA1 \cdot (T - TNOM)]$$

$$UB(T) = UB(TNOM)[1 + UB1 \cdot (T - TNOM)]$$

$$UC(T) = UC(TNOM)[1 + UC1 \cdot (T - TNOM)]$$

and

$$UD(T) = UD(TNOM)[1 + UD1 \cdot (T - TNOM)]$$

## 12.3 Temperature Dependence of Saturation Velocity

If **TEMPMOD** = 0, the temperature dependence of *VSAT* is modeled by

$$VSAT(T) = VSAT(TNOM) - AT \cdot (T/TNOM - 1)$$

If **TEMPMOD** = 1, the temperature dependence of VSAT is modeled by

(12.3.2)

$$VSAT(T) = VSAT(TNOM)[1 - AT \cdot (T - TNOM)]$$

## 12.4 Temperature Dependence of LDD Resistance

If TEMPMOD = 0,

• rdsMod = 0 (internal source/drain LDD resistance)

(12.4.1)

$$RDSW(T) = RDSW(TNOM) + PRT \cdot (T/TNOM - 1)$$

(12.4.2)

$$RDSWMIN(T) = RDSWMIN(TNOM) + PRT \cdot (T/TNOM - 1)$$

• rdsMod = 1 (external source/drain LDD resistance)

$$RDW(T) = RDW(TNOM) + PRT \cdot (T/TNOM - 1)$$

(12.4.4)

$$RDWMIN(T) = RDWMIN(TNOM) + PRT \cdot (T/TNOM - 1)$$

$$RSW(T) = RSW(TNOM) + PRT \cdot (T/TNOM - 1)$$

and

$$(12.4.6)$$

$$RSWMIN(T) = RSWMIN(TNOM) + PRT \cdot (T/TNOM - 1)$$

If **TEMPMOD** = 1,

• rdsMod = 0 (internal source/drain LDD resistance)

(12.4.7)

$$RDSW(T) = RDSW(TNOM)[1 + PRT \cdot (T - TNOM)]$$

(12.4.8)

$$RDSWMIN(T) = RDSWMIN(TNOM)[1 + PRT \cdot (T - TNOM)]$$

• rdsMod = 1 (external source/drain LDD resistance)

$$RDW(T) = RDW(TNOM)[1 + PRT \cdot (T - TNOM)]$$

(12.4.10)

$$RDWMIN(T) = RDWMIN(TNOM)[1 + PRT \cdot (T - TNOM)]$$

(12.4.11)

$$RSW(T) = RSW(TNOM)[1 + PRT \cdot (T - TNOM)]$$

and

$$(12.4.12)$$

$$RSWMIN(T) = RSWMIN(TNOM)[1 + PRT \cdot (T - TNOM)]$$

## 12.5 Temperature Dependence of Junction Diode IV

#### • Source-side diode

The source-side saturation current is given by

$$I_{sbs} = A_{seff} J_{ss}(T) + P_{seff} J_{ssws}(T) + W_{effcj} \cdot NF \cdot J_{sswgs}(T)$$
(12.5.1)

where

$$J_{ss}(T) = JSS(TNOM) \cdot \exp \left( \frac{\frac{E_g(TNOM)}{v_t(TNOM)} - \frac{E_g(T)}{v_t(T)} + XTIS \cdot \ln\left(\frac{T}{TNOM}\right)}{NJS} \right)$$

$$J_{ssws}(T) = JSSWS(TNOM) \cdot \exp\left(\frac{\frac{E_g(TNOM)}{v_t(TNOM)} - \frac{E_g(T)}{v_t(T)} + XTIS \cdot \ln\left(\frac{T}{TNOM}\right)}{NJS}\right)$$

and

$$J_{sswgs}(T) = JSSWGS(TNOM) \cdot \exp \left( \frac{\frac{E_g(TNOM)}{k_b \cdot TNOM} - \frac{E_g(T)}{k_b \cdot T} + XTIS \cdot \ln\left(\frac{T}{TNOM}\right)}{NJS} \right)$$

where  $E_g$  is given in Section 12.7.

#### • Drain-side diode

The drain-side saturation current is given by

$$I_{sbd} = A_{deff} J_{sd}(T) + P_{deff} J_{sswd}(T) + W_{effcj} \cdot NF \cdot J_{sswgd}(T)$$
(12.5.5)

where

$$J_{sd}(T) = JSD(TNOM) \cdot \exp \left( \frac{\frac{E_g(TNOM)}{k_b \cdot TNOM} - \frac{E_g(T)}{k_b \cdot T} + XTID \cdot \ln\left(\frac{T}{TNOM}\right)}{NJD} \right)$$

$$J_{sswd}(T) = JSSWD(TNOM) \cdot \exp\left(\frac{\frac{E_g(TNOM)}{k_b \cdot TNOM} - \frac{E_g(T)}{k_b \cdot T} + XTID \cdot \ln\left(\frac{T}{TNOM}\right)}{NJD}\right)$$

and

(12.5.8)

$$J_{sswgd}(T) = JSSWGD(TNOM) \cdot \exp\left(\frac{\frac{E_g(TNOM)}{k_b \cdot TNOM} - \frac{E_g(T)}{k_b \cdot T} + XTID \cdot \ln\left(\frac{T}{TNOM}\right)}{NJD}\right)$$

#### trap-assisted tunneling and recombination current

(12.5.9)

$$J_{tsswgs}(T) = J_{tsswgs}(TNOM) \cdot \exp \left[ \frac{-Eg(TNOM)}{k_B T} \cdot X_{tsswgs} \cdot \left( 1 - \frac{T}{TNOM} \right) \right]$$

(12.5.10)

$$J_{tssws}(T) = J_{tssws}(TNOM) \cdot \exp \left[ \frac{-Eg(TNOM)}{k_B T} \cdot X_{tssws} \cdot \left( 1 - \frac{T}{TNOM} \right) \right]$$

(12.5.11)

$$J_{tss}(T) = J_{tss}(TNOM) \cdot \exp \left[ \frac{-Eg(TNOM)}{k_B T} \cdot X_{tss} \cdot \left( 1 - \frac{T}{TNOM} \right) \right]$$

(12.5.12)

$$J_{tsswgd}(T) = J_{tsswgd}(TNOM) \cdot \exp\left[\frac{-Eg(TNOM)}{k_BT} \cdot X_{tsswgd} \cdot \left(1 - \frac{T}{TNOM}\right)\right]$$

(12.5.13)

$$J_{tsswd}(T) = J_{tsswd}(TNOM) \cdot \exp\left[\frac{-Eg(TNOM)}{k_B T} \cdot X_{tsswd} \cdot \left(1 - \frac{T}{TNOM}\right)\right]$$

$$I_{ssd}(T) = I_{tsd}(TNOM) \cdot \exp\left[\frac{-Eg(TNOM)}{k_BT} \cdot X_{tsd} \cdot \left(1 - \frac{T}{TNOM}\right)\right]$$

$$(12.5.14)$$

$$NJTSSWG(T) = NJTSSWG(TNOM) \cdot \left[1 + TNJTSSWG\left(\frac{T}{TNOM} - 1\right)\right]$$

$$(12.5.15)$$

$$NJTSSW(T) = NJTSSW(TNOM) \cdot \left[1 + TNJTSSW\left(\frac{T}{TNOM} - 1\right)\right]$$

$$(12.5.17)$$

$$NJTS(T) = NJTS(TNOM) \cdot \left[1 + TNTJS\left(\frac{T}{TNOM} - 1\right)\right]$$

$$(12.5.18)$$

$$NJTSSWGD(T) = NJTSSWGD(TNOM) \cdot \left[1 + TNJTSSWGD\left(\frac{T}{TNOM} - 1\right)\right]$$

$$(12.5.19)$$

$$NJTSSWD(T) = NJTSSWD(TNOM) \cdot \left[1 + TNJTSSWD\left(\frac{T}{TNOM} - 1\right)\right]$$

$$(12.5.20)$$

$$NJTSD(T) = NJTSD(TNOM) \cdot \left[1 + TNTJSD\left(\frac{T}{TNOM} - 1\right)\right]$$

## 12.6 Temperature Dependence of Junction Diode CV

#### • Source-side diode

The temperature dependences of zero-bias unit-length/area junction capacitances on the source side are modeled by

$$CJS(T) = CJS(TNOM) + TCJ \cdot (T - TNOM)$$

$$(12.6.2)$$

$$CJSWS(T) = CJSWS(TNOM) + TCJSW \cdot (T - TNOM)$$

and

$$(12.6.3)$$

$$CJSWGS(T) = CJSWGS(TNOM) \cdot [1 + TCJSWG \cdot (T - TNOM)]$$

The temperature dependences of the built-in potentials on the source side are modeled by

$$PBS(T) = PBS(TNOM) - TPB \cdot (T - TNOM)$$

$$(12.6.4)$$

$$PBSWS(T) = PBSWS(TNOM) - TPBSW \cdot (T - TNOM)$$

and

$$PBSWGS(T) = PBSWGS(TNOM) - TPBSWG \cdot (T - TNOM)$$

#### • Drain-side diode

The temperature dependences of zero-bias unit-length/area junction capacitances on the drain side are modeled by

$$CJD(T) = CJD(TNOM) \cdot [1 + TCJ \cdot (T - TNOM)]$$

$$(12.6.8)$$

$$CJSWD(T) = CJSWD(TNOM) + TCJSW \cdot (T - TNOM)$$

and

$$(12.6.9)$$

$$CJSWGD(T) = CJSWGD(TNOM) \cdot [1 + TCJSWG \cdot (T - TNOM)]$$

The temperature dependences of the built-in potentials on the drain side are modeled by

$$PBD(T) = PBD(TNOM) - TPB \cdot (T - TNOM)$$

$$(12.6.11)$$

$$PBSWD(T) = PBSWD(TNOM) - TPBSW \cdot (T - TNOM)$$

and

(12.6.12)

 $PBSWGD(T) = PBSWGD(TNOM) - TPBSWG \cdot (T - TNOM)$ 

## 12.7 Temperature Dependences of $\boldsymbol{E}_g$ and $\boldsymbol{n}_i$

• Energy-band gap of Si  $(E_g)$ 

The temperature dependence of  $E_g$  is modeled by

(12.7.1)

$$E_g(TNOM) = 1.16 - \frac{7.02 \times 10^{-4} TNOM^2}{TNOM + 1108}$$

and

(12.7.2)

$$E_g(T) = 1.16 - \frac{7.02 \times 10^{-4} T^2}{T + 1108}$$

• Intrinsic carrier concentration of Si  $(n_i)$ 

The temperature dependence of  $n_i$  is modeled by

(12.7.3)

$$n_i = 1.45e10 \cdot \frac{TNOM}{300.15} \cdot \sqrt{\frac{TNOM}{300.15}} \cdot \exp \left[ 21.5565981 - \frac{qE_g(TNOM)}{2 \cdot k_B T} \right]$$

## **Chapter 13: Stress Effect Model**

CMOS feature size aggressively scaling makes shallow trench isolation(STI) very popular active area isolatiohn process in advanced technologies. Recent years, strain channel materials have been employed to achieve high device performance. The mechanical stress effect induced by these process causes MOSFET performance function of the active area size(OD: oxide definition) and the location of the device in the active area. And the necessity of new models to describe the layout dependence of MOS parameters due to stress effect becomes very urgent in advance CMOS technologies.

Influence of stress on mobility has been well known since the 0.13um technology. The stress influence on saturation velocity is also experimentally demonstrated. Stress-induced enhancement or suppression of dopant diffusion during the processing is reported. Since the doping profile may be changed due to different STI sizes and stress, the threshold voltage shift and changes of other second-order effects, such as DIBL and body effect, were shown in process integration.

BSIM4 considers the influence of stress on mobility, velocity saturation, threshold voltage, body effect, and DIBL effect.

## 13.1Stress Effect Model Development

Experimental analysis show that there exist at least two different mechanisms within the influence of stress effect on device characteristics. The first one is mobility-related and is induced by the band structure modification. The second one is Vth-related as a result of doping profile variation. Both of them follow the same 1/LOD trend but reveal different L and W scaling. We have derived a phenomenological model based on these findings by modifying some parameters in the BSIM model. Note that the following equations have no impact on the iteration time because there are no voltage-controlled components in them.

### **13.1.1** Mobility-related Equations

This model introduces the first mechanism by adjusting the U0 and Vsat according to different W, L and OD shapes. Define mobility relative change due to stress effect as:

$$r_{m_{eff}} = \Delta m_{eff} / m_{effo} = (m_{eff} - m_{effo}) / m_{effo} = \frac{m_{eff}}{m_{effo}} - 1$$
(13.1.1)

So,

$$\frac{\mathbf{m}_{eff}}{\mathbf{m}_{effo}} = 1 + r_{m_{eff}}$$

Figure(13.1) shows the typical layout of a MOSFET on active layout surrounded by STI isolation. SA, SB are the distances between isolation edge to Poly from one and

the other side, respectively. 2D simulation shows that stress distribution can be expressed by a simple function of SA and SB.

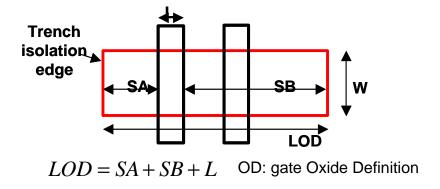


Fig. (13.1) shows the typical layout of a MOSFET

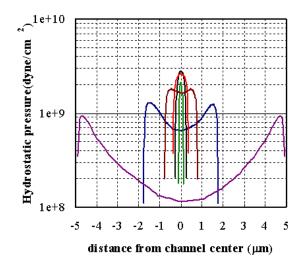


Fig. (13.2) Stress distribution within MOSFET channel using 2D simulation

Assuming that mobility relative change is proportional to stress distribution. It can be described as function of SA, SB(LOD effect), L, W, and T dependence:

$$r_{meff} = \frac{KU0}{Kstress \quad u0} \cdot (Inv _sa + Inv _sb)$$
(13.1.3)

Where:

$$\begin{split} & Inv\_sa = \frac{1}{SA + 0.5 \cdot L_{drawn}} \quad Inv\_sb = \frac{1}{SB + 0.5 \cdot L_{drawn}} \\ & Kstress\_u0 = \left(1 + \frac{LKUO}{(L_{drawn} + XL)^{LLODKUO}} + \frac{WKUO}{(W_{drawn} + XW + WLOD)^{WLODKUO}} \right) \\ & \quad + \frac{PKUO}{(L_{drawn} + XL)^{LLODKUO} \cdot (W_{drawn} + XW + WLOD)^{WLODKUO}} \right) \times \left(1 + TKUO \cdot \left(\frac{Temperature}{TNOM} - 1\right)\right) \end{aligned}$$

So that:

$$m_{eff} = \frac{1 + r_{meff}(SA, SB)}{1 + r_{meff}(SA_{ref}, SB_{ref})} m_{effo}$$

$$u_{sattemp} = \frac{1 + KVSAT \cdot r_{meff}(SA, SB)}{1 + KVSAT \cdot r_{meff}(SA_{ref}, SB_{ref})} u_{sattempo}$$
(13.1.4)

Where  $\mathbf{m}_{effo}$  ,  $u_{sato}$  are low field mobility, saturation velocity at SA<sub>ref</sub>, SB<sub>ref</sub>

and SAref, SBref are reference distances between OD edge to poly from one and the other side.

## 13.1.2 Vth-related Equations

Vth0, K2 and ETA0 are modified to cover the doping profile change in the devices with different LOD. They use the same 1/LOD formulas as shown in section(13.1.1), but different equations for W and L scaling:

$$VTH = VTH + \frac{KVTHO}{Kstress \ vthO} \cdot \left(Inv \ sa + Inv \ sb - Inv \ sa_{ref} - Inv \ sb_{ref}\right)$$
(13.1.6)

$$K2 = K2_{original} + \frac{STK2}{Kstress \ vth0^{LODK2}} \cdot \left(Inv \ \_sa + Inv \ \_sb - Inv \ \_sa_{ref} - Inv \ \_sb_{ref}\right)$$
(13.1.7)

$$ETA0 = ETA0_{original} + \frac{STETA0}{Kstress \ vth0^{LODETA0}} \cdot \left(Inv \ \_sa + Inv \ \_sb - Inv \ \_sa_{ref} - Inv \ \_sb_{ref}\right) \quad (13.1.8)$$

Where:

$$Inv \_sa_{ref} = \frac{1}{SA_{ref} + 0.5 \cdot L_{drawn}} \qquad Inv \_sb_{ref} = \frac{1}{SB_{ref} + 0.5 \cdot L_{drawn}}$$

$$\textit{Kstress} \quad \_\textit{vth} \, 0 = 1 + \frac{\textit{LKVTH0}}{\left( \left. L_{\textit{drawn}} + \textit{XL} \right. \right)^{\textit{LLODKVTH}}} + \frac{\textit{WKVTH0}}{\left( \left. W_{\textit{drawn}} + \textit{XW} + \textit{WLOD} \right. \right)^{\textit{WLODKVTH}}} \\ + \frac{\textit{PKVTH0}}{\left( \left. L_{\textit{drawn}} + \textit{XL} \right. \right)^{\textit{LLODKVTH}} \cdot \left( \left. W_{\textit{drawn}} + \textit{XW} + \textit{WLOD} \right. \right)^{\textit{WLODKVTH}}}$$

## 13.1.3 Multiple Finger Device

For multiple finger device, the total LOD effect is the average of LOD effect to every finger. That is(see Fig.(13.3) for the layout for multiple finger device):

$$Inv \_sa = \frac{1}{NF} \sum_{i=0}^{NF-1} \frac{1}{SA + 0.5 \cdot L_{drawn} + i \cdot (SD + L_{drawn})}$$

$$Inv \_sb = \frac{1}{NF} \sum_{i=0}^{NF-1} \frac{1}{SB + 0.5 \cdot L_{drawn} + i \cdot (SD + L_{drawn})}$$

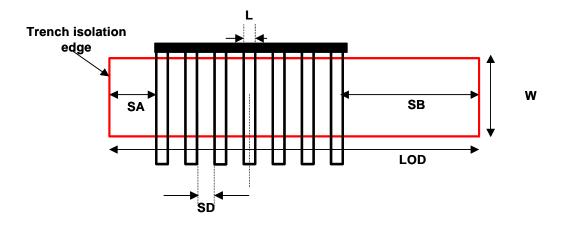


Fig. (13.3) Layout of multiple finger MOSFET

## 13.2 Effective SA and SB for Irregular LOD

General MOSFET has an irregular shape of active area shown in Fig.(13.4). To fully describe the shape of OD region will require additional instance parameters. However, this will result in too many parameters in the net lists and would massively increase the read-in time and degrade the readability of parameters. One way to overcome this difficulty is the concept of effective SA and SB similar to ref. [16].

Stress effect model described in Section(13.1) allows an accurate and efficient layout extraction of effective SA and SB while keeping fully compatibility of the LOD model. They are expressed as:

$$\frac{1}{\mathrm{SA}_{\mathrm{eff}} + 0.5 \cdot L_{drawn}} = \sum_{i=1}^{n} \frac{\mathrm{SW}_{i}}{W_{drawn}} \cdot \frac{1}{\mathrm{Sa}_{i} + 0.5 \cdot L_{drawn}}$$
(13.2.1)

$$\frac{1}{\mathbf{S}\boldsymbol{B}_{\text{eff}} + 0.5 \cdot \boldsymbol{L}_{drawn}} = \sum_{i=1}^{n} \frac{\mathbf{S}\boldsymbol{W}_{i}}{\boldsymbol{W}_{drawn}} \cdot \frac{1}{\mathbf{S}\boldsymbol{b}_{i} + 0.5 \cdot \boldsymbol{L}_{drawn}}$$
(13.2.2)

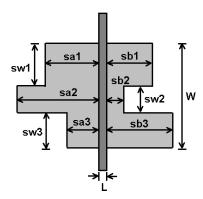


Fig.(13.4) A typical layout of MOS devices with more instance parameters (swi, sai and sbi) in addition to the traditional L and W

## **Chapter 14: Well Proximity Effect Model**

Retrograde well profiles have several key advantages for highly scaled bulk complementary metal oxide semiconductor(CMOS) technology. With the advent of high-energy implanters and reduced thermal cycle processing, it has become possible to provide a relatively heavily doped deep nwell and pwell without affecting the critical device-related doping at the surface. The deep well implants provide a low resistance path and suppress parasitic bipolar gain for latchup protection, and can also improve soft error rate and noise isolation. A deep buried layer is also key to forming triple-well structures for isolated-well NMOSFETs. However, deep buried layers can affect devices located near the mask edge. Some of the ions scattered out of the edge of the photoresist are implanted in the silicon surface near the mask edge, altering the threshold voltage of those devices[17]. It is observed a threshold voltage shifts of up to 100 mV in a deep boron retrograde pwell, a deep phosphorus retrograde nwell, and also a triple-well implementation with a deep phosphorus isolation layer below the pwell over a lateral distance on the order of a micrometer[17]. This effect is called well proximity effect.

BSIM4 considers the influence of well proximity effect on threshold voltage, mobility, and body effect. This well proximity effect model is developed by the Compact Model Council[19].

## **14.1 Well Proximity Effect Model**

Experimental analysis[17] shows that well proximity effect is strong function of distance of FET from mask edge, and electrical quantities influenced by it follow the same geometrical trend. A phenomenological model based on these findings has been developed by modifying some parameters in the BSIM model. Note that the following equations have no impact on the iteration time because there are no voltage-controlled components in them.

Well proximity affects threshold voltage, mobility and the body effect of the device. The effect of the well proximity can be described through the following equations:

$$Vth0 = Vth0_{org} + \text{KVTH0WE} \times (\text{SCA} + \text{WEB} \times \text{SCB} + \text{WEC} \times \text{SCC})$$

$$K2 = K2_{org} + \text{K2WE} \times (\text{SCA} + \text{WEB} \times \text{SCB} + \text{WEC} \times \text{SCC})$$

$$m_{eff} = m_{eff,org} \times (1 + \text{KU0WE} \times (\text{SCA} + \text{WEB} \times \text{SCB} + \text{WEC} \times \text{SCC}))$$

where SCA, SCB, SCC are instance parameters that represent the integral of the first/second/third distribution function for scattered well dopant.

The guidelines for calculating the instance parameters SCA, SCB, SCC have been developed by the Compact Model Council which can be found at the CMC website [19].

## CHAPTER 15: Parameter Extraction Methodology

Parameter extraction is an important part of model development. The extraction methodology depends on the model and on the way the model is used. A combination of a local optimization and the group device extraction strategy is adopted for parameter extraction.

## 15.1 Optimization strategy

There are two main, different optimization strategies: global optimization and local optimization. Global optimization relies on the explicit use of a computer to find one set of model parameters which will best fit the available experimental (measured) data. This methodology may give the minimum average error between measured and simulated (calculated) data points, but it also treats each parameter as a "fitting" parameter. Physical parameters extracted in such a manner might yield values that are not consistent with their physical intent.

In local optimization, many parameters are extracted independently of one another. Parameters are extracted from device bias conditions which correspond to dominant physical mechanisms. Parameters which are extracted in this manner might not fit experimental data in all the bias conditions. Nonetheless, these extraction methodologies are developed specifically with respect to a given parameter's physical meaning. If properly executed, it should, overall, predict

device performance quite well. Values extracted in this manner will now have some physical relevance.

## 15.2 Extraction Strategy

Two different strategies are available for extracting parameters: single device extraction strategy and group device extraction strategy. In single device extraction strategy, experimental data from a single device is used to extract a complete set of model parameters. This strategy will fit one device very well but will not fit other devices with different geometries. Furthermore, single device extraction strategy can not guarantee that the extracted parameters are physical. If only one set of channel length and width is used, parameters related to channel length and channel width dependencies can not be determined.

It is suggested that BSIM4 use group device extraction strategy. This requires measured data from devices with different geometries. All devices are measured under the same bias conditions. The resulting fit might not be absolutely perfect for any single device but will be better for the group of devices under consideration. In the following, a general extraction methodology is proposed for basic BSIM4 model parameters. Thus, it will not cover other model parameters, such as those of the gate tunneling current model and RF models, etc.

#### **15.3.1** Extraction Requirements

One large size device and two sets of smaller-sized devices are needed to extract parameters, as shown in Figure 13-1.

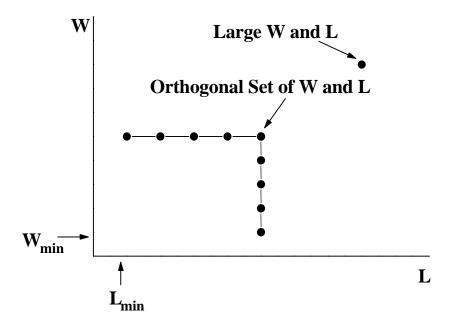


Figure 13-1. Device geometries used for parameter extraction

The large-sized device (W  $\geq$  10 $\mu$ m, L  $\geq$  10 $\mu$ m) is used to extract parameters which are independent of short/narrow channel effects and parasitic resistance. Specifically, these are: mobility, the large-sized device

threshold voltage *VTH*0, and the body effect coefficients *K*1 and *K*2 which depend on the vertical doping concentration distribution. The set of devices with a fixed large channel width but different channel lengths are used to extract parameters which are related to the short channel effects. Similarly, the set of devices with a fixed, long channel length but different channel widths are used to extract parameters which are related to narrow width effects. Regardless of device geometry, each device will have to be measured under four, distinct bias conditions.

- (1)  $I_{ds}$  vs.  $V_{gs}$  @  $V_{ds} = 0.05$ V with different  $V_{bs}$ .
- (2)  $I_{ds}$  vs.  $V_{ds}$  @  $V_{bs} = 0$ V with different  $V_{gs}$ .
- (3)  $I_{ds}$  vs.  $V_{gs}$  @  $V_{ds} = V_{dd}$  with different  $V_{bs}$ .
- (4)  $I_{ds}$  vs.  $V_{ds}$  @  $V_{bs} = V_{bb}$  with different  $V_{gs}$ . ( $|V_{bb}|$  is the maximum body bias).

#### 15.3.2 Optimization

The optimization process recommended is a combination of Newton-Raphson's iteration and linear-squares fit of either one, two, or three variables. A flow chart of this optimization process is shown in Figure 13-2. The model equation is first arranged in a form suitable for Newton-Raphson's iteration as shown in (14.3.1):

$$f_{\exp}(P_{10}, P_{20}, P_{30}) - f_{sim}(P_1^{(m)}, P_2^{(m)}, P_3^{(m)}) = \frac{\P f_{sim}}{\P P_1} \mathbf{D} P_1^m + \frac{\P f_{sim}}{\P P_2} \mathbf{D} P_2^m + \frac{\P f_{sim}}{\P P_3} \mathbf{D} P_3^m$$

The variable  $f_{sim}()$  is the objective function to be optimized. The variable  $f_{exp}()$  stands for the experimental data.  $P_{10}$ ,  $P_{20}$ , and  $P_{30}$  represent the

desired extracted parameter values.  $P_1^{(m)}$ ,  $P_2^{(m)}$  and  $P_3^{(m)}$  represent parameter values after the *m*th iteration.

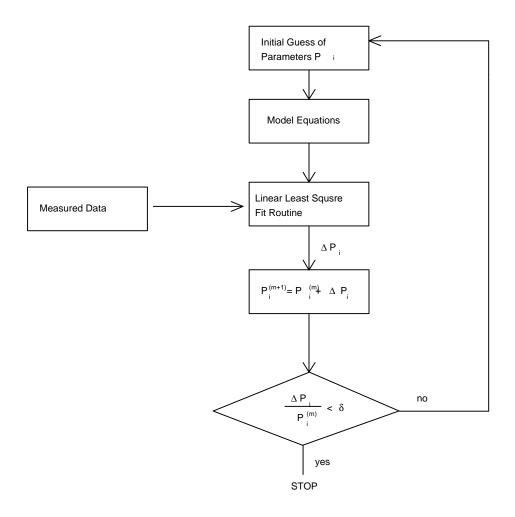


Figure 13-2. Optimization flow.

To change (14.3.1) into a form that a linear least-squares fit routine can be used (i.e. in a form of  $y = a + bx_1 + cx_2$ ), both sides of (14.3.1) are divided

by  $\partial f_{sim} / \partial P_1$ . This gives the change in  $P_1$ ,  $\Delta P_1^{(m)}$ , for the next iteration such that:

$$P_i^{(m+1)} = P_i^{(m)} + \mathbf{D}P_i^{(m)}$$
(14.3.2)

where i=1, 2, 3 for this example. The (m+1) parameter values for  $P_2$  and  $P_3$  are obtained in an identical fashion. This process is repeated until the incremental parameter change in parameter values  $\Delta P_i^{(m)}$  are smaller than a pre-determined value. At this point, the parameters  $P_1$ ,  $P_2$ , and  $P_3$  have been extracted.

#### 15.3.3 Extraction Routine

Before any model parameters can be extracted, some process parameters have to be provided. They are listed below in Table 13-1:

Input Parameters Names	Physical Meaning
TOXE, TOXP, DTOX, or EPSROX	Gate oxide thickness and dielectric constant
NDEP	Doping concentration in the channel
TNOM	Temperature at which the data is taken
L <sub>drawn</sub>	Mask level channel length
W <sub>drawn</sub>	Mask level channel width
XJ	Junction depth

Table 13-1. Prerequisite input parameters prior to extraction process.

The parameters are extracted in the following procedure. These procedures are based on a physical understanding of the model and based on local optimization. (Note: *Fitting Target Data* refers to measurement data used for model extraction.)

#### Step 1

Extracted Parameters & Fitting Target Data	Device & Experimental Data
VTH0, K1, K2	Large Size Device (Large W & L).
	$I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = 0.05$ V at Different $V_{bs}$
Fitting Target Exp. Data: $V_{th}(V_{bs})$	Extracted Experimental Data $V_{th}(V_{bs})$

#### Step 2

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
UA, UB, UC, EU	Large Size Device (Large $W \& L$ ). $I_{ds}$ vs. $V_{gs} @ V_{ds} = 0.05 \text{V}$ at Different $V_{bs}$
Fitting Target Exp. Data: Strong Inversion region $I_{ds}(V_{gs}, V_{bs})$	

Extracted Parameters & Fitting Target	Devices & Experimental Data
Data	

	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: Strong Inversion region $I_{ds}(V_{gs}, V_{bs})$	$I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = 0.05$ V at Different $V_{bs}$

#### <u>Step 4</u>

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
WINT, $R_{ds}$ (RDSW, $W$ , $V_{bs}$ )	One Set of Devices (Large and Fixed <i>L</i> & Different <i>W</i> ).
Fitting Target Exp. Data: Strong Inversion region $I_{ds}(V_{gs}, V_{bs})$	$I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = 0.05$ V at Different $V_{bs}$

#### Step 5

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
RDSW, PRWG, PRWB, WR	$R_{ds}(\text{RDSW}, W, V_{gs}, V_{bs})$
Fitting Target Exp. Data: $R_{ds}$ (RDSW, $W$ , $V_{gs}$ , $V_{bs}$ )	

#### <u>Step 6</u>

Extracted Parameters & Fitting Target	Devices & Experimental Data
Data	

DVT0, DVT1, DVT2, LPE0, LPEB	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: $V_{th}(V_{bs}, L, W)$	$V_{th}(V_{bs}, L, W)$

#### <u>Step 7</u>

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
DVT0W, DVT1W, DVT2W Fitting Target Exp. Data: $V_{th}(V_{bs}, L, W)$	One Set of Devices (Large and Fixed $L$ & Different $W$ ). $V_{th}(V_{bs}, L, W)$

## <u>Step 8</u>

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
K3, K3B, W0	One Set of Devices (Large and Fixed <i>L</i> & Different <i>W</i> ).
Fitting Target Exp. Data: $V_{th}(V_{bs}, L, W)$	$V_{th}(V_{bs}, L, W)$

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
MINV, VOFF, VOFFL, NFACTOR, CDSC, CDSCB Fitting Target Exp. Data: Subthreshold region $I_{ds}(V_{gs}, V_{bs})$	One Set of Devices (Large and Fixed $W$ & Different $L$ ). $I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = 0.05$ V at Different $V_{bs}$

#### **Step 10**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
CDSCD Fitting Target Exp. Data: Subthreshold	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
region $I_{ds}(V_{gs}, V_{bs})$	$I_{ds}$ vs. $V_{gs}$ @ $V_{bs} = V_{bb}$ at Different $V_{ds}$

#### <u>Step 11</u>

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
DWB	One Set of Devices (Large and Fixed W &
Fitting Target Exp. Data: Strong Inver-	Different $L$ ).
sion region $I_{ds}(V_{gs}, V_{bs})$	$I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = 0.05$ V at Different $V_{bs}$

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
VSAT, A0, AGS, LAMBDA, XN, VTL, LC	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: $I_{sat}(V_{gs}, V_{bs})/W$	$I_{ds}$ vs. $V_{ds}$ @ $V_{bs} = 0$ V at Different $V_{gs}$
A1, A2 (PMOS Only)	
Fitting Target Exp. Data $V_{dsat}(V_{gs})$	

## **Step 13**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
B0, B1 Fitting Target Exp. Data: $I_{sat}(V_{gs}, V_{bs})/W$	One Set of Devices (Large and Fixed $L$ & Different $W$ ). $I_{ds}$ vs. $V_{ds}$ @ $V_{bs}$ = 0V at Different $V_{gs}$

#### **Step 14**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
DWG Fitting Target Exp. Data: $I_{sat}(V_{gs}, V_{bs})/W$	One Set of Devices (Large and Fixed $L$ & Different $W$ ). $I_{ds}$ vs. $V_{ds}$ @ $V_{bs}$ = 0V at Different $V_{gs}$

#### **Step 15**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
PSCBE1, PSCBE2	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: $R_{out}(V_{gs}, V_{ds})$	$I_{ds}$ vs. $V_{ds}$ @ $V_{bs} = 0$ V at Different $V_{gs}$

Extracted Parameters & Fitting Target	Devices & Experimental Data
Data	

PCLM, $\theta$ (DROUT, PDIBLC1,
PDIBLC2, L), PVAG, FPROUT, DITS,
DITSL, DITSD

One Set of Devices (Large and Fixed W & Different L).

Fitting Target Exp. Data:  $R_{out}(V_{gs}, V_{ds})$ 

 $I_{ds}$  vs.  $V_{ds}$  @  $V_{bs} = 0$ V at Different  $V_{gs}$ 

#### **Step 17**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
DROUT, PDIBLC1, PDIBLC2	One Set of Devices (Large and Fixed $W$ & Different $L$ ).
Fitting Target Exp. Data: $\theta$ (DROUT, PDIBLC1, PDIBLC2, $L$ )	$\theta$ (DROUT, PDIBLC1, PDIBLC2, $L$ )

#### **Step 18**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
PDIBLCB	One Set of Devices (Large and Fixed $W$ & Different $L$ ).
Fitting Target Exp. Data: $\theta(DROUT, PDIBLC1, PDIBLC2, L, V_{bs})$	$I_{ds}$ vs. $V_{gs}$ @ fixed $V_{gs}$ at Different $V_{bs}$

Extracted Parameters & Fitting Target	Devices & Experimental Data
Data	

$\theta_{DIBL}$ (ETA0, ETAB, DSUB, DVTP0, DVTP1, $L$ )	One Set of Devices (Large and Fixed $W$ & Different $L$ ). $I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = V_{dd}$ at Different $V_{bs}$
Fitting Target Exp. Data: Subthreshold region $I_{ds}(V_{gs}, V_{bs})$	

#### **Step 20**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
ETA0, ETAB, DSUB	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: $\theta_{DIBL}$ (ETA0,	$I_{ds}$ vs. $V_{gs}$ @ $V_{ds} = V_{dd}$ at Different $V_{bs}$
ETAB, $L$ )	

#### **Step 21**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
KETA	One Set of Devices (Large and Fixed <i>W</i> & Different <i>L</i> ).
Fitting Target Exp. Data: $I_{sat}(V_{gs}, V_{bs})/W$	,

Extracted Parameters & Fitting Target	Devices & Experimental Data
Data	

ALPHA0, ALPHA1, BETA0	One Set of Devices (Large and Fixed W &		
	Different <i>L</i> ).		
Fitting Target Exp. Data: $I_{ii}(V_{gs}, V_{bs})/W$	$I_{ds}$ vs. $V_{ds}$ @ $V_{bs} = V_{bb}$ at Different $V_{ds}$		

#### **Step 23**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
ku0, kvsat, tku0, lku0, wku0, pku0, llodku0, wlodku0	Set of Devices (Different L, W, SA, SB).
Fitting Target Exp. Data: <i>Mobility (SA, SB, L, W)</i>	$I_{ds-linear}$ @ $V_{gs} = V_{dd}$ , $V_{ds} = 0.05$

#### **Step 24**

Extracted Parameters & Fitting Target Data	Devices & Experimental Data
kvth0, lkvth0, wkvth0, pvth0, llodvth, wlodvth	Set of Devices (Different L, W, $SA$ , $SB$ ). $V_{th}(SA, SB, L, W)$
Fitting Target Exp. Data: $V_{th}(SA, SB, L, W)$	

_		
	Extracted Parameters & Fitting Target	Devices & Experimental Data
	Data	

stk2, lodk2, steta0, lodeta0	Set of Devices (Different L, W, SA, SB).
Fitting Target Exp. Data: $k2(SA, SB, L, W)$ , eta0( $SA, SB, L, W$ )	k2(SA, SB, L, W), eta0(SA, SB, L, W)

## **Appendix A: Complete Parameter List**

## A.1 BSIM4.5.0 Model Selectors/Controllers

Parameter name	Description	Default value	Binnable?	Note
LEVEL (SPICE3 parameter)	SPICE3 model selector	14	NA	BSIM4 also set as the default model in SPICE3
VERSION	Model version number	4.5.0	NA	Berkeley Latest offi- cial release
BINUNIT	Binning unit selector	1	NA	-
PARAMCHK	Switch for parameter value check	1	NA	Parame- ters checked
MOBMOD	Mobility model selector	0	NA	-
RDSMOD	Bias-dependent source/drain resistance model selector	0	NA	R <sub>ds</sub> (V) modeled internally through IV equation
IGCMOD	Gate-to-channel tunneling current model selector	0	NA	OFF
IGBMOD	Gate-to-substrate tunneling current model selector	0	NA	OFF
CAPMOD	Capacitance model selector	2	NA	-
RGATEMOD	Gate resistance model selector	0		-
(Also an instance parameter)		(no gate resistance)		

#### **BSIM4.5.0 Model Selectors/Controllers**

Parameter name	Description	Default value	Binnable?	Note
RBODYMOD  (Also an instance parameter)	Substrate resistance network model selector	0 ( network off)	NA	-
TRNQSMOD (Also an instance parameter)	Transient NQS model selector	0	NA	OFF
ACNQSMOD (Also an instance parameter)	AC small-signal NQS model selector	0	NA	OFF
FNOIMOD	Flicker noise model selector	1	NA	-
TNOIMOD	Thermal noise model selector	0	NA	-
DIOMOD	Source/drain junction diode IV model selector	1	NA	-
TEMPMOD	Temperature mode selector	0	No	If 0,origi- nal model is used If 1, new format used
PERMOD	Whether PS/PD (when given) includes the gate-edge perimeter	1 (including the gate- edge perime- ter)	NA	-
GEOMOD (Also an instance parameter)	Geometry-dependent parasitics model selector - specifying how the end S/D diffusions are connected	0 (isolated)	NA	-
RGEOMOD (Instance parameter only)	Source/drain diffusion resistance and contact model selector - specifying the end S/D contact type: point, wide or merged, and how S/D parasitics resistance is computed	0 (no S/D diffusion resistance)	NA	-
WPEMOD	Flag for WPE model (WPEMOD=1 to activate this model	0	NA	-

## **A.2 Process Parameters**

Parameter name	Description	Default value	Binnable?	Note
EPSROX	Gate dielectric constant relative to vacuum	3.9 (SiO <sub>2</sub> )	No	Typically greater than or equal to 3.9
TOXE	Electrical gate equivalent oxide thickness	3.0e-9m	No	Fatal error if not positive
TOXP	Physical gate equivalent oxide thickness	TOXE	No	Fatal error if not positive
TOXM	Tox at which parameters are extracted	TOXE	No	Fatal error if not positive
DTOX	Defined as (TOXE-TOXP)	0.0m	No	-
XJ	S/D junction depth	1.5e-7m	Yes	-
GAMMA1 (γ1 in equation)	Body-effect coefficient near the surface	calculated	V <sup>1/2</sup>	Note-1
GAMMA2 (γ2 in equation)	Body-effect coefficient in the bulk	calculated	V <sup>1/2</sup>	Note-1
NDEP	Channel doping concentration at depletion edge for zero body bias	1.7e17cm <sup>-3</sup>	Yes	Note-2
NSUB	Substrate doping concentration	6.0e16cm <sup>-3</sup>	Yes	-
NGATE	Poly Si gate doping concentration	0.0cm <sup>-3</sup>	Yes	-
NSD	Source/drain doping concentrationFa- tal error if not positive	1.0e20cm <sup>-3</sup>	Yes	-
VBX	$V_{bs}$ at which the depletion region width equalsXT	calculated (V)	No	Note-3
XT	Doping depth	1.55e-7m	Yes	-

#### **Process Parameters**

Parameter name	Description	Default value	Binnable?	Note
RSH	Source/drain sheet resistance	0.0ohm/ square	No	Should not be negative
RSHG	Gate electrode sheet resistance	0.1ohm/ square	No	Shoule not be negative

Parameter name	Description	Default value	Binnable?	Note
VTH0 or VTHO	Long-channel threshold voltage at $V_{bs}$ =0	0.7V (NMOS) -0.7V (PMOS)	Yes	Note-4
DELVTO (Instance parameter only)	Zero bias threshold voltage variation	0.0V	No	
VFB	Flat-band voltage	-1.0V	Yes	Note-4
PHIN	Non-uniform vertical doping effect on surface potential	0.0V	Yes	-
K1	First-order body bias coefficient	$0.5V^{1/2}$	Yes	Note-5
K2	Second-order body bias coefficient	0.0	Yes	Note-5
К3	Narrow width coefficient	80.0	Yes	-
КЗВ	Body effect coefficient of K3	0.0 V <sup>-1</sup>	Yes	-
W0	Narrow width parameter	2.5e-6m	Yes	-
LPE0	Lateral non-uniform doping parameter at V <sub>bs</sub> =0	1.74e-7m	Yes	-
LPEB	Lateral non-uniform doping effect on K1	0.0m	Yes	-
VBM	Maximum applied body bias in VTH0 calculation	-3.0V	Yes	-
DVT0	First coefficient of short-channel effect on $V_{th}$	2.2	Yes	-
DVT1	Second coefficient of short-channel effect on $V_{th}$	0.53	Yes	-
DVT2	Body-bias coefficient of short-channel effect on Vth	-0.032V <sup>-1</sup>	Yes	-
DVTP0	First coefficient of drain-induced $V_{th}$ shift due to for long-channel pocket devices	0.0m	Yes	Not modeled if binned DVTP0 <=0.0

Parameter name	Description	Default value	Binnable?	Note
DVTP1	First coefficient of drain-induced $V_{th}$ shift due to for long-channel pocket devices	0.0V <sup>-1</sup>	Yes	-
DVT0W	First coefficient of narrow width effect on $V_{th}$ for small channel length	0.0	Yes	-
DVT1W	Second coefficient of narrow width effect on $V_{th}$ for small channel length	5.3e6m <sup>-1</sup>	Yes	-
DVT2W	Body-bias coefficient of narrow width effect for small channel length	-0.032V <sup>-1</sup>	Yes	-
U0	Low-field mobility	0.067 m <sup>2</sup> /(Vs) (NMOS); 0.025 m <sup>2</sup> /(Vs) PMOS	Yes	-
UA	Coefficient of first-order mobility degradation due to vertical field	1.0e-9m/V for MOBMOD =0 and 1; 1.0e-15m/V for MOBMOD =2	Yes	-
UB	Coefficient of secon-order mobility degradation due to vertical field	1.0e-19m <sup>2</sup> / V <sup>2</sup>	Yes	-
UC	Coefficient of mobility degradation due to body-bias effect	-0.0465V <sup>-1</sup> for MOB- MOD=1; -0.0465e-9 m/V <sup>2</sup> for MOBMOD =0 and 2	Yes	-
UD	Mobility Coulumb scattering coefficient	0.0m <sup>-2</sup>	Yes	-

Parameter name	Description	Default value	Binnable?	Note
UP	Mobility channel length coefficient	$0(1/m^2)$	Yes	-
LP	Mobility channel length exponential coefficient	1e-8(m)	Yes	-
EU	Exponent for mobility degradation of MOBMOD=2	1.67 (NMOS); 1.0 (PMOS)		-
VSAT	Saturation velocity	8.0e4m/s	Yes	-
A0	Coefficient of channel-length dependence of bulk charge effect	1.0	Yes	-
AGS	Coefficient of $V_{gs}$ dependence of bulk charge effect	0.0V <sup>-1</sup>	Yes	-
В0	Bulk charge effect coefficient for channel width	0.0m	Yes	-
B1	Bulk charge effect width offset	0.0m	Yes	-
KETA	Body-bias coefficient of bulk charge effect	-0.047V <sup>-1</sup>	Yes	-
A1	First non-saturation effect parameter	0.0V <sup>-1</sup>	Yes	-
A2	Second non-saturation factor	1.0	Yes	-
WINT	Channel-width offset parameter	0.0m	No	-
LINT	Channel-length offset parameter	0.0m	No	-
DWG	Coefficient of gate bias dependence of $W_{\it eff}$	0.0m/V	Yes	-
DWB	Coefficient of body bias dependence of $W_{eff}$ bias dependence	0.0m/V <sup>1/2</sup>	Yes	-
VOFF	Offset voltage in subthreshold region for large $W$ and $L$	-0.08V	Yes	-
VOFFL	Channel-length dependence of VOFF	0.0mV	No	-
MINV	$V_{\it gsteff}$ fitting parameter for moderate inversion condition	0.0	Yes	-
NFACTOR	Subthreshold swing factor	1.0	Yes	-

Parameter name	Description	Default value	Binnable?	Note
ETA0	DIBL coefficient in subthreshold region	0.08	Yes	-
ЕТАВ	Body-bias coefficient for the sub- threshold DIBL effect	-0.07V <sup>-1</sup>	Yes	-
DSUB	DIBL coefficient exponent in sub- threshold region	DROUT	Yes	-
CIT	Interface trap capacitance	$0.0F/m^2$	Yes	-
CDSC	coupling capacitance between source/drain and channel	2.4e-4F/m <sup>2</sup>	Yes	-
CDSCB	Body-bias sensitivity of Cdsc	$0.0F/(Vm^2)$	Yes	-
CDSCD	Drain-bias sensitivity of CDSC	$0.0(F/Vm^2)$	Yes	-
PCLM	Channel length modulation parameter	1.3	Yes	-
PDIBLC1	Parameter for DIBL effect on Rout	0.39	Yes	-
PDIBLC2	Parameter for DIBL effect on Rout	0.0086	Yes	-
PDIBLCB	Body bias coefficient of DIBL effect on Rout	0.0V <sup>-1</sup>	Yes	-
DROUT	Channel-length dependence of DIBL effect on Rout	0.56	Yes	-
PSCBE1	First substrate current induced body- effect parameter	4.24e8V/m	Yes	-
PSCBE2	Second substrate current induced body-effect parameter	1.0e-5m/V	Yes	-
PVAG	Gate-bias dependence of Early voltage	0.0	Yes	-
DELTA (δ in equation)	Parameter for DC $V_{dseff}$	0.01V	Yes	-
FPROUT	Effect of pocket implant on Rout degradation	0.0V/m <sup>0.5</sup>	Yes	Not modeled if binned FPROUT not positive

Parameter name	Description	Default value	Binnable?	Note
PDITS	Impact of drain-induced $V_{th}$ shift on Rout	0.0V <sup>-1</sup>	Yes	Not modeled if binned PDITS=0; Fatal error if binned PDITS negative
PDITSL	Channel-length dependence of drain- induced $V_{th}$ shift for Rout	0.0m <sup>-1</sup>	No	Fatal error if PDITSL negative
PDITSD	$V_{ds}$ dependence of drain-induced $V_{th}$ shift for Rout	0.0V <sup>-1</sup>	Yes	-
LAMBDA	Velocity overshoot coefficient	0.0	Yes	If not given or (<=0.0), velocity overshoot will be turned off
VTL	Thermal velocity	2.05e5[m/s]	Yes	If not given or (<=0.0), source end thermal velocity will be turned off
LC	Velocity back scattering coefficient	0.0[m]	No	5e9[m] at room tem- perature
XN	Velocity back scattering coefficient	3.0	Yes	-

## A.4 Parameters for Asymmetric and Bias-Dependent $R_{ds}$ Model

Parameter name	Description	Default value	Binnable?	Note
RDSW	Zero bias LDD resistance per unit width for RDSMOD=0	200.0 ohm(μm) <sup>WR</sup>	Yes	If negative, reset to 0.0
RDSWMIN	LDD resistance per unit width at high $V_{gs}$ and zero $V_{bs}$ for RDSMOD=0	0.0 ohm(µm) <sup>WR</sup>	No	-
RDW	Zero bias lightly-doped drain resistance $R_d(V)$ per unit width for RDS-MOD=1	100.0 ohm(μm) <sup>WR</sup>	Yes	-
RDWMIN	Lightly-doped drain resistance per unit width at high $V_{gs}$ and zero $V_{bs}$ for RDSMOD=1	0.0 ohm(μm) <sup>WR</sup>	No	-
RSW	Zero bias lightly-doped source resistance $R_s(V)$ per unit width for RDS-MOD=1	100.0 ohm(µm) <sup>WR</sup>	Yes	-
RSWMIN	Lightly-doped source resistance per unit width at high $V_{gs}$ and zero $V_{bs}$ for RDSMOD=1	0.0 ohm(μm) <sup>WR</sup>	No	-
PRWG	Gate-bias dependence of LDD resistance	1.0V <sup>-1</sup>	Yes	-
PRWB	Body-bias dependence of LDD resistance	0.0V <sup>-0.5</sup>	Yes	-
WR	Channel-width dependence parameter of LDD resistance	1.0	Yes	-
NRS (instance parameter only)	Number of source diffusion squares	1.0	No	-
NRD (instance parameter only)	Number of drain diffusion squares	1.0	No	-

# **A.5 Impact Ionization Current Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
ALPHA0	First parameter of impact ionization current	0.0m/V	Yes	-
ALPHA1	Channel length scaling parameter of impact ionization current	0.0/V	Yes	-
BETA0	First Vds dependent parameter of impact ionization current	0.0/V	Yes	-

# A.6 Gate-Induced Drain Leakage Model Parameters

Parameter name	Description	Default value	Binnable?	Note
AGIDL	Pre-exponential coefficient for GIDL	0.0mho	Yes	I <sub>gidl</sub> =0.0 if binned AGIDL
				=0.0
BGIDL	Exponential coefficient for GIDL	2.3e9V/m	Yes	$I_{gidl}$ =0.0 if binned BGIDL =0.0
CGIDL	Paramter for body-bias effect on GIDL	$0.5V^3$	Yes	-
EGIDL	Fitting parameter for band bending for GIDL	0.8V	Yes	-
AGISL	Pre-exponential coefficient for GISL	AGIDL	Yes	$I_{gisl}$ =0.0 if binned AGISL
				=0.0
BGISL	Exponential coefficient for GISL	BGIDL	Yes	$I_{gisl}$ =0.0 if binned BGISL
				=0.0
CGISL	Paramter for body-bias effect on GISL	CGIDL	Yes	-
EGISL	Fitting parameter for band bending for GISL	EGIDL	Yes	-

# **A.7** Gate Dielectric Tunneling Current Model Parameters

Parameter name	Description	Default value	Binnable?	Note
AIGBACC	Parameter for $I_{gb}$ in accumulation	$9.49e-4$ $(Fs^2/g)^{0.5}m^{-1}$	Yes	-
BIGBACC	Parameter for $I_{gb}$ in accumulation	$1.71e-3$ $(Fs^2/g)^{0.5}$ $m^{-1}V^{-1}$	Yes	-
CIGBACC	Parameter for $I_{gb}$ in accumulation	0.075V <sup>-1</sup>	Yes	-
NIGBACC	Parameter for $I_{gb}$ in accumulation	1.0	Yes	Fatal error if binned value not positive
AIGBINV	Parameter for $I_{gb}$ in inversion	$1.11e-2$ $(Fs^2/g)^{0.5}m^{-1}$	Yes	-
BIGBINV	Parameter for $I_{gb}$ in inversion	9.49e-4 $(Fs^2/g)^{0.5}$ $m^{-1}V^{-1}$	Yes	-
CIGBINV	Parameter for $I_{gb}$ in inversion	0.006V <sup>-1</sup>	Yes	-
EIGBINV	Parameter for $I_{gb}$ in inversion	1.1V	Yes	-
NIGBINV	Parameter for $I_{gb}$ in inversion	3.0	Yes	Fatal error if binned value not positive
AIGC	Parameter for $I_{gcs}$ and $I_{gcd}$	1.36e-2 (NMOS) and 9.8e-3 (PMOS) (Fs <sup>2</sup> /g) <sup>0.5</sup> m <sup>-1</sup>	Yes	-

## **Gate Dielectric Tunneling Current Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
BIGC	Parameter for $I_{gcs}$ and $I_{gcd}$	1.71e-3 (NMOS) and 7.59e-4 (PMOS) (Fs <sup>2</sup> /g) <sup>0.5</sup> m <sup>-1</sup> V <sup>-1</sup>	Yes	-
CIGC	Parameter for $I_{gcs}$ and $I_{gcd}$	0.075 (NMOS) and 0.03 (PMOS) V <sup>-1</sup>	Yes	-
AIGS	Parameter for $I_{gs}$	1.36e-2 (NMOS) and 9.8e-3 (PMOS) (Fs <sup>2</sup> /g) <sup>0.5</sup> m <sup>-1</sup>	Yes	-
BIGS	Parameter for $I_{gs}$	1.71e-3 (NMOS) and 7.59e-4 (PMOS) $(Fs^2/g)^{0.5}$ $m^{-1}V^{-1}$	Yes	-
CIGS	Parameter for $I_{gs}$	0.075 (NMOS) and 0.03 (PMOS) V <sup>-1</sup>	Yes	-
DLCIG	Source/drain overlap length for $I_{gs}$	LINT	Yes	-
AIGD	Parameter for $I_{gd}$	1.36e-2 (NMOS) and 9.8e-3 (PMOS) (Fs <sup>2</sup> /g) <sup>0.5</sup> m <sup>-1</sup>	Yes	-

## **Gate Dielectric Tunneling Current Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
BIGD	Parameter for $I_{gd}$	1.71e-3 (NMOS) and 7.59e-4 (PMOS) (Fs <sup>2</sup> /g) <sup>0.5</sup> m <sup>-1</sup> V <sup>-1</sup>	Yes	-
CIGD	Parameter for $I_{gd}$	0.075 (NMOS) and 0.03 (PMOS) V <sup>-1</sup>	Yes	-
DLCIGD	Source/drain overlap length for $I_{gd}$	LINT	Yes	-
NIGC	Parameter for $I_{gcs}$ , $I_{gcd}$ , $I_{gs}$ and $I_{gd}$	1.0	Yes	Fatal error if binned value not positive
POXEDGE	Factor for the gate oxide thickness in source/drain overlap regions	1.0	Yes	Fatal error if binned value not positive
PIGCD	$V_{ds}$ dependence of $I_{gcs}$ and $I_{gcd}$	1.0	Yes	Fatal error if binned value not positive
NTOX	Exponent for the gate oxide ratio	1.0	Yes	-
TOXREF	Nominal gate oxide thickness for gate dielectric tunneling current model only	3.0e-9m	No	Fatal error if not positive
VFBSDOFF	Flatband Voltage Offset Parameter	0.0V	Yes	-

## **A.8** Charge and Capacitance Model Parameters

Parameter name	Description	Default value	Binnable?	Note
XPART	Charge partition parameter	0.0	No	ı
CGSO	Non LDD region source-gate overlap capacitance per unit channel width	calculated (F/m)	No	Note-6
CGDO	Non LDD region drain-gate overlap capacitance per unit channel width	calculated (F/m)	No	Note-6
CGBO	Gate-bulk overlap capacitance per unit channel length	0.0	F/m	Note-6
CGSL	Overlap capacitance between gate and lightly-doped source region	0.0F/m	Yes	-
CGDL	Overlap capacitance between gate and lightly-doped source region	0.0F/m	Yes	-
CKAPPAS	Coefficient of bias-dependent overlap capacitance for the source side	0.6V	Yes	-
CKAPPAD	Coefficient of bias-dependent overlap capacitance for the drain side	CKAPPAS	Yes	-
CF	Fringing field capacitance	calculated (F/m)	Yes	Note-7
CLC	Constant term for the short channel model	1.0e-7m	Yes	-
CLE	Exponential term for the short channel model	0.6	Yes	-
DLC	Channel-length offset parameter for CV model	LINT (m)	No	-
DWC	Channel-width offset parameter for CV model	WINT (m)	No	-
VFBCV	Flat-band voltage parameter (for CAPMOD=0 only)	-1.0V	Yes	-
NOFF	CV parameter in $V_{gsteff,CV}$ for weak to strong inversion	1.0	Yes	-
VOFFCV	CV parameter in $V_{gsteff,CV}$ for week to strong inversion	0.0V	Yes	-

## **Charge and Capacitance Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
ACDE	Exponential coefficient for charge thickness in CAPMOD=2 for accumulation and depletion regions	1.0m/V	Yes	-
MOIN	Coefficient for the gate-bias dependent surface potential	15.0	Yes	-

## **A.9 High-Speed/RF Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
XRCRG1	Parameter for distributed channel- resistance effect for both intrinsic- input resistance and charge-deficit NQS models	12.0	Yes	Warning message issued if binned XRCRG1 <=0.0
XRCRG2	Parameter to account for the excess channel diffusion resistance for both intrinsic input resistance and charge-deficit NQS models	1.0	Yes	-
RBPB (Also an instance parameter)	Resistance connected between bNodePrime and bNode	50.0ohm	No	If less than 1.0e-3ohm, reset to 1.0e-3ohm
RBPD (Also an instance parameter)	Resistance connected between bNodePrime and dbNode	50.0ohm	No	If less than 1.0e-3ohm, reset to 1.0e-3ohm
RBPS (Also an instance parameter)	Resistance connected between bNodePrime and sbNode	50.0ohm	No	If less than 1.0e-3ohm, reset to 1.0e-3ohm
RBDB (Also an instance parameter)	Resistance connected between dbNode and bNode	50.0ohm	No	If less than 1.0e-3ohm, reset to 1.0e-3ohm
RBSB (Also an instance parameter)	Resistance connected between sbNode and bNode	50.0ohm	No	If less than 1.0e-3ohm, reset to 1.0e-3ohm
GBMIN	Conductance in parallel with each of the five substrate resistances to avoid potential numerical instability due to unreasonably too large a substrate resistance	1.0e-12mho	No	Warning message issued if less than 1.0e-20 mho

## **High-Speed/RF Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
RBPS0	Scaling prefactor for RBPS	50 Ohms	No	
RBPSL	Length Scaling parameter for RBPS	0.0	No	
RBPSW	Width Scaling parameter for RBPS	0.0	No	
RBPSNF	Number of fingers Scaling parameter for RBPS	0.0	No	
RBPD0	Scaling prefactor for RBPD	50 Ohms	No	
RBPDL	Length Scaling parameter for RBPD	0.0	No	
RBPDW	Width Scaling parameter for RBPD	0.0	No	
RBPDNF	Number of fingers Scaling parameter for RBPD	0.0	No	
RBPBX0	Scaling prefactor for RBPBX	100 Ohms	No	
RBPBXL	Length Scaling parameter forRBPBX	0.0	No	
RBPBXW	Width Scaling parameter for RBPBX	0.0	No	
RBPBXNF	Number of fingers Scaling parameter for RBPBX	0.0	No	
RBPBY0	Scaling prefactor for RBPBY	100 Ohms	No	
RBPBYL	Length Scaling parameter forRBPBY	0.0	No	
RBPBYW	Width Scaling parameter for RBPBY	0.0	No	
RBPBYNF	Number of fingers Scaling parameter for RBPBY	0.0	No	
RBSBX0	Scaling prefactor for RBSBX	100 Ohms	No	
RBSBY0	Scaling prefactor for RBSBY	100 Ohms	No	
RBDBX0	Scaling prefactor for RBDBX	100 Ohms	No	
RBDBY0	Scaling prefactor for RBDBY	100 Ohms	No	
RBSDBXL	Length Scaling parameter for RBSBX and RBDBX	0.0	No	
RBSDBXW	Width Scaling parameter for RBSBX and RBDBX	0.0	No	
RBSDBXNF	Number of fingers Scaling parameter for RBSBX and RBDBX	0.0	No	
RBSDBYL	Length Scaling parameter for RBSBY and RBDBY	0.0	No	
RBSDBYW	Width Scaling parameter for RBSBY and RBDBY	0.0	No	
RBSDBYNF	Number of fingers Scaling parameter for RBSBY and RBDBY	0.0	No	

## A.10 Flicker and Thermal Noise Model Parameters

Parameter name	Description	Default value	Binnable?	Note
NOIA	Flicker noise parameter A	6.25e41 (eV) <sup>-1</sup> s <sup>1-</sup> EFm <sup>-3</sup> for NMOS; 6.188e40 (eV) <sup>-1</sup> s <sup>1-</sup> EFm <sup>-3</sup> for PMOS	No	-
NOIB	Flicker noise parameter B	3.125e26 (eV) <sup>-1</sup> s <sup>1-</sup> EFm <sup>-1</sup> for NMOS; 1.5e25 (eV) <sup>-1</sup> s <sup>1-</sup> EFm <sup>-1</sup> for PMOS	No	-
NOIC	Flicker noise parameter C	8.75 (eV) <sup>-1</sup> s <sup>1-EF</sup> m	No	-
EM	Saturation field	4.1e7V/m	No	-
AF	Flicker noise exponent	1.0	No	-
EF	Flicker noise frequency exponent	1.0	No	-
KF	Flicker noise coefficient	$\begin{array}{c} 0.0 \\ A^{2\text{-EF}}s^{1\text{-EF}}F \end{array}$	No	-
LINTNOI	Length Reduction Parameter Offset	0.0 m	No	-
NTNOI	Noise factor for short-channel devices for TNOIMOD=0 only	1.0	No	-
TNOIA	Coefficient of channel-length dependence of total channel thermal noise	1.5E6	No	-

#### Flicker and Thermal Noise Model Parameters

Parameter name	Description	Default value	Binnable?	Note
TNOIB	Channel-length dependence parameter for channel thermal noise partitioning	3.5E6	No	-
RNOIA	Thermal Noise Coefficient	0.577	No	-
RNOIB	Thermal Noise Coefficient	0.37	No	-

# A.11 Layout-Dependent Parasitics Model Parameters

Parameter name	Description	Default value	Binnable?	Note
DMCG	Distance from S/D contact center to the gate edge	0.0m	No	-
DMCI	Distance from S/D contact center to the isolation edge in the channel-length direction	DMCG	No	-
DMDG	Same as DMCG but for merged device only	0.0m	No	-
DMCGT	DMCG of test structures	0.0m	No	-
NF (instance parameter only)	Number of device fingers	1	No	Fatal error if less than one
DWJ	Offset of the S/D junction width	DWC (in CVmodel)	No	-
MIN (instance parameter only)	Whether to minimize the number of drain or source diffusions for even-number fingered device	0 (minimize the drain dif- fusion num- ber)	No	-
XGW(Also an instance parameter)	Distance from the gate contact to the channel edge	0.0m	No	-
XGL	Offset of the gate length due to variations in patterning	0.0m	No	-
XL	Channel length offset due to mask/ etch effect	0.0m	No	-

### **Layout-Dependent Parasitics Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
XW	Channel width offset due to mask/etch effect	0.0m	No	-
NGCON(Also an instance parameter)	Number of gate contacts	1	No	Fatal error if less than one; if not equal to 1 or 2, warning message issued and reset to

Separate for source and drain side as indicated in the names   Description   Default value   Binnable?   Note	Parameter name				
Side as indicated in the names   Description   Default value   Binnable?   Note					
in the names)     Description     value     Binnable?     Note       IJTHSREV IJTHDREV     Limiting current in reverse bias region IJTHDREV     IJTHSREV     No     If not positive, reset to 0.1A       IJTHSFWD IJTHDFWD     Limiting current in forward bias region     IJTHSFWD =0.1A     No     If not positive, reset to 0.1A       XJBVS XJBVS     Fitting parameter for diode break- down     XJBVS=1.0     No     No       XJBVD =XJBVS     Breakdown voltage     BVS=10.0V =XJBVS     No     If not positive, reset to 0.1A       BVS BVD=BVS     Breakdown voltage     BVS=10.0V =XJBVS     No     If not positive, reset to 0.1A       JSS     Bottom junction reverse saturation current density     JSS= 1.0e-4A/m²     No     -       JSWS JSWS     Isolation-edge sidewall reverse saturation tion current density     JSWS =0.0A/m     No     -			Default		
IJTHSREV   Limiting current in reverse bias region   IJTHSREV   =0.1A		Description		Binnable?	Note
IJTHDREV	·		IITHSREV	No	If not posi-
IJTHDREV		Emining carrent in reverse stas region		110	
IJTHSFWD   Limiting current in forward bias   IJTHSFWD   No   If not positive, reset to 0.1A	IJ TIIDKE V		-0.1A		to 0.1A
IJTHSFWD   Limiting current in forward bias   IJTHSFWD   No   If not positive, reset to 0.1A					
IJTHSFWD   Limiting current in forward bias   IJTHSFWD   =0.1A					
IJTHDFWD region =0.1A tive, reset to 0.1A  IJTHDFWD =IJTHS-FWD  XJBVS XJBVD Stiting parameter for diode break-down XJBVS=1.0 No Note-8  XJBVD STITING PARAMETER STITING PARAMETER STITING PRODUCT PROD					
STINDING   Color   C	IJTHSFWD		IJTHSFWD	No	
XJBVS XJBVD Fitting parameter for diode break- down  XJBVS=1.0  XJBVS=1.0  XJBVS  XJBVD  =XJBVS  BVS  BVS=10.0V  BVS=10.0V  No  If not positive, reset to 10.0V  BVD=BVS  JSS  JSD  Bottom junction reverse saturation current density  JSD=JSS  JSWS  JSD=JSS  JSWS  JSO=JSS  No  -  1.0e-4A/m²  JSWS  JSD=JSS  No  -  1.0e-MA/m²  JSWS  JSWS  JSO=JSS  No  -  1.0e-MA/m²	IJTHDFWD	region	=0.1A		
XJBVS XJBVD  Fitting parameter for diode break- down  XJBVD  BVS BVS BVS BVS BVD BVD  BVD BVD  BVD			IJTHDFWD		
XJBVD  down  XJBVD  =XJBVS  BVS  BVS=10.0V  BVD=BVS  BVD=BVS  Bottom junction reverse saturation current density  JSD=JSS  JSWS   JSWS  JSWS  JSWS   JSWS   JSWS   JSWS   JSWS					
XJBVD  XJBVS  BVS  BVS  Breakdown voltage  BVS=10.0V  BVD=BVS  BVD=BVS  JSS  Bottom junction reverse saturation current density  JSS=  JSD-JSS  JSWS	XJBVS	Fitting parameter for diode break-	XJBVS=1.0	No	Note-8
BVS Breakdown voltage BVS=10.0V No If not positive, reset to 10.0V  JSS Bottom junction reverse saturation current density JSD=JSS  JSWS Isolation-edge sidewall reverse saturation tion current density JSWS = 0.0A/m    SWS	XJBVD	down			
BVS BVD  Breakdown voltage  BVS=10.0V  BVD=BVS  Bottom junction reverse saturation current density  JSD=JSS  JSWS JSWS JSWD  Isolation-edge sidewall reverse saturation current density  BVS=10.0V  No If not positive, reset to 10.0V  JSS= No - 1.0e-4A/m²  JSD=JSS  No - 1.0e-4A/m²  JSWS Bottom junction reverse saturation current density  JSD=JSS  No - 1.0e-4A/m²			XJBVD		
BVD  BVD=BVS  BVD=BVS  Ive, reset to 10.0V  JSS  JSD  Bottom junction reverse saturation current density  JSS= 1.0e-4A/m²  JSD=JSS  JSWS JSWS JSWD  Isolation-edge sidewall reverse saturation current density  SWS  =0.0A/m			=XJBVS		
BVD  BVD=BVS  BVD=BVS  Ive, reset to 10.0V  JSS  JSD  Bottom junction reverse saturation current density  JSS= 1.0e-4A/m²  JSD=JSS  JSWS JSWS JSWD  Isolation-edge sidewall reverse saturation current density  SWS  =0.0A/m	BVS	Breakdown voltage	BVS=10.0V	No	If not posi-
JSS Bottom junction reverse saturation current density  JSD=JSS  JSWS JSWD  JSD=JSS  Isolation-edge sidewall reverse saturation jSSS= No - 1.0e-4A/m <sup>2</sup> JSD=JSS  No - 2.0e-4A/m <sup>2</sup> JSWS No - 2.0e-4A/m  JSWS No - 3.0e-4A/m	BVD				tive, reset
JSD current density  1.0e-4A/m²  JSD=JSS  JSWS Isolation-edge sidewall reverse saturation current density  SWS =0.0A/m			BVD=BVS		to 10.0V
JSD=JSS  JSWS Isolation-edge sidewall reverse satura- tion current density =0.0A/m  JSD=JSS No	JSS		JSS=	No	-
JSWS Isolation-edge sidewall reverse saturation current density =0.0A/m	JSD	current density	$1.0e-4A/m^2$		
JSWS Isolation-edge sidewall reverse satura- tion current density =0.0A/m					
JSWD tion current density =0.0A/m			JSD=JSS		
-0.0A/III	JSWS		JSWS	No	-
JSWD	JSWD	tion current density	=0.0A/m		
JSWD					
			JSWD		
=JSWS					

Parameter name				
(separate for source and drain				
side as indicated		Default		
in the names)	Description	value	Binnable?	Note
JSWGS	Gate-edge sidewall reverse saturation	JSWGS	No	-
JSWGD	current density	=0.0A/m		
		JSWGD		
		=JSWGS		
JTSS	Bottom trap-assisted saturation cur-	JTSS	No	-
JTSD	rent density	=0.0A/m		
		JTSD=JTSS		
JTSSWS	STI sidewall trap-assisted saturation	JTSSWS	No	-
JTSSWD	current density	$=0.0A/m^2$		
		JTSSWD		
		=JTSSWS		
JTSSWGS	Gate-edge sidewall trap-assisted satu-	JTSSWGS	No	-
JTSSWGD	ration current density	=0.0A/m		
		JTSSWGD		
		=JTSSWGS		
NJTS	Non-ideality factor for JTSS and	NJTS=20.0	No	-
NJTSD	JTSD			
		NJTSD		
		=NJTS		
NJTSSW	Non-ideality factor for JTSSWS and	NJTSSW	No	-
NJTSSWD	JTSSWD	=20.0		
		NJTSSWD		
		=NJTSSW		

Parameter				
name				
(separate for				
source and drain				
side as indicated		Default		
in the names)	Description	value	Binnable?	Note
	Non-ideality factor for JTSSWGS and	NJTSSWG	No	-
NJTSSWGD	JTSSWGD	=20.0		
		NJTSS- WGD =NJTSSWG		
	Power dependence of JTSS, JTSD on temperature	XTSS=0.02	No	-
		XTSD=0.02		
XTSSWS,	Power dependence of JTSSWS,	XTSSWS	No	-
	JTSSWD on temperature	=0.02		
		XTSSWD =0.02		
	Power dependence of JTSSWGS, JTSSWGD on temperature	XTSSWGS =0.02	No	-
		XTSSWGD =0.02		
	Bottom trap-assisted voltage depen-	VTSS=10V	No	-
VTSD	dent parameter			
		VTSD =VTSS		
VTSSWS	STI sidewall trap-assisted voltage	VTSSWS	No	-
VTSSWD	dependent parameter	=10V		
		VTSSWD		
		=VTSSWS		

name (separate for source and drainside as indicated in the names)         Description         Default value         Binnable?         Note           VTSSWGS VTSSWGD         Gate-edge sidewall trap-assisted voltage dependent parameter         TSSWGS =10V         No         -           TNJTS TNJTS         Temperature coefficient for NJTS and NJTSD         TNJTSD         No         -           TNJTSD         TNJTSSWG and NJTSSWD         TNJTSSWG =TNJTSSWG         No         -           TNJTSSWG TNJTSSWG         Temperature coefficient for NJTSSW and NJTSSWG         TNJTSSWG =TNJTSSWG         No         -           TNJTSSWG TNJTSSWG         Temperature coefficient for NJTSSWG and NJTSSWG         TNJTSSWG =0.0         No         -           CJS CJD         Bottom junction capacitance per unit area at zero bias         CJS=5.0e-4 F/m²         No         -           MJS MJSWS         Bottom junction capacitance grating coefficient         MJS=0.5 MJD=MJS         No         -           MJSWS MJSWD         Isolation-edge sidewall junction capacitance grading coefficient         MJSWS MJSWD         No         -	Parameter				
Source and drain side as indicated in the names)  VTSSWGS VTSSWGD  Gate-edge sidewall trap-assisted voltage dependent parameter  TNJTSWGS TNJTSD  TNJTSD  TNJTSD  TNJTSSW TNJTSSWD  TNJTSSWG  TNJTSS					
side as indicated in the names)         Description         Default value         Binnable?         Note           VTSSWGS VTSSWGD         Gate-edge sidewall trap-assisted voltage dependent parameter         VTSSWGS =10V         No         -           TNJTSSWGD         VTSSWGD         VTSSWGS         No         -           TNJTS         Temperature coefficient for NJTS and NJTSD         TNJTSS=0.0         No         -           TNJTSSW         TNJTSSW         TNJTSSW=TNJTS         No         -           TNJTSSWD         TEmperature coefficient for NJTSSW         TNJTSSWB         No         -           TNJTSSWG         TEmperature coefficient for NJTSSWG         No         -         -           TNJTSSWG         TNJTSSWG         No         -         -           TNJTSSWG         No         -         -         -         -           TNJTSSWG         No         -         -         -         -         -           TNJTSSWG         TNJTSSWG         No         - <td></td> <td></td> <td></td> <td></td> <td></td>					
in the names)         Description         value         Binnable?         Note           VTSSWGS VTSSWGD         Gate-edge sidewall trap-assisted voltage dependent parameter         VTSSWGS =10V         No -10V			Default		
VTSSWGD age dependent parameter = 10V   VTSSWGD = VTSSWGS    TNJTS		Description		Binnable?	Note
TNJTSSW TNJTSS WGD = TNJTSSW TNJTSSW TNJTSSW TNJTSSW TNJTSS TNJTS TNJTS TNJTSS TNJTSS TNJTSS TNJTS TNJTS TNJTS TNJTS TNJTS TNJTS TNJTS TN	VTSSWGS	Gate-edge sidewall trap-assisted volt-	VTSSWGS	No	-
TNJTS Temperature coefficient for NJTS and NJTSD  TNJTSD  TNJTSD  TNJTSD  TNJTSSW TNJTSSW TNJTSSWD  TNJTSSWG  CJS  Bottom junction capacitance per unit area at zero bias  TSJTSSWG  TNJTSSWG  No	VTSSWGD	age dependent parameter	=10V		
TNJTS Temperature coefficient for NJTS and NJTSD  TNJTSD  TNJTSD  TNJTSD  TNJTSSW TNJTSSW TNJTSSWD  TNJTSSWG  CJS  Bottom junction capacitance per unit area at zero bias  TSJTSSWG  TNJTSSWG  No					
TNJTS TNJTSD  TNJTSD  TNJTSD  TNJTSD  TNJTSSW TNJTSSW TNJTSSWD  TNJTSSWG  No			VTSSWGD		
TNJTSD  NJTSD  TNJTSSW TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWG TNJTSSWG  TNJTSSWG TNJTSSWG  No			=VTSSWGS		
TNJTSSW TNJTSSWD TNJTSSWD and NJTSSWD TNJTSSWD TNJTSSWD TNJTSSWD TNJTSSWD TNJTSSWG TNJTSSWG TNJTSSWG NJTSSWG and NJTSSWG TNJTSSWG	TNJTS	Temperature coefficient for NJTS and	TNJTS=0.0	No	-
TNJTSSWD and NJTSSWD and NJTSSWG and NJTSS	TNJTSD	NJTSD			
TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWD  TNJTSSWG			TNJTSD		
TNJTSSWD  and NJTSSWD  TNJTSSWD  TNJTSSWG  TNJTSSWG  TNJTSSWG  NO  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  TNJTSSWG  CJS  CJD  CJD  Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS  MJS  Bottom junction capacitance grating coefficient  MJSWS  MJSWS  MJSWS  Isolation-edge sidewall junction capacitance grading capacitance grading coefficient  MJSWS  MJSWS  MJSWS  MJSWD  ANO  MJSWS  NO  MJSWS  MJSWS  MJSWD  ANO  MJSWS  MJSWS  MJSWD			=TNJTS		
TNJTSSWD  TNJTSSWG TN	TNJTSSW			No	-
TNJTSSWG TNJTSSWGD TNJTSSWG Temperature coefficient for NJTSSWG and NJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG  CJS CJS Bottom junction capacitance per unit area at zero bias  CJS=5.0e-4 F/m²  CJD=CJS  MJS MJS Bottom junction capacitance grating coefficient  MJS=0.5 MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS MJSWD  MJSWD  MJSWD  MJSWD	TNJTSSWD	and NJTSSWD	0.0		
TNJTSSWG TNJTSSWGD TNJTSSWG Temperature coefficient for NJTSSWG and NJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG TNJTSSWG  CJS CJS Bottom junction capacitance per unit area at zero bias  CJS=5.0e-4 F/m²  CJD=CJS  MJS MJS Bottom junction capacitance grating coefficient  MJS=0.5 MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS MJSWD  MJSWD  MJSWD  MJSWD					
TNJTSSWG TNJTSSWGD  TEmperature coefficient for NJTSSWG and NJTSSWG  TNJTSS- WGD = TNJTSSWG  CJS Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS MJD  Bottom junction capacitance grating CJD=CJS  No  CJD=CJS  No  MJS=0.5 MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS MJSWD  MJSWD  MJSWD  TNJTSSWG No  CJS=5.0e-4 F/m²  No  CJD=CJS  No  MJS=0.5 MJD=MJS No  MJSWS No  MJSWS  MJSWD					
TNJTSSWGD  NJTSSWG and NJTSSWG  TNJTSS-WGD = TNJTSSWG  CJS Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS MJS Bottom junction capacitance grating coefficient  MJS=0.5 MJD=MJS  MJSWS Isolation-edge sidewall junction CJD=CJS  No MJSWS MJSWS MJSWS MJSWS MJSWS MJSWD  MJSWS MJSWD  MJSWD	TMITSSWG	Tomporature coefficient for		No	
TNJTSS-WGD = TNJTSSWG  CJS Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS Bottom junction capacitance grating CJD=CJS  MJS Coefficient  MJS=0.5 No - MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS No - MJSWD				NO	-
CJS Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS Bottom junction capacitance grating MJS=0.5 Mo coefficient  MJSWS Isolation-edge sidewall junction MJSWS — Capacitance grading coefficient  MJSWS — MJSWS — MJSWS — No mJSWS — Capacitance grading coefficient  MJSWS — MJSWS — No mJSWS — No mJSWS — Capacitance grading coefficient  MJSWS — MJSWS — No mJSWS — No mJSWS — No mJSWS — No mJSWD — Capacitance grading coefficient	INJISSWOD				
CJS Bottom junction capacitance per unit area at zero bias  CJD=CJS  MJS Bottom junction capacitance grating MJS=0.5 Mo coefficient  MJSWS Isolation-edge sidewall junction MJSWS — Capacitance grading coefficient  MJSWS — MJSWS — MJSWS — No mJSWS — Capacitance grading coefficient  MJSWS — MJSWS — No mJSWS — No mJSWS — Capacitance grading coefficient  MJSWS — MJSWS — No mJSWS — No mJSWS — No mJSWS — No mJSWD — Capacitance grading coefficient			TNJTSS-		
CJS CJD  Bottom junction capacitance per unit area at zero bias  CJD=CJS  CJD=CJS  MJS MJS Bottom junction capacitance grating coefficient  MJS=0.5 MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient  MJSWS MJSWD  MJSWD  MJSWD					
CJD area at zero bias  CJD=CJS  MJS  MJS  Bottom junction capacitance grating coefficient  MJS=0.5  MJD=MJS  MJSWS  Isolation-edge sidewall junction capacitance grading coefficient  MJSWS  MJSWD  MJSWD			TNJTSSWG		
MJS Bottom junction capacitance grating MJS=0.5 No - MJD coefficient MJD=MJS  MJSWS Isolation-edge sidewall junction capacitance grading coefficient =0.33  MJSWD MJSWD	CJS		CJS=5.0e-4	No	-
MJS Bottom junction capacitance grating MJS=0.5 No - Coefficient MJD=MJS NO - MJD=MJS NO - MJSWS Isolation-edge sidewall junction Capacitance grading coefficient =0.33 MJSWD	CJD	area at zero bias	F/m <sup>2</sup>		
MJS Bottom junction capacitance grating MJS=0.5 No - Coefficient MJD=MJS NO - MJD=MJS NO - MJSWS Isolation-edge sidewall junction Capacitance grading coefficient =0.33 MJSWD					
MJD coefficient MJD=MJS  MJSWS Isolation-edge sidewall junction MJSWS No capacitance grading coefficient =0.33  MJSWD			CJD=CJS		
MJSWS Isolation-edge sidewall junction MJSWS No - capacitance grading coefficient =0.33 MJSWD	MJS		MJS=0.5	No	-
MJSWD capacitance grading coefficient =0.33  MJSWD	MJD	coefficient	MJD=MJS		
MJSWD		1		No	-
	MJSWD	capacitance grading coefficient	=0.33		
			MISWD		
=MJSWS			=MJSWS		

Parameter name				
(separate for source and drain				
side as indicated		Default		
in the names)	Description	value	Binnable?	Note
CJSWS	Isolation-edge sidewall junction	CJSWS=	No	-
CJSWD	capacitance per unit area	5.0e-10		
		F/m		
		CJSWD		
		=CJSWS		
CJSWGS	Gate-edge sidewall junction capaci-	CJSWGS	No	-
CJSWGD	tance per unit length	=CJSWS		
		CJSWGD		
		=CJSWS		
MJSWGS	Cata adap sidemali impetian associ	MJSWGS	No	
	Gate-edge sidewall junction capacitance grading coefficient		NO	-
MJSWGD	gg	=MJSWS		
		MJSWGD		
		=MJSWS		
PB	Bottom junction built-in potential	PBS=1.0V	No	-
		PBD=PBS		
PBSWS PBSWD	Isolation-edge sidewall junction built- in potential	PBSWS =1.0V	No	-
IBSWD	in potential	-1.0 V		
		PBSWD		
		=PBSWS		
PBSWGS	Gate-edge sidewall junction built-in	PBSWGS	No	-
PBSWGD	potential	=PBSWS		
		PBSWGD		
		=PBSWS		

# **A.13** Temperature Dependence Parameters

Parameter name	Description	Default value	Binnable?	Note
TNOM	Temperature at which parameters are extracted	27°C	No	-
UTE	Mobility temperature exponent	-1.5	Yes	-
KT1	Temperature coefficient for threshold voltage	-0.11V	Yes	-
KT1L	Channel length dependence of the temperature coefficient for threshold voltage	0.0Vm	Yes	-
KT2	Body-bias coefficient of Vth temperature effect	0.022	Yes	-
UA1	Temperature coefficient for UA	1.0e-9m/V	Yes	-
UB1	Temperature coefficient for UB	$-1.0e-18$ $(m/V)^2$	Yes	-
UC1	Temperature coefficient for UC	0.056V <sup>-1</sup> for MOB- MOD=1; 0.056e-9m/ V <sup>2</sup> for MOB- MOD=0 and	Yes	-
IID1	Towns of the Control	2	<b>X</b> 7	
UD1	Temperature coefficient for UD	$0.0(1/m)^2$	Yes	
AT	Temperature coefficient for saturation velocity	3.3e4m/s	Yes	-
PRT	Temperature coefficient for Rdsw	0.0ohm-m	Yes	-
NJS, NJD	Emission coefficients of junction for source and drain junctions, respectively	NJS=1.0; NJD=NJS	No	-

### **Temperature Dependence Parameters**

Parameter name	Description	Default value	Binnable?	Note
XTIS, XTID	Junction current temperature exponents for source and drain junctions, respectively	XTIS=3.0; XTID=XTIS	No	-
TPB	Temperature coefficient of PB	0.0V/K	No	-
TPBSW	Temperature coefficient of PBSW	0.0V/K	No	-
TPBSWG	Temperature coefficient of PBSWG	0.0V/K	No	-
TCJ	Temperature coefficient of CJ	0.0K <sup>-1</sup>	No	-
TCJSW	Temperature coefficient of CJSW	0.0K <sup>-1</sup>	No	-
TCJSWG	Temperature coefficient of CJSWG	0.0K <sup>-1</sup>	No	-
TVOFF	Temperature coefficient of VOFF	0.0K <sup>-1</sup>	No	-
TVFBSDOFF	Temperature coefficient of VFBSD-OFF	0.0K <sup>-1</sup>	No	-

### **A.14 Stress Effect Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
SA (Instance Parameter)	Distance between OD edge to Poly from one side	0.0		If not given or(<=0), stress effect will be turned off
SB (Instance Parameter)	Distance between OD edge to Poly from other side	0.0		If not given or(<=0), stress effect will be turned off
SD (Instance Parameter)	Distance between neighbouring fingers	0.0		For NF>1 :If not given or(<=0), stress effect will be turned off
SAref	Reference distance between OD and edge to poly of one side	1E-06[m]	No	>0.0
SBref	Reference distance between OD and edge to poly of the other side	1E-06[m]	No	>0.0
WLOD	Width parameter for stress effect	0.0[m]	No	-
KU0	Mobility degradation/enhancement coefficient for stress effect	0.0[m]	No	-
KVSAT	Saturation velocity degradation/ enhancement parameter for stress effect	0.0[m]	No	-1<=kvsat <=1
TKU0	Temperature coefficient of KU0	0.0	No	-

#### **Stress Effect Model Parameters**

Parameter name	Description	Default value	Binnable?	Note
LKU0	Length dependence of ku0	0.0	No	-
WKU0	Width dependence of ku0	0.0	No	-
PKU0	Cross-term dependence of ku0	0.0	No	-
LLODKU0	Length parameter for u0 stress effect	0.0	No	>0
WLODKU0	Width parameter for u0 stress effect	0.0	No	>0
KVTH0	Threshold shift parameter for stress effect	0.0[Vm]	No	-
LKVTH0	Length dependence of kvth0	0.0	No	-
WKVTH0	Width dependence of kvth0	0.0	No	-
PKVTH0	Cross-term dependence of kvth0	0.0	No	-
LLODVTH	Length parameter for Vth stress effect	0.0	No	>0
WLODVTH	Width parameter for Vth stress effect	0.0	No	>0
STK2	K2 shift factor related to Vth0 change	0.0[m]	No	
LODK2	K2 shift modification factor for stress effect	1.0	No	>0
STETA0	eta0 shift factor related to Vth0 change	0.0[m]	No	
LODETA0	eta0 shift modification factor for stress effect	1.0	No	>0

# **A.15** Well-Proximity Effect Model Parameters

Parameter name	Description	Default value	Binnable?	Note
SCA (Instance Parameter)	Integral of the first distribution func- tion for scattered well dopant	0.0	no	If not given, cal-culated
SCB (Instance Parameter)	Integral of the second distribution function for scattered well dopant	0.0	no	If not given, cal-culated
SCC (Instance Parameter)	Integral of the third distribution function for scattered well dopant	0.0	no	If not given, cal-culated
SC (Instance Parameter)	Distance to a single well edge	0.0[m]	no	If not given or <=0.0, turn off WPE
WEB	Coefficient for SCB	0.0	No	>0.0
WEC	Coefficient for SCC	0.0	No	>0.0
KVTH0WE	Threshold shift factor for well proximity effect	0.0	Yes	-
K2WE	K2 shift factor for well proximity effect	0.0	Yes	-
KU0WE	Mobility degradation factor for well proximity effect	0.0	Yes	-
SCREF	Reference distance to calculate SCA, SCB and SCC	1e-6[m]	No	>0

### A.16 dW and dL Parameters

Parameter name	Descrition	Default name	Binnable?	Note
WL	Coefficient of length dependence for width offset	0.0m <sup>WLN</sup>	No	-
WLN	Power of length dependence of width offset	1.0	No	-
WW	Coefficient of width dependence for width offset	0.0m <sup>WWN</sup>	No	-
WWN	Power of width dependence of width offset	1.0	No	-
WWL	Coefficient of length and width cross term dependence for width offset	0.0 mWWN+WLN	No	-
LL	Coefficient of length dependence for length offset	0.0m <sup>LLN</sup>	No	-
LLN	Power of length dependence for length offset	1.0	No	-
LW	Coefficient of width dependence for length offset	0.0m <sup>LWN</sup>	No	-
LWN	Power of width dependence for length offset	1.0	No	-
LWL	Coefficient of length and width cross term dependence for length offset	0.0 m <sup>LWN+LLN</sup>	No	-
LLC	Coefficient of length dependence for CV channel length offset	LL	No	-
LWC	Coefficient of width dependence for CV channel length offset	LW	No	-
LWLC	Coefficient of length and width cross- term dependence for CV channel length offset	LWL	No	-
WLC	Coefficient of length dependence for CV channel width offset	WL	No	-

#### **Range Parameters for Model Application**

Parameter name	Descrition	Default name	Binnable?	Note
WWC	Coefficient of width dependence for CV channel width offset	WW	No	-
WWLC	Coefficient of length and width cross- term dependence for CV channel width offset	WWL	No	-

### **A.17** Range Parameters for Model Application

Parameter name	Description	Default value	Binnable?	Note
LMIN	Minimum channel length	0.0m	No	-
LMAX	Maximum channel length	1.0m	No	-
WMIN	Minimum channel width	0.0m	No	-
WMAX	Maximum channel width	1.0m	No	-

### **A.18 Notes 1-8**

Note-1: If  $\gamma_1$  is not given, it is calculated by

$$\mathbf{g}_{1} = \frac{\sqrt{2q\mathbf{e}_{si}NDEP}}{C_{oxe}}$$

If  $\gamma_2$  is not given, it is calculated by

$$\mathbf{g}_2 = \frac{\sqrt{2q\mathbf{e}_{si}NSUB}}{C_{ove}}$$

**Note-2:** If *NDEP* is not given and  $\gamma_1$  is given, *NDEP* is calculated from

$$NDEP = \frac{{\boldsymbol{g}_1}^2 C_{oxe}^2}{2q\boldsymbol{e}_{si}}$$

If both  $\gamma_1$  and *NDEP* are not given, *NDEP* defaults to 1.7e17cm<sup>-3</sup> and  $\gamma_1$  is calculated from *NDEP*.

**Note-3:** If *VBX* is not given, it is calculated by

$$\frac{qNDEP \cdot XT^2}{2\mathbf{e}_{si}} = \Phi_s - VBX$$

**Note-4:** If *VTH*0 is not given, it is calculated by

$$VTH0 = VFB + \Phi_s + K1\sqrt{\Phi_s - V_{bs}}$$

where VFB = -1.0. If VTH0 is given, VFB defaults to

$$VFB = VTH0 - \Phi_s - K1\sqrt{\Phi_s - V_{bs}}$$

**Note-5:** If  $K_1$  and  $K_2$  are not given, they are calculated by

$$K1 = \mathbf{g}_2 - 2K2\sqrt{\Phi_s - VBM}$$

$$K2 = \frac{(\boldsymbol{g}_1 - \boldsymbol{g}_2)(\sqrt{\Phi_s - VBX} - \sqrt{\Phi_s})}{2\sqrt{\Phi_s}(\sqrt{\Phi_s - VBM} - \sqrt{\Phi_s}) + VBM}$$

#### Note-6: If CGSO is not given, it is calculated by

If (DLC is given and > 0.0)

$$CGSO = DLC \cdot C_{oxe} - CGSL$$

if 
$$(CGSO < 0.0)$$
,  $CGSO = 0.0$ 

Else

$$CGSO = 0.6 \cdot XJ \cdot C_{oxe}$$

#### If CGDO is not given, it is calculated by

If (DLC is given and > 0.0)

$$CGDO = DLC \cdot C_{oxe} - CGDL$$

if 
$$(CGDO < 0.0)$$
,  $CGDO = 0.0$ 

Else

$$CGDO = 0.6 \cdot XJ \cdot C_{oxe}$$

#### If CGBO is not given, it is calculated by

$$CGBO = 2 \cdot DWC \cdot C_{oxe}$$

**Note-7:** If *CF* is not given, it is calculated by

$$CF = \frac{2 \cdot EPSROX \cdot \varepsilon_0}{\pi} \cdot \log\left(1 + \frac{4.0e - 7}{TOXE}\right)$$

#### Note-8:

For dioMod = 0, if XJBVS < 0.0, it is reset to 1.0.

For dioMod = 2, if  $XJBVS \le 0.0$ , it is reset to 1.0.

For dioMod = 0, if XJBVD < 0.0, it is reset to 1.0.

For dioMod = 2, if  $XJBVD \le 0.0$ , it is reset to 1.0.

# **Appendix B: CORE PARAMETERS**

Parameter		Default		
name	Description	value	Binnable?	Note
TOXE	Electrical gate equivalent oxide thickness	3.0e-9m	No	Fatal error if not positive
TOXP	Physical gate equivalent oxide thickness	TOXE	No	Fatal error if not positive
DTOX	Defined as (TOXE-TOXP)	0.0m	No	-
XJ	S/D junction depth	1.5e-7m	Yes	-
NDEP	Channel doping concentration at depletion edge for zero body bias	1.7e17cm <sup>-3</sup>	Yes	Note-2
VTH0 or VTHO	Long-channel threshold voltage at $V_{bs}$ =0	0.7V (NMOS)	Yes	Note-4
		-0.7V (PMOS)		
K1	First-order body bias coefficient	$0.5V^{1/2}$	Yes	Note-5
K2	Second-order body bias coefficient	0.0	Yes	Note-5
LPE0	Lateral non-uniform doping parameter at V <sub>bs</sub> =0	1.74e-7m	Yes	-
DVT0	First coefficient of short-channel effect on $V_{th}$	2.2	Yes	-
DVT1	Second coefficient of short-channel effect on $V_{th}$	0.53	Yes	-
U0	Low-field mobility	0.067 m <sup>2</sup> /(Vs) (NMOS); 0.025 m <sup>2</sup> /(Vs) PMOS	Yes	-
VSAT	Saturation velocity	8.0e4m/s	Yes	-

Parameter name	Description	Default value	Binnable?	Note
WINT	Channel-width offset parameter	0.0m	No	-
LINT	Channel-length offset parameter	0.0m	No	-
VOFF	Offset voltage in subthreshold region for large $W$ and $L$	-0.08V	Yes	-
NFACTOR	Subthreshold swing factor	1.0	Yes	-
ETA0	DIBL coefficient in subthreshold region	0.08	Yes	-
PCLM	Channel length modulation parameter	1.3	Yes	-
RDSW	Zero bias LDD resistance per unit width for RDSMOD=0	200.0 ohm(μm) <sup>WR</sup>	Yes	If negative, reset to 0.0
ALPHA0	First parameter of impact ionization current	0.0Am/V	Yes	-
BETA0	The second parameter of impact ionization current	30.0V	Yes	-
CGSO	Non LDD region source-gate overlap capacitance per unit channel width	calculated (F/m)	No	Note-6
CGDO	Non LDD region drain-gate overlap capacitance per unit channel width	calculated (F/m)	No	Note-6
CGBO	Gate-bulk overlap capacitance per unit channel length	0.0	F/m	Note-6
DLC	Channel-length offset parameter for CV model	LINT (m)	No	-
DWC	Channel-width offset parameter for CV model	WINT (m)	No	-
NOFF	CV parameter in $V_{gsteff,CV}$ for weak to strong inversion	1.0	Yes	-
VOFFCV	CV parameter in $V_{gsteff,CV}$ for week to strong inversion	0.0V	Yes	-
NTNOI	Noise factor for short-channel devices for TNOIMOD=0 only	1.0	No	-
TNOIA	Coefficient of channel-length dependence of total channel thermal noise	1.5E6	No	-
TNOIB	Channel-length dependence parameter for channel thermal noise partitioning	3.5E6	No	-

Parameter name	Description	Default value	Binnable?	Note
JSS	Bottom junction reverse saturation	JSS=	No	-
JSD	current density	$1.0e-4A/m^2$		
		JSD=JSS		
CJS	Bottom junction capacitance per unit	CJS=5.0e-4	No	-
CJD	area at zero bias	F/m <sup>2</sup>		
		CJD=CJS		
WW	Coefficient of width dependence for width offset	0.0m <sup>WWN</sup>	No	-
WWN	Power of width dependence of width offset	1.0	No	-
LL	Coefficient of length dependence for length offset	0.0m <sup>LLN</sup>	No	-
LLN	Power of length dependence for length offset	1.0	No	-

## **Appendix C: References**

- [1] Y. C. King, H. Fujioka, S. Kamohara, K. Chen, and Chenming Hu, "DC electrical oxide thickness model for quantization of the inversion layer in MOSFETs", *Semicond. Sci. Technol.*, vol. 13, pp. 963-966, 1998.
- [2] Weidong Liu, Xiaodong Jin, Yachin King, and Chenming Hu, "An efficient and accurate compact model for thin-oxide-MOSFET intrinsic capacitance considering the finite charge layer thickness", *IEEE Trans. Electron Devices*, vol. ED-46, May, 1999.
- [3] Kanyu M. Cao, Weidong Liu, Xiaodong Jin, Karthik Vasanth, Keith Green, John Krick, Tom Vrotsos, and Chenming Hu, "Modeling of pocket implanted MOSFETs for anomalous analog behavior," *Tech. Dig. of IEDM*, pp. 171-174, 1999.
- [4] Z.H. Liu, C. Hu, J.H. Huang, T.Y. Chan, M.C. Jeng, P.K. Ko, and Y.C. Cheng, "Threshold Voltage Model For Deep-Submicrometer MOSFETs," *IEEE Tran. Electron Devices*, vol. 40, pp. 86-95, 1993.
- [5] J.A. Greenfield and R.W. Dutton, "Nonplanar VLSI Device Analysis Using the Solution of Poisson's Equation," *IEEE Trans. Electron Devices*, vol. ED-27, p.1520, 1980.
- [6] H. S. Lee, "An Analysis of the Threshold Voltage for Short-Channel IGFET's," Solid-State Electronics, vol.16, p.1407, 1973.
- [7] Yuhua Cheng and Chenming Hu, "MOSFET Modeling & BSIM3 User's Guide," Kluwer Academic Publishers, 1999.
- [8] C. Hu, S. Tam, F.C. Hsu, P.K. Ko, T.Y. Chan and K.W. Kyle, "Hot-Electron Induced MOSFET Degradation - Model, Monitor, Improvement," *IEEE Trans. Electron Devices*, vol. 32, pp. 375-385, 1985.
- [9] T. Y. Chen, J. Chen, P. K. Ko, C. Hu, "The impact of gate-induced drain leakage current on MOSFET scaling," *Tech. Digest of IEDM*, pp. 718-721, 1987.

- [10] S. A. Parke, E. Moon, H-J. Wenn, P. K. Ko, and C. Hu, "Design for suppression of gate-induced drain leakage in LDD MOSFETs using a quasi 2D analytical model," *IEEE Trans. Electron Devices*, vol. 39, no. 7, pp 1694-1703, 1992.
- [11] Weidong Liu, Xiaodong Jin, J. Chen, M. Jeng, Z. Liu, Y. Cheng, K. Chen, M. Chan, K. Hui, J. Huang, R. Tu, P. Ko, and Chenming Hu, "BSIM3v3.2 MOSFET Model and Users' Manual," http://www-device.eecs.berkeley.edu/~bsim3.
- [12] Xiaodong Jin, J-J Ou, C-H Chen, Weidong Liu, Paul Gray, and Chenming Hu, "An effective gate resistance model for CMOS RF and noise modeling," *Tech. Dig. of IEDM*, pp. 961-964, 1998.
- [13] Mansun Chan, K. Hui, R. Neff, C. Hu, P. Ko, "A Relaxation time Approach to Model the Non-Quasi-Static Transient Effects in MOSFETs," *Tech. Dig. of IEDM*, pp. 169-172, 1994.
- [14] K.K. Hung, P. Ko, C. Hu, and Y. C. Cheng, "A Physics-Based MOSFET Noise Model for Circuit Simulators," *IEEE Trans. Electron Devices*, vol. 37, no. 5, pp. 1323-1333, 1990.
- [15] Weidong Liu, Kanyu M. Cao, Xiaodong Jin, and Chenming Hu, "BSIM4.0.0 Technical Notes," http://www-device.eecs.berkeley.edu/~bsim3/bsim4.html.
- [16] R.A.Bianchi, G.Bouche and O.Roux-dit-Buisson, "Accurate Modeling of Trench Isolation Induced Mechanical Stress Effect on MOSFET Electrical Performance," IEDM 2002, pp. 117-120.
- [17] Hook, T.B.; Brown, J.; Cottrell, P.; Adler, E.; Hoyniak, D.; Johnson, J.; Mann, R., "Lateral ion implant straggle and mask proximity effect", *IEEE Trans. Electron Devices*, Volume 50, no 9, pp 1946- 1951, Sept. 2003
- [18] Yi-Ming Sheu, Ke-Wei Su, Sheng-Jier Yang, Hsien-Te Chen, Chih-Chiang Wang, Ming-Jer Chen, and Sally Liu, "Modeling Well Edge Proximity Effect on Highly-Scaled MOSFETs", CICC 2005
- [19] CMC Website: http://www.eigroup.org/cmc