#### **DIGITAL ELECTRONICS CIRCUIT(BCA 103)**

# DEPARTMENT OF COMPUTER SCIENCE PROGRAMME: BCA




#### CENTRAL UNIVERSITY OF ODISHA KORAPUT


• "Digital Logic and Computer Design", M Morris Mano.

- Signals carry information.
- The communication that occurs day to day life is in the form of signal.


Analog Signal	Digital Signal		
Ex: Temperature, FM radio signals, Human voice, natural sound	Ex: Computers, optical drives(CDs, DVDs)		
It is a continuous signal that represents physical measurements.	These are discrete, time separated signals which are generated using digital modulation.		
It is denoted by sine waves	It is denoted by square waves		
It uses a continuous range of values that help you to represent information.	Digital signal uses discrete 0 and 1 to represent information.		
The analog signal bandwidth is low	The digital signal bandwidth is high.		
It is suited for audio and video transmission.	It is suited for Computing and digital electronics.		
These signals are deteriorated by noise throughout transmission	Relatively a noise-immune system without deterioration during the transmission process		

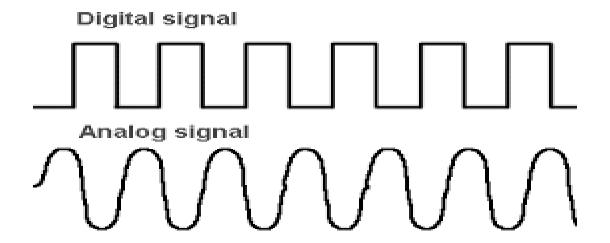

### **Analog Vs Digital**

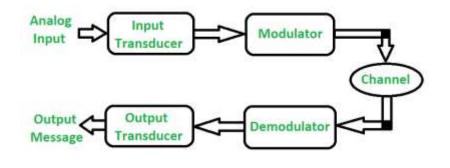

**Analog Communication System** 

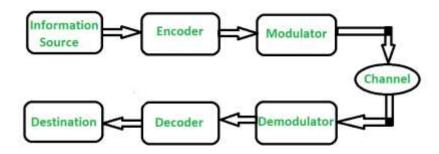

**Digital Communication System** 


Analog Communication	Digital Communication		
Analog signal is used for information transmission.	Digital signal is used for information transmission.		
It uses analog signal whose amplitude varies continuously with time from 0 to 100.	It uses digital signal whose amplitude is of two levels either Low i.e., 0 or either High i.e., 1.		
	It gets affected by noise less during transmission through communication channel.		
Error Probability is high.	Error Probability is low.		
Coding is not possible.	Different coding techniques can be used to detect and correct errors.		
Separating out noise and signal in analog communication is not possible.	Separating out noise and signal in digital communication is possible.		
This communication system is having complex hardware and less flexible.	This communication system is having less complex hardware and more flexible.		
For multiplexing Frequency Division Multiplexing(FDM) is used.	For multiplexing Time Division Multiplexing(TDM) is used.		

Power consumption is high.	Power consumption is low.		
It is less portable.	Portability is high.		
No privacy or privacy is less so not highly secured.	Privacy is high so it is highly secured.		
Not assures an accurate data transmission.	It assures a more accurate data transmission.		
Communication system is low cost.	Communication system is high cost.		
It requires low bandwidth.	It requires high bandwidth.		

#### **Discrete Vs Continuous**

- Discrete Data can only take certain values.
- Ex: Number of students in a class, the result of rolling a dice(i.e. 1, 2, 3, 4, 5, 6)
- **Discrete variables** are countable in a finite amount of time. The money in your bank account.
- Continuous Data can take any value (within a range)
- Ex: A person's height, Time in a race.
- Continuous Variables would (literally) take forever to count.

### **Block Diagram of Digital Computer**

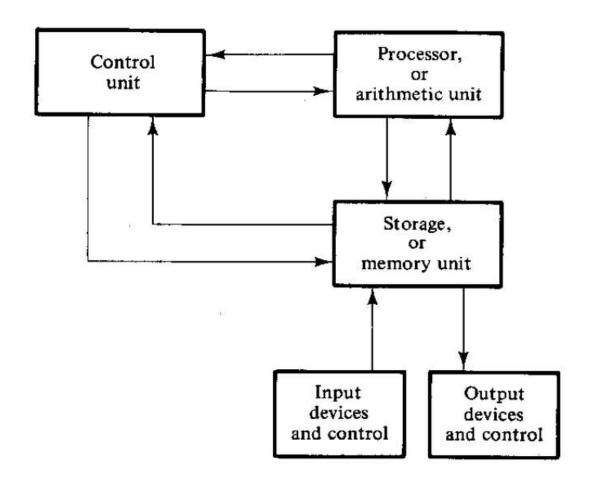

### **Positional Number Systems**

- Digits represent different values depending on the position they occupy in the number.
- The value of each digit is determined by:
  - The digit itself
  - The position of the digit in the number
  - The base of the number system
- (base/radix = total number of digits in the number system)
- Four Types:
- **Decimal** (*Base*(10), *Digits-*(0-9))
- **Binary** (*Base*(2), *Digits-*(0, 1))
- **Octal** (*Base*(8), *Digits-*(0-7))
- **Hexadecimal** (Base(16), Digits-(0-9, A, B, C, D, E, F))

### **Decimal Number System**

- It Has 10 symbols or digits (0, 1, 2, 3, 4, 5, 6, 7, 8, 9). Hence, its base = 10
- The maximum value of a single digit is 9 (one less than the value of the base)
- Each position of a digit represents a specific power of the base (10)
- We use this number system in our day-to-day life

• Ex: 
$$(2586)_{10} = (2 \times 10^3) + (5 \times 10^2) + (8 \times 10^1) + (6 \times 10^0)$$
  
=  $2000 + 500 + 80 + 6$   
=  $2586$ 

# **Binary Number System**

- It Has only 2 symbols or digits (0 and 1). Hence its base = 2
- The maximum value of a single digit is 1 (one less than the value of the base)
- Each position of a digit represents a specific power of the base (2)
- This number system is used in computers.

• Ex: 
$$(10101)_2 = (1 \times 2^4) + (0 \times 2^3) + (1 \times 2^2) + (0 \times 2^1) \times (1 \times 2^0)$$
  
=  $16 + 0 + 4 + 0 + 1$   
=  $(21)_{10}$ 

- In order to be specific about which number system we are referring to, it is a common practice to indicate the base as a subscript. Thus, we write:
- $(10101)_2 = (21)_{10}$

#### Bit

- Bit stands for binary digit
- A bit in computer terminology means either a 0 or a 1
- A binary number consisting of *n* bits is called an n-bit number

# Octal Number System

- It Has total 8 symbols or digits (0, 1, 2, 3, 4, 5, 6, 7). Hence, its base = 8
- The maximum value of a single digit is 7 (one less than the value of the base
- Each position of a digit represents a specific power of the base
   (8)
- Since there are only 8 digits, 3 bits  $(2^3 = 8)$  are sufficient to represent any octal number in binary
- Ex:  $(2057)_8 = (2 \times 8^3) + (0 \times 8^2) + (5 \times 8^1) + (7 \times 8^0)$ = 1024 + 0 + 40 + 7=  $(1071)_{10}$

# Hexadecimal Number System

- It has total 16 symbols or digits (0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F). Hence its base = 16
- The symbols A, B, C, D, E and F represent the decimal values 10, 11, 12, 13, 14 and 15 respectively
- The maximum value of a single digit is 15 (one less than the value of the base)
- Each position of a digit represents a specific power of the base (16)
- Since there are only 16 digits, 4 bits  $(2^4 = 16)$  are sufficient to represent any hexadecimal number in binary.

Ex: 
$$(1AF)_{16} = (1 \times 16^2) + (A \times 16^1) + (F \times 16^0)$$
  
=  $1 \times 256 + 10 \times 16 + 15 \times 1$   
=  $256 + 160 + 15 = (431)_{10}$ 

### **Number System Conversion**

#### Decimal to Non-Decimal

Decimal to Binary

Decimal to Octal

Decimal to Hexadecimal

#### Non-Decimal to Decimal

Binary to Decimal

Octal to Decimal

Hexadecimal to Decimal

#### Non-Decimal to Non-Decimal

Decimal to Binary


• **Ex:**  $(28)_{10} = (?)_2$  Ans.  $(28)_{10} = (11100)_2$ 

2	28	Remainder	
2	14	0	1
2	7	0	
2	3	1	
2	1	1	
<b>-</b>	0	1	

Decimal to Binary (Fraction)

• **Ex:** 
$$(.457)_{10} = (?)_2$$
 Ans.  $(.457)_{10} = (.01110)_2$ 

0.457	X 2
0.914	.914 X 2
1.828	.828 X 2
1.656	.656 X 2
1.312	.312 X 2
0.624	

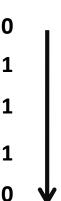

Decimal to Octal


• **Ex:**  $(1628)_{10} = (?)_8$  Ans.  $(1628)_{10} = (3134)_8$ 

8	1628	Remainder	1
8	203	4	П
8	25	3	
8	3	1	
	0	3	

Decimal to Octal (Fraction)

• **Ex:** 
$$(.257)_{10} = (?)_8$$
 Ans.  $(.257)_{10} = (.20345)_8$ 

0.257	X 8
2.056	.056 X 8
0.448	.448 X 8
3.584	.584 X 8
4.672	.672 X 8
5.376	

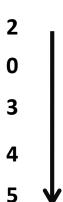

Decimal to Hexadecimal


• **Ex:**  $(1981)_{10} = (?)_{16}$  Ans.  $(1981)_{10} = (7BD)_{16}$ 

16	1981	Remainder	<b>1</b>
16	123	13 - D	П
16	7	11 - B	
	0	7	

Decimal to Hexadecimal (Fraction)

• **Ex:** 
$$(.974)_{10} = (?)_{16}$$
 Ans.  $(.974)_{10} = (.F9581)_{16}$ 

0.974	X 16
15.584	.584 X 16
9.344	.344 X 16
5.504	.504 X 16
8.064	.064 X 16
1.024	

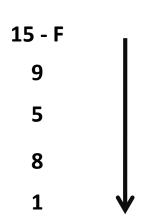

Position	4	3	2	1	0	•	-1	-2	-3	-4
Position Value	24	23	22	21	20		2-1	2-2	2-3	2-4
Quantity	16	8	4	2	1		1/2	1/4	1/8	1/16
							.5	.25	.125	.0625
	<del></del>									<b></b>
Position	4	3	2	1	0		-1	-2	-3	-4
Position Value	84	83	82	81	80		8-1	8-2	8-3	8-4
Quantity	4096	512	64	8	1		1/8	1/64	1/512	1/4096
							.125	.015	.001	.0002
Position	4	3	2	1	0		-1	-2	-3	-4
Position Value	164	16 <sup>3</sup>	<b>16</b> <sup>2</sup>	16 <sup>1</sup>	16 <sup>0</sup>		16-1	16-2	16-3	16-4

**Quantity** 65536 4096 256 16

1

1/16

.0625

.0039

1/256 1/4096 1/65536

.0002

- Binary to Decimal
- **Ex:**  $(11011)_2 = (?)_{10}$   $(11011)_2 = (27)_{10}$

11011 . 1010

$$(11011)_2 = 1 \times 2^4 + 1 \times 2^3 + 0 \times 2^2 + 1 \times 2^1 + 1 \times 2^0$$
  
=  $16 + 8 + 0 + 2 + 1 = (27)_{10}$ 

**Ex:** 
$$(.1010)_2 = (?)_{10}$$
  $(1010)_2 = (0.625)_{10}$ 

$$(.1010)_2 = 1 \times 2^{-1} + 0 \times 2^{-2} + 1 \times 2^{-3} + 0 \times 2^{-4}$$
  
= 1 x 0.5 + 0 + 1 x 0.125 + 0 = 0.5 + 0.125 = (0.625)<sub>10</sub>

• Ex: 
$$(110.101)_2 = 1 \times 2^2 + 1 \times 2^1 + 0 \times 2^0 + 1 \times 2^{-1} + 0 \times 2^{-2} + 1 \times 2^{-3}$$
  
=  $4 + 2 + 0 + 0.5 + 0 + 0.125$   
=  $(6.625)_{10}$ 

- Octal to Decimal
- **Ex:**  $(7034)_8 = (?)_{10}$   $(7034)_8 = (3609)_{10}$

7034.251

$$(7034)_8 = 7 \times 8^3 + 0 \times 8^2 + 3 \times 8^1 + 4 \times 8^0$$
  
=  $7 \times 512 + 0 + 24 + 1 = 3584 + 24 + 1 = (3609)_{10}$ 

**Ex:** 
$$(.251)_8 = (?)_{10}$$
  $(.251)_8 = (0.326)_{10}$ 

$$(.251)_8 = 2 \times 8^{-1} + 5 \times 8^{-2} + 1 \times 8^{-3}$$
  
=  $2 \times 0.125 + 5 \times 0.015 + 1 \times 0.001 = 0.250 + 0.075 + 0.001$   
=  $(0.326)_{10}$ 

• **Ex:** 
$$(16.47)_8 = 1 \times 8^1 + 6 \times 8^0 + 4 \times 8^{-1} + 7 \times 8^{-2}$$
  
=  $8 + 6 + 4 \times 0.125 + 7 \times 0.015 = 14 + 0.600 + 0.105$   
=  $(14.705)_{10}$ 

- Hexadecimal to Decimal
- **Ex:**  $(2BCA)_{16} = (?)_{10}$   $(2BCA)_{16} = (11210)_{10}$

 $(2BCA)_{16} = 2 \times 16^{3} + B \times 16^{2} + C \times 16^{1} + A \times 16^{0}$ =  $2 \times 4096 + 11 \times 256 + 12 \times 16 + 10 \times 1$ =  $8192 + 2816 + 192 + 10 = (11210)_{10}$ 

**Ex:** 
$$(.ED8)_{16} = (?)_{10}$$
  $(ED8)_{16} = (0.9273)_{10}$ 

$$(.ED8)_{16} = E \times 16^{-1} + D \times 16^{-2} + 8 \times 16^{-3}$$
$$= 14 \times 0.0625 + 13 \times 0.0039 + 8 \times 0.0002$$
$$= 0.8750 + 0.0507 + 0.0016 = (0.9273)_{10}$$

• Ex: 
$$(AB.4C)_{16} = A \times 16^{1} + B \times 16^{0} + 4 \times 16^{-1} + C \times 16^{-2}$$
  
=  $10 \times 16 + 11 \times 1 + 4 \times 0.0625 + 12 \times 0.0039$   
=  $160 + 11 + 0.2500 + 0.0468$   
=  $171 + 0.2968 = (171.2968)_{10}$ 

**AB.4C** 

Octal to Binary

• Ex: 
$$(562)_8 = (?)_2$$
  
 $(5)_8 = (101)_2$   $(6)_8 = (110)_2$   $(2)_8 = (010)_2$   
Hence  $(562)_8 = (1011110010)_2$ 

$$\mathbf{Ex} : (.174)_8 = (?)_2$$

$$(1)_8 = (001)_2$$

$$(7)_8 = (111)_2$$

$$(4)_8 = (100)_2$$

Hence 
$$(.174)_8 = (.0011111100)_2$$
  
**Ex**:  $(143.62)_8 = (?)_2$   
 $(1)_8 = (001)_2$   $(4)_8 = (100)_2$   $(3)_8 = (011)_2$   $(6)_8 = (110)_2$   $(2)_8 = (010)_2$ 

Hence 
$$(143.62)_8 = (001100011.110010)_2$$

- Hexadecimal to Binary
- Ex:  $(A9C)_{16} = (?)_2$  $(A)_{16} = (1010)_2$   $(9)_{16} = (1001)_2$   $(C)_{16} = (1100)_2$

Hence  $(A9C)_{16} = (101010011100)_2$ 

Ex: 
$$(.E57)_{16} = (?)_2$$
  
 $(E)_{16} = (1110)_2$   $(5)_{16} = (0101)_2$   $(7)_{16} = (0111)_2$ 

Hence  $(.174)_{16} = (.1110010101111)_2$ 

Ex: 
$$(BD.F8)_{16} = (?)_2$$
  
 $(B)_{16} = (1011)_2$   $(D)_{16} = (1101)_2$   $(F)_{16} = (1111)_2$   $(8)_{16} = (0100)_2$ 

Hence 
$$(BD.F8)_{16} = (101111101.11110100)_2$$

Binary to Octal:

• **Ex:** 
$$(10110)_2 = (?)_8$$

$$(10110)_2 = (26)_8$$

$$(10\ 110)_2 = (\ 010\ 110)_2 = (26)_8$$

Ex: 
$$(.1010010)_2 = (?)_8$$

$$(.1010010)_2 = (.122)_8$$

$$(1\ 010\ 010)_2 = (001\ 010\ 010)_2 = (.122)_8$$

Ex: 
$$(1100.1011011)_2 = (?)_8$$

$$(1100.\ 1011011)_2 = (14.133)_8$$

$$(1100.\ 1011011)_2 = (001100.\ 001011011)_2 = (14.133)_8$$

Binary to Hexadecimal:

• **Ex:** 
$$(10110)_2 = (?)_{16}$$

$$(10110)_2 = (16)_{16}$$

$$(10110)_2 = (0001 \ 0110)_2 = (16)_{16}$$

Ex: 
$$(.1010010)_2 = (?)_{16}$$

$$(.1010010)_2 = (.52)_{16}$$

$$(1010010)_2 = (0101\ 0010)_2 = (.52)_{16}$$

Ex: 
$$(10100. 1011011)_2 = (?)_{16}$$

$$(10100.\ 1011011)_2 = (14.5B)_{16}$$

$$(10100.\ 1011011)_2 = (00010100.\ 01011011)_2 = (14.5B)_{16}$$

#### **Numbers with Different Bases**

Decimal (base 10)	Binary (base 2)	Octal (base 8)	Hexadecima (base 16)	
00	0000	00	0	
01	0001	01	1	
02	0010	02	2	
03	0011	03	3	
04	0100	04	4	
05	0101	05	5	
06	0110	06	6	
07	0111	07	7	
08	1000	10	8	
09	1001	11	9	
10	1010	12	Α	
11	1011	13	В	
12	1100	14	Ċ	
13	1101	15	D	
14	1110	16	E	
15	1111	17	F	

### **Binary Arithmetic**

• Binary Addition:

Rule for binary addition is as follows:

• 
$$0 + 0 = 0$$

• 
$$0 + 1 = 1$$

• 
$$1 + 0 = 1$$

• 1 + 1 = 0 plus a carry of 1 to next higher column

Ex: Add binary numbers  $(101101)_2$  and  $(100111)_2$ 

Ans. (1010100)<sub>2</sub>

Carry	1		1	1	1	1	
Augend		1	0	1	1	0	1
Addend		1	0	0	1	1	1
Sum	1	0	1	0	1	0	0

Carry		1	1	1	1	1	
Augend		1	0	0	1	1	1
Addend			1	1	0	1	1
Sum	1	0	0	0	0	1	0

Carry	1	1	1	1		
Augend		1	1	1	1	1
Addend			1	1	1	0
Sum	1	0	1	1	0	1

Carry	1	1	1	1		
Augend		1	1	0	1	1
Addend			1	1	1	0
Sum	1	0	1	0	0	1

- Binary Subtraction:
- Rule for binary subtraction is as follows:
- 0 0 = 0
- 0 1 = 1 with a borrow from the next column
- 1 0 = 1
- 1 1 = 0
- Ex: Subtract  $(01110)_2$  from  $(10101)_2$

Borrow		0	1	0	1	
Minuend		1	0	1	0	1
Subtrahend		0	1	1	1	0
Difference		0	0	1	1	1


Borrow			0	0	1	
Minuend	1	0	1	1	0	1
Subtrahend	1	0	0	1	1	1
Difference	0	0	0	1	1	0

Borrow				0	0	1	1
Minuend	_	1	1	1	1	0	0
Subtrahend		1	0	0	1	1	1
Difference		0	1	0	1	0	1

# Multiplication

Multiplicand			1	0	1	1
Multiplier		X		1	0	1
			1	0	1	1
		0	0	0	0	
	1	0	1	1		
Product	1	1	0	1	1	1

#### **Division**

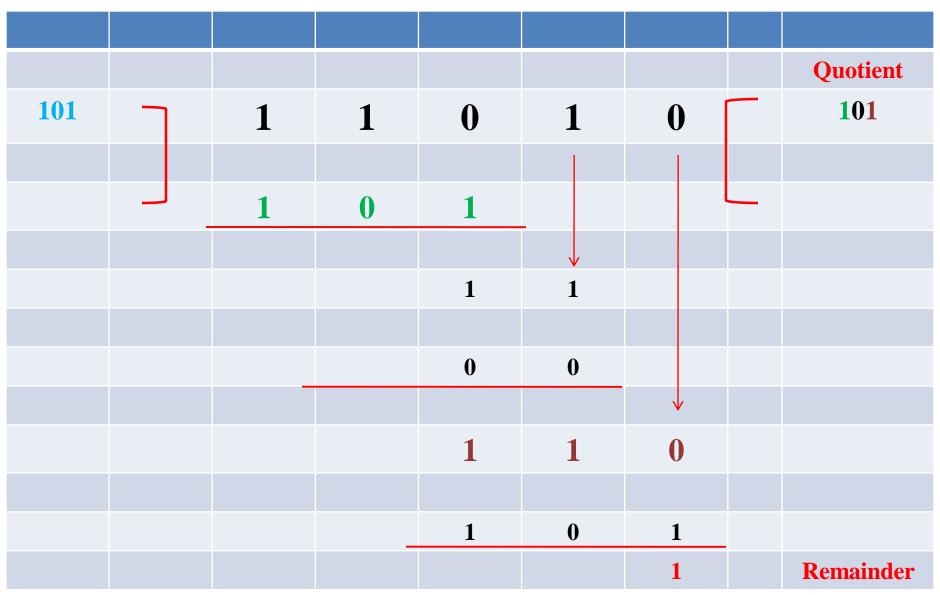

#### **COMPLEMENTS**

- Complements are used in digital computers for simplifying the subtraction operation and for logical manipulation.
- Simplifying operations leads to simpler, less expensive circuits to implement the operations.
- There are two types of complements for each base-r system:

Types	Also known as	Base (r)	2	10	8	16
Radix Complement	r's Complement		2's	10's	8's	16's
Diminished Radix Complement	(r-1)'s Complement		1's	9's	7's	15's

#### Diminished Radix Complement((r-1)'s Complement)

- Given a number 'N' in base 'r' having 'n' digits, the (r-1)'s complement of 'N' is defined as : (r<sup>n</sup>-1)-N.
- For Decimal numbers r = 10 and r 1 = 9
- For Binary numbers r = 2 and r 1 = 1
- Ex: The 9's complement of 546700 is -----?
- Ans: N = 946700 r = 10 n = 6  $(10^6 - 1) - 546700 = (1000000 - 1) - 546700$  = 999999 - 546700 = 453299

The 9's complement of a decimal number is obtained by subtracting each digit from 9.

Ex: The 9's complement of 012398 is : 999999 - 012398 = 987601

#### Diminished Radix Complement((r-1)'s Complement)

- Given a number 'N' in base 'r' having 'n' digits, the (r-1)'s complement of 'N' is defined as : (r<sup>n</sup>-1)-N.
- For Binary numbers r = 2 and r 1 = 1
- Ex: The 1's complement of 1011000 is ----?
- Ans: N = 1011000 r = 2 n = 7  $(2^7 - 1) - 1011000 = (10000000 - 1) - 1011000$ = 1111111 - 1011000 = 0100111
- The 1's complement of a binary number is obtained by changing 1's to 0's and 0's to 1's.

Ex: The 1's complement of 0101101 is: 1010010

The (r-1)'s complement of Octal and Hexadecimal numbers is obtained by subtracting each digit from 7 or F (or Decimal 15), respectively.

## Radix Complement(r's Complement)

- The r's complement of an 'n' digit number 'N' in base 'r' is defined as  $r^n N$  for  $N \neq 0$  and 0 for N = 0.
- Comparison with (r-1)'s complement: r's complement is obtained by adding 1 to the (r-1)'s complement since

$$r^{n} - N = [(r^{n} - 1) - N] + 1$$

**Ex:** 10's complement of 2389 is -----?

Ans: 10's complement of 2389 is = (9's complement of 2389) +1

$$= (9999 - 2389) + 1 = 7610 + 1 = 7611$$

Ex: 2's complement of 101100 is = (1's complement of 101100) + 1

$$= 010011 + 1 = 010100$$

- **Second method:** Leaving all least significant 0's unchanged, subtracting first non-zero least significant digit from 10, and subtracting all higher significant digits from 9.
- Ex: 10's complement of 012398 ----?
- Ans: No least significant 0's.

Subtracting first non-zero least significant digit (i.e. 8) from 10 = 10 - 8 = 2Subtracting all higher significant digits from 9 = 99999 - 01239 = 98760Hence, 10's complement of 012398 is 987602.

**Ex:** 10's complement of 246700 ----?

Ans: Leaving 2 least significant 0's.

Subtracting first non-zero least significant digit (i.e. 7) from 10 = 10 - 7 = 3Subtracting all higher significant digits from 9 = 999 - 246 = 753Hence, 10's complement of 246700 is 753300. • **Second method:** Leaving all least significant 0's and the first 1 unchanged, and replacing 1's with 0's and 0's with 1's in all other higher significant digits.

**Ex:** 2's complement of 1101100 -----?

**Ans:** Leaving 2 least significant 0's and the first 1 unchanged. (i.e. 1101100)

replacing 1's with 0's and 0's with 1's in all other higher significant digits . i.e. 1101 as 0010

Hence, 2's complement of 1101100 is 0010100.

**Ex:** 2's complement of 0110111 ----?

**Ans:** No least significant 0's and leaving the first 1 unchanged. (i.e. 0110111)

replacing 1's with 0's and 0's with 1's in all other higher significant digits. i.e. 011011 as 100100

Hence, 2's complement of 0110111 is 1001001.

- The complement of the complement restores the number to its original value.
- The **r**'s complement of **N** is  $\mathbf{r}^{\mathbf{n}} \mathbf{N}$ .
- The complement of the complement is  $\mathbf{r}^{n} (\mathbf{r}^{n} \mathbf{N}) = \mathbf{N}$ , giving back the original number.

- When subtraction is implemented with digital hardware, borrow method using pen, pencil is found to be less efficient than the method that use complements.
- Rules: The subtraction of two n-digit unsigned numbers M N in base 'r'can be done as follows:
- 1. Add the minuend M to the r's complement of the subtrahend N. This performs  $M + (r^n N) = M N + r^n$
- 2. If  $M \ge N$ , the sum will produce an end carry,  $r^n$ , which is discarded; what is left is the result M N.
- 3. If M N, the sum does not produce an end carry and is equal to r<sup>n</sup> (N M), which is the r's complement of (N M). To obtain the answer, take the r's complement of the sum and place a negative sign in front.

- Ex: Using 10's complement subtract 72532 3250?
- Ans: M = 72532 N = 3250
- Step 1: Add the M(72532) to the 10's complement of the N(3250).
  - 9's complement of 03250 = 9999 03250 = 96749
  - 10's complement of 03250 = 9's complement of 03250 + 1

$$= 96749 + 1 = 96750$$

$$-M + N = 72532 + 96750 = 169282$$

Step 2: Since M > N and sum produces an end carry, so it should be discarded. i.e. answer will be 69282.

**Note:** M has 5 digits and N has only 4 digits. Both numbers must have the same number of digits. So we can write N = 3250 as N = 03250.

**Note:** The occurrence of the end carry signifies that  $M \ge N$  and the result is positive.

- Ex: Using 10's complement subtract 3250 72532?
- Ans: M = 3250 N = 72532
- Step 1: Add the M(3250) to the 10's complement of the N(72532).
  - 9's complement of 72532 = 99999 72532 = 27467
  - 10's complement of 72532 = 9's complement of 72532 + 1

$$= 27467 + 1 = 27468$$

$$-M + N = 03250 + 27468 = 30718$$

- Step 2: Since M < N and sum produces no end carry, answer will be : (10's complement of 30718).
- 9's complement of 30718 = 99999 30718 = 69281
- 10's complement of 30718 = 9's complement of 30718 + 1

$$=69281 + 1 = 69282$$

Hence, 10's complement subtract 3250 - 72532 = -(69282)

- Ex: Using 2's complement subtract 1010100 1000011?
- Ans: M = 1010100 N = 1000011
- Step 1: Add the M(1010100) to the 2's complement of the N(1000011).
  - 1's complement of 1000011 = 0111100
  - 2's complement of 1000011 = 1's complement of 1000011 + 1 = 0111100 + 1 = 0111101
  - M + N = 1010100 + 0111101 = 10010001

Step 2: Since M > N and sum produces an end carry, so it should be discarded, i.e. answer will be 0010001.

- Ex: Using 2's complement subtract 1000011 1010100?
- Ans: M = 1000011 N = 1010100
- Step 1: Add the M(1000011) to the 2's complement of the N(1010100).
  - 1's complement of 1010100 = 0101011
  - 2's complement of 1010100 = 1's complement of 1010100 + 1= 0101011 + 1 = 0101100
  - -M + N = 1000011 + 0101100 = 1101111

Step 2: Since M < N and sum produces no end carry, answer will be :

- (2's complement of 1101111).
- 1's complement of 11011111 = 0010000
- 2's complement of 1101111 = 1's complement of 1101111 + 1 = 0010000 + 1 = 0010001

Hence, 2's complement subtract 1000011 - 1010100 = -(0010001)

- The (r-1)'s complement is one less than the r's complement.
- Because of this, the result of adding the minuend to the complement of the subtrahend produces a sum that is one less than the correct difference when an end carry occurs.
- Removing the end carry and adding 1 to the sum is referred to as an *end-around carry*.
- Rules: The subtraction of two n-digit unsigned numbers M-N in base 'r'can be done as follows:
- 1. Add the minuend M to the (r-1)'s complement of the subtrahend N.
- 2. If  $M \ge N$ , the sum will produce an end carry,  $r^n$ , which is added to it; what is the result of M N.
- 3. If M N, the sum does not produce an end carry and to obtain the answer, take the (r 1)'s complement of the sum and place a negative sign in front.

- Ex: Using 9's complement subtract 72532 3250?
- Ans: M = 72532 N = 3250
- Step 1: Add the M(72532) to the 9's complement of the N(3250).
  - 9's complement of 03250 = 9999 03250 = 96749
  - -M + N = 72532 + 96749 = 169281

Step 2: Since M > N and sum produces an end carry, so it should be added. i.e. answer will be 69281 + 1 = 69282.

**Note:** M has 5 digits and N has only 4 digits. Both numbers must have the same number of digits. So we can write N = 3250 as N = 03250.

**Note:** The occurrence of the end carry signifies that  $M \ge N$  and the result is positive.

- Ex: Using 9's complement subtract 3250 72532?
- Ans: M = 3250 N = 72532
- Step 1: Add the M(3250) to the 9's complement of the N(72532).
  - 9's complement of 72532 = 99999 72532 = 27467
  - M + N = 03250 + 27467 = 30717
- Step 2: Since M < N and sum produces no end carry, answer will be : (9's complement of 30717).
- 9's complement of 30717 = 99999 30717 = 69282

Hence, 9's complement subtract 3250 - 72532 = -(69282)

- Ex: Using 1's complement subtract 1010100 1000011?
- Ans: M = 1010100 N = 1000011
- Step 1: Add the M(1010100) to the 1's complement of the N(1000011).
  - 1's complement of 1000011 = 0111100
  - M + N = 1010100 + 0111100 = 10010000

Step 2: Since M > N and sum produces an end carry, so it should be added. i.e. answer will be 0010000 + 1 = 0010001

- Ex: Using 1's complement subtract 1000011 1010100?
- Ans: M = 1000011 N = 1010100
- Step 1: Add the M(1000011) to the 1's complement of the N(1010100).
  - 1's complement of 1010100 = 0101011
  - -M + N = 1000011 + 0101011 = 1101110

Step 2: Since M < N and sum produces no end carry, answer will be :


- (1's complement of 1101110).
- 1's complement of 11011110 = 0010001

Hence, 1's complement subtract 1000011 - 1010100 = -(0010001)

#### **Signed Binary Numbers**

- Positive integers (including zero) can be represented as unsigned numbers.
- However, to represent negative integers, we need a notation for negative values.
- Because of hardware limitations, computers must represent everything with binary digits.
- It is customary to represent the sign with a bit placed in the leftmost position of the number.
- The convention is to make the sign bit 0 for positive and 1 for negative.
- If the binary number is signed, then the leftmost bit represents the sign and the rest of the bits represent the number.
- If the binary number is assumed to be unsigned, then the leftmost bit is the most significant bit of the number.

- Ex: 01001 can be considered as 9 (unsigned binary) or as +9 (signed binary) because the leftmost bit is 0.
- Ex: 11001 represents the binary equivalent of 25 when considered as an unsigned number and the binary equivalent of -9 when considered as a signed number.
- This is because the **1** that is in the leftmost position designates a negative and the other four bits represent binary 9.

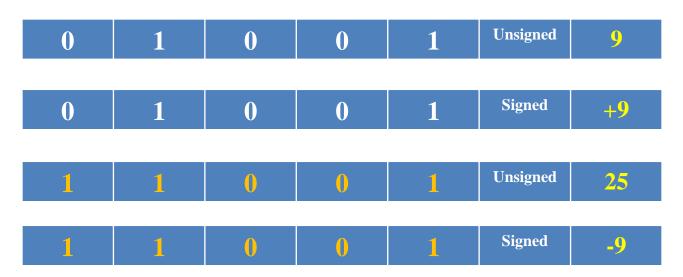

# **Notation For Signed Number**

- **signed-magnitude convention:** In this notation, the number consists of a magnitude and a symbol (+ or -) or a bit (0 or 1) indicating the sign.
- The signed-magnitude system negates a number by changing its sign.
- This is the representation of signed numbers used in ordinary arithmetic.
- **signed- complement system:** Arithmetic operations are implemented in a computer .
- For representing negative numbers.
- In this system, a negative number is indicated by its complement.
- Since positive numbers always start with 0 (plus) in the leftmost position, the complement will always start with a 1, indicating a negative number. The signed-complement system can use either the 1's or the 2's complement, but the 2's complement is the most common.

• Ex: 9 represented in binary with eight bits.

•	+ 9	0	0	0	0	1	0	0	1
		Sign bit							

• Although there is only one way to represent +9, there are three different ways to represent -9 with eight bits:

•	Notation	Representation	?		
	signed-magnitude representation	10001001	Changing only sign bit in the left most position of +9		
	signed-1's-complement representation	11110110	1's complement of +9		
	signed-2's-complement representation	11110111	2's complement of +9		

- The positive numbers in all three representations are identical and have 0 in the leftmost position.
- The signed-2's-complement system has only one representation for 0, which is always positive.
- The other two systems have either a positive 0 or a negative 0, something not encountered in ordinary arithmetic.
- All negative numbers have a 1 in the leftmost bit position; that is the way we distinguish them from the positive numbers.

- With four bits, we can represent 16 binary numbers.
- In the signed-magnitude and the 1's-complement representations, there are eight positive numbers and eight negative numbers, including two zeros.
- In the 2's-complement representation, there are eight positive numbers, including one zero, and eight negative numbers.

Signed Binary Numbers

Decimal	Signed-2's Complement	Signed-1's Complement	Signed Magnitude
+7	0111	0111	0111
+6	0110	0110	0110
+5	0101	0101	0101
+4	0100	0100	0100
+3	0011	0011	0011
+2	0010	0010	0010
+1	0001	0001	0001
+0	0000	0000	0000
-0	8 <del></del> 3.	1111	1000
-1	1111	1110	1001
-2	1110	1101	1010
-3	1101	1100	1011
-4	1100	1011	1100
-5	1011	1010	1101
-6	1010	1001	1110
-7	1001	1000	1111
-8	1000	<del>-</del>	-

## **Arithmetic Addition (Signed)**

- The addition of two numbers in the signed-magnitude system follows the rules of ordinary arithmetic.
- If the signs are the same, we add the two magnitudes and give the sum the common sign.
- If the signs are different, we subtract the smaller magnitude from the larger and give the difference the sign of the larger magnitude.
- **Example:** (+25) + (-37) = -(37 25) = -12
- This is a process that requires a comparison of the signs and magnitudes and then performing either addition or subtraction.
- The same procedure applies to binary numbers in **signed-magnitude** representation.

- The addition of two signed binary numbers with negative numbers represented in signed-2's-complement form is obtained from the addition of the two numbers, including their sign bits. A carry out of the sign-bit position is discarded.
- Note: Negative numbers must be initially in 2's-complement form and that if the sum obtained after the addition is negative, it is in 2's-complement form.
- Any carry out of the sign-bit position is discarded, and negative results are automatically in 2's-complement form.

		Binary Representation
Augend	+6	00000110
Addend	+13	00001101
Result	+19	00010011

		Binary Representation (8-bits)	Signed 1's Complement	Signed 2's Complement	1's Complement	2's Complement (Normal Form)
Augend	+ 6	00000110		00000110		
Addend	- 13	00001101	11110010	11110011		
Result	- 7			11111001	00000110	00000111

		Binary Representation (8-bits)	Signed 1's Complement	Signed 2's Complement	
Augend	- 6	00000110	11111001	11111010	
Addend	+13	00001101		00001101	
Result	+ 7			<b>1</b> 00000111	

		Binary Representation (8-bits)	Signed 1's Complement	Signed 2's Complement	1's Complement	2's Complement (Normal Form)
Augend	- 6	00000110	11111001	11111010		
Addend	- 13	00001101	11110010	11110011		
Result	- 19			<b>1</b> 11101101	00010010	00010011

- In order to obtain a correct answer, we must ensure that the result has a sufficient number of bits to accommodate the sum. If we start with two n-bit numbers and the sum occupies n + 1 bits, we say that an overflow occurs.
- Overflow is a problem in computers because the number of bits that hold a number is finite, and a result that exceeds the finite value by 1 cannot be accommodated.
- The complement form of representing negative numbers is unfamiliar to those used to the signed-magnitude system.
- To determine the value of a negative number in signed-2's complement, it is necessary to convert the number to a positive number to place it in a more familiar form.

## **Arithmetic Subtraction (Signed)**

- Subtraction of two signed binary numbers when negative numbers are in 2's-complement form is simple and can be stated as follows:
- - Take the 2's complement of the subtrahend (including the sign bit) and add it to the minuend (including the sign bit).
- - A carry out of the sign-bit position is discarded.
- This procedure is adopted because a subtraction operation can be changed to an addition operation if the sign of the subtrahend is changed, as is demonstrated by the following relationship:

$$(\pm A) - (\pm B) = (\pm A) + (-B)$$

$$(\pm A) - (-B) = (\pm A) + (+B)$$

- Changing a positive number to a negative number is easily done by taking the 2's complement of the positive number.
- The reverse is also true, because the complement of a negative number in complement form produces the equivalent positive number.

		Binary Representation (8-bits)	Signed 1's Complement	Signed 2's Complement	1's Complement	2's Complement (Normal Form)
Minuend	- 6	00000110	11111001	11111010		11111010
Subtrahend	- 13	00001101	11110010	11110011		00001101
Difference	+7			00000111		
					Sum	<b>1</b> 00000111

- It is worth noting that binary numbers in the signed-complement system are added and subtracted by the same basic addition and subtraction rules as unsigned numbers.
- Therefore, computers need only one common hardware circuit to handle both types of arithmetic.
- This consideration has resulted in the signed-complement system being used in virtually all arithmetic units of computer systems.
- The user or programmer must interpret the results of such addition or subtraction differently, depending on whether it is assumed that the numbers are signed or unsigned.

#### **Binary Code**

- Digital systems represent and manipulate not only binary numbers, but also many other discrete elements of information.
- Any discrete element of information that is distinct among a group of quantities can be represented with a binary code (i.e., a pattern of 0's and 1's).
- An *n*-bit binary code is a group of *n* bits that assumes up to  $2^n$  distinct combinations of 1's and 0's, with each combination representing one element of the set that is being coded.
- The bit combination of an n-bit code is determined from the count in binary from 0 to  $2^n$  1.
- Each element must be assigned a unique binary bit combination, and no two elements can have the same value; otherwise, the code assignment will be ambiguous.
- Although the *minimum* number of bits required to code  $2^n$  distinct quantities is n, there is no *maximum* number of bits that may be used for a binary code.

## **Binary Coded Decimal Code (BCD Code)**

- Since the computer can accept only binary values, we must represent the decimal digits by means of a code that contains 1's and 0's.
- It is also possible to perform the arithmetic operations directly on decimal numbers when they are stored in the computer in coded form.
- A binary code that distinguishes among 10 elements must contain at least four bits, but 6 out of the 16 possible combinations remain unassigned.
- Different binary codes can be obtained by arranging four bits into 10 distinct combinations.
- This scheme is called *binary-coded decimal* and is commonly referred to as BCD.

#### **Binary Coded Decimal Code (BCD Code)**

- A number with k decimal digits will require 4k bits in BCD.
- Ex:  $(179)_{10} = (0001 \ 0111 \ 1001)_{BCD} = (10110011)_2$
- Each group of 4 bits representing one decimal digit.
- A decimal number in BCD is the same as its equivalent binary number only when the number is between 0 and 9.
- A 'BCD' number greater than 10 looks different from its equivalent binary number, even though both contain 1's and 0's.
- Moreover, the binary combinations 1010 through 1111 are not used and have no meaning in BCD.

  Binary-Coded Decimal (BCD)

Decimal Symbol	BCD Digit		
0	0000		
1	0001		
2	0010		
3	0011		
4	0100		
5	0101		
6	0110		
7	0111		
8	1000		
9	1001		

## **Binary Coded Decimal Code (BCD Code)**

- Ex:  $(179)_{10} = (0001 \ 0111 \ 1001)_{BCD} = (10110011)_2$
- The representation of a BCD number needs more bits than its equivalent binary value.
- However, there is an advantage in the use of decimal numbers, because computer input and output data are generated by people who use the decimal system.
- It is important to realize that BCD numbers are decimal numbers and not binary numbers, although they use bits in their representation.
- The only difference between a decimal number and BCD is that decimals are written with the symbols 0, 1, 2, ..., 9 and BCD numbers use the binary code 0000, 0001, 0010, ..., 1001.