
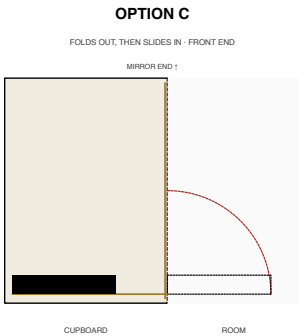
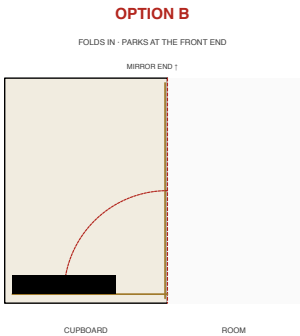
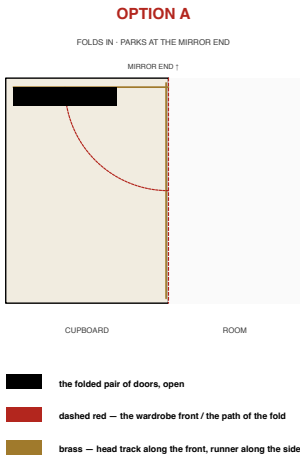


DRESSING ROOM — THE END-BAY DOORS

THREE WAYS TO OPEN THEM WITHOUT HITTING THE FREE-STANDING MIRROR · PLANS

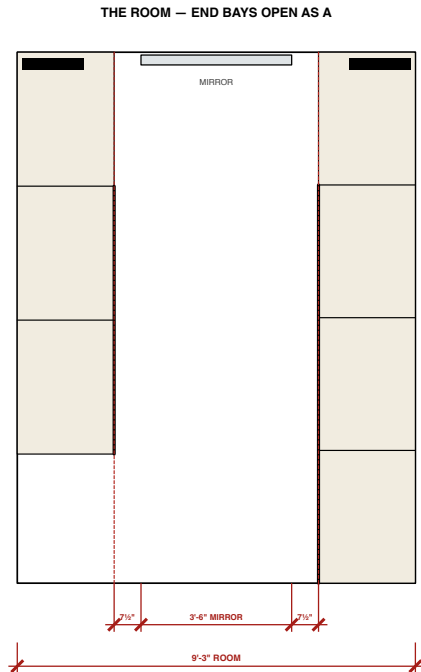

HINGES AND HARDWARE

CENTRE HINGE
Continuous brass piano hinge, full height, between the two leaves. INSIDE face for A and B; room face for C.

PARKING LEAF
Top and bottom pivot pins on a carriage that runs in a runner along the side panel. The same for A, B and C.

FREE LEAF
Guide roller at the top, running in the head track along the front; small guide at the floor. All three options.

PUSH-BACK
All three. Folded pair is about 1 ft 6 in deep, 3 in thick; the 2 ft 3 in cupboard lets it go back about 8 in.

HANGING RAIL
Stop it about 4 in short of the side panel the pair parks against. Nothing else inside the bay changes.

NOTES

REVISION 2

Why not ordinary hinges: a leaf at the back of either run swings about 1 ft 6½ in into the room, and the mirror (3 ft 6 in across, centred) leaves only 7½ in beside it. It would hit the mirror.

Two leaves hinged together always fold into a triangle. A and B put the triangle INSIDE the cupboard and push the folded pair back, so nothing ever passes the wardrobe front.

C folds out into the room first, like the owner's photo, then slides back in the same way. It crosses the wardrobe front only while folding, at the front end of the bay, well away from the mirror.

Revision 1 of this sheet showed the pair folding flat against the front — that cannot be built and is withdrawn. The video on the Dressing page shows all three moving.

A — parks at the mirror end: you reach in from the front, never from behind the mirror.

B — parks at the front end: same mechanism, other side of the bay.

C — while it folds, it stands about 1 ft 6 in into the room; once slid in, the corridor is clear.

The tunnel bay works the same way: in A and B its folded pair can slide right back into the tunnel, out of sight.

CHOSEN — C, confirmed by the owner. A and B are kept here for reference.

A STUDY IN TEAK	
Particulars of the room	
END-BAY DOORS	
Dressing room · three ways to open	
SCALE 1:42 AND 1:25 @ A3	DATE 26.09.2026
REV 3 — option C chosen	DWG AST-DR-026

PROJECT

A Study in Teak — End-Bay Doors

SHEET

General arrangement — the whole sheet

each view follows at its own scale, pages 2 to 3

SCALE

NTS

DATE

26.09.2026

REV





3

DRAWING

AST-DR-026 · 1 of 3

DRESSING ROOM — THE END-BAY DOORS

THREE WAYS TO OPEN THEM WITHOUT HITTING THE FREE-STANDING MIRROR · PLANS

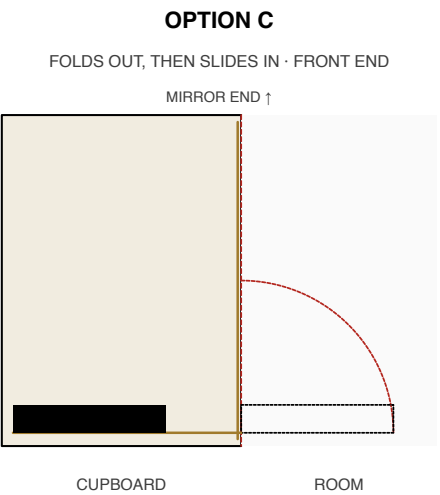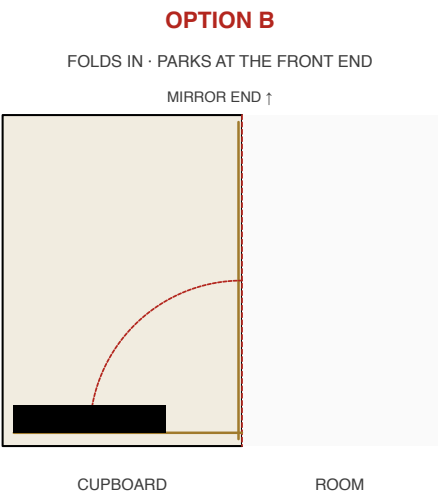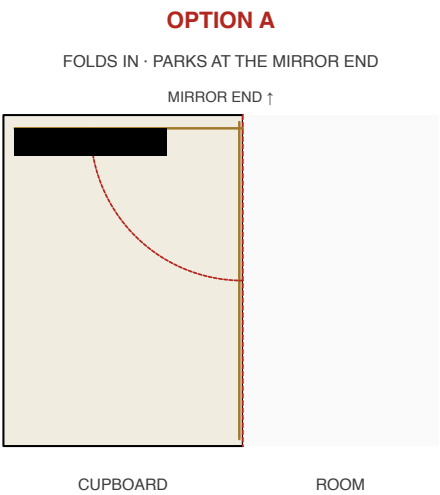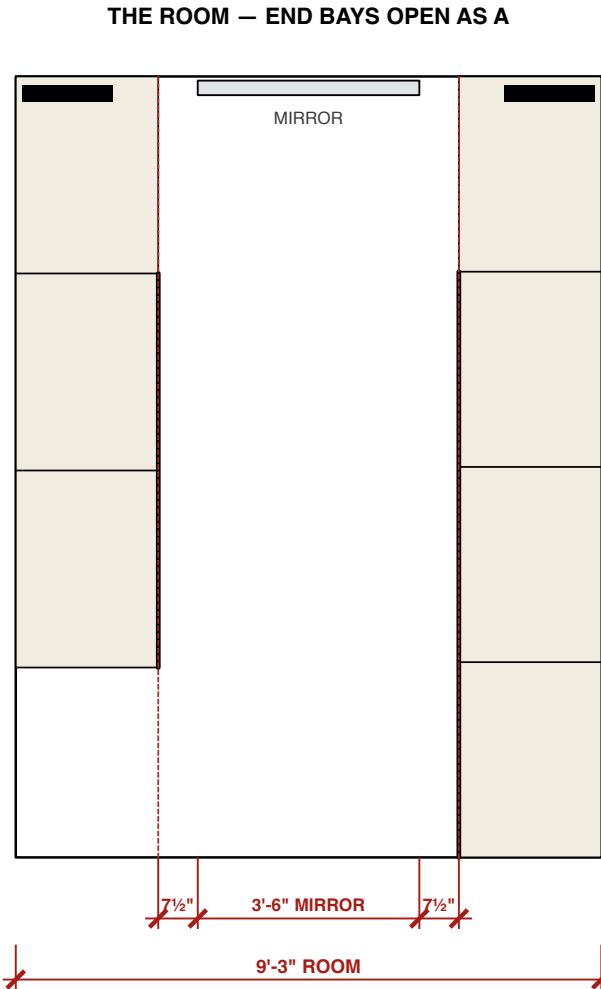

- the folded pair of doors, open
- dashed red — the wardrobe front / the path of the fold
- brass — head track along the front, runner along the side

HINGES AND HARDWARE

- CENTRE HINGE**
Continuous brass piano hinge, full height, between the two leaves. INSIDE face for A and B; room face for C.
- PARKING LEAF**
Top and bottom pivot pins on a carriage that runs in a runner along the side panel. The same for A, B and C.
- FREE LEAF**
Guide roller at the top, running in the head track along the front; small guide at the floor. All three options.
- PUSH-BACK**
All three. Folded pair is about 1 ft 6 in deep, 3 in thick; the 2 ft 3 in cupboard lets it go back about 8 in.
- HANGING RAIL**
Stop it about 4 in short of the side panel the pair parks against. Nothing else inside the bay changes.

PROJECT
A Study in Teak — End-Bay Doors

SHEET
Dressing room — the end-bay doors
Dressing room · three ways to open

SCALE
NTS

DATE
26.09.2026

REV
3

DRAWING
AST-DR-026 · 2 of 3

NOTES

REVISION 2

Why not ordinary hinges: a leaf at the back of either run swings about 1 ft 6½ in into the room, and the mirror (3 ft 6 in across, centred) leaves only 7½ in beside it. It would hit the mirror.

Two leaves hinged together always fold into a triangle. A and B put the triangle INSIDE the cupboard and push the folded pair back, so nothing ever passes the wardrobe front.

C folds out into the room first, like the owner's photo, then slides back in the same way. It crosses the wardrobe front only while folding, at the front end of the bay, well away from the mirror.

Revision 1 of this sheet showed the pair folding flat against the front — that cannot be built and is withdrawn. The video on the Dressing page shows all three moving.

A — parks at the mirror end: you reach in from the front, never from behind.

B — parks at the front end: same mechanism, other side of the bay.

C — while it folds, it stands about 1 ft 6 in into the room; once slid in, the bay works the same way; in A and B its folded pair can slide out of sight.

CHOSEN — C, confirmed by the owner. A and B are kept here for reference.

PROJECT A Study in Teak — End-Bay Doors	SHEET Notes Dressing room · three ways to open	SCALE NTS	DATE 26.09.2026	REV 3	DRAWING AST-DR-026 · 3 of 3
--	--	--------------	--------------------	----------	--------------------------------