

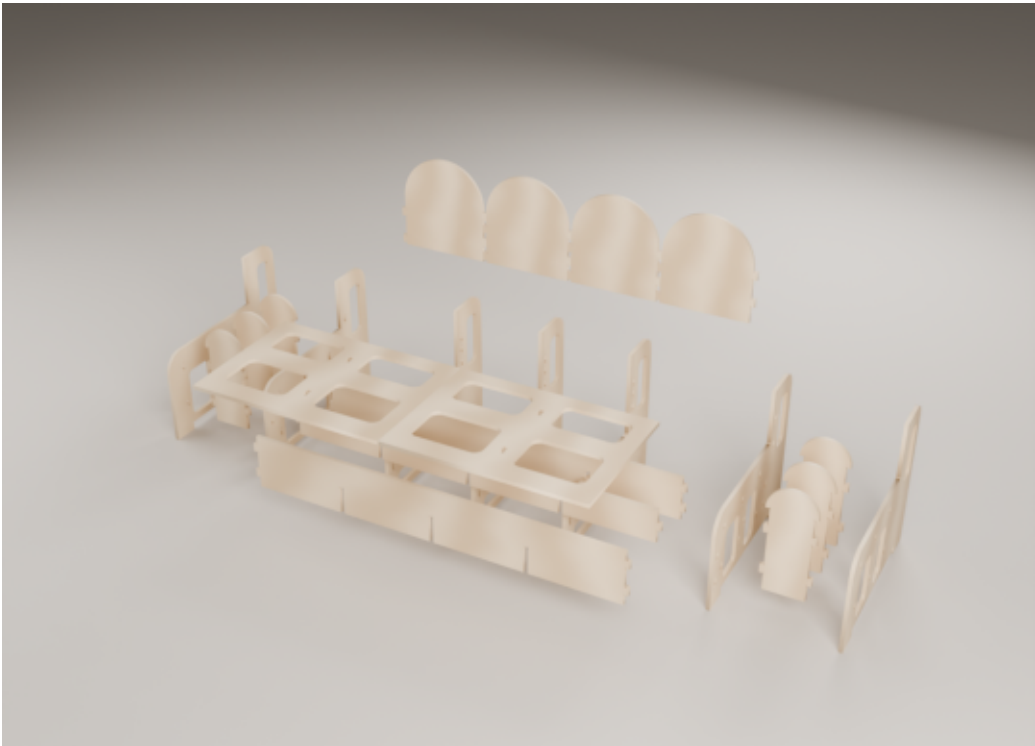


LENA SOFA / ASSEMBLY GUIDE

frame only - upholstery is outside this pack

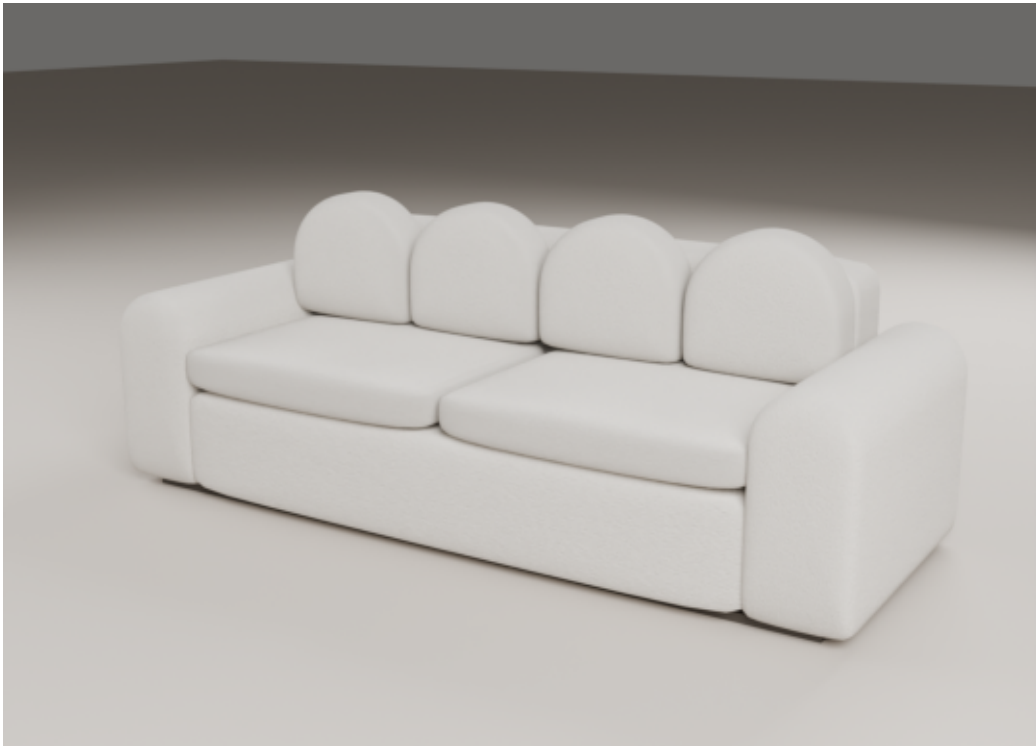


LENA SOFA / STEP 01 - Back chain: ribs and arches

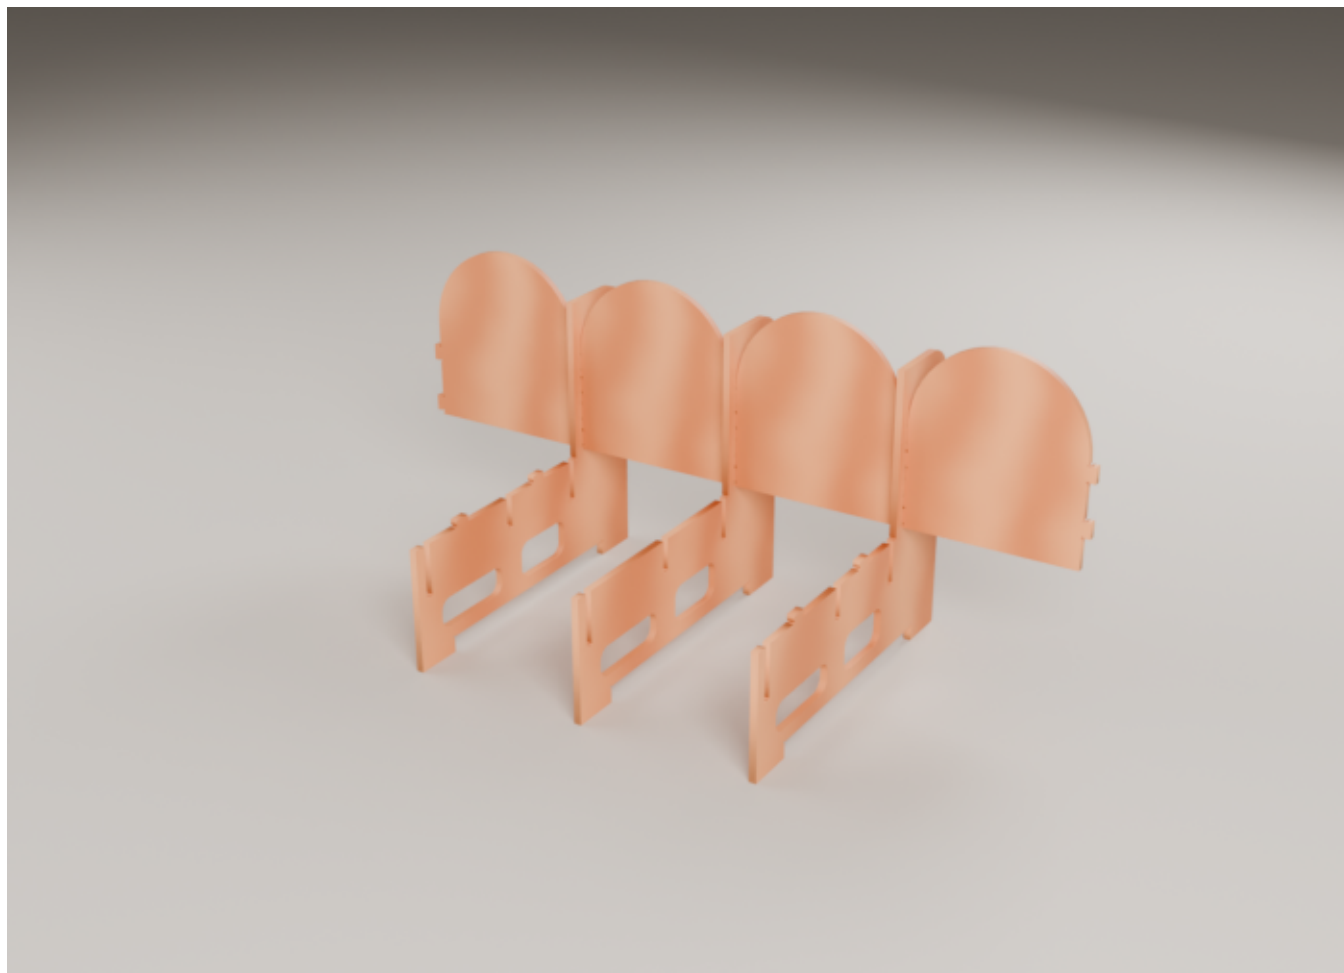

Stand P01 RIB-A on the floor. Push two P03 BACK-ARCHes into its post mortises, one from each side. Slide P02 RIB-B onto the right arch's free tabs, add the third arch, then the second RIB-A and the fourth arch. The ribs stand 426.5 mm apart (clear) - every arch is the same part.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.

LENA SOFA / STEP 02 - Seat rails

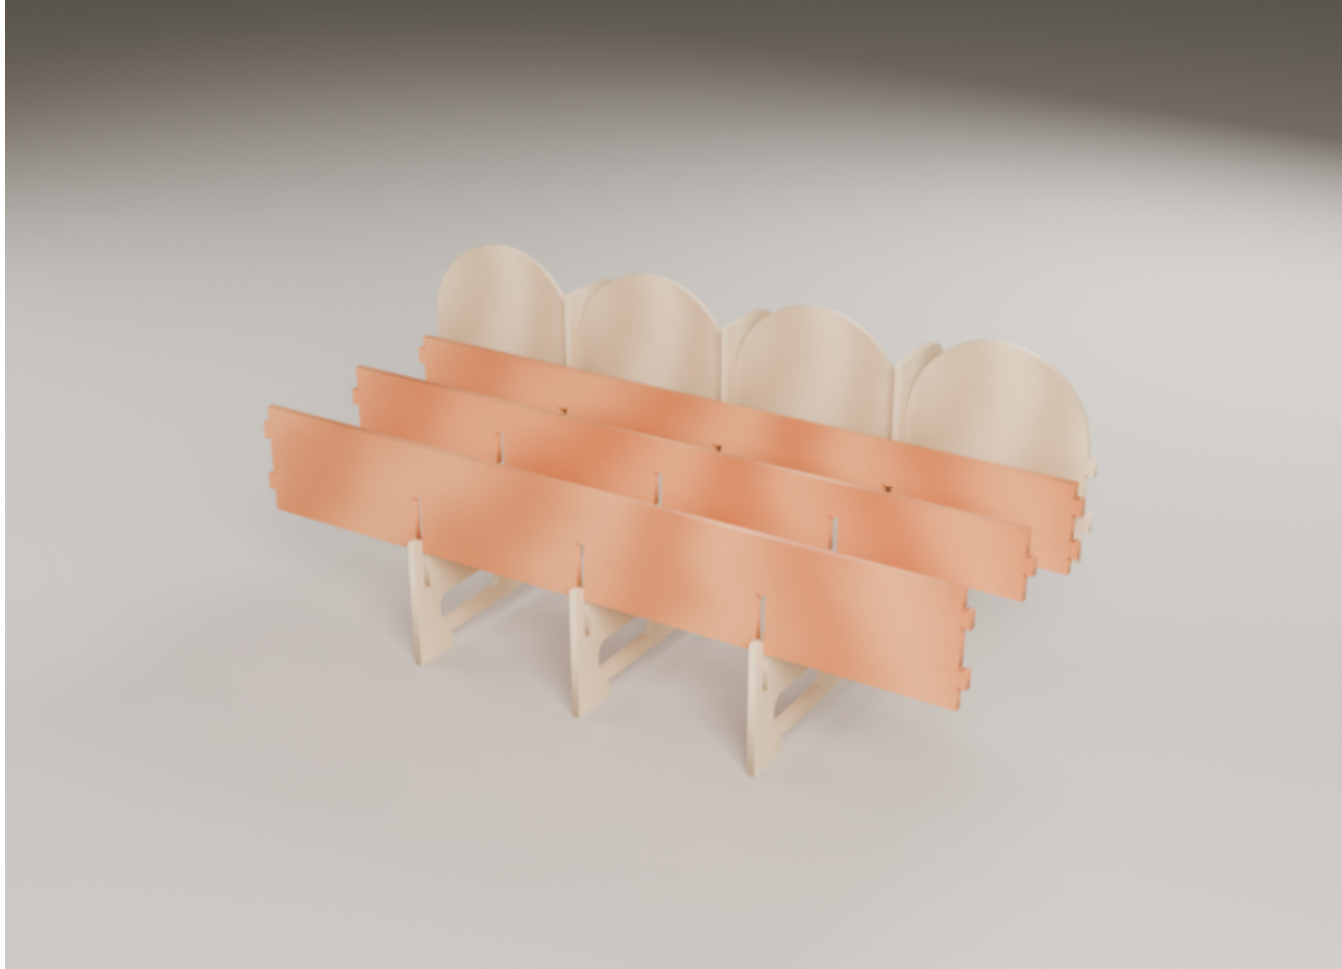

Drop P04 RAIL-FRONT, P05 RAIL-MID and P06 RAIL-BACK down into the slots in the rib tops (rail slots face down). Each rail must seat fully: its top flush with the rib tops. The rail end tabs stick out past the outer arches.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.


LENA SOFA / STEP 03 - Inner arm panels



Slide P07 ARM-INNER-L onto the left ends: the rail tabs and the first arch's tabs go through its mortises together. Same for P08 ARM-INNER-R on the right. L and R differ only in the arch mortise heights - check the engraving.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.


LENA SOFA / STEP 04 - Arm spacers

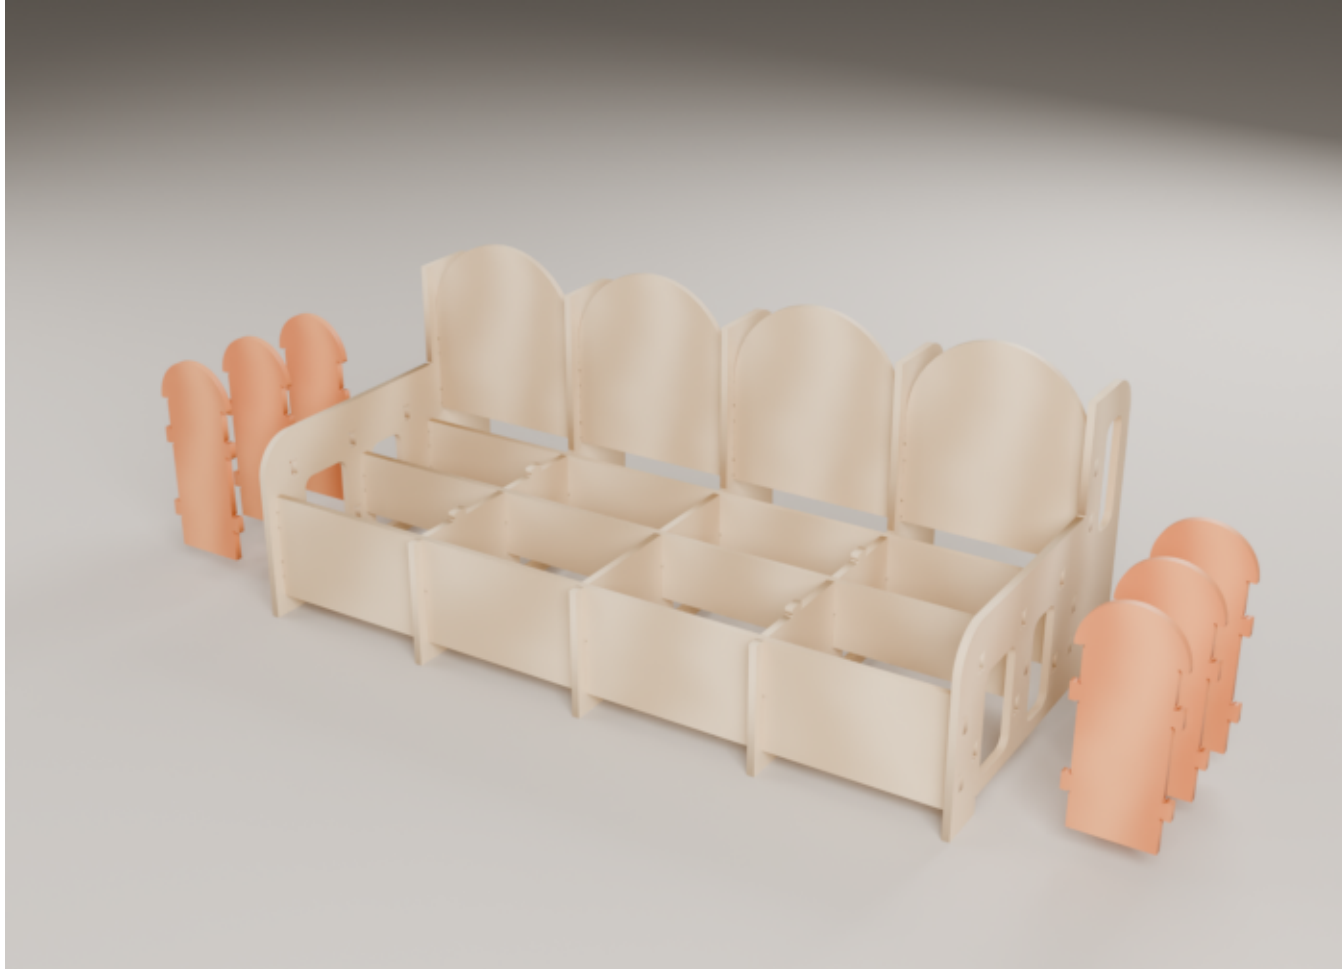

Push three P09 ARM-SPACERS into each inner arm panel from outside, round drum cap up. The cap rests on the panel top edge.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.

LENA SOFA / STEP 05 - Outer arm panels

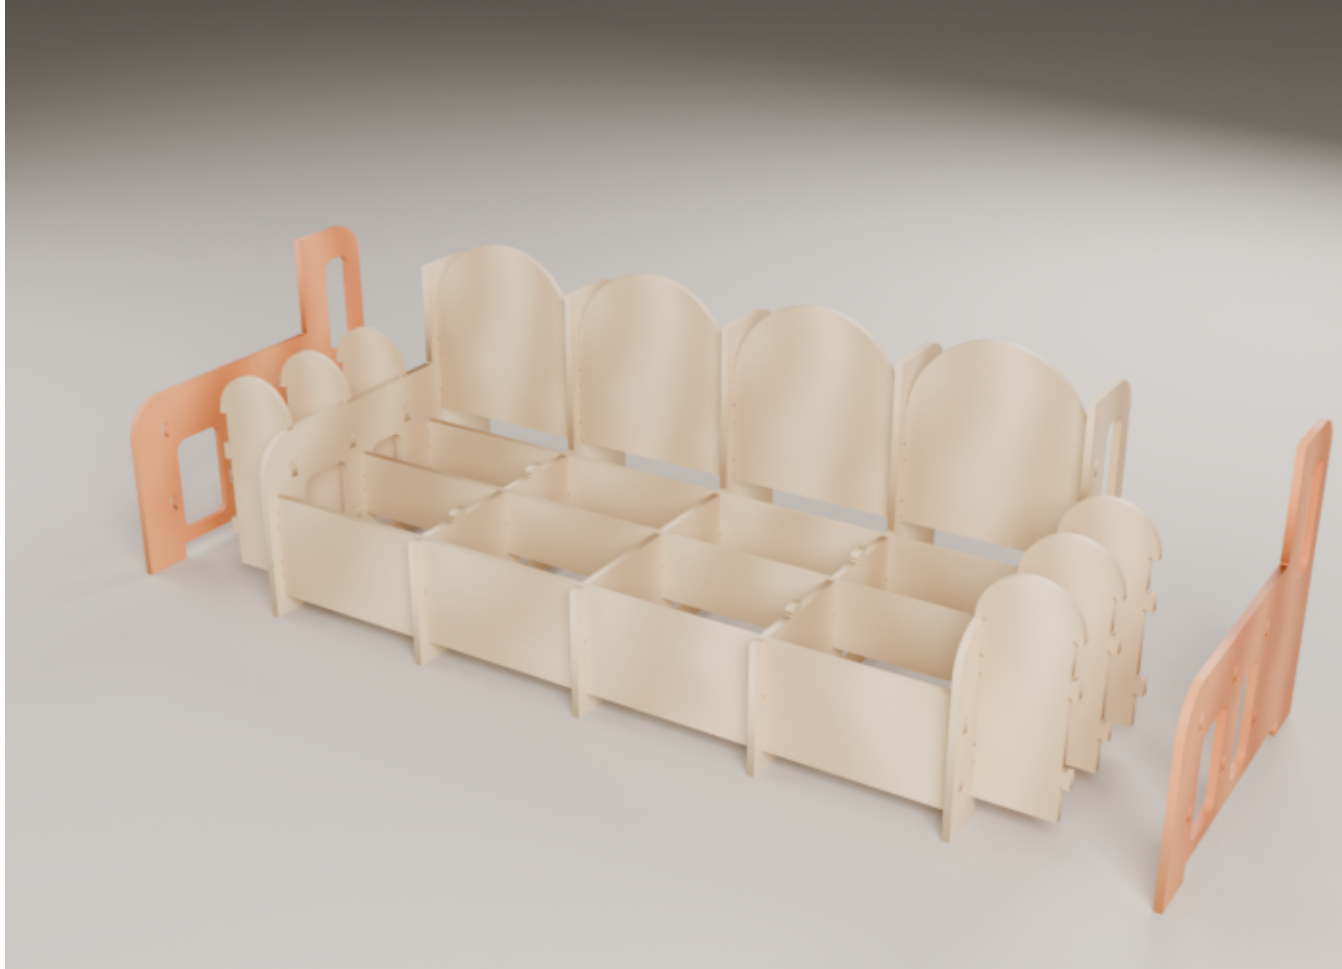

Slide each P10 ARM-OUTER onto the spacers' free tabs until the caps rest on its top edge too. The arms are now closed boxes.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.

LENA SOFA / STEP 06 - Seat decks



Lower the two P11 SEAT-DECKs onto the RIB-A top tabs; they meet over the middle rib. The second deck is the same part turned over. Check the frame is square, then glue (PVA D3) every joint and staple the tabs.

New parts are shown in terracotta, just before they slide home along the arrowless axis of their tabs.

LENA SOFA / BEFORE YOU GLUE

Dry-fit the whole frame first. The 1 mm clearance is an UNTESTED FIT:

cut one test slot on an offcut and try a tab before cutting the sheets.

If tabs are loose, lower CLEARANCE; if tight, measure the board and raise

MATERIAL_THICKNESS - then regenerate (build.py) rather than sanding.

Glue: PVA D3 in every mortise and halving. Staples through the tabs.

The arches are held only by their tabs: glue all 16 of them.

Seat: foam directly on the decks (breathing holes are cut in).

ASSEMBLY SEQUENCE: checked in 3D - every piece slides home along one axis

without touching what is already built. Not yet confirmed on a real build.