


ROUND TUB ARMCHAIR / ASSEMBLY GUIDE

frame only - upholstery is outside this pack

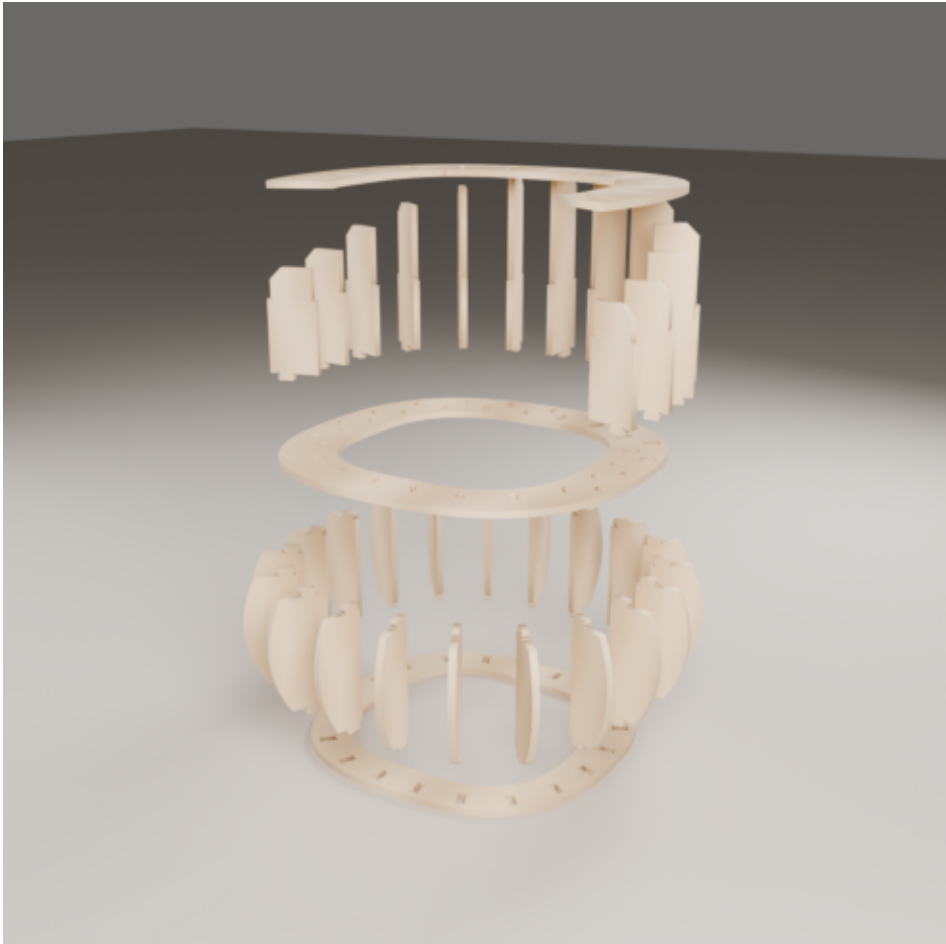


ROUND TUB ARMCHAIR / STEP 01 - Base ring

Lay P01 BASE-RING flat on a level floor, mortises up.




ROUND TUB ARMCHAIR / STEP 02 - Body ribs

Stand the 20 BODY-RIBS in the base mortises, curved edge outward. Match the engraved letter (A-E) to the plan angle in the parts list: a rib with the wrong letter still fits the mortise but makes the belly lumpy.

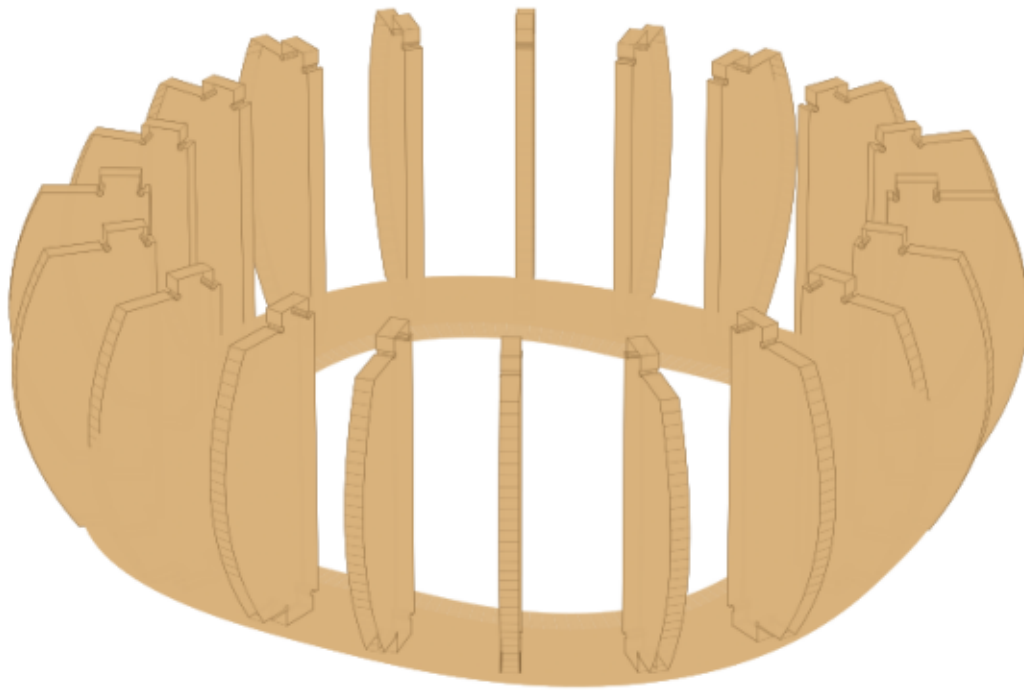


ROUND TUB ARMCHAIR / STEP 03 - Seat ring

Lower P02 SEAT-RING onto the rib top tabs, working round the ring. The 13 outer mortises must face up for the back ribs.

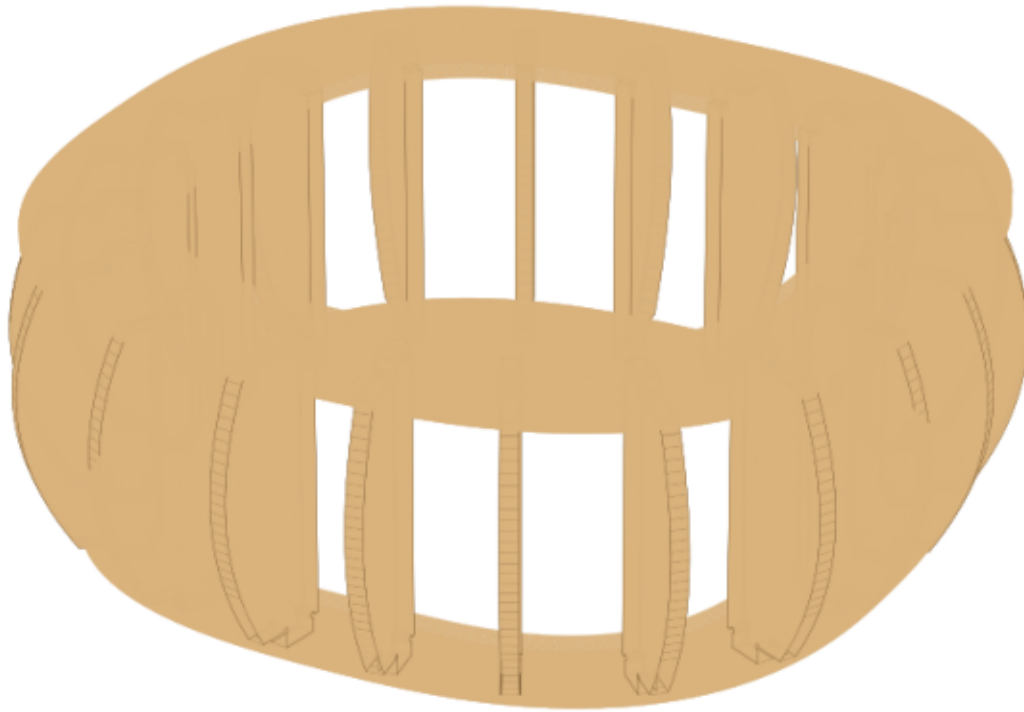


ROUND TUB ARMCHAIR / STEP 04 - Back and arm ribs

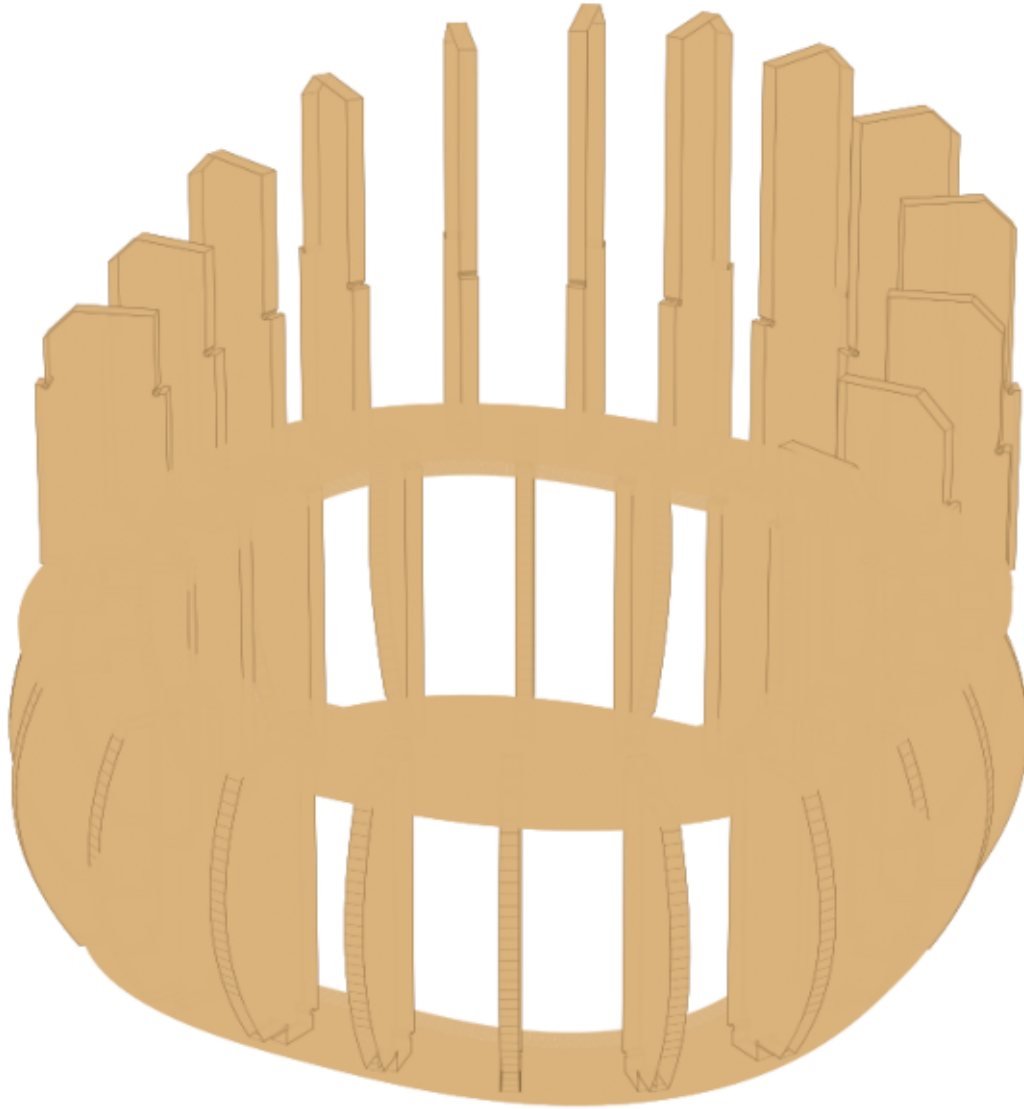

Stand the 13 BACK-RIBs in the outer seat-ring mortises: shortest (A) at the arm ends, tallest (G) at the centre of the back.

ROUND TUB ARMCHAIR / STEP 05 - Back bands

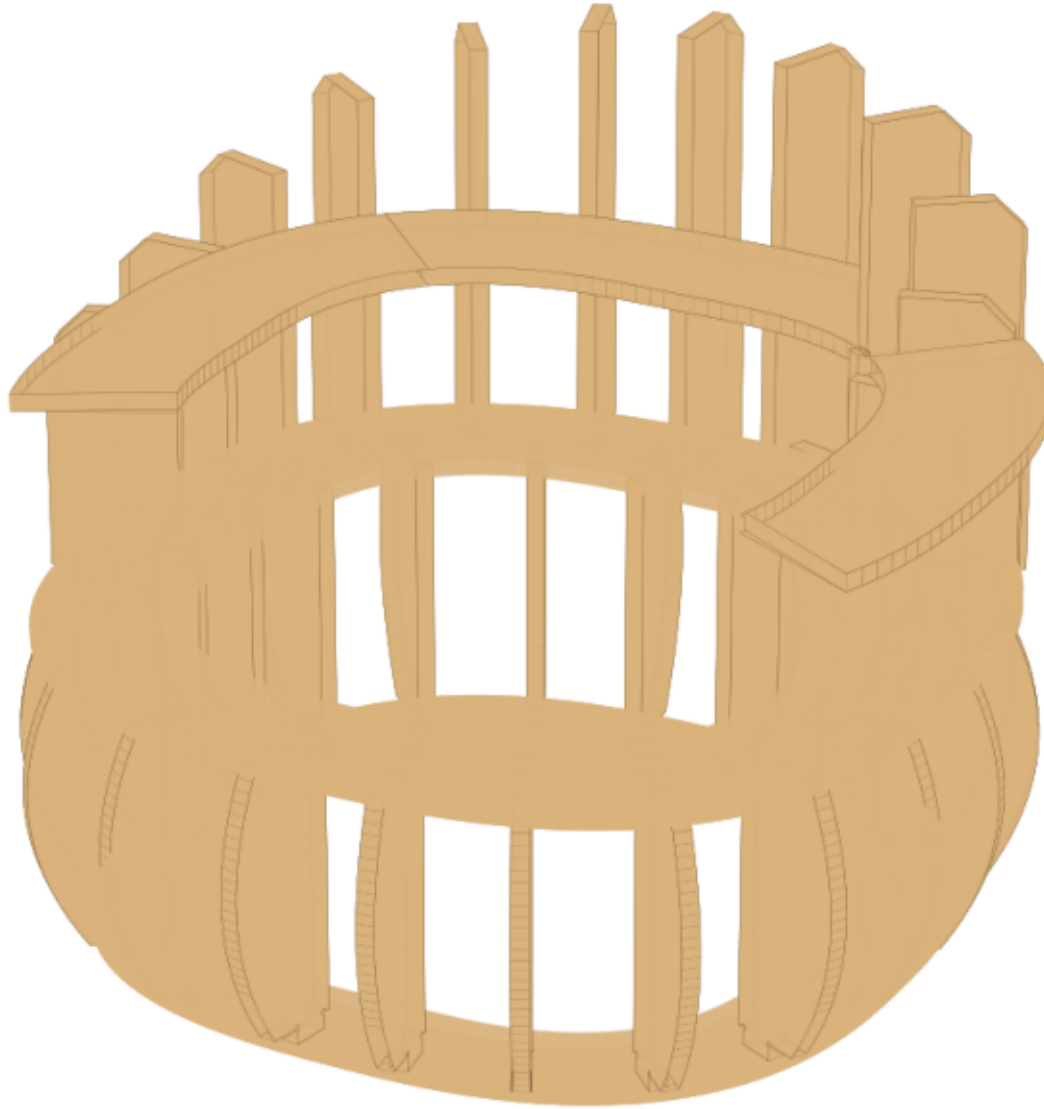

Drop the three BACK-BANDS over the back rib tops until they rest on the 10 mm shoulders. Check the frame is square, then glue (PVA D3) and staple every joint.

ROUND TUB ARMCHAIR / BEFORE YOU GLUE

Dry-fit the whole frame first. The 1 mm clearance is an UNTESTED FIT:

cut one test slot on an offcut and try a tab before cutting the sheets.

If tabs are loose, lower CLEARANCE; if tight, measure the board and raise

MATERIAL_THICKNESS - then regenerate (build.py) rather than sanding.

Glue: PVA D3 in every mortise. Staples through tabs from below.

Seat: elastic webbing across the seat-ring opening, then foam.

ASSEMBLY SEQUENCE: derived from the geometry (each layer drops onto the one below; the bands can only go on last). Not yet confirmed on a build.