




POWER – USB-C, nPM1300 (PS v1.2.1 Config 1), battery

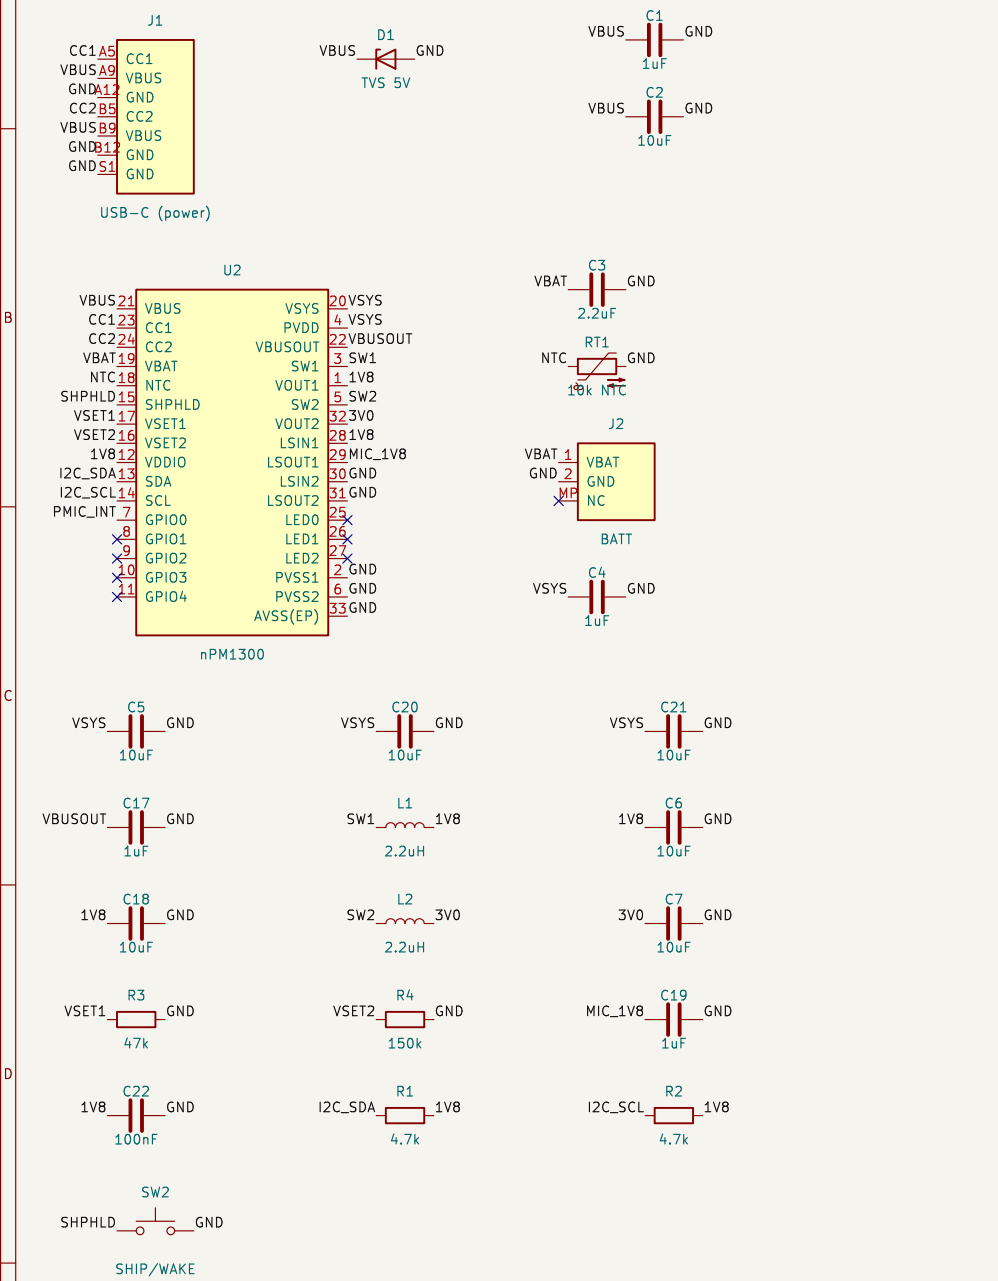


RADIO – Ezurio BL54L15 453-00044 (nRF54L15, MHF4 antenna connector) SENSORS – T5838 mic, LSM6DSV16BX bone conduction + touch

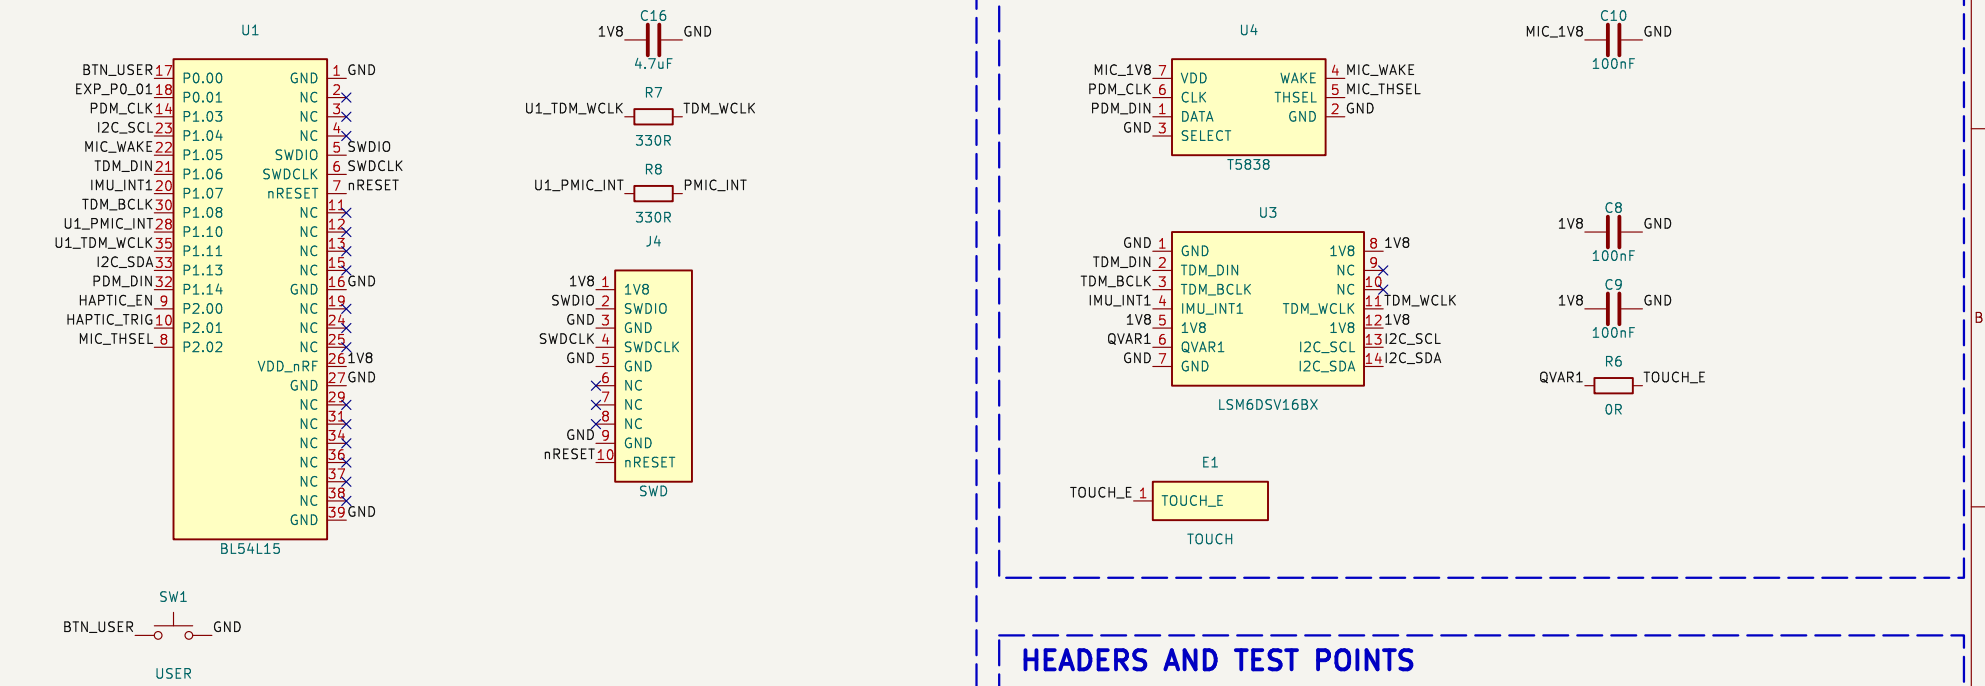

HAPTICS – DRV2605L + LRA

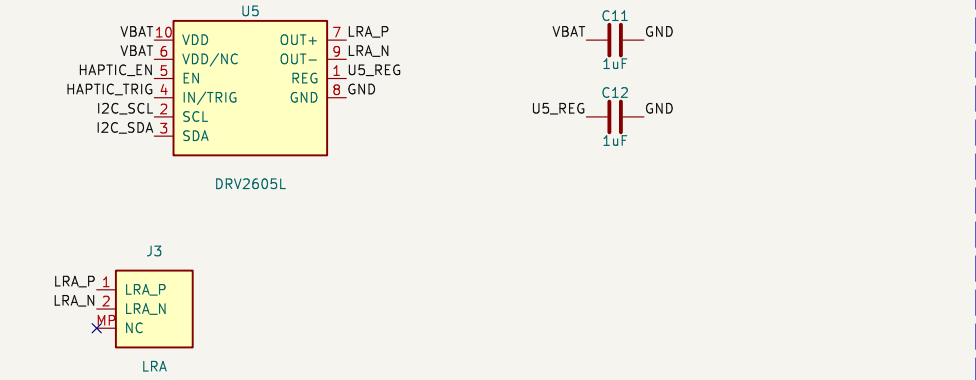

HEADERS AND TEST POINTS

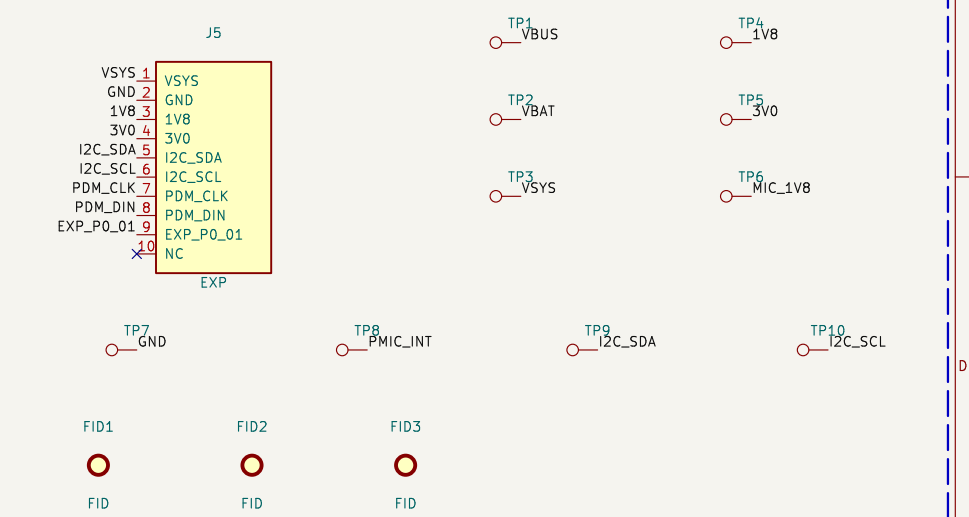

NOTES

R7–R8: the cuff's BL54L15u Note 7 (P1.09–P1.12 < 1 MHz behind >=330 R), kept so both boards share one pin map.

U1 antenna: plug a 2.4 GHz MHF4 antenna (Ezurio mFlexPIFA EFA2400A3S–10MH4L) into the module.

J5 takes the V2S200D eval board: PDM left channel (T5838 is right).

Generated by make_schematic.py from devboard_circuit.py – edit the circuit file, not this sheet.

OPEN: nPM1300 TWI DC input limits (not tabulated in PS v1.2.1); bench–check I2C low level at 400 kHz.

OPEN: shared PDM bus – T5838 right channel (SELECT=GND), external V2S200D on J5 must select left.

Firmware: charger off at reset; select the 10k NTC (ADCNTCRSEL) and 32 mA before enabling charging.

Firmware: LOADSW1 (MIC_1VB) off at reset – enable only after BUCK1 is confirmed at 1.8 V.