




POWER – USB-C, nPM1300 (PS v1.2.1 Config 1), battery

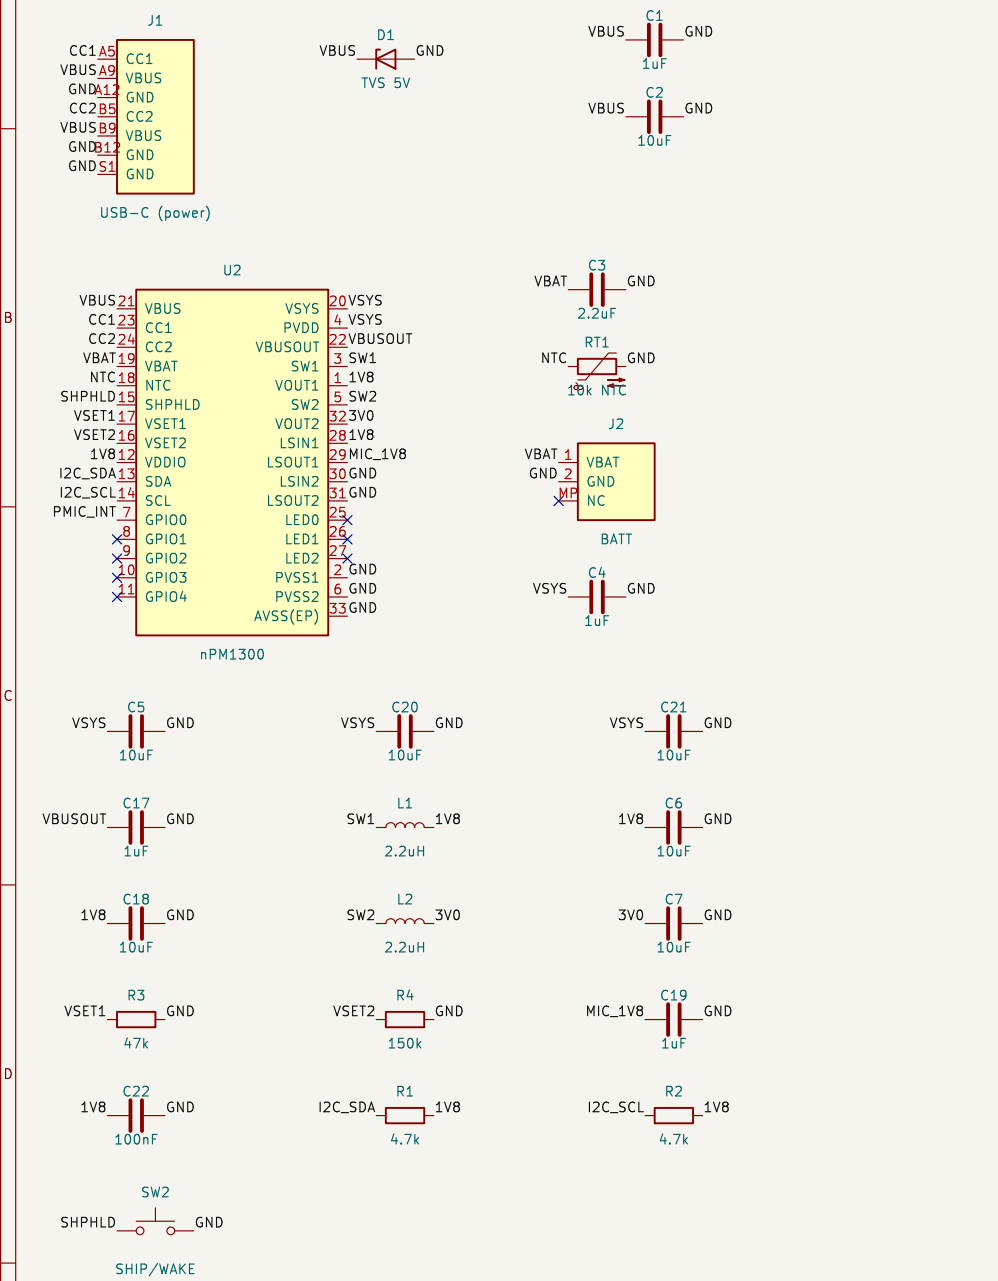


RADIO – Ezurio BL54L15 453-00044 (nRF54L15, MHF4 antenna connector), SENSORS – T5838 mic, LSM6DSV16BX bone conduction + touch

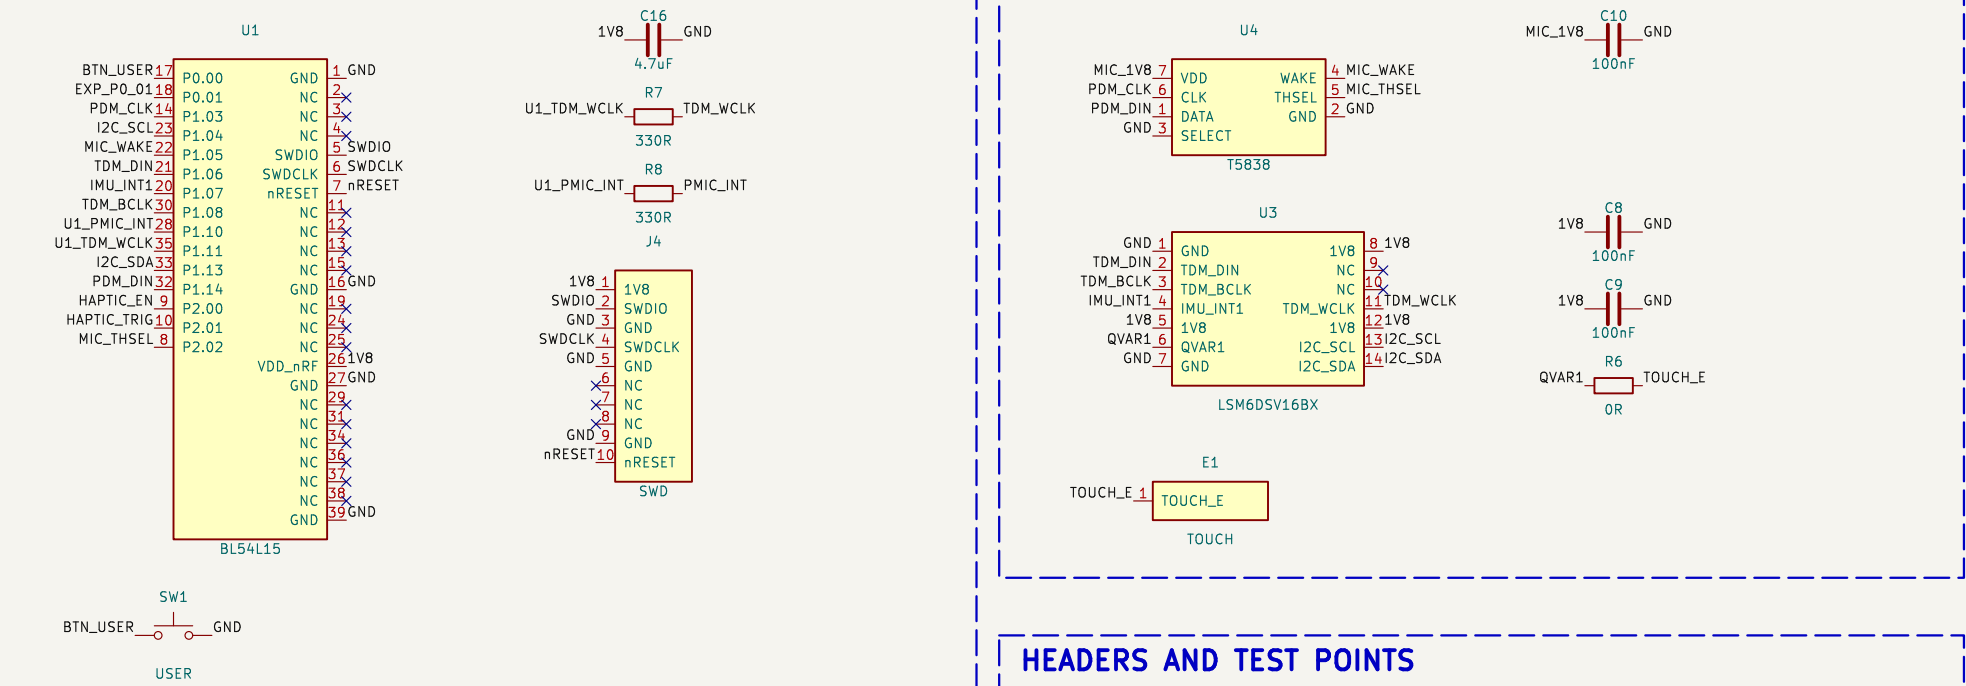

HAPTICS – DRV2605L + LRA

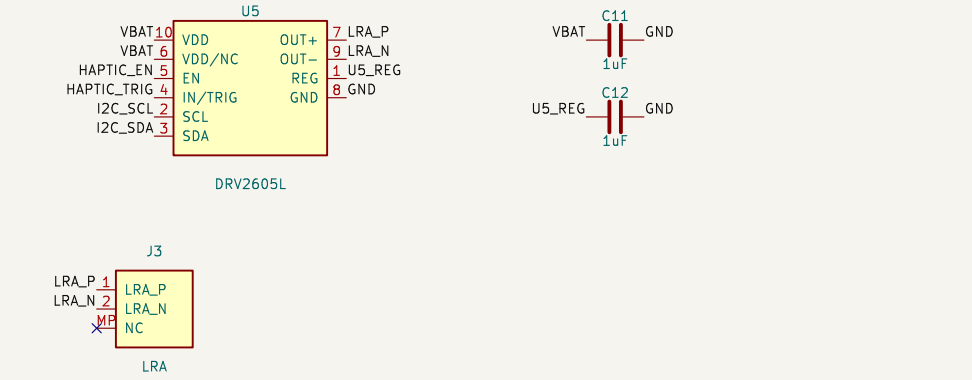

HEADERS AND TEST POINTS

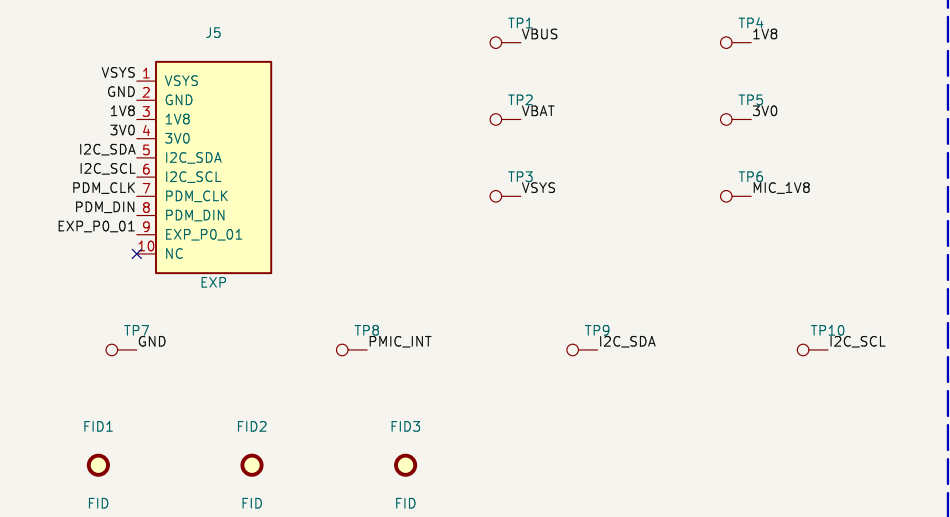

NOTES

- R7–R8: the cuff's BL54L15u Note 7 (P1.09–P1.12 < 1 MHz behind >=330 R), kept so both boards share one pin map.
- U1 antenna: plug a 2.4 GHz MHF4 antenna (Ezurio mFlexPIFA EFA2400A3S–10MH4L) into the module.
- J5 takes the V2S200D eval board: PDM left channel (T5838 is right).
- Generated by make_schematic.py from devboard_circuit.py – edit the circuit file, not this sheet.
- OPEN: nPM1300 TWI DC input limits (not tabulated in PS v1.2.1); bench-check I2C low level at 400 kHz.
- OPEN: shared PDM bus – T5838 right channel (SELECT=GND), external V2S200D on J5 must select left.
- Firmware: charger off at reset; select the 10k NTC (ADCNTCRSEL) and 32 mA before enabling charging.
- Firmware: LOADSW1 (MIC_1V8) off at reset – enable only after BUCK1 is confirmed at 1.8 V.

Radio module footprint: see README for status
Source: hardware/devboard/devboard_circuit.py

Cue

Sheet: /
File: cue_devboard.kicad_sch

Title: Cue rev A dev board

Size: A3 Date: 2026-10-05

KiCad E.D.A. kicad-cli 7.0.11+dfsg-1build4

Rev: A

Id: 1/1