UNIT 1 MICROPROCESSOR ARCHITECTURE

Stru	cture		Page No.
1.0	Introdu	action	5
1.1	Object	ives	5
1.2	Micro	computer Architecture	5
1.3		are of 8086 CPU	. 7
	1.3.1	The Bus Interface Unit	
	1.3.2	Execution Unit (EU)	
1.4	Registe	er Set of 8086	. 11
1.5	Instruc	tion Set of 8086	, 13
	1.5.1	Data Transfer Instructions	
	1.5.2	Arithmetic Instructions	
	1.5.3		
	1.5.4	Program Execution Transfer Instructions	
	1.5.5		
	1.5.6	Processor Control Instructions	
1.6		ssing Modes	. 29
	1.6.1	Register Addressing Mode	
	1.6.2	ĕ	
	1.6.3	Direct Addressing Mode	
	1.6.4	Indirect Addressing Mode	
1.7	1.7 Summary		33
1.8	Solution	ons/Answers	33

1.0 INTRODUCTION

In the previous blocks of this course, we have discussed concepts relating to CPU organization, register set, instruction set, addressing modes with a few examples. Let us look at one microprocessor architecture in regard of all the above concepts. We have selected one of the simplest processors 8086, for this purpose. Although the processor technology is old, all the concepts are valid for higher end Intel processor. Therefore, in this unit, we will discuss the 8086 microprocessor in some detail.

We have started the discussion of the basic microcomputer architecture. This discussion is followed by the details on the components of CPU of the 8086 microprocessor. Then we have discussed the register organization for this processor. We have also discussed the natruction set and addressing modes for this processor. Thus, this unit presents exhabitive details of the 8086 microprocessor. These details will then be used in Assembly Programming.

1.1 OBJECTIVES

After going through this unit, you should be able to:

- describe the features of the 8086 microprocessor;
- list various components of the 8086 microprocessor; and
- identify the instruction set and the addressing modes of the 8086 microprocessor.

1.2 MICROCOMPUTER ARCHITECTURE

The word micro is used in microscopes, microphones, microwaves, microprocessors, microcomputers, microprogramming, microcodes etc. It means small. A

Assembly Language Programming

microprocessor is an example of VLSI bringing the whole processor to a single small chip. With the popularity of distributed processing, the emphasis has shifted from the single mainframe system to independently working workstations or functioning units with their own CPU, RAM, ROM and a magnetic or optical disk memory. Thus, the advent of the microprocessor has transformed the mainframe environment to a distributed platform.

Let us recapitulate the basic components of a microprocessor:

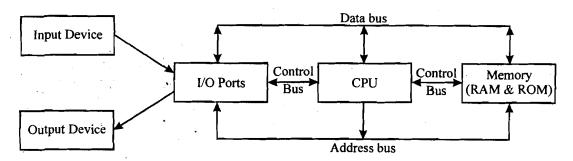


Figure 1: Components of a Microcomputer

Please note the following in the above figure:

- ROM stores the boot program.
- The path from CPU to devices is through Buses. But what would be the size of these Buses?

Bus Sizes

- 1. The Address bus: 8085 microprocessor has 16 bit lines. Thus, it can access up to $2^{16} = 64$ K Bytes. The address bus of 8086 microprocessor has a 20 bits address bus. Thus it can access upto $2^{20} = 1$ M Byte size of RAM directly.
- 2. Data bus is the number of bits that can be transferred simultaneously. It is 16 bits in 8086.

Microprocessors

The microprocessor is a complete CPU on a single chip. The main advantages of the microprocessor are:

- compact but powerful;
- oan be microprogrammed for user's needs;
- easily programmable and maintainable due to small size; and
- useful in distributed applications.

A microprocessor must demonstrate:

- More throughput
- More addressing capability
- Powerful addressing modes
- Powerful instruction set
- Faster operation through pipelining
- Virtual memory management.

However, RISC machine do not agree with above principles.

Some of the most commercially available microprocessors are: Pentium, Xeon, G4 etc.

The assembly language for more advanced chips subsumes the simplest 8086/8088 assembly language. Therefore, we will confine our discussions to Intel 8086/8088 assembly language. You must refer to the further readings for more details on assembly language of Pentium, G4 and other processors.

All microprocessors execute a continuous loop of fetch and execute cycles.

```
while (1)
{
          fetch (instruction); ,
          execute (using date);
}
```

1.3 STRUCTURE OF 8086 CPU

The 8086 microprocessor consists of two independent units:

- 1. The Bus Interface unit, and
- 2. The Execution unit.

Please refer to Figure 2.

8086 Address and Data Bus **Bus Interface** Unit (BIU) Address Adder Instruction 4 Stream 3 Queue ES CS SS DS IP **Execution Unit** bits Control system **Execution** unit (EU) ΑH Arithmetic BH BL Logic unit CH CL DH DL SP BP Operands Š1 DI Flags 16 bits

Figure 2: The CPU of INTEL 8086 Microprocessor

Assembly Language Programming

The word independent implies that these two units can function parallel to each other. In other words they may be considered as two stages of the instruction pipeline.

1.3.1 The Bus Interface Unit

The BIU (Bus Interface Unit) primarily interacts with the system bus. It performs almost all the activities relating to fetch cycle such as:

- Calculating the physical address of the next instruction
- Fetching the instruction
- Reading or writing data memory or I/O port from memory or Input/ Output.

The instruction/ data is then passed to the execution unit. This BIU consists of:

(a) The Instruction Queue

The instruction queue is used to store the instruction "bytes" fetched. Please note two points here: that it is (1) A Byte (2) Queue. This is used to store information in byte form, with the underlying queue data structure. The advantage of this queue would only be if the next expected instructions are fetched in advance, thus, allowing a pipeline of fetch and execute cycles.

(b) The Segment Registers

These are very important registers of the CPU. Why? We will answer this later. In 8086 microprocessor, the memory is a byte organized, that is a memory address is byte address. However, the number of bits fetched is 16 at a time. The segment registers are used to calculate the address of memory location along with other registers. A segment register is 16 bits long.

The BIU contains four sixteen-bit registers, viz., the CS: Code Segment, the DS: Data Segment, the SS: Stack Segment, and the ES: Extra Segment. But what is the need of the segments: Segments logically divide a program into logical entities of Code, Data and Stack each having a specific size of 64 K. The segment register holds the upper 16 bits of the starting address of a logical group of memory, called the segment. But what are the advantages of using segments? The main advantages of using segments are:

- Logical division of program, thus enhancing the overall possible memory use and minimise wastage.
- The addresses that need to be used in programs are relocatable as they are the offsets. Thus, the segmentation supports relocatability.
- Although the size of address, is 20 bits, yet only the maximum segment size, that is 16 bits, needs to be kept in instruction, thus, reducing instruction length.

The 8086 microprocessor uses overlapping segments configuration. The typical memory organization for the 8086 microprocessor may be as per the following figure.

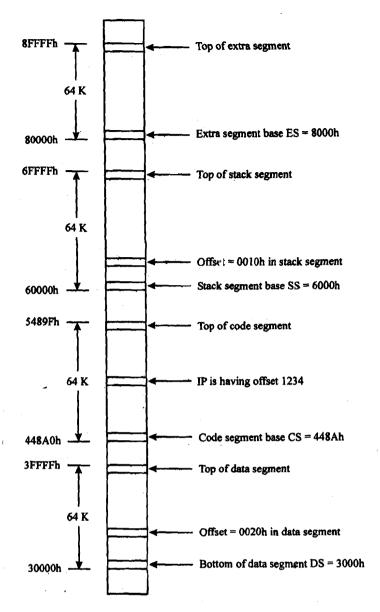


Figure 3: Logical Organisation of Memory in INTEL 8086 Microprocessor

Although the size of each segment can be 64K, as they are overlapping segments we can create variable size of segments, with maximum as 64K. Each segment has a specific function. 8086 supports the following segments:

As per model of assembly program, it can have more than one of any type of segments. However, at a time only four segments one of each type, can be active.

The 8086 supports 20 address lines, thus supports 20 bit addresses. However, all the registers including segment registers are of only 16 bits. So how may this mapping of 20 bits to 16 bits be performed?

Let us take a simple mapping procedure:

The top four hex digits of initial physical address constitute segment address.

You can add offset of 16 bits (4 Hex digits) from 0000h to FFFFh to it. Thus, a typical segment which starts at a physical address 10000h will range from 10000h to 1FFFFh. The segment register for this segment will contain 1000H and offset will

Assembly Language Programming

range from 0000h to FFFFh. But, how will the segment address and offset be added to calculate physical address? Let us explain using the following examples:

Example 1 (In the Figure above)

The value of the stack segment register (SS) = 6000h The value of the stack pointer (SP) which is Offset = 0010h

Thus, Physical address of the top of the stack is:

Physical Address

This calculation can be expressed as: Physical address = $SS (hex) \times 16 + SP (hex)$

Example 2

The offset of the data byte = 0020h The value of the data segment register (DS) = 3000h Physical address of the data byte

Physical Address

This calculation can be expressed as physical address = DS (Hex) \times 16 + Data byte offset (hex).

Example 3

The value of the Instruction Pointer, holding address of the instruction = 1234h The value of the code segment register (CS) = 448Ah Physical address of the instruction

Physical Address = CS (Hex) \times 16 + IP

(c) Instruction Pointer

The instruction pointer points to the offset of the current instruction in the code segment. It is used for calculating the address of instruction as shown above.

1.3.2 Execution Unit (EU)

Execution unit performs all the ALU operations. The execution unit of 8086 is of 16 bits. It also contains the control unit, which instructs bus interface unit about which memory location to access, and what to do with the data. Control unit also performs decoding and execution of the instructions. The EU consists of the following:

(a) Control Circuitry, Instruction Decoder and ALU

The 8086 control unit is primarily micro-programmed control. In addition it has an instruction decoder, which translates an instruction into sequence of micro operations. The ALU performs the required operations under the control of CU which issues the necessary timing and control sequences.

(b) Registers

All CPUs have a defined number of operational registers. 8086 has several general purpose and special purpose registers. We will discuss these registers in the following sections.

1.4 REGISTER SET OF 8086

The 8086 registers have five groups of registers. These groupings are done on the basis of the main functions of the registers. These groups are:

General Purpose Register

8086 microprocessors have four general purpose registers namely, AX, BX, CX, DX. All these registers are 16 – bit registers. However, each register can be used as two general-purpose byte registers also. These byte registers are named AH and AL for AX, BH and BL for BX, CH and CL for CX, and DH and DL for DX. The H in register name represents higher byte while L represents lower byte of the 16 bits registers. These registers are primarily used for general computation purposes. However, in certain instruction executions they acquire a special meaning.

AX register is also known as accumulator. Some of the instructions like divide, rotate, shift etc. require one of the operands to be available in the accumulator. Thus, in such anstructions, the value of AX should be suitably set prior to the instruction.

BX register is mainly used as a base register. It contains the starting base location of a memory region within a data segment.

CX register is a defined counter. It is used in loop instruction to store loop counter.

DX register is used to contain I/O port address for I/O instruction.

You will experience their usage in various assembly programs discussed later.

Segment Registers

Segment Registers are used for calculating the physical address of the instruction or memory. Segment registers cannot be used as byte registers.

Pointer and Index Registers

The 8086 microprocessor has three pointer and index registers. Each of these registers is of 16 bit and cannot be accessed byte wise. These are Base Pointer (BP), Source Index (S1) and Destination Index (DI). Although they can be used as general purpose registers, their main objective is to contain indexes. BP is used in stack segment, SI in Data segment and DI in Extra Data segment.

Special Registers

A Last in First Out (LIFO) stack is a data structure used for parameter passing, return address storage etc. 8086 stack is 64K bytes. Base of the stack is pointed to by the stack segment (SS) register while the offset or top of the stack is stored in Stack Pointer (SP) register. Please note that although the memory in 8086 has byte addresses, stack is a word stack, which is any push operation will occupy two bytes.

Flags Register

A flag represents a condition code that is 0 or 1. Thus, it can be represented using a flip-flop. 8086 employs a 16-bit flag register containing nine flags. The following table shows the flags of 8086.

Flags	Meaning	Comments			
Conditional Flags	Conditional Flags represent result of last arithmetic or logical instruction executed.				
		lition generated as a result of the last			
mathematical or lo	ogical instruction exe	ecuted. The conditional flags are:			
CF	Carry Flag	1 if there is a carry bit			
PF_	Parity Flag	1 on even parity 0 on odd parity			
AF	Auxiliary Flag	Set (1) if auxiliary carry for BCD occurs			
ZF	Zero Flag	Set if result is equal to zero			
SF	Sign Flag	Indicates the sign of the result (1 for minus, 0			
		for plus)			
OF	Overflow Flag	set whenever there is an overflow of the result			
Control flags, which are set or reset deliberately to control the operations of the execution unit. The control flags of 8086 are as follows:					
TF	Single step trap flag	Used for single stepping through the program			
IF	Interrupt Enable flag	Used to allow/inhibit the interruption of the program			
DF	String direction flag	Used with string instruction.			

Check Your Progress 1

	microprocessors?	0000
2.	Find out the physical addresses for the following segment re	gister: offset
	(a) SS:SP = 0100h:0020h (b) DS:BX = 0200h:0100h (c) CS:IP = 4200h:0123h	•
3.	State True or False.	TF
(a)	BX register is used as an index register in a data segment.	
(b)	CX register is assumed to work like a counter.	

(c) The Source Index (SI) and Destination Index(DI) registers in 8086 can also be used as general registers.

(d) Trag Flag (TR) is a conditional flag.

1.5 INSTRUCTION SET OF 8086

After discussing the basic organization of the 8086 micro-processor, let us now provide an overview of various instructions available in the 8086 microprocessor. The instruction set is presented in the tabular form. An assembly language instruction in the 8086 includes the following:

Label: Op-code Operand(s); Comment

For example, to add the content of AL and BL registers to get the result in AL, we use the following assembly instruction.

NEXT: ADD AL,BL ; $AL \leftarrow AL + BL$

Please note that NEXT is the label field. It is giving an identity to the statement. It is an optional field, and is used when an instruction is to be executed again through a LOOP or GO TO. ADD is symbolic op-code, for addition operation. AL and BL are the two operands of the instructions. Please note that the number of operands is dependent upon the instructions. 8086 instructions can have zero, one or two operands. An operand in 8086 can be:

- 1. A register
- 2. A memory location
- 3. A constant called literal
- 4. A label.

We will discuss the addressing modes of these operands in section 1.6.

Comments in 8086 assembly start with a semicolon, and end with a new line. A long comment can be extended to more than one line by putting a semicolon at the beginning of each line. Comments are purely optional, however recommended as they provide program documentation. In the next few sections we look at the instruction set of the 8086 microprocessor. These instructions are grouped according to their functionality.

1.5.1 Data Transfer Instructions

These instructions are used to transfer data from a source operand to a destination operand. The source operand in most of the cases remains unchanged. The operand can be a literal, a memory location, a register, or even an I/O port address, as the case may be. Let us discuss these instructions with the following table:

MNEMONIC	DESCRIPTION	EXAMPLE
MOV des, src	des ← src; Both the operands should	MOV CX,037AH
	be byte or word. src operand can be	; CX register is initialized
}	register, memory location or an	; with immediate value
	immediate operand des can be	; 037AH.
	register or memory operand.	
,	Restriction: Both source and	MOV AX,BX
}	destination cannot be memory	; AX←BX
·	operands at the same time.	

PUSH operand	Pushes the operand into a stack. SP ← SP – 2; value [TOS] ← operand. Initialise stack segment register, and the stack pointer properly before using this instruction. No flags are effected by this instruction. The operand can be a general purpose register, a segment register, or a memory location. Please note it is a word stack and memory address is a byte address, thus, you decrement by 2. Also you decrement as SP is initialised to maximum offset and condition of stackful is a zero offset (so it is a reversed stack)	PUSH BX ; decrement stack pointer ; by; two, and copy BX to ; stack. ; decrement stack pointer ; by two, and copy ; BX to stack
POP des	POP a word from stack. The des can be a general-purpose register, a segment register (except for CS register), or a memory location. Steps are: des ← value [TOS] SP ← SP + 2	POP AX; Copy content for top; of stack to AX.
XCHG des, src	Used to exchange bytes or words of src and des. It requires at least one of the operands to be a register operand. The other can be a register or memory operand. Thus, the instruction cannot exchange two memory locations directly. Both the operands should be either byte type or word type. The segment registers cannot be used as operands for this instruction.	XCHG DX,AX ; Exchange word in DX ; with word in AX
XLAT	Translate a byte in AL using a table stored in the memory. The instruction replaces the AL register with a byte from the lookup table. This instruction is a complex instruction.	Example is available in Unit 3.
IN accumulator, port address	It transfers a byte or word from specified port to accumulator register. In case an 8-bit port is supplied as an operand then the data byte read from that part will be transferred to AL register. If a 16-bit port is read then the AX will get 16 bit word that was read. The port address can be an immediate operand, or contained in DX register. This instruction does not change any flags.	IN AL,028h; read a byte from port; 028h to AL register
OUT port address, Accumulator LEA register, source	It transfers a byte or word from accumulator register to specified port. This instruction is used to output on devices like the monitor or the printer. Load "effective address" (refer to this term in block 2, Unit 1 in addressing modes) of operand into specified 16 – bit register. Since, an address is an offset in a segment and maximum can	LEA BX, PRICES ; Assume PRICES is ; an array in the data ; segment. The ; instruction loads the

	be of 16 bits, therefore, the register can only be a 16-bit register. LEA instruction does not change any flags. The instruction is very useful for array processing.	; offset of the first byte of ; PRICES directly into ; the BX register.
LDS des-reg	It loads data segment register and other specified register by using consecutive memory locations.	LDS SI, DATA ; DS←content of memory ; location DATA & ; DATA + 1 ; SI ← content of ; memory locations ; DATA + 2 & DATA + ; 3_
LES des-reg	It loads ES register and other specified register by using consecutive memory locations. This instruction is used exactly like the LDS except in this case ES & other specified registers are initialized.	
LAHF	Copies the lower byte of flag register to AH. The instruction does not change any flags and has no operands.	
SAHF	Copies the value of AH register to low byte of flag register. This instruction is just the opposite of LAHF instruction. This instruction has no operands.	•
PUSHF	Pushes flag register to top of stack. SP ← SP - 2; stack [SP] ← Flag Register.	
POPF	Pops the stack top to Flag register. Flag register ← stack [SP] SP ← SP + 2	

1.5.2 Arithmetic Instructions

MNEMONIC	DESCRIPTION	EXAMPLE
ADD	Adds byte to byte, or word to word.	ADD AL,74H
IF	The source may be an immediate	; Add the number 74H to
	operand, a register or a memory	; AL register, and store the
ĺ	location. The rules for operands are	; result back in AL
	the same as that of MOV instruction.	ADD DX,BX
†	To add a byte to a word, first copy the	; Add the contents of DX to
·	byte to a word location, then fill up	; BX and store the result in ;
}	the upper byte of the word with zeros.	DX, BX remains
	This instruction effects the following	; unaffected.
<u> </u>	flags: AF, CF, OF, PF, SF, ZF.	
ADC des, src	Add byte + byte + carry flag, or word	
}	+ word + carry flag. It adds the two	·
}	operands with the carry flag. Rest all	
	the details are the same as that of	·
	ADD instruction.	
INC des	It increments specified byte or word	INC BX
	operand by one. The operand can be a	; Add 1 to the contents of
į.	register or a memory location. It can	; BX register
1	effect AF, SF, ZF, PF, and OF flags.	INC BL
}	It does not affect the carry flag, that	;Add 1 to the contents of
	is, if you increment a byte operand	; BL register

	having OFFIL than it will went to a	
{	having OFFH, then it will result in 0	
AAA	value in register and no carry flag.	ADD ALDI
AAA	ASCII adjusts after addition. The data	ADD AL,BL
{	entered from the terminal is usually in	; AL=00110101, ASCII 05
	ASCII format. In ASCII 0-9 are	; BL=00111001, ASCII 09
	represented by codes 30-39. This	; after addition
	instruction allows you to add the	; $AL = 01101110$, that is,
	ASCII codes instead of first	; 6EH- incorrect
	converting them to decimal digit	; temporary result
	using masking of upper nibble. AAA	AAA
	instruction is then used to ensure that	; AL = 00000100.
	the result is the correct unpacked	; Unpacked BCD for 04
	BCD.	; carry = 1, indicates
	· .	; the result is 14
DAA	Decimal (BCD) adjust after addition.	; AL = 0101 1001 (59
	This is used to make sure that the	; BCD)
,	result of adding two packed BCD	; BL = 0011 0101 (35
	numbers is adjusted to be a correct	; BCD)
	BCD number. DAA only works on	ADD AL, BL
	AL register.	; AL = 10001101 or
	AL register.	
}	·	; 8Eh (incorrect BCD) DAA
		 -
-		; AL = 1001 0100
arin i		; ≡ 94 BCD : Correct.
SUB des, src	Subtract byte from byte, or word from	SUB AX, 3427h
)	word. (des \leftarrow des $-$ src). For	; Subtract 3427h from AX
	subtraction the carry flag functions as	; register, and store the
	a borrow flag, that is, if the number in	; result back in AX
	the source is greater than the number	·
	in the destination, the borrow flag is	
	to set 1. Other details are equivalent	
	to that of the ADD instruction.	
SBB des, src	Subtract operands involving previous	SBB AL,CH
-	carry if any. The instruction is similar	; subtract the contents
	to SUB, except that it allows us to	; of CH and CF from AL
	subtract two multibyte numbers,	; and store the result
	because any borrow produced by	; back in AL.
	subtracting less-significant byte can	,
	be included in the result using this	
	instruction.	
DEC src	Decrement specified byte or specified	DEC BP
DEC 810	word by one. Rules regarding the	Decrement the contents
	operands and the flags that are	; of BP
	affected are same as INC instruction.	; register by one.
	Please note that if the contents of the	, register by one.
	·	
	operand is equal to zero then after	
	decrementing the contents it becomes	
	0FFH or 0FFFFH, as the case may be.	·
,	The carry flag in this case is not	
	affected.	
NEG src	Negate - creates 2's complement of a	NEG AL
·	given number, this changes the sign	; Replace the number in
	of a number. However, please note	; AL with it's 2's
	that if you apply this instruction on	; complement
* -	operand having value -128 (byte	· •
	operand) or -32768 (word operand) it	
•	will result in overflow condition. The	
	overflow (OF) flag will be set to	1
	O TOTALION (OI) Has will be set to	

		<u> </u>
the state of the	indicate that operation could not be done.	
C) (D) 1		OLD OTTO
CMP des,src	It compares two specified byte	CMP CX,BX
	operands or two specified word	; Compare the CX register
	operands. The source and destination	; with the BX register
	operands can be an immediate	; In the example above, the;
}	number, a register or a memory	CF, ZF, and the SF flags
,	location. But, both the operands	; will be set as follows.
<u>.</u>	cannot be memory locations at the	; CX=BX 0 1 0; result of
	same time. The comparison is done	; subtraction is zero
]	simply by internally subtracting the	; CX>BX 0 0 0; no borrow;
	source operand from the destination	required therefore, CF=0
	operand. The value of source and the	; CX <bx 0="" 1="" 1<="" th=""></bx>
	destination, operands is not changed,	; subtraction require
	but the flags are set to indicate the	; borrow, so CF=1
	results of the compatison.	
AAS	ASCII adjust after suptraction. This	; AL = 0011 0101 ASCII 5
1	instruction is similar to AAA (ASCII	; BL = 0011 1001 ASCII 9
	adjust after addition) instruction. The	SUB AL,BL
	AAS instruction works on the AL	; (5-9) result:
	register only. It updates the AF and	; AL= 1111 1100 = - 4 in
	CF flags, but the OF, PF, SF and the	; 2's complement, CF = 1
!	ZF flags remain undefined.	AAS ;result:
	21 mags remain undermed.	; AL = 0000 0100 =
i		1 *
	,	; BCD 04,
DAG		; CF = 1 borrow needed.
DAS	Decimal adjust after subtraction. This	; AL=86 BCD
	instruction is used after subtracting	; BH=57 BCD
·	two packed BCD numbers to make	SUB AL,BH
A CONTRACTOR	sure the result is the packed BCD.	; AL=2Fh, CF =0
	DAS only works on the AL register.	DAS
	The DAS instruction updates the AF,	; Results in AL = 29 BCD
A 1 1	CF, SF, PF and ZF flags. The	
	overflow (OF) is undefined after	
	DAS.	: '
MUL src	This is an unsigned multiplication	MOV AX,05; AX=05
	instruction that multiplies two bytes	MOV CX,02; CX=02
12 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	to produce a word operand or two	MUL CX
,4	words to produce a double word such	; results in DX=0
∫ ಿ⊀,∴	as:	; AX=0Ah
A 64 (4)	$AX \leftarrow AL^*$ src (byte multiplication)	, AX-VAII
SV 60 41.060	src is also byte)	
in endings	l a to at a second and a second a second and	
the state of the state of	DX or $AX \leftarrow AX * src (word)$	·
	multiplication is two word).	,
'	This instruction assumes one of the	,
	operand in AL (byte) or AX (word):	
in the second of the second	the src operand can be register or	. :1
	memory operand. If the most	
	significant word of the result is zero	
	then, the CF and the OF flags are both	
4	made zero. The AF, SF, PF, ZF flags	
	are not defined after the MUL	
wilder Market Market (1)	instruction. If you want to multiply a	
	byte with a word, then first convert	}
See at 1. 1 day	byte to a word operand.	:
AAM	ASCII adjust after multiplication.	; AL=0000 0101 unpacked
**************************************	Please note that two ASCII numbers	
		; BCD 05
,	cannot be multiplied directly. To	; BH=0000 1001 unpacked;
	multiply first convert the ASCII	BCD 09_

number to numeric digits by masking off the upper nibble of each byte. The leaves unpacked BCD in the register AAM instruction is used to adjust the product to two unpacked BCD digits in AX after the multiplication has been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word by a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags undefined.	; AX=AL * BH=002Dh AAM ; AX=00000100 00000101; BCD 45: Correct result ; AX = 37D7h = 14295 ; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RernainderAH = ; 65h = 101 ; decimal ; decimal ; CH = 00000011 = + 3h =
leaves unpacked BCD in the register AAM instruction is used to adjust the product to two unpacked BCD digits in AX after the multiplication has been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word be a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	AAM; AX=00000100 00000101; BCD 45: Correct result ; AX = 37D7h = 14295; decimal DIV BH; AX / BH quotient; AL = 5Eh = 94; decimal RernainderAH = ; 65h = 101; decimal ; decimal ; CH = 00000011 = + 3h =
AAM instruction is used to adjust the product to two unpacked BCD digits in AX after the multiplication has been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division to a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX=00000100 00000101; BCD 45: Correct result ; AX = 37D7h = 14295; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RernainderAH = ; 65h = 101 ; decimal ; decimal ; CH = 00000011 = + 3h =
product to two unpacked BCD digits in AX after the multiplication has been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX = 37D7h = 14295; decimal; BH = 97h = 151 decimal DIV BH; AX / BH quotient; AL = 5Eh = 94; decimal Remainder AH = ; 65h = 101; decimal; decimal; decimal; decimal; decimal; cH = 00000011 = + 3h =
in AX after the multiplication has been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX/ src AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX = 37D7h = 14295 ; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
been performed. AAM defined by the instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AH: Quotient Similarly for double word division to a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX = 37D7h = 14295 ; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RernainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
instruction while the CF, OF and the AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX = 37D7h = 14295 ; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RernainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
AF flags are left undefined. DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word be a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; decimal ; - 38 decimal ; CH = 00000011 = + 3h =
DIV src This instruction divides unsigned word by byte, or unsigned double word by word. For dividing a word be a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; decimal ; - 38 decimal ; CH = 00000011 = + 3h =
word by byte, or unsigned double word by word. For dividing a word be a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; decimal ; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; decimal ; - 38 decimal ; CH = 00000011 = + 3h =
word by word. For dividing a word to a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient. It can be represented as: AH: Remainder AX/ src AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; BH = 97h = 151 decimal DIV BH ; AX / BH quotient ; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
a byte, the word is stored in AX register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AX/ src AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	DIV BH; AX / BH quotient; AL = 5Eh = 94; decimal Rernainder AH =; 65h = 101; decimal i ; AL = 11001010 = -26h =; -38 decimal; CH = 00000011 = +3h =
register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AX / BH quotient ; AL = 5Eh = 94 ; decimal RernainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
register, divisor the src operand and the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
the result is obtained in AH: remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etc are all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 5Eh = 94 ; decimal RemainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
remainder AL: quotient. It can be represented as: AH: Remainder AL: Quotient AX/ src AL: Quotient AX/ src Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; decimal RemainderAH = ; 65h = 101 ; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
represented as: AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	65h = 101; decimal 1; AL = 11001010 = -26h = ; -38 decimal; CH = 00000011 = +3h =
AH: Remainder AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; decimal ; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
AL: Quotient Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
Similarly for double word division be a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	1 ; AL = 11001010 = -26h = ; - 38 decimal e ; CH = 00000011 = + 3h =
a word we have DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	1 ; AL = 11001010 = -26h = ; - 38 decimal e ; CH = 00000011 = + 3h =
DX: Remainder AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
AX: Quotient A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
A division by zero result in run time error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
error. The divisor src can be either in a register or a memory operand. IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
IDIV a register or a memory operand. Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; AL = 11001010 = -26h = ; - 38 decimal ; CH = 00000011 = + 3h =
IDIV Divide signed word by byte or signed double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; - 38 decimal ; $CH = 00000011 = +3h =$
double word by word. For this division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	; - 38 decimal ; $CH = 00000011 = +3h =$
division the operand requirement, the general format of the instruction etcare all same as the DIV instruction. IDIV instruction leaves all flags	c : CH = 00000011 = +3h =
general format of the instruction etc are all same as the DIV instruction. IDIV instruction leaves all flags	
are all same as the DIV instruction. IDIV instruction leaves all flags	
IDIV instruction leaves all flags	; 3 decimal
	; According to the operand
	; rules to divide by a byte
	; the number should be
	; present in a word register, ;
	i.e. AX. So, first convert
•	; the operand in AL to word
	; operand. This can be done;
	by sign extending the
	; AL register,
	; this makes AX
i L	; 11111111 11001010.
	; (Sign extension can also
	; be done with the help of
	; an instruction, discussed
	; later)
	IDIV CH
	; AX/CH
	; AL = 11110100 = - 0CH;
	= -12 Decimal
	; AH = 111111110 = -02H = ; -
	02 Decimal
	; Although the quotient is
	; actually closer to -13
	. (\$10 (((())) Ab = 10 1. 4
,	; (-12.66667) than -12, but
	; (-12.66667) than -12, but ; 8086 truncates the result
AAD ASCII adjust after division. The BC	
numbers are first unpacked, by	; 8086 truncates the result ; to give -12.

	masking off the upper nibble of each byte. Then ADD instruction is used to convert the unpacked BCD digits in AL and AH registers to adjust them to equivalent binary prior to division. Such division will result in unpacked BCD quotient and remainder. The PF, SF, ZF flags are updated, while the AF, CF, and the OF flags are left undefined.	; and 7 CH = 09h AAD ; adjust to binary before ; division AX= 0043 = ; 043h = 67 Decimal DIV CH ; Divide AX by unpacked ; BCD in CH ; AL = 07 unpacked BCD ; AH = 04 unpacked BCD ; PF = SF = ZF = 0
CBW	Fill upper-byte or word with copies of sign bit of lower bit. This is called sign extension of byte to word. This instruction does not change any flags. This operation is done with AL register in the result being stored in AX.	; AL = 10011011 = -155 ; decimal AH = 00000000 CBW ; convert signed ; byte in AL to signed ; word in AX = 11111111 ; 10011011 = -155 decimal
CWD	Fill upper word or double word with sign bit of lower word. This instruction is an extension of the previous instruction. This instruction results in sign extension of AX register to DX:AX double word.	; DX: 0000 0000 0000 0000 ; AX: 1111 0000 0101 0001 CWD ; DX:AX = 1111 1111 1111 1111: ; 1111 0000 0101 0001


1.5.3 Bit Manipulation Instructions

These instructions are used at the bit level. These instructions can be used for testing a zero bit, set or reset a bit and to shift bits across registers. Let us look into some such basic instructions.

MNEMONIC	DESCRIPTION	EXAMPLE
NOT des	Complements each bit to produce	; BX = 0011 1010 0001 0000
·	1's complement of the specified	NOT BX
	byte or word operand. The	$; BX = 1100\ 0101\ 1110\ 1111$
· ·	operand can be a register or a	
<u> </u>	memory operand.	
AND des, src	Bitwise AND of two byte or word	; BH = 0011 1010 before
	operands. The result is des \leftarrow des	AND BH, 0Fh
	AND src. The source can be an	; BH = 0000 1010
	immediate operand a register, or a	; after the AND operation
19	memory operand. The destination	
	can be a register or a memory	
	operand. Both operands cannot be	
	memory operands at the same	
	time. The CF and the OF flags are	
	both zero after the AND	
	operation. PF, SF and ZF area	
	updated, Afis left undefined.	
OR des, src	OR each corresponding bits of the	; BH = 0011 1010 before
	byte or word operands. The other	OR BH, 0Fh
*	operands rules are same as AND.	; BH = 0011 1111 after
· · · · · · · · · · · · · · · · · · ·	des ← des OR src	
XOR des, src	XOR each corresponding bit in a	$;BX = 00111101 \ 01101001$
	byte or word operands rules are	; CX = 00000000111111111
	two same as AND and OR.	XOR BX,CX
	des C Des + src	; BX=0011110110010110
		; Please note, that the bits in
		; the lower byte are inverted.

the same and the same and the same		
TEST des, src	AND the operands to update	$; AL = 0101\ 0001$
	flags, but donot change operands	TEST AL, 80h.
		; This instruction would
100 100 100 100 100 100	test conditions.CF and OF are	; test if the MSB bit of the AL
isarir di ta	both set to zero, PF, SF and ZF	; register is zero or one. After
4	are all updated, AF is left	the TEST operation ZF will
I Down of the	undefined after the operation.	; be set to 1 if the MSB of AL
4.7	1004 Tours 100 Constant	; is zero.
SHL/SAL des,	Shift bits of word or byte left, by	SAL/BX, 01
count	count. It puts zero(s) in LSB(s).	; if $CF = 0$
4, 4 T 1 T 2.	MSB is shifted into the carry flag.	$; BX = 1000\ 1001$
	If more than one bits are shifted	; result ; CF = 1
(O O O O O O O O O O O O O O O O O O O	left, then the CF gets the most	; BX = 0001 0010
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	recently moved MSB. If the	Market Commence
harry a stally	number of bits desired to be	line gra
Burn Ale	shifted is only 1, then the	
Land the time	immediate number. 1 can be	10 84
	written as one of the operands.	
B A SECTION		
Lague Margaratin		
	one, then the second operand is	 T + 12 X, \$40 4
	put in CL register.	
SHR des, count	It shifts bits of a byte or word to	SHR BX,01
	register put zero in MSB. LSB is	; if $CF = 0$
	moved into CF.	$; BX = 1000\ 1001$
	A STATE OF THE STA	; result: CF = 1
		; $BX = 0100 \ 0100$
Lighter with Early	After the following the second	MOV: CŁ, 02 grad zadogo dago o
Mark (a.b. 1 b)	Hilliam to the control of the	SHR BX, CL
,,		; with same BX, the
		; result would be
		CF=0
	4. 2 · · · · · · · · · · · · · · · · · ·	$; BX = 0010\ 0100$
SAR des, count	Shift bits of word or byte right,	; AL=0001 1101 = +29
	but it retains the value of new	; decimal, CF = 0
	MSB to that of old MSB. This is	SAR AL, 01
	also called arithmetic shift	AL = 0000 1110 = +14
	operation, as it does not change	; decimal, CF = 1
	the MSB, which is sign bit of a	; OF = PF = SF = ZF = 0
	number:	$; BH = 1111\ 0011 = -13$
	k atma i jeun jeley elemen g	; decimal
		SAR BH,01
1	V365 - 13 1 - 1341	; BH = 1111 1001 = -7
.h		
	gradicinated districts a	; decimal, CF =1
	ner opver direction et al.	
ROL des, count	Rotate bits of word or byte left,	; decimal, CF =1
ROL des, count	Rotate bits of word or byte left, MSB is transferred to LSB and	; decimal, CF =1
ROL des, count	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it	; decimal, CF =1
	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as:	; decimal, CF =1
	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as:	; decimal, CF =1
्राहरू सम्बद्धित । व	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as:	; decimal, CF =1
	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB	; decimal, CF =1
2 18 sef (4 / 1) - 1	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB	; decimal, CF =1 ; OF = ZF = 0; PF = SF = 1
production of the second secon	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB	; decimal, CF =1 ; OF = ZF = 0; PF = SF = 1
7. 35-6440. 3 7. 31-4 1. 31-31 (0.10) 1111-111 (0.10)	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB The operation is called rotate as it	; decimal, CF = 1 ; OF = ZF = 0; PF = SF = 1
7. 02.00 (0.70) 1. 02.00 (0.70) 1111.111.00001	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB The operation is called rotate as it circulates bits. The operands can	; decimal, CF =1 ; OF = ZF = 0; PF = SF = 1
238-6640. (2006-711-4 211-211-60064 21-211-60064	Rotate bits of word or byte left, MSB is transferred to LSB and also to CF. Diagrammatically, it can be represented as: CF MSB LSB The operation is called rotate as it	; decimal, CF =1 ; OF = ZF = 0; PF = SF = 1

Microprocessor Architecture

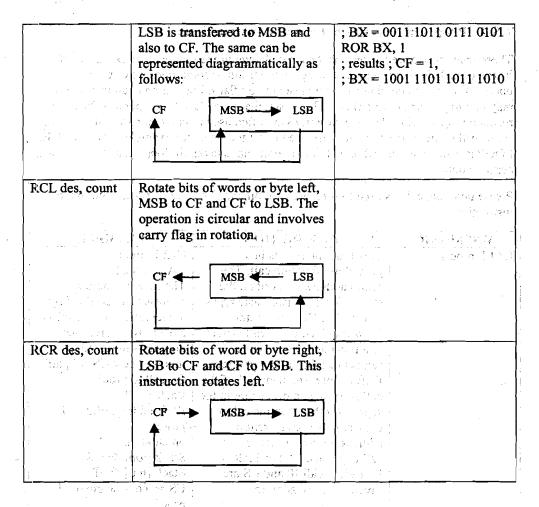

Check Your Progress 2

- Point out the error/errors in the following 8086 assembly instruction (if any)?
 - a. PUSHF AX
 - b. MOV AX, BX
 - c. XCHG MEM_WORD1, MEM_WORD2
 - d. AAA BL, CL

	e. Thiv Ax; CH 1/2	
2.	State True or False in the context of 8086 assembly language.	F
	(a) LEA and MOV instruction serve the same purpose. The only difference between the two is the type of operands they take.	
	(b) NEG instruction produces 1's complement of a number.	ļ
	(c) MUL instruction assumes one of the operands to be present in the AL or AX register.	
•	(d) TEST instruction performs an OR operation, but does not change the value of operands.	ue
	(e) Suppose AL contains 0110 0101 and CF is set, then instructions ROL AL and RCL AL will produce the same results.	. ·

1.5.4 Program Execution Transfer Instructions

These instructions are the ones that causes change in the sequence of execution of instruction. This change can be through a condition or sometimes may be unconditional. The conditions are represented by flags. For example, an instruction may be jump to an address if zero flag is set, that is the last ALU operation has resulted in zero value. These instructions are often used after a compare instruction, or some arithmetic instructions that are used to set the flags, for example, ADD or SUB. LOOP is also a conditional branch instruction and is taken till loop variable is below a certain count.

Please note that a "/" is used to separate two mnemonics which represent the same instruction.

MNEMONIC	DESCRIPTION	EXAMPLE
CALL proc 1	This function results in a	CALL procl
	procedure/ function call. The	CALL proc2
	return address is saved on the	The new instruction
* *	stack. There are two basic types	address is determined by
	of CALLS. NEAR or Intra-	name declaration proc1 is
	Segment calls: if the call is made	a near procedure, thus,
;	to a procedure in the same	only IP is involved. proc2
-	segment as the calling program.	involves new CS: IP pair.
	FAR or Inter segment call: if the	On call to proc1
	call is made to a procedure in the	stack ← IP
	segment, other than the calling	IP ← address offset of
	program. The saved return	proc1
	address for NEAR procedure	on call to proc2
	call is just the IP. For FAR	Stack [top] ← CS
^	Procedure call IP and CS are	Stack [top] ← IP
,	saved as return address.	CS ← code segment of
		proc2
,		IP ← address offset of
		proc2
		Here we assume that procl
].		is defined within the same
		segment as the calling
	·	procedure, while proc2 is
		defined in another
		segment. As far as the
:	,	calling program is
	,	concerned, both the
		procedures have been
		called in the same manner.
		But while declaring these
		procedures, we declare
1.		procl as NEAR procedure
	,	and proc2 as FAR
		procedure, as follows:
·		procl PROC NEAR
		proc2 PROC FAR
	A procedure can also be called	LEA BX, procl
	indirectly, by first initializing	; initialize BX with the
	some 16-bit register, or some	; offset of the procedure
	other memory location with the	; procl
	new addresses as follows.	CALL BX
	•	; CALL procl indirectly
		; using BX register
RET number	It returns the control from	RET 6

JA/JNBE	Jump if above / Jump if not	
j.		
{	are self explanatory.	THE WALLAND STAND COLOM
	All the conditional jump instruction	
		; jump to occur.
•		; will cause the conditional
		; if applied instead of JE,
		; equal) jump instructions
		above or
-		above), ; or JAE (Jump
		; to) or JA (Jump if
		; JNE (Jump if not equal
*	, A	; executed. However, if
		; jump instruction will be
	·	; instruction to conditional
		; the jump will not take ; place and the next
		; CX is not equal to BX; the jump will not take
•		; in the above example as
		; instruction
		; through to next
		; simply falls
		; otherwise the control
		; a jump to LABEL1,
		; BX, it makes
		; it is set implying CX =
		; checks for the ZF, and if
, i		; now be applied, which
		; conditional jump can
		JE LABELI
		; and the CF.
		; various flags like the ZF,
	flag.	; this instruction will set
	I 5	CMP CX, BX
1	any instruction that affects the	
Constitution and	some conditional statement, or	MOV EX, 03
Conditional Jump	All the conditional jumps follow	MOV CX, 05
	FAR jump, just like CALL.	; to be transferred.
	JMP can be a NEAR JMP or a	; where the control needs
	initialised with the offset value.	; offset of the instruction,
	be a register that has been	; initialize BX with the
	within the program, or it could	JMP BX
	which jump has to take place	; to be transferred.
	label assigns the instruction to	; where the control needs
	from the label specified. The	; given to the instruction
	address and get next instruction	; CONTINUE is the label
JMP Label	Unconditionally go to specified	JMP CONTINUE
		; affect any flags.
		; instruction does not
	also be followed by a number.	; programmer. RET
	is restored. RET instruction can	; created by the
	far procedure the CS:IP pair get	; temporary parameters
	restored from stack. While for	; the local parameters, or
	of the instruction pointer is	; the stack. This cancels
	from near procedure the values	; registers (for far) from
	FAR procedure call. For return	; (for new) or IP and CS
,	causes return from NEAR or	; after popping off the IP
-	instruction. A RET instruction,	; pointer by this number
ſ	Every CALL should be a RET	; increments the stack
1		l .

JAE/JNB	Jump if above or equal/ Jump if	
	not below	·
JB/JNAE	Jump if below/ Jump if not	. i
3,4	above nor equal	Charles Control
JBE/JNA	Jump if below or equal/ Jump if	4 1
	not above	
JC	Jump if carry flag set	
JE/JZ	Jump if equal / Jump if zero flag	124
and the street of	is set	
JNC	Jump if not carry	
JNE/JNZ	Jump if not equal / Jump if zero	
· · · · · · · · · · · · · · · · · · ·	flag is not set	
.JO	Jump if overflow flag is set	
JNO	Jump if overflow flag is not set	Carlos Maria
JP/JPE	Jump if parity flag is set / Jump	
<u></u>	if parity even	***
JNP/JPO	Jump if not parity / Jump if	1 1 m2
TO/DILP	parity odd	
JG/JNLE	Jump if greater than / Jump if	
T A 170 TT	not less than nor equal	
JA/JNL	Jump if above / Jump if not less	
	than	<u> </u>
JL/JNGE	Jump if less than / Jump if not	
TT D/DIO	greater than nor equal	- ,
JLE/JNG	Jump if less than or equal to /	o series
	Jump if not greater than	
JS	Jump if sign flag is set	
JNS	Jump if sign flag is not set	I ot we account to
LOOP label	This is a looping instruction of assembly. The number of times	; Let us assume we want to ; add 07 to AL register,
i Language de co llège	the looping is required is placed	; three times.
A Commence of the	in CX register. Each iteration	MOV CX,03
	decrements CX register by one	; count of iterations
	implicitly, and the Zero Flag is	L1: ADD AL,07
	checked to check whether to	LOOP L1; loop back to L1,
	loop again. If the zero flag is not	; until CX
1,11	set (CX is zero) greater than the	: becomes equal to zero
e Santa	control goes back to the	; Loop affects no flags.
	specified label in the instruction,	•
	or else the control falls through	,
	to the next instruction. The	
	LOOP instruction expects the	
	label destination at offset of -	[
garage (1995) in the Samuel Communication of the Samuel Co	128 to +127 from the loop	
4 37	instruction offset.	
LOOPE/ LOOPZ	Loop through a sequence of	Let us assume we have an
label	instructions while zero flag = 1	array of 20 bytes. We want
	and CX is not equal to zero.	to see if all the elements of
	There are two ways to exit out of	that array are equal to
***	the loop, firstly, when the count	OFFh or not. To scan 20
e e e e e e e e e e e e e e e e e e e	in the CX register becomes equal	elements of the array, we
Tanan sa	to zero, or when the quantities	loop 20 times. And we
	that are being compared become	come out of the loop,
	unequal.	when either the count of
		iterations has become
•		equal to 20, or in other words CX register has
		Words CA register nas

Microprocessor Architecture

		decremented to zero,
		which means all the
	{	elements of the array are
-		equal to 0FFh, or an element in the array is
	•	found which is not equal
		to 0FFh. In this case, the
		CX register may still be
		greater than zero, when the control comes out. This
		can be coded as follows:
j		(Please note here that you
		might not understand
		everything at this place,
	·	that is because you are still not familiar with the
}		various addressing modes.
4	}	Just concentrate on the
		LOOPE instruction):
		MOV BX, OFFSET ARRAY; Point BX at the start
		; of the ARRAY
		DEC BX; put number of
		; array elements in CX
		MOV CX,10 L1: INC BX; point to
		; next element in array
		CMP [BX],0FFh
		; compare array element
		; with 0FFh LOOPE L1
		; When the control comes
		; out of the loop, it has
		; either scanned all the ; elements and found them
		; to be all equal to 0FFh, or
		; it is pointing to the first
		; non-0FFh, element in the
LOOPNE/LOOPNIZ	This is a second to the second	; array.
LOOPNE/LOOPNZ label	This instruction causes Loop through a sequence of	
	instructions while zero flag = 0	
}	and CX is not equal to zero. This	
	instruction is just the opposite of	
	the previous instruction in its functionality.	
JCXZ label	Jump to specified address if CX	This instruction is useful
	=0. This instruction will cause a jump, if the value of CX register	when you want to check whether CX is zero even
	is zero. Otherwise it will proceed	prior to entering into a
	with the next instruction in	loop. Please note that
}	sequence.	LOOP instruction executes
		the loop at least once before decrementing and
}		checking the value of CX
		register. Thus, CX=0 will
		execute the loop once and
	<u> </u>	decrement the CX register,

	making it 0FFFFh, which is non zero: This will cause FFFFh times
	execution of loop. To avoid such type of conditions you can proceed as follows:
	JCXZ SKIP _LOOP ; if CX is already 0, skip ; loop L1: SUB [BX],07h
/ · · /	INC BX LOOP L1 ; loop until CX=0 SKIP LOOP:

In addition to these instructions, there are other interrupt handling instructions also, which too transfer the control of the program to some specified location. We will discuss these instructions in later units.

1.5.5 String Instructions

These are a very strong set of 8086 instructions as these instructions process strings, in a compact manner, thus, reducing the size of the program by a considerable amount. "String" in assembly is just a sequentially stored bytes or words. A string often consists of ASCII character codes. A subscript B following the instruction indicates that the string of bytes is to be acted upon, while "W" indicates that it is the string of words that is being acted upon.

MNEMONIC	DESCRIPTION	EXAMPLES
REP	This is an instruction prefix. It	REP MOVSB STR1, STR2
	causes repetition of the following	The above example copies
	instruction till CX becomes zero.	byte by byte contents. The
	REP. It is not an instruction, but it	CX register is initialized to
·	is an instruction prefix that causes	contain the length of source
*	the CX register to be decremented.	string REP repeats the
	This prefix causes the string	operation MOVSB that
	instruction to be repeated, until CX	copies the source string byte
	becomes equal to zero.	to destination byte. This
		operation is repeated until
		the CX register becomes
		equal to zero.
REPE/REPZ	It repeats the instruction following	
	until CX =0 or ZF is not equal to	
,	one. REPE/REPZ may be used	
· .	with the compare string instruction	april 1
	or the scan string instruction.	· ·
	REPE causes the string instruction	
	to be repeated, till compared bytes	
	or words are equal, and CX is not	
	yet decremented to zero.	
REPNE/REPNZ	It repeats instruction following it	
	until CX =0 or ZF is equal to 1.	•
	This comparison here is just	
	inverse of REPE except for CX,	
	which is checked to be equal to	
	zero.	
MOVS/MOVSB/	It causes moving of byte or word	Assumes both data and extra
MOVSW	from one string to another. This	segment start at address 1000

	 instruction assumes that: Source string is in Data segment. Destination string is in extra data segment SI stores offset of source string in extra segment DI stores offset of destination string is in data segment CX contains the count of operation A single byte transfer requires; One byte transfer from source string to destination Increment of ! I and DI to next byte Decrement count register that is CX register 	in the memory. Source string starts at offset 20h and the destination string starts at offset 30h. Length of the source string is 10 bytes. To copy the source string to the destination string, proceed as follows: MOV AX,1000h MOV DS,AX; initialize data segment and MOV ES,AX; extra segment MOV SI,20h MOV DI,30h; load offset of start of; source string to SI; Load offset of start of; destination string to DI MOV CX,10; load length of string to CX; as counter REP MOVSB; Decrement CX and; MOVSB until; CX =0; after move SI will be one; greater than offset of last; byte in source string, DI; will be one greater than; offset of last destination; string. CX will be equal
CMPS/CMPSB/ CMPSW	It compares two string bytes or words. The source string and the destination strings should be present in data segment and the extra segment respectively. SI and DI are used as in the previous instruction. CX is used if more than one bytes or words are to be compared, however for such a case appropriate repeating prefix like REP, PEPE etc. need to be used.	; to zero. MOV CX,10 MOV SI,OFFSET SRC_STR ; offset of source ; string in SI MOV DI, OFFSET DES_STR ; offset of destination ; string in DI REPE CMPSB ; Repeat the comparison of ; string bytes until ; end of string or until ; compared bytes are not ; equal.
SCAS/SCASB/ SCASW	It scans a string. Compare a string byte with byte in AL or a string word with a word in AX. The instruction does not change the operands in AL (AX) or the operand in the string. The string to be scanned must be present in the extra segment, and the offset of the string must be contained in the DI register. You can use CX if operation is to be repeated using REP prefixes.	MOV AL, 0Dh; Byte to be scanned; for in AL MOV DI,OFFSET DES_STR MOV CX,10 REPNE SCAS DES_STR; Compare byte inDES_STR; with byte in AL register; Scanning is repeated while; the bytes are not equal and; it is not end of string. If a; carriage return 0Dh is; found, ZF = DI will point;

		at the next hate offer the
	}	at the next byte after the
		; carriage return. If a
		; carriage return is not
		; found then, $ZF = 0$ and
		; $CX = 0$. SCASB or
) .		; SCASW can be used to
·		; explicitly state whether
		; the byte comparison or the;
		word comparison is
	<u> </u>	; required.
LODS/LODSB/	It loads string byte into AL or a	MOV SI,OFFSET SRC_STR
LODSW	string word into AX. The string	LODS SRC_STR
	byte is assumed to be pointed to by	; LODSB or LODSW can
	SI register. After the load, the SI	; be used to indicate to the
Ì	pointer is automatically adjusted to	; assembler, explicitly,
	point to the next byte or word as	; whether it is the byte that
	the case may be. This instruction	; is required to be loaded or
	does not affect any flag.	; the word.
STOS/STOSB/	It stores byte from AL or word	MOVDI,OFFSET DES_STR
STOSW	from AX into the string present in	STOSB DES_STR
	the extra segment with offset given	[.]
	by DI. After the copy, DI is	
	automatically adjusted to point to	
	the next byte or word as per the	
	instruction. No flags are affected.	

1.5.6 Processor Control Instructions

The objectives of these instructions are to control the processor. This raises two questions:

How can you control processor, as this is the job of control unit? How much control of processor is actually allowed?

Well, 8086 only allows you to control certain control flags that causes the processing in a certain direction, processor synchronization if more than one processors are attached through LOCK instruction for buses etc.

Note: Please note that these instructions may not be very clear to you right now. Thus, some of these instructions have been discussed in more detail in later units. You must refer to further readings for more details on these instructions.

MNEMONIC	DESCRIPTION	EXAMPLE
STC	It sets carry flag to 1.	
CLC	It clears the carry flag to 0.	
СМС	It complements the state of the carry flag from 0 to 1 or 1 to 0 as the case may be.	CMC; Invert the carry flag
STD	It sets the direction flag to 1. The string instruction moves either forward (increment SI, DI) or backward (decrement SI, DI) based on this flag value. STD instruction does not affect any other flag. The set direction flag causes strings to move from right to left.	
CLD	This is opposite to STD, the string	CLD

	operation occurs in the reverse	; Clear the direction flag
	direction.	; so that the string pointers
		; auto-increment.
		MOV AX,1000h
}	1	MOV DS, AX
		; Initialize data segment
		; and extra segment
		MOV ES, AX
	1	MOV SI, 20h
	1	; Load offset of start of
}	1	; source string to SI
1]	MOV DI,30h
		; Load offset of start of
		; destination string to DI
(· 	l	MOV CX,10
	ł	; Load length of string to
}	1	; CX as counter
)	1	REP MOVSB
	•	; Decrement CX and
	{	; increment
	1	; SI and DI to point to next
{	}	; byte, then MOVSB until
1	<u></u>	_ ; CX = 0

There are many process control instructions other than these; you may please refer to further reading for such instructions. These instructions include instructions for setting and closing interrupt flag, halting the computer, LOCK (locking the bus), NOP etc.

1.6 ADDRESSING MODES

The basic set of operands in 8086 may reside in register, memory and immediate operand. How can these operands be accessed through various addressing modes? The answer to the question above is given in the following sub-section. Large number of addressing modes help in addressing complex data structures with ease. Some specific Terms and registers roles for addressing:

Base register (BX, BP): These registers are used for pointing to base of an array, stack etc.

Index register (SI, DI): These registers are used as index registers in data and/or extra segments.

Displacement: It represents offset from the segment address.

Addressing modes of 8086

Mode	Description	Example
Direct	Effective address is the displacement of memory variable.	
Register Indirect	Effective address is the contents of a register.	[BX] [SI] [DI] [BP]
Based	Effective address is the sum of a base register and a displacement.	LIST[BX] (OFFSET LIST + BX) [BP + 1]
Indexed	Effective address is the sum of an index register and a displacement.	LIST[SI] [LIST +DI] [DI + 2]
Based Indexed		[BX + SI]

31

	Effective address is the sum of a base and an index register.	[BX][DI] [BP + DI]
Based Indexed with displacement	of a base register, an index register, and a displacement.	[BX + SI + 2]

1.6.1 Register Addressing Mode

Operand can be a 16-bit register:

Addressing Mode	Description	Example
AX, BX, CX, DX, SI,	In general, the register	MOV AL,CH
DI,BP,IP,CS,DS,ES,SS	addressing mode is the most	MOV AX,CX
Or it may be AH, AL, BH, BL,	efficient because registers are	
CH, CL, DH, DL	within the CPU and do not	
	require memory access.	

1.6.2 Immediate Addressing Mode

An immediate operand can be a constant expression, such as a number, a character, or an arithmetic expression. The only constraint is that the assembler must be able to determine the value of an immediate operand at assembly time. The value is directly inserted into the machine instruction.

MOV AL,05

Mode	Description	Example
Immediate	Please note in the last	MOV AL,10
	examples the expression (2	MOV AL,'A'
	+ 3)/5, is evaluated at	MOV AX,'AB'
	assembly time.	MOV AX, 64000
		MOV AL, (2 + 3)/5

1.6.3 Direct Addressing Mode

A direct operand refers to the contents of memory at an address implied by the name of the variable.

Mode	Description	Example
DIRECT	The direct operands are also	MOV COUNT, CL
·	called as relocatable operands	; move CL to COUNT (a
	as they represent the offset of	; byte variable)
1	a label from the beginning of a	MOV AL,COUNT
[segment. On reloading a	; move COUNT to AL
<u>'</u>	program even in a different	JMP LABEL1
	segment will not cause change	; jump to LABEL1
{	in the offset that is why we	MOV AX,DS:5
	call them relocatable. Please	; segment register and
` ·	note that a variable is	; offset
,	considered in Data segment	MOV BX,CSEG:2Ch
\ ·	(DS) and code label in code	; segment name and offset
	segment (SS) by default. Thus,	MOV AX,ES:COUNT
	in the example, COUNT, by	; segment register and
		; variable.

	default will be assumed to be in data segment, while LABEL 1, will be assumed to be in code segment. If we specify, as a direct operand then the address is non-relocatable. Please note the value of segment register will be known only at the run time.	; The offsets of these ; variables are calculated ; with respect to the ; segment name (register) ; specified in the ; instruction.
--	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------

1.6.4 Indirect Addressing Mode

In indirect addressing modes, operands use registers to point to locations in memory. So it is actually a register indirect addressing mode. This is a useful mode for handling strings/ arrays etc. For this mode two types of registers are used. These are:

- Base register BX, BP
- Index register SI, DI

BX contain offset/ pointer in Data Segment BP contains offset/ pointer in Stack segment. SI contains offset/pointer in Data segment. DI contains offset/pointer in extra data segment.

There are five different types of indirect addressing modes:

- 1. Register indirect
- 2. Based indirect
- 3. Indexed indirect
- 4. Based indexed
- 5. Based indexed with displacement.

Mode	Description	Example
Register	Indirect operands are	MOV BX, OFFSET ARRAY
indirect	particularly powerful when	; point to start of array
	processing list of arrays,	MOV AL,[BX]
	because a base or an index	; get first element
	register may be modified at	INC BX
	runtime.	; point to next
	·	MOV DL,[BX]
		; get second element
		The brackets around BX signify
		that we are referring to the contents
		of memory location, using the
		address stored in BX.
		In the following example, three
		bytes in an array are added together:
		MOV SI,OFFSET ARRAY
	}	; address of first byte
		MOV AL,[SI]
	1	; move the first byte to AL
		INC SI
		; point to next byte
		ADD AL,[SI]
· •	•	; add second byte
		INC SI
		; point to the third byte
	#	ADD AL,[SI]
		; add the third byte

Assembly Language Programming

Dec 4 Te 1	T	
Based Indirect	Based and indirect addressing	; Register added to an offset
and Indexed	modes are used in the same	MOV DX, ARRAY[BX]
Indirect	manner. The contents of a	MOV DX,[DI + ARRAY]
}	register are added to a	MOV DX,[ARRAY + SI]
}	displacement to generate an	; Register added to a constant
	effective address. The register	MOV AX,[BP + 2]
	must be one of the following:	MOV DL,[DI – 2]; DI + (-2)
	SI, DI, BX or BP. If the	MOV DX,2[SI]
	registers used for	, , ,
	displacement are base	
	registers, BX or BP, it is said	
ļ	to be base addressing or else	
	it is called indexed	
	addressing. A displacement is	
	either a number or a labei	-
	whose offset is known at	
	assembly time. The notation	
	may take several equivalent	
	forms. If BX, SI or DI is	
	used, the effective address is	
•	usually an offset from the DS	
ĺ	register; BP on the other	
	hand, usually contains an	
	offset from the SS register.	
	oriset from the 35 register.	

Mode	Description	Example	
Based Indexed	In this type of ad lressing the operand's effective address is	MOV AL,[BP] [SI] MOV DX,[BX + SI]	
	formed by combining a base	ADD CX,[DI] [BX]	
	register with an index register.	; Two base registers or two ; index registers cannot be	
Ì	register with an index register.		
Ì		; combined, so the	
Ì		; following would be	
		; incorrect:	
	·	MOV DL,[BP + BX]	
		; error : two base registers	
		MOV AX,[SI + DI]	
		; error : two index registers	
Based Indexed with	The operand's effective	MOV DX,ARRAY[BX][SI]	
Displacement	address is formed by	MOV AX, [BX + SI +	
j	combining a base register, an	ARRAY] ADD DL,[BX + SI + 3]	
	index register, and a displacement.	SUB CX, ARRAY[BP +	
}	displacement.	SI)	
		Two base registers or two	
}		index registers cannot be	
		combined, so the	
	}	following would be	
		incorrect:	
	• .	MOV AX,[BP + BX + 2]	
		MOV DX,ARRAY[SI +	
		DI]	

Check Your Progress 3

State True or False. 1. CALL instruction should be followed by a RET instruction.

2.	Conditional jump instructions require one of the flags to be tested.
3.	REP is an instruction prefix that causes execution of an instruction until CX value become 0.
4.	In the instruction MOV BX, DX register addressing mode has been used.
5.	In the instruction MOV BX,ES:COUNTER the second operand is a direct operand.
б.	In the instruction ADD CX, [DI] [BX] the second operand is a based index operand, whose effective address is obtained by adding the contents of DI and B registers.
7.	The instruction ADD AX,ARRAY [BP + SI] is incorrect.
1.	7 SUMMARY
- a	summarize the features of 8086, we can say 8086 has: 16-bit data bus
	20-bit address bus
	PU is divided into Bus Interface Unit and Execution Unit
	byte instruction prefetch queue egmented memory
	general purpose registers (each of 16 bits)
	struction pointer and a stack pointer
	et of index registers
	owerful instruction set
- po	
- po	owerful addressing modes
- po - po - de	esigned for multiprocessor environment
- po - po - de	- · · · · · · · · · · · · · · · · · · ·
- po - po - do - av	esigned for multiprocessor environment
- po - do - av You	esigned for multiprocessor environment vailable in versions of 5Mhz and 8Mhz clock speed. u can refer to further readings for obtaining more details on INTEL and Motorolaties of microprocessors.
- po - po - do - av	esigned for multiprocessor environment vailable in versions of 5Mhz and 8Mhz clock speed. u can refer to further readings for obtaining more details on INTEL and Motorolates of microprocessors.
- po - do - av Your Series	esigned for multiprocessor environment variable in versions of 5Mhz and 8Mhz clock speed. u can refer to further readings for obtaining more details on INTEL and Motorolaties of microprocessors. 8 SOLUTIONS/ANSWERS
- po - do - av Your Series	esigned for multiprocessor environment vailable in versions of 5Mhz and 8Mhz clock speed. u can refer to further readings for obtaining more details on INTEL and Motorolaties of microprocessors.

- 1. It improves execution efficiency by storing the next instruction in the register queue.
- 2. a) $0100 \times 10h$ (-16 in decimal) + 0020h = 01000h + 0020h = 01020h
 - b) 0200h × 10h + 0100h = 02000h + 0100h = 02100h
 - c) $4200h \times 10h + 0123$

Microprocessor Architecture

- =42000h+0123h
- = 42123h
- 3. a) False b) True c) True d) False

Check Your Progress 2

- 1. (a) PUSHF instructions do not take any operand.
 - (b) No error.
 - (c) XCHG instruction cannot have two memory operands
 - (d) AAA instruction performs ASCII adjust after addition. It is used after an ASCII Add. It does not have any operands.
 - (e) IDIV assumes one operand in AX so only second operand is needed to be specified.
- 2. (a) False
 - (b) False
 - (c) True
 - (d) False
 - (e) False

Check Your Progress 3

- 1. False
- 2. True
- 3. True
- 4. True
- 5. True
- 6. True
- 7. False

UNIT 2 INTRODUCTION TO ASSEMBLY LANGUAGE PROGRAMMING

Struc	ture	Page No.
2.0	Introduction	['] 35 ,
2.1	Objectives	35
2.2	The Need and Use of the Assembly Language	35
2.3	Assembly Program Execution	36
2.4	An Assembly Program and its Components	41
	2.4.1 The Program Annotation	
	2.4.2 Directives	
2.5	Input Output in Assembly Frogram	45
	2.5.1 Interrupts	
	2.5.2 DOS Function Calls (Using INT 21H)	
2.6	The Types of Assembly Programs	51
	2.6.1 COM Programs	•
	2.6.2 EXE Programs	
2.7	How to Write Good Assembly Programs	53
2.8	Summary	- 55
2.9	Solutions/Answers	56
2.10	Further Readings	56

2.0 INTRODUCTION

In the previous unit, we have discussed the 8086 microprocessor. We have discussed the register set, instruction set and addressing modes for this microprocessor. In this and two later units we will discuss the assembly language for 8086/8088 microprocessor. Unit 1 is the basic building block, which will help in better understanding of the assembly language. In this unit, we will discuss the importance of assembly language, basic components of an assembly program followed by discussions on the program developmental tools available. We will then discuss what are COM programs and EXE programs. Finally we will present a complete example. For all our discussions, we have used Microsoft Assembler (MASM). However, for different assemblers the assembly language directives may change. Therefore, before running an assembly program you must consult the reference manuals of the assembler you are using.

2.1 OBJECTIVES

After going through this unit you should be able to:

- define the need and importance of an assembly program;
- define the various directives used in assembly program;
- write a very simple assembly program with simple input output services;
- define COM and EXE programs; and
- differentiate between COM and EXE programs.

2.2 THE NEED AND USE OF THE ASSEMBLY LANGUAGE

Machine language code consists of the 0-1 combinations that the computer decodes directly. However, the machine language has the following problems:

Assembly Language Programming

- It greatly depends on machine and is difficult for most people to write in 0-1 forms.
- DEBUGGING is difficult.
- Deciphering the machine code is very difficult. Thus program logic will be difficult to understand.

To overcome these difficulties computer manufacturers have devised English-like words to represent the binary instruction of a machine. This symbolic code for each instruction is called a mnemonic. The mnemonic for a particular instruction consists of letters that suggest the operation to be performed by that instruction. For example, ADD mnemonic is used for adding two numbers. Using these mnemonics machine language instructions can be written in symbolic form with each machine instruction represented by one equivalent symbolic instruction. This is called an assembly language.

Pros and Cons of Assembly Language

The following are some of the advantages / disadvantages of using assembly language:

- Assembly Language provides more control over handling particular hardware and software, as it allows you to study the instructions set, addressing modes, interrupts etc.
- Assembly Programming generates smaller, more compact executable modules: as
 the programs are closer to machine, you may be able to write highly optimised
 programs. This results in faster execution of programs.

Assembly language programs are at least 30% denser than the same programs written in high-level language. The reason for this is that as of today the compilers produce a long list of code for every instruction as compared to assembly language, which produces single line of code for a single instruction. This will be true especially in case of string related programs.

On the other hand assembly language is machine dependent. Each microprocessor has its own set of instructions. Thus, assembly programs are not portable.

Assembly language has very few restrictions or rules; nearly everything is left to the discretion of the programmer. This gives lots of freedom to programmers in construction of their system.

Uses of Assembly Language

Assembly language is used primarily for writing short, specific, efficient interfacing modules/ subroutines. The basic idea of using assembly is to support the HLL with some highly efficient but non-portable routines. It will be worth mentioning here that UNIX mostly is written in C but has about 5-10% machine dependent assembly code. Similarly in telecommunication application assembly routine exists for enhancing efficiency.

2.3 ASSEMBLY PROGRAM EXECUTION

An assembly program is written according to a strict set of rules. An editor or word processor is used for keying an assembly program into the computer as a file, and then the assembler is used to translate the program into machine code.

There are 2 ways of converting an assembly language program into machine language:

- 1) Manual assembly
- By using an assembler.


Manual Assembly

It was an old method that required the programmer to translate each opcode into its numerical machine language representation by looking up a table of the microprocessor instructions set, which contains both assembly and machine language instructions. Manual assembly is acceptable for short programs but becomes very inconvenient for large programs. The Intel SDK-85 and most of the earlier university kits were programmed using manual assembly.

Using an Assembler

The symbolic instructions that you code in assembly language is known as - Source program.

An assembler program translates the source program into machine code, which is known as object program.

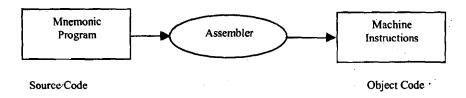

The steps required to assemble, link and execute a program are:

Step 1: The assembly step involves translating the source code into object code and generating an intermediate .OBJ (object file) or module.

The assembler also creates a header immediately in front of the generated .OBJ module; part of the header contains information about incomplete addresses. The .OBJ module is not quite in executable form.

Step 2: The link step involves converting the .OBJ module to an .EXE machine code module. The linker's tasks include completing any address left open by the assembler and combining separately assembled programs into one executable module.

The linker:

- combines assembled module into one executable program
- generates an .EXE module and initializes with special instructions to facilitate its subsequent loading for execution.
- Step 3: The last step is to load the program for execution. Because the loader knows where the program is going to load in memory, it is now able to resolve any remaining address still left incomplete in the header. The loader drops the header and creates a program segment prefix (PSP) immediately before the program is loaded in memory.

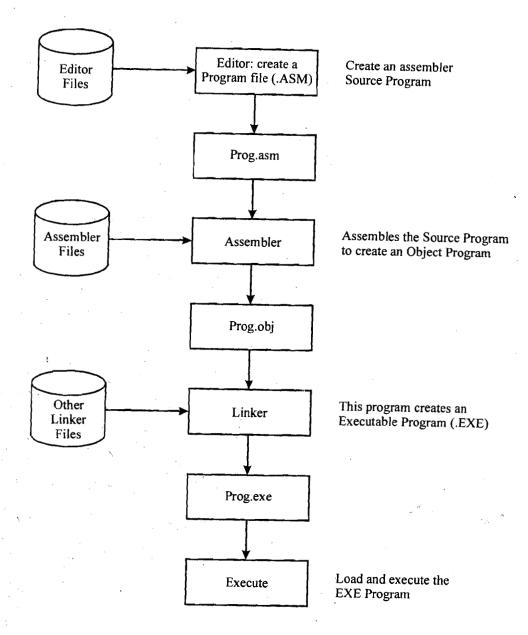


Figure 2: Program Assembly

All this conversion and execution of Assembly language performed by Two-pass assembler.

Two-pass assembler: Assemblers typically make two or more passes through a source program in order to resolve forward references in a program. A forward reference is defined as a type of instruction in the code segment that is referencing the label of an instruction, but the assembler has not yet encountered the definition of that instruction.

Pass 1: Assembler reads the entire source program and constructs a symbol table of names and labels used in the program, that is, name of data fields and programs labels and their relative location (offset) within the segment.

Pass 1 determines the amount of code to be generated for each instruction.

Pass 2: The assembler uses the symbol table that it constructed in Pass 1. Now it knows the length and relative position of each data field and instruction, it can complete the object code for each instruction. It produces .OBJ (Object file), .LST (list file) and cross reference (.CRF) files.

Tools required for assembly language programming

The tools of the assembly process described below may vary in details.

Editor

The editor is a program that allows the user to enter, modify, and store a group of instructions or text under a file name. The editor programs can be classified in 2 groups.

- Line editors
- Full screen editors.

Line editors, such as EDIT in MS DOS, work with the manage one line at a time. Full screen editors, such as Notepad, Wordpad etc. manage the full screen or a paragraph at a time. To write text, the user must call the editor under the control of the operating system. As soon as the editor program is transferred from the disk to the system memory, the program control is transferred from the operating system to the editor program. The editor has its own command and the user can enter and modify text by using those commands. Some editor programs such as WordPerfect are very easy to use. At the completion of writing a program, the exit command of the editor program will save the program on the disk under the file name and will transfer the control to the operating system. If the source file is intended to be a program in the 8086 assembly language the user should follow the syntax of the assembly language and the rules of the assembler.

Assembler

An assembly program is used to transfer assembly language mnemonics to the binary code for each instruction, after the complete program has been written, with the help of an editor it is then assembled with the help of an assembler.

An assembler works in 2 phases, i.e., it reads your source code two times. In the first pass the assembler collects all the symbols defined in the program, along with their offsets in symbol table. On the second pass through the source program, it produces binary code for each instruction of the program, and give all the symbols an offset with respect to the segment from the symbol table.

The assembler generates three files. The object file, the list file and cross reference file. The object file contains the binary code for each instruction in the program. It is created only when your program has been successfully assembled with no errors. The errors that are detected by the assembler are called the symbol errors. For example,

MOVE AX1, ZX1;

In the statement, it reads the word MOVE, it tries to match with the mnemonic sets, as there is no mnemonic with this spelling, it assumes it to be an identifier and looks for its entry in the symbol table. It does not even find it there therefore gives an error as undeclared identifier.

List file is optional and contains the source code, the binary equivalent of each instruction, and the offsets of the symbols in the program. This file is for purely

Assembly Language Programming documentation purposes. Some of the assemblers available on PC are MASM, TURBO etc.

Linker

For modularity of your programs, it is better to break your program into several sub routines. It is even better to put the common routine, like reading a hexadecimal number, writing hexadecimal number, etc., which could be used by a lot of your other programs into a separate file. These files are assembled separately. After each file has been successfully assembled, they can be linked together to form a large file, which constitutes your complete program. The file containing the common routines can be linked to your other program also. The program that links your program is called the linker.

The linker produces a link file, which contains the binary code for all compound modules. The linker also produces link maps, which contains the address information about the linked files. The linker however does not assign absolute addresses to your program. It only assigns continuous relative addresses to all the modules linked starting from the zero. This form a program is said to be relocatable because it can be put anywhere in memory to be run.

Loader

Loader is a program which assigns absolute addresses to the program. These addresses are generated by adding the address from where the program is loaded into the memory to all the offsets. Loader comes into action when you want to execute your program. This program is brought from the secondary memory like disk. The file name extension for loading is .exe or .com, which after loading can be executed by the CPU.

Debugger

The debugger is a program that allows the user to test and debug the object file. The user can employ this program to perform the following functions.

- Make changes in the object code.
- Examine and modify the contents of memory.
- Set breakpoints, execute a segment of the program and display register contents after the execution.
- Trace the execution of the specified segment of the program and display the register and memory contents after the execution of each instruction.
- Disassemble a section of the program, i.e., convert the object code into the source code or mnemonics.

In summary, to run an assembly program you may require your computer:

- A word processor like notepad
- MASM, TASM or Emulator
- LINK.EXE, it may be included in the assembler
- DEBUG.COM for debugging if the need so be.

Errors

Two possible kinds of errors can occur in assembly programs:

- a. Programming errors: They are the familiar errors you can encounter in the course of executing a program written in any language.
- b. System errors: These are unique to assembly language that permit low-level operations. A system error is one that corrupts or destroys the system under which the program is running In assembly language there is no supervising

2.4 AN ASSEMBLY PROGRAM AND ITS COMPONENTS

Sample Program

In this program we just display:

Line	Offset		
Numbe	rs	S	ource Code ————
0001		DATA SEGME	ENT
0002	0000	MESSA	AGE DB "HAVE A NICE DAY!\$"
0003		DATA ENDS	
0004		STACK SEGM	ENT
0005		STACE	C 0400H
0006		STACK ENDS	
0007		CODE SEGME	NT
0008		ASSUN	ME CS: CODE, DS: DATA SS: STACK
0009	Offset	Machine Code	
.0010	0000	B8XXXX	MOV AX, DATA
0011	0003	8ED8	MOV DS, AX
0012	0005	BAXXXX	MOV DX, OFFSET MESSAGE
0013	8000	B409	MOV AH, 09H
0014	000A	CD21	INT 21H
0015	000C	B8004C	MOV AX, 4C00H
0016	000F	CD21	INT 21H
0017		*	CODE ENDS
0018			END

The details of this program are:

2.4.1 The Program Annotation

The program annotation consists of 3 columns of data: line numbers, offset and machine code.

- The assembler assigns line numbers to the statements in the source file sequentially. If the assembler issues an error message, the message will contain a reference to one of these line numbers.
- The second column from the left contains offsets. Each offset indicates the
 address of an instruction or a datum as an offset from the base of its logical
 segment, e.g., the statement at line 0010 produces machine language at offset
 0000H of the CODE SEGMENT and the statement at line number 0002 produces
 machine language at offset 0000H of the DATA SEGMENT.
- The third column in the annotation displays the machine language produce by code instruction in the program.

Segment numbers: There is a good reason for not leaving the determination of segment numbers up to the assembler. It allows programs written in 8086 assembly language to be almost entirely relocatable. They can be loaded practically anywhere in memory and run just as well. Program1 has to store the message "Have a nice day\$" somewhere in memory. It is located in the DATA SEGMENT. Since the

characters are stored in ASCII, therefore it will occupy 15 bytes (please note each blank is also a character) in the DATA SEGMENT.

Missing offset: The xxxx in the machine language for the instruction at line 0010 is there because the assembler does not know the DATA segment location that will be determined at loading time. The loader must supply that value.

Program Source Code

Each assembly language statement appears as:

{identifier} Keyword {{parameter},} {;comment}.

The element of a statement must appear in the appropriate order, but significance is attached to the column in which an element begins. Each statement must end with a carriage return, a line feed.

Keyword: A keyword is a statement that defines the nature of that statement. If the statement is a directive then the keyword will be the title of that directive; if the statement is a data-allocation statement the keyword will be a data definition type. Some examples of the keywords are: SEGMENT (directive), MOV (statement) etc.

Identifiers: An identifier is a name that you apply to an item in your program that you expect to reference. The two types of identifiers are name and label.

- 1. Name refers to the address of a data item such as counter, arr etc.
- 2. Label refers to the address of our instruction, process or segment. For example MAIN is the label for a process as:

MAIN PROC FAR
A20: BL,45; defines a label A20.

Identifier can use alphabet, digit or special character but it always starts with an alphabet.

Parameters: A parameter extends and refines the meaning that the assembler attributes to the keyword in a statement. The number of parameters is dependent on the Statement.

Comments: A comment is a string of a text that serves only as internal document action for a program. A semicolon identifies all subsequent text in a statement as a comment.

2.4.2 Directives

Assembly languages support a number of statements. This enables you to control the way in which a source program assembles and list. These statements, called directives, act only when the assembly is in progress and generate no machine-executable code. Let us discuss some common directives.

- 1. List: A list directive causes the assembler to produce an annotated listing on the printer, the video screen, a disk drive or some combination of the three. An annotated listing shows the text of the assembly language programs, numbers of each statement in the program and the offset associated with each instruction and each datum. The advantage of list directive is that it produces much more informative output.
- HEX: The HEX directive facilitates the coding of hexadecimal values in the body of the program. That statement directs the assembler to treat tokens in the

source file that begins with a dollar sign as numeric constants in hexadecimal notation.

3. **PROC Directive:** The code segment contains the executable code for a program, which consists of one or more procedures defined initially with the PROC directive and ended with the ENDP directive.

Procedure-name PROC FAR ; Beginning of Procedure

Procedure-name ENDP FAR; End Procedure

- 4. **END DIRECTIVE:** ENDS directive ends a segment, ENDP directive ends a procedure and END directive ends the entire program that appears as the last statement.
- 5. **ASSUME Directive:** An .EXE program uses the SS register to address the base of stack, DS to address the base of data segment, CS to address base of the code segment and ES register to address the base of Extra segment. This directive tells the assembler to correlate segment register with a segment name. For example,

ASSUME SS: stack_seg_name, DS: data_seg_name, CS: code_seg_name.

6. **SEGMENT Directive:** The segment directive defines the logical segment to which subsequent instructions or data allocations statement belong. It also gives a segment name to the base of that segment.

The address of every element in a 8086 assembly program must be represented in segment - relative format. That means that every address must be expressed in terms of a segment register and an offset from the base of the segmented addressed by that register. By defining the base of a logical segment, a segment directive makes it possible to set a segment register to address that base and also makes it possible to calculate the offset of each element in that segment from a common base.

An 8086 assembly language program consists of logical segments that can be a code segment, a stack segment, a data segment, and an extra segment.

A segment directive indicates to assemble all statements following it in a single source file until an ENDS directive.

CODE SEGMENT

The logical program segment is named code segment. When the linker links a program it makes a note in the header section of the program's executable file describing the location of the code segment when the DOS invokes the loader to load an executable file into memory, the loader reads that note. As it loads the program into memory, the loader also makes notes to itself of exactly where in memory it actually places each of the program's other logical segments. As the loader hands execution over to the program it has just loaded, it sets the CS register to address the base of the segment identified by the linker as the code segment. This renders every instruction in the code segment addressable in segment relative terms in the form CS: xxxxx.

The linker also assumes by default that the first instruction in the code segment is intended to be the first instruction to be executed. That instruction will appear in memory at an offset of 0000H from the base of the code segment, so the linker passes that value on to the loader by leaving an another note in the header of the program's executable file.

The loader sets the IP (Instruction Pointer) register to that value. This sets CS:IP to the segment relative address of the first instruction in the program.

STACK SEGMENT

8086 Microprocessor supports the Word stack. The stack segment parameters tell the assembler to alert the linker that this segment statement defines the program stack area.

A program must have a stack area in that the computer is continuously carrying on several background operations that are completely transparent, even to an assembly language programmer, for example, a real time clock. Every 55 milliseconds the real time clock interrupts. Every 55 ms the CPU is interrupted. The CPU records the state of its registers and then goes about updating the system clock. When it finishes servicing the system clock, it has to restore the registers and go back to doing whatever it was doing when the interruption occurred. All such information gets recorded in the stack. If your program has no stack and if the real time clock were to pulse while the CPU is running your program, there would be no way for the CPU to find the way back to your program when it was through updating the clock. 0400H byte is the default size of allocation of stack. Please note if you have not specified the stack segment it is automatically created.

DATA SEGMENT

It contains the data allocation statements for a program. This segment is very useful as it shows the data organization.

Defining Types of Data

The following format is used for defining data definition:

Format for data definition:

{Name} <Directive> <expression>

Name - a program references the data item through the name although it is

optional.

Directive: Specifying the data type of assembly. Expression: Represent a value or evaluated to value.

The list of directives are given below:

Directive	Description	Number of Bytes
DB	Define byte	1
DW .	Define word	2
DD	Define double	word 4
DQ	Define Quad v	vord 8
DT	Define 10 byte	es , 10 -

DUP Directive is used to duplicate the basic data definition to 'n' number of times

ARRAY DB 10 DUP (0)

In the above statement ARRAY is the name of the data item, which is of byte type (DB). This array contains 10 duplicate zero values; that is 10 zero values.

20

EQU directive is used to define a name to a constant

CONST EQU

Introduction to Assembly Language **Programming**

Type of number used in data statements can be octal, binary, haxadecimal, decimal and ASCII. The above statement defines a name CONST to a value 20. Some other examples of using these directives are: TEMP DB 0111001B ; Binary value in byte operand ; named temp VALI DW 7341O ; Octal value assigned to word ; variable 49 Decimal value 49 contained in Decimal DB byte variable DW ; Hex decimal value in word HEX 03B2AH ; operand ASCII DB EXAMPLE, ; ASCII array of values, Check Your Progress 1 Why should we learn assembly language?itte What is a segment? Write all four main segment names. State True or False. T F (a) The directive DT defines a quadword in the memory (b) DUP directive is used to indicate if a same memory location is used by two different variables name. (c) EQU directive assign a name to a constant value. (d) The maximum number of active segments at a time in 8086 can be four. (e) ASSUME directive specifies the physical address for the data values of instruction. (f) A statement after the END directive is ignored by the assembler. INPUT OUTPUT IN ASSEMBLY PROGRAM A software interrupt is a call to an Interrupt servicing program located in the operating

2.5

system. Usually the input-output routine in 8086 is constructed using these interrupts.

2.5.1 Interrupts

1.

An interrupt causes interruption of an ongoing program. Some of the common interrupts are: keyboard, printer, monitor, an error condition, trap etc.

8086 recognizes two kinds of interrupts: Hardware interrupts and Software interrupts.

Hardware interrupts are generated when a peripheral Interrupt servicing program requests for some service. A software interrupt causes a call to the operating system. It usually is the **input-output** routine.

Let us discuss the software interrupts in more detail. A software interrupt is initiated using the following statements:

INT number

In 8086, this interrupt instruction is processing using the **interrupt vector table** (IVT). The IVT is located in the first 1K bytes of memory, and has a total of 256 entities, each of 4 bytes. An entry in the interrupt vector table is identified by the number given in the interrupt instruction. The entry stores the address of the operating system subroutine that is used to process the interrupt. This address may be different for different machines. Figure 1 shows the processing of an interrupt.

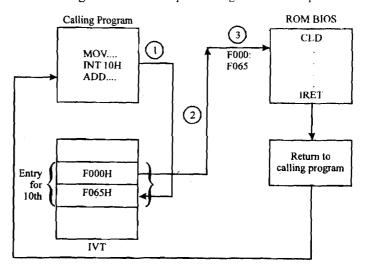


Figure 1: Processing of an Interrupt

The interrupt is processed as:

- Step 1: The number field in INT instruction is multiplied by 4 to find its entry in the interrupt vector table. For example, the IVT entry for instruction INT 10h will be found at IVT at an address 40h. Similarly the entry of INT 3h will be placed at 0Ch.
- Step 2: The CPU locates the interrupt servicing routine (ISR) whose address is stored at IVT entry of the interrupt. For example, in the figure above the ISR of INT 10h is stored at location at a segment address F000h and an offset F065h.
- Step 3: The CPU loads the CS register and the IP register, with this new address in the IVT, and transfers the control to that address, just like a far CALL, (discussed in the unit 4).
- Step 4: IRET (interrupt return) causes the program to resume execution at the next instruction in the calling program.

Keyboard Input and Video output

A Keystroke read from the keyboard is called a console input and a character displayed on the video screen is called a console output. In assembly language, reading and displaying character is most tedious to program. However, these tasks were greatly simplified by the convenient architecture of the 8086/8088. That

architecture provides for a pack of software interrupt vectors beginning at address 0000:0000.

The advantage of this type of call is that it appears static to a programmer but flexible to a system design engineer. For example, INT 00H is a special system level vector that points to the "recovery from division by zero" subroutine. If new designer come and want to move interrupt location in memory, it adjusts the entry in the IVT vector of interrupt 00H to a new location. Thus from the system programmer point of view, it is relatively easy to change the vectors under program control.

One of the most commonly used Interrupts for Input /Output is called DOS function call. Let us discuss more about it in the next subsection:

2.5.2 DOS Function Calls (Using INT 21H)

INT 21H supports about 100 different functions. A function is identified by putting the function number in the AH register. For example, if we want to call function number 01, then we place this value in AH register first by using MOV instruction and then call INT 21H:

Some important DOS function calls are:

DOS	Purpose	Example
Function Call	2 to pose	
AH = 01H	For reading a single character from keyboard and echo it on monitor. The input value is put in AL register.	To get one character input in a variable in data segment you may include the following in the code segment: MOV AH,01 INT 21H MOV X, AL (Please note that interrupt call will return value in AL which is being transferred to variable of data segment X. X must be byte type).
AH = 02H	This function prints 8 bit data (normally ASCII) that is stored in DL register on the screen.	To print a character let say '?' on the screen we may have to use following set of commands: MOV AH, 02H; MOV DL, '?' INT 21H
AH = 08H	This is an input function for inputting one character. This is same as AH = 01H functions with the only difference that value does not get displayed on the screen.	Same example as 01 can be used only difference in this case would be that the input character wouldn't get displayed MOV AH, 08H INT 21H MOV X, AL
AH = 09H	This program outputs a string whose offset is stored in DX register and that is terminated using a \$ character, One can print newline, tab character also.	To print a string "hello world" followed by a carriage return (control character) we may have to use the following assembly program segment.

Example of	CR EQU ODH			
AH = 09H				
AII - 09II	; ASCII code of carriage ret	urn.		
,	DATA SEGMENT	}		
	STRING DB 'HELLO WO	RLD', CR, '\$'		
	DATA ENDS			
	CODE SEGMENT			
	:			
	MOV AX, DATA			
	MOV DS, AX			
	MOV AH, 09H			
	MOV DX, OFFSET STRING			
	; Store the offset of string in DX register.			
	INT 21H	,		
AH = 0AH	For input of string up to	Look in the examples given.		
	255 characters. The string	1 - 8		
	is stored in a buffer.	}		
A IX ACXI		<u> </u>		
AH = 4CH	Return to DOS			

Some examples of Input

(i) Input a single ASCII character into BL register without echo on screen

CODE SEGMENT

MOV AH, 08H; Function 08H

INT 21H; The character input in AL is

MOV BL, AL; transfer to BL

CODE ENDS

(ii) Input a Single Digit for example (0,1, 2, 3, 4, 5, 6, 7, 8, 9)

CODE SEGMENT

Read a single digit in BL register with echo. No error check in the Program MOV AH, 01H

; Assuming that the value entered is digit, then its ASCII will be stored in AL.

Suppose the key pressed is 1 then ASCII '31' is stored in the AL. To get the

; digit 1 in AL subtract the ASCII value '0' from the AL register.

; Here it store 0 as ASCII 30,

; 1 as 31, 2 as 32......9 as 39

; to store 1 in memory subtract 30 to get 31 - 30 = 1

MOV BL, AL

SUB BL, '0'; '0' is digit 0 ASCII

; OR

SUB BL, 30H

; Now BL contain the single digit 0 to 9

; The only code missing here is to check whether the input is in the specific

; range.

CODE ENDS.

(iii) Input numbers like (10, 11......99)

; If we want to store 39, it is actually 30 + 9

; and it is $3 \times 10 + 9$

; to input this value through keyboard, first we input the tenth digit e.g., 3 and

Introduction to Assembly Language Programming

```
; then type 9
              MOV
                     AH, 08H
              INT
                      21H
              MOV BL, AL; If we have input 39 then, BL will first have character
     ; 3, we can convert it to 3 using previous logic that is 33 - 30 - 3.
              SUB
                      BL, '0'
                                    ; To get 30 Multiply it by 10.
              MUL
                     BL, AH
                                    ; Now BL Store 30
                                    ; Input another digit from keyboard
              MOV
                      AH, 08H
              INT
                      21H;
                                    ; Store AL in DL
              MOV
                     DL, AL
                                    (39-30)=9.
              SUB
                      DL, '0'
     ; Now BL contains the value: 30 and DL has the value 9 add them and get the
     ; required numbers.
              ADD
                     BL, DL
     ; Now BL store 39. We have 2 digit value in BL.
     Let us try to summarize these segments as:
     CODE SEGMENT
     ; Set DS register
       MOV AX, DATA
                            boiler plate code to set the DS register so that the
                              program can access the data segment.
       MOV DS, AX
     ; read first digit from keyboard
                       AH, 08
               MOV
              INT
                       21H
              MOV
                       BL, AL
                       BL, '0'
              SUB
              MUL
                       BL, 10H
     ; read second digit from keyboard
              MOV
                       AH, 08H
              INT
                       21H
              MOV
                       DL, AL
              SUB
                       DL, '0'
     DL = 9 \text{ AND BL} = 30
              SUM
                       BL, DL
     ; now BL store 39
     CODE ENDS.
Note: Boilerplate code is the code that is present more or less in the same form in
every assembly language program.
Strings Imput
CODE SEGMENT
       MOV AH, 0AH; Move 04 to AH register
                             ; BUFF must be defined in data segment.
       MOV DX, BUFF
       INT 21H
CODE ENDS
DATA SEGMENT
       BUFF DB
                      50
                             ; max length of string,
                             ; including CR, 50 characters
                             ; actual length of string not known at present
               DB
              DB 50 DUP(0); buffer having 0 values
```

DATA ENDS.

Explanation

The above DATA segment creates an input buffer BUFF of maximum 50 characters. On input of data 'JAIN' followed by enter data would be stored as:



Examples of Display on Video Monitor

(1) Displaying a single character

; display contents of BL register (assume that it has a single character) MOV AH, 02H MOV DL, BL.

INT 21 H.

Here data from BL is moved to DL and then data display on monitor function is called which displays the contents of DL register.

(2) Displaying a single digit (0 to 9)

Assume that a value 5 is stored in BL register, then to output BL as ASCII value add character '0' to it

ADD BL, '0' MOV AH, 02H MOV DL, BL INT 21H

(3) Displaying a number (10 to 99)

Assuming that the two digit number 59 is stored as number 5 in BH and number 9 in BL₄ to convert them to equivalent ASCII we will add '0' to each of them.

ADD BH, '0'
ADD BL, '0'
MOV AH, 02H
MOV DL, BH
INT 21H
MOV DL, BL
INT 21H

(4) Displaying a string

MOV AH, 09H MOV DX, OFFSET BUFF INT 21H

Here data in input buffer stored in data segment is going to be displayed on the monitor.

A complete program:

Input a letter from keyboard and respond. "The letter you typed is ____".

Introduction to Assembly Language Programming

CODE SEGMENT

set the DS register

MOV AX, DATA MOV DS, AX

Read Keyboard

MOV AH, 08H

INT 21H

Save input

MOV BL, AL

Display first part of Message

MOV AH, 09H

MOV DX, OFFSET MESSAGE

INT 21 H

Display character of BL register

MOV AH, 02H . MOV DL, BL

INT 21 H

Exit to DOS

MOV AX, 4C00H

INT 21H

CODE ENDS

DATA SEGMENT

MESSAGE DB "The letter you typed is \$"

DATA ENDS

END.

2.6 THE TYPES OF ASSEMBLY PROGRAMS

Assembly language programs can be written in two ways:

COM Program; Having all the segments as part of one segment

EXE Program; which have more than one segment.

Let us look into brief details of these programs.

2.6.1 COM Programs

A COM (Command) program is the binary image of a machine language program. It is loaded in the memory at the lowest available segment address. The program code begins at an offset 100h, the first 1K locations being occupied by the IVT.

A COM program keeps its code, data, and stack segments within the same segment. Since the offsets in a physical segment can be of 16 bits, therefore the size of COM program is limited to 2¹⁶ = 64K which includes code, data and stack. The following program shows a COM program:

; Title add two numbers and store the result and carry in memory variables.

; name of the segment in this program is chosen to be CSEG

CSEG SEGMENT

ASSUME CS:CSEG, DS:CSEG, SS:CSEG

ORG 100h

START:MOV AX, CSEG

; Initialise data segment

MOV DS, AX

: register using AX

MOV AL, NUM1

; Take the first number in AL

Assembly	Language
Programo	ning

: Add the 2nd number to it ADD AL, NUM2 MOV RESULT, AL : Store the result in location RESULT RCL AL, 01 ; Rotate carry into LSB AND AL, 00000001B ; Mask out all but LSB MOV CARRY, AL ; Store the carry result MOV AX,4C00h INT 21h NUM1 DB 15h ; First number stored here NUM2 DB 20h : Second number stored here **RESULT DB** ? ; Put sum here ? **CARRY DB** ; Put any carry here CSEG ENDS

END START

These programs are stored on a disk with an extension .com, A COM program requires less space on disk rather than equivalent EXE program. At run-time the COM program places the stack automatically at the end of the segment, so they use at least one complete segment.

2.6.2 EXE Programs

An EXE program is stored on disk with extension .exc. EXE programs are longer than the COM programs, as each EXE program is associated with an EXE header of 256 bytes followed by a load module containing the program itself. The EXE header contains information for the operating system to calculate the addresses of segments and other components. We will not go into such details in this unit.

The load module of EXE program consists of up to 64K segments, although at the most only four segments may be active at any time. The segments may be of variable size, with maximum size being 64K.

We will write only EXE programs for the following reasons:

- EXE programs are better suited for debugging.
- EXE-format assembler programs are more easily converted into subroutines for high-level languages.
- EXE programs are more easily relocatable. Because, there is no ORG statement, forcing the program to be loaded from a specific address.
- To fully use multitasking operating system, programs must be able to share computer memory and resources. An EXE program is easily able to do this.

An example of equivalent EXE program for the COM program is:

; ABSTRACT		this program adds 2 8-bit numbers in the memory locations		
· •		NUM	l and NUM2. The result is stored in the	
;		memo	ry location RESULT. If there was a carry	
•		from t	he addition it will be stored as 0000 0001 in	
•		the location CARRY		
; REGISTERS		Uses CS, DS, AX		
DATA SEGME	ENT		:	
NUM1	DB	15h	; First number	
NUM2	DB	20h	: Second number	

RESULT DB

?

: Put sum here

CARRY DB

; Put any carry here

DATA ENDS

CODE SEGMENT

ASSUME CS:CODE, DS:DATA

START:MOV AX, DATA

; Initialise data segment

MOV DS, AX

; register using AX

MOV AL, NUM1

; Bring the first number in AL

ADD AL, NUM2

; Add the 2nd number to AL

MOV RESULT, AL

: Store the result

RCL AL, 01

; Rotate carry into Least Significant Bit (LSB)

AND AL, 00000001B

; Mask out all but LSB

MOV CARRY, AL

; Store the carry

MOV AX, 4C00h

; Terminate to DOS

INT 21h

CODE ENDS

END START

2.7 HOW TO WRITE GOOD ASSEMBLY PROGRAMS

Now that we have seen all the details of assembly language programming, let us discuss the art of writing assembly programs in brief.

Preparation of writing the program

1. Write an algorithm for your program closer to assembly language. For example, the algorithm for preceding program would be:

get NUM1

add NUM2

put sum into memory at RESULT position carry bit in LSB of byte

mask off upper seven bits store the result in the CARRY location.

2. Specify the input and output required.

input required

- two 8-bit numbers

output required

- an 8-bit result and a 8-bit carry in memory.

3. Study the instruction set carefully. This step helps in specifying the available instructions and their format and constraints. For example, the segment registers cannot be directly initialized by a memory variable. Instead we have to first move the offset for segment into a register, and then move the contents of register to the segment register.

You can exit to DOS, by using interrupt routine 21h, with function 4Ch, placed in AH register.

It is a nice practice to first code your program on paper, and use comments liberally. This makes programming easier, and also helps you understand your program later. Please note that the number of comments do not affect the size of the program.


After the program development, you may assemble it using an assembler and correct it for errors, finally creating exe file for execution.

Check Your Progress 2

State	True or False	TF
1.	For input/output on Intel 8086/8088 machine running on DOS require special routines to be written by the assembly programmers.	
2.	Intel 8086 processor recognises only the software interrupts.	Experience Services
3.	INT instruction in effect calls a subroutine, which is identified by a number.	,
4.	Interrupt vector table IVT stores the interrupt handling programs.	
5 .	INT 21H is a DOS function call.	
6.	INT 21H will output a character on the monitor if AH register contains 02.	\$ \$ - \(\sigma_{\text{a}} \)
7.	String input and output can be achieved using INT 21H with function number 09h and 0Ah respectively.	
8.	To perform final exit to DOS we must use function 4CH with the INT 21H.	
9.	Notepad is an editor package.	
10.	Linking is required to link several segments of a single assembly program.	` 🗀
11.	Debugger helps in removing the syntax errors of a program.	
12.	COM program is loaded at the 0th location in the memory.	log ·
13.	The size of COM program should not exceed 64K.	
14.	A COM program is longer than an EXE program.	F () () () () () ()
15.	STACK of a COM program is kept at the end of the occupied segment by the program.	:
16.	EXE program contains a header module, which is used by DOS for calculating segment addresses.	
17:	EXE program cannot be easily debugged in comparison to COM programs.	A 7 700
18.	EXE programs are more easily relocatable than COM programs.	

2.8 SUMMARY

We summarize the complete discussion in the following flow chart.

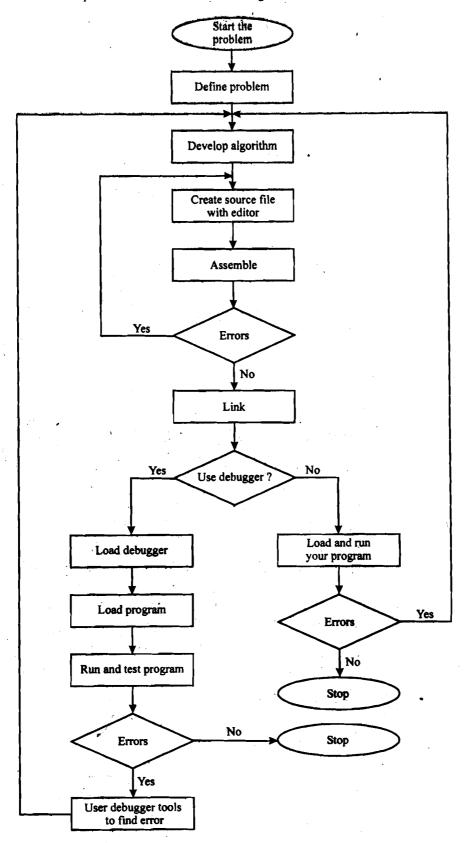

2.9 SOLUTIONS/ ANSWERS

Check Your Progress 1

- 1. (a) It helps in better understanding of computer architecture and work in machine language.
 - (b) Results in smaller machine level code, thus result in efficient execution of programs.
 - (c) Flexibility of use as very few restrictions exist.
- A segment identifier a group of instructions or data value. We have four segments.
 - 1. Data segment 2. Code segment 3. Stack segment 4. Extra Segment
- (a) False
 - (b) False
 - (c) True
 - (d) True
 - (e) False
 - (f) True

Check Your Progress 2

- 1. False
- 2. False
- 3. True
- 4. False
- 5. True
- 6. True
- 7. True
- 8. True
- 9. True
- 10. False
- 11. False
- 12. False13. True
- 14. False
- 15. True
- 16. True
- 17. False
- 18. True

2.10 FURTHER READINGS

- 1. Yu-Cheng Lin, Genn. A. Gibson, "Microcomputer System the 8086/8088 Family" 2nd Edition, PHI.
- 2. Peter Abel, "IBM PC Assembly Language and Programming", 5th Edition, PHI.
- 3. Douglas, V. Hall, "Microprocessors and Interfacing", 2nd edition, Tata McGraw-Hill Edition.
- 4. Richard Tropper, "Assembly Programming 8086", Tata McGraw-Hill Edition.
- 5. M. Rafiquzzaman, "Microprocessors, Theory and Applications: Intel and Motorala", PHI.

UNIT 3 ASSEMBLY LANGUAGE PROGRAMMING (PART – I)

Stru	cture		Page No.
3.0	Introdu	ction	. 57
3.1	Objecti	ves	57
3.2	Simple	Assembly Programs	57
	3.2.1	Data Transfer	
	3.2.2	Simple Arithmetic Application	
	3.2.3	Application Using Shift Operations	
	3.2.4	Larger of the Two Numbers	
3.3	.3 Programming With Loops and Comparisons		
	3.3.1	Simple Program Loops	
	3.3.2	Find the Largest and the Smallest Array Values	
	3.3.3	Character Coded Data	
		Code Conversion	
3.4	Program	nming for Arithmetic and String Operations	69
	3.4.1	String Processing	
	3.4.2	Some More Arithmetic Problems	
3.5	Summa	ıry	75
3.6	Solutio	ns/ Answers	75

3.0 INTRODUCTION

After discussing a few essential directives, program developmental tools and simple programs, let us discuss more about assembly language programs. In this unit, we will start our discussions with simple assembly programs, which fulfil simple tasks such as data transfer, arithmetic operations, and shift operations. A key example here will be about finding the larger of two numbers. Thereafter, we will discuss more complex programs showing how loops and various comparisons are used to implement tasks like code conversion, coding characters, finding largest in array etc. Finally, we will discuss more complex arithmetic and string operations. You must refer to further readings for more discussions on these programming concepts.

3.1 OBJECTIVES

After going through this unit, you should be able to:

- write assembly programs with simple arithmetic logical and shift operations;
- implement loops;
- · use comparisons for implementing various comparison functions;
- · write simple assembly programs for code conversion; and
- write simple assembly programs for implementing arrays.

3.2 SIMPLE ASSEMBLY PROGRAMS

As part of this unit, we will discuss writing assembly language programs. We shall start with very simple programs, and later graduate to more complex ones.

3.2.1 Data Transfer

Two most basic data transfer instructions in the 8086 microprocessor are MOV and XCHG. Let us give examples of the use of these instructions.

; Program 1: This program shows the difference of MOV and XCHG instructions:

```
DATA SEGMENT
VAL DB 5678H ; initialize variable VAL
DATA ENDS
```

CODE SEGMENT

	ASSUME	CS: CODE	E, DS: DATA
MAINP:	MOV	AX, 1234H	; AH=12 & AL=34
	XCHG '	AH, AL	; AH=34 & AL=12
	MOV	AX, 1234H	; AH=12 & AL=34
	MOV	BX, VAL	; BH=56 & BL=78
	XCHG	AX, BX	; AX=5678 & BX=1234
	XCHG	AH, BL	; AH=34, AL=78, BH=12, & BL=56
	MOV	AX, 4C00H	; Halt using INT 21h
	INT	21H	
CODE ENDS			

END MAINP Discussion:

Just keep on changing values as desired in the program.

```
; Program 2: Program for interchanging the values of two Memory locations ; input: Two memory variables of same size: 8-bit for this program
```

```
DATA SEGMENT
      VALUE1 DB
                          0Ah
                                       ; Variables
      VALUE2 DB
                          14h
DATA ENDS
CODE SEGMENT
      ASSUME CS:CODE, DS:DATA
      MOV AX, DATA
                                       ; Initialise data segments
      MOV DS, AX
                                       ; using AX
                                       ; Load Value1 into AL
      MOV AL, VALUE1
                                       ; exchange AL with Value2.
      XCHG VALUE2,AL
      MOV VALUE1,AL
                                       ; Store A1 in Value1
                                       ; Return to Operating system
      INT 21h
      CODE ENDS
```

Discussion:

END

The question is why cannot we simply use XCHG instruction with two memory variables as operand? To answer the question let us look into some of constraints for the MOV & XCHG instructions:

The MOV instruction has the following constraints and operands:

- CS and IP may never be destination operands in MOV;
- Immediate data value and memory variables may not be moved to segment registers;
- The source and the destination operands should be of the same size;
- Both the operands cannot be memory locations;
- If the source is immediate data, it must not exceed 255 (FFh) for an 8-bit destination or 65,535 (FFFFh) for a 16-bit destination.

The statement MOV AL, VALUE1, copies the VALUE1 that is 0Ah in the AL register:



The instruction, XCHG AL, VALUE2; exchanges the value of AL with VALUE2

Now AL and VALUE2 contains and values as under:

The statement, MOV VALUE1, AL;, now puts the value of AL to VALUE1.

Thus the desired exchange is complete

Other statements in the above program have already been discussed in the preceding units.

3.2.2 Simple Arithmetic Application

Let us discuss an example that uses simple arithmetic:

```
; Program 3: Find the average of two values stored in ; memory locations named FIRST and SECOND ; and puts the result in the memory location AVGE.
```

```
; Input: Two memory variables stored in memory locations FIRST and SECOND
                            ; Uses DS, CS, AX, BL
; REGISTERS
                            ; None used
; PORTS
DATA
              SEGMENT
       FIRST
                DB 90h
                            ; FIRST number,
                                                 90h is a sample value
       SECOND DB 78h
                            ; SECOND number,
                                                 78h is a sample value
                DB ?
                            ; Store average here
       AVGE
DATA
          ENDS
CODE
          SEGMENT
       ASSUME CS:CODE, DS:DATA
START:
          MOV
                 AX, DATA
                                   ; Initialise data segment, i.e. set
          MOV
                 DS, AX
                                   ; Register DS to point to Data Segment
                                   ; Get first number
          MOV
                 AL, FIRST
          ADD
                 AL, SECOND
                                   ; Add second to it
          MOV
                 AH, 00h
                                   ; Clear all of AH register
          ADC
                                   ; Put carry in LSB of AH
                 AH, 00h
          MOV
                 BL, 02h
                                   ; Load divisor in BL register
          DIV
                                   ; Divide AX by BL. Quotient in AL,
                 BL
                                   ; and remainder in AH
                AVGE, AL
                                   ; Copy result to memory
          MOV
CODE
          ENDS
       END
             START
```

Discussion:

An add instruction cannot add two memory locations directly, so we moved a single value in AL first and added the second value to it.

Please note, on adding the two values, there is a possibility of carry bit. (The values here are being treated as unsigned binary numbers). Now the problem is how to put

the carry bit into the AH register such that the AX(AH:AL) reflects the added value. This is done using ADC instruction.

The ADC AH,00h instruction will add the immediate number 00h to the contents of the carry flag and the contents of the AH register. The result will be left in the AH register. Since we had cleared AH to all zeros, before the add, we really are adding 00h + 00h + CF. The result of all this is that the carry flag bit is put in the AH register, which was desired by us.

Finally, to get the average, we divide the sum given in AX by 2. A more general program would require positive and negative numbers. After the division, the 8-bit quotient will be left in the AL register, which can then be copied into the memory location named AVGE.

3.2.3 Application Using Shift Operations

Shift and rotate instructions are useful even for multiplication and division. These operations are not generally available in high-level languages, so assembly language may be an absolute necessity in certain types of applications.

Program 4: Convert the ASCII code to its BCD equivalent. This can be done by simply replacing the bits in the upper four bits of the byte by four zeros. For example, the ASCII '1' is $32h = \underline{0011}$ 0010B. By making the upper four bits as 0 we get 0000 0010 which is 2 in BCD. The number obtained is called unpacked BCD number. The upper four bits of this byte is zero. So the upper four bits can be used to store another BCD digit. The byte thus obtained is called packed BCD number. For example, an unpacked BCD number 59 is 00000101 00001001, that is, 05 09. The packed BCD will be 0101 1001, that is 59.

The algorithm to convert two ASCII digits to packed BCD can be stated as:

Convert first ASCII digit to unpacked BCD. Convert the second ASCII digit to unpacked BCD.

Decimal	ASCII	BCD
5	00110101	00000101
9	00111001	00001001

Move first BCD to upper four positions in byte.

0101 0000	Using Rotate Instructions

Pack two BCD bits in one byte.

	0101 0000	
	0000 1001	
Pack	0101 1001	Using OR

;The assembly language program for the above can be written in the following manner.

; ABSTRACT Program produces a packed BCD byte from 2 ASCII ; encoded digits. Assume the number as 59.

; The first ASCII digit (5) is loaded in BL. ; The second ASCII digit (9) is loaded in AL.

; The result (packed BCD) is left in AL.

REGISTERS	; Use	s CS, AL,	, BL, CL
; PORTS	; Non	ie used	A
CODE	SEGMENT		,
	ASSUME	CS:CC	DDE
START:	MOV BL,	151	; Load first ASCII digit in BL
	MOV AL,	'9'	; Load second ASCII digit in AL
	AND BL,	0Fh	, Mask upper 4 bits of first digit
•	AND AL,	0Fh	; Mask upper 4 bits of second digit
•	MOV CL,	04h	; Load CL for 4 rotates
	ROL BL,	\mathbf{CL}	; Rotate BL 4 bit positions
	OR AL,	BL	; Combine nibbles, result in AL contains 59 ; as packed BCD
CODE	ENDS		, }
	END	STAR	Т

Discussion:

MOV DS, AX

MOV AL, NUM1

ADD AL, NUM2

8086 does not have any instruction to swap upper and lower four bits in a byte, therefore we need to use the rotate instructions that too by 4 times. Out of the two rotate instructions, ROL and RCL, we have chosen ROL, as it rotates the byte left by one or more positions, on the other hand RCL moves the MSB into the carry flag and brings the original carry flag into the LSB position, which is not what we want.

Let us now look at a program that uses RCL instructions. This will make the difference between the instructions clear.

; **Program 5:** Add a byte number from one memory location to a byte from the next memory location and put the sum in the third memory location. Also, save the carry flag in the least significant bit of the fourth memory location.

```
: ABSTRACT
                     : This program adds 2-8-bit words in the memory locations
                     : NUM1 and NUM2. The result is stored in the memory
                     : location RESULT. The carry bit, if any will be stored as
                     : 0000 0001 in the location CARRY
; ALGORITHM:
           get NUM1
           add NUM2 in it
           put sum into memory location RESULT
           rotate carry in LSB of byte
           mask off upper seven bits of byte
           store the result in the CARRY location.
 PORTS
                     : None used
 PROCEDURES
                     : None used
 REGISTERS
                     : Uses CS, DS, AX
'D'ATA
              SEGMENT
       NUM1
                     DB
                             25h
                                    ; First number
       NUM2
                     DB
                             80h
                                    ; Second number
       RESULT
                                    ; Put sum here
                     DB
                             ?
       CARRY
                     DB
DATA
              ENDS
CODE
              SEGMENT
       ASSUME CS:CODE, DS:DATA
START:MOV AX, DATA
                                    ; Initialise data segment
```

; register using AX

; Load the first number in AL

; Add 2nd number in AL

MOV RESULT, AL ; Store the result RCL AL, 01 ; Rotate carry into LSB AND AL, 00000001B ; Mask out all but LSB MOV CARRY, AL ; Store the carry result MOV AH, 4CH INT 21H ENDS START

Discussion:

CODE

END

RCL instruction brings the carry into the least significant bit position of the AL register. The AND instruction is used for masking higher order bits, of the carry, now in AL.

In a similar manner we can also write applications using other shift instructions.

3.2.4 Larger of the Two Numbers

How are the comparisons done in 8086 assembly language? There exists a compare instruction CMP. However, this instruction only sets the flags on comparing two operands (both 8 bits or 16 bits). Compare instruction just subtracts the value of source from destination without storing the result, but setting the flag during the process. Generally only three comparisons are more important. These are:

Result of comparison

Flag(s) affected

Destination < source	Carry flag = 1
Destination = source	Zero flag = 1
Destination > source	Carry = 0, $Zero = 0$

Let's look at three examples that show how the flags are set when the numbers are compared. In example 1 BL is less than 10, so the carry flag is set. In example 2, the zero flag is set because both operands are equal. In example 3, the destination (BX) is greater than the source, so both the zero and the carry flags are clear.

Example 1:

MOV BL, 02h CMP BL, 10h ; Carry flag = 1

Example 2:

MOV AX, F0F0h MOV DX, F0F0h CMP AX,DX ; Zero flag = 1

Example 3:

MOV BX, 200H CMP BX, 0 ; Zero and Carry flags = 0

In the following section we will discuss an example that uses the flags set by CMP instruction.

Check Your Progress 1

3.3	PROGRAMMING WITH LOOPS AND		
6.	If AL = 05 and BL = 06 then CMP AL, BL instruction will clear the		
5.	An unpacked BCD number requires 8 bits of storage, however, two unpacked BCD numbers can be packed in a single byte register.		
4.	A single instruction cannot swap the upper and lower four of a byte register.		
3.	In the example given in section 3.2.2 we can change instruction DIV I with a shift.	3L	
2.	XCHG VALUE1, VALUE2 is a valid instruction.		
1.	In a MOV instruction, the immediate operand value for 8-bit destination exceed F0h.	on ca	innot
State	True or False with respect to 8086/8088 assembly languages.	Ţ	F

Let us now discuss a few examples which are slightly more advanced than what we have been doing till now. This section deals with more practical examples using loops, comparison and shift instructions.

3.3.1 Simple Program Loops

The loops in assembly can be implemented using:

- Unconditional jump instructions such as JMP, or
- Conditional jump instructions such as JC, JNC, JZ, JNZ etc. and
- Loop instructions.

Let us consider some examples, explaining the use of conditional jumps.

Example 4:

> JE	AX,BX THERE AX, 02	; compare instruction: sets flags ; if equal then skip the ADD instruction ; add 02 to AX
THERE: MOV	CL, 07	; load 07 to CL

In the example above the control of the program will directly transfer to the label THERE if the value stores in AX register is equal to that of the register BX. The same example can be rewritten in the following manner, using different jumps.

Example 5:

	CMP	AX, BX	; compare instruction: sets flags
	JNE	FIX	; if not equal do addition
	JMP	THERE	; if equal skip next instruction
FIX:	ADD	AX, 02	; add 02 to AX

THERE: MOV CL, 07

The above code is not efficient, but suggest that there are many ways through which a conditional jump can be implemented. Select the most optimum way.

Example 6:

CMP DX, 00 ; checks if DX is zero. JE Label 1 ; if yes, jump to Label1 i.e. if ZF=1

Label1:----; control comes here if DX=0

Example 7:

MOV AL, 10 ; moves 10 to AL **CMP** AL, 20 ; checks if AL < 20 i.e. CF=1 JLLab1 ; carry flag = 1 then jump to Lab1

Lab1: -----; control comes here if condition is satisfied

LOOPING

; Program 6: Assume a constant inflation factor that is added to a series of prices ; stored in the memory. The program copies the new price over the old price. It is ; assumed that price data is available in BCD form.

; The algorithm:

;Repeat

Read a price from the array

Add inflation factor

Adjust result to correct BCD

Put result back in array

Until all prices are inflated

; REGISTERS: Uses DS, CS, AX, BX, CX

: PORTS

: Not used **ARRAYS**

SEGMENT **PRICE**

DB36h, 55h, 27h, 42h, 38h, 41h, 29h, 39h

ARRAYS **ENDS**

CODE **SEGMENT**

ASSUME CS:CODE, DS:ARRAYS

START:

MOV AX, ARRAYS; Initialize data segment

MOV DS, AX ; register using AX

LEA BX, PRICES ; initialize pointer to base of array

MOV CX, 0008h ; Initialise counter to 8 as array have 8

values.

DO NEXT: ; Copy a price to AL. BX is addressed in MOV AL, [BX]

; indirect mode.

ADD AL, 0Ah : Add inflation factor

; Make sure that result is BCD DAA

MOV ; Copy result back to the memory [BX], AL

INC BX; increment BX to make it point to next price

DEC CX; Decrement counter register

: If not last, (last would be when CX will JNZ DO NEXT

; become 0) Loop back to DO_NEXT

; Return to DOS MOV AH, 4CH

INT 21H

CODE **ENDS END START**

Discussion:

Please note the use of instruction: LEA BX,PRICES: It will load the BX register with the offset of the array PRICES in the data segment. [BX] is an indirection through BX and contains the value stored at that element of array. PRICES. BX is incremented to point to the next element of the array. CX register acts as a loop counter and is decremented by one to keep a check of the bounds of the array. Once the CX register becomes zero, zero flag is set to 1. The JNZ instruction keeps track of the value of CX, and the loop terminates when zero flag is 1 because JNZ does not loop back. The same program can be written using the LOOP instruction, in such case, DEC CX and JNZ DO_NEXT instructions are replaced by LOOP DO_NEXT instruction. LOOP decrements the value of CX and jumps to the given label, only if CX is not equal to zero.

Let us demonstrate the use of LOOP instruction, with the help of following program:

```
: Program 7: This following program prints the alphabets (A-Z)
```

```
; Register used : AX, CX, DX
```

```
CODE SEGMENT
```

ASSUME : CS:CODE.

MAINP: MOV CX, 1AH; 26 in decimal = 1A in hexadecimal Counter.

MOV DL, 41H; Loading DL with ASCII hexadecimal of A.

NEXTC: MOV AH, 02H; display result character in DL

INT 21H; DOS interrupt

INC DL ; Increment DL for next char

LOOP NEXTC ; Repeat until CX=0.(loop automatically decrements

CS and checks whether it is zero or not)

MOV AX, 4C00H; Exit DOS

INT 21H ; DOS Call

CODE ENDS END MAINP

Let us now discuss a slightly more complex looping program.

```
; Program 8: This program compares a pair of characters entered through keyboard.
```

```
; Registers used: AX, BX, CX, DX
```

```
DATA SEGMENT
```

XX DB ?

YY DB ?

DATA ENDS

CODE SEGMENT

ASSUME CS: CODE, DS: DATA

MAINP: MOV AX, DATA ; initialize data MOV DS, AX ; segment using AX

MOV CX, 03H ; set counter to 3.

NEXTP: MOV AH, 01H; Waiting for user to enter a char.

INT 21H

MOV XX, AL ; store the 1st input character in XX MOV AH, 01H ; waiting for user to enter second

INT 21H ; character.

MOV YY, AL ; store the character to YY

MOV BH, XX ; load first character in BH

MOV BL, YY ; load second character in BL

CMP BH, BL ; compare the characters

JNE NOT_EQUAL

EQUAL: MOV AH, 02H ; if characters are equal then control MOV DL, 'Y' ; will execute this block and INT 21H ; display 'Y' JMP CONTINUE ; Jump to continue loop. NOT_EQUAL: MOV AH, 02H ; if characters are not equal then control MOV DL, 'N" ; will execute this block and INT 21 H ; display 'N' CONTINUE: LOOP NEXT P ; Get the next character MOV AH, 4C H ; Exit to DOS INT 21 H

CODE ENDS END MAINP

Discussion:

This program will be executed, at least 3 times.

3.3.2 Find the Largest and the Smallest Array Values

Let us now put together whatever we have done in the preceding sections and write down a program to find the largest and the smallest numbers from a given array. This program uses the JGE (jump greater than or equal to) instruction, because we have assumed the array values as signed. We have not used the JAE instruction, which works correctly for unsigned numbers.

; **Program 9:** Initialise the **smallest** and the **largest** variables as the first number in ; the array. They are then compared with the other array values one by one. If the ; value happens to be smaller than the assumed smallest number or larger than the ; assumed largest value, the **smallest** and the **largest** variables are changed with the ; new values respectively. Let us use register DI to point the current array value and ; LOOP instruction for looping.

DATA DATA END.	SEGMENT ARRAY DW - LARGE DW ? SMALL DW ? ENDS	
CODE A1:	SEGMENT MOV AX,DATA MOV DS,AX MOV DI, OFFSET ARI MOV AX, [DI] MOV DX, AX MOV BX, AX MOV CX, 6 MOV AX, [DI] CMP AX, BX JGE A2 MOV BX, AX	; Initialize DS RAY; DI points to the array; ; AX contains the first element; initialize large in DX register; initialize small in BX register; initialize loop counter; get next array value; Is the new value smaller? ; If greater then (not smaller) jump to; A2, to check larger than large in DX; Otherwise it is smaller so move it to; the smallest value (BX register); as it is small, thus no need; to compare it with the large so jump

A2:	CMP AX, DX JLE A3	; to A3 to continue or terminate loop. ; [DI] = large ; if less than it implies not large so ; jump to A3
	MOV DX, AX	; to continue or terminate ; otherwise it is larger value, so move ; it to DX that store the large value
A3:	ADD DI, 2 LOOP A1 MOV LARGE, DX	; DI now points to next number ; repeat the loop until CX = 0
	MOV SMALL, BX	; move the large and small in the ; memory locations
CODE	MOV AX, 4C00h INT 21h ENDS	; halt, return to DOS

Discussion:

Since the data is word type that is equal to 2 bytes and memory organisation is byte wise, to point to next array value DI is incremented by 2.

3.3.3 Character Coded Data

The input output takes place in the form of ASCII data. These ASCII characters are entered as a string of data. For example, to get two numbers from console, we may enter the numbers as:

1234
3210
4444

As each digit is input, we would store its ASCII code in a memory byte. After the first number was input the number would be stored as follows:

The number is entered as:

31	32	33	34	hexadecimal storage
1	2	3	4	ASCII digits

Each of these numbers will be input as equivalent ASCII digits and need to be converted either to digit string to a 16-bit binary value that can be used for computation or the ASCII digits themselves can be added which can be followed by instruction that adjust the sum to binary. Let us use the conversion operation to perform these calculations here.

Another important data format is packed decimal numbers (packed BCD). A packed BCD contains two decimal digits per byte. Packed BCD format has the following advantages:

- The BCD numbers allow accurate calculations for almost any number of significant digits.
- Conversion of packed BCD numbers to ASCII (and vice versa) is relatively fast.
- An implicit decimal point may be used for keeping track of its position in a separate variable.

The instructions DAA (decimal adjust after addition) and DAS (decimal adjust after subtraction) are used for adjusting the result of an addition of subtraction operation on

packed decimal numbers. However, no such instruction exists for multiplication and division. For the cases of multiplication and division the number must be unpacked. First, multiplied or divided and packed again. The instruction DAA and DAS has already been explained in unit 1.

3.3.4 Code Conversion

The conversion of data from one form to another is needed. Therefore, in this section we will discuss an example, for converting a hexadecimal digit obtained in ASCII form to binary form. Many ASCII to BCD and other conversion examples have been given earlier in unit 2.

Program 10:

```
This program converts an ASCII input to equivalent hex digit that it represents.
     Thus, valid ASCII digits are 0 to 9, A to F and the program assumes that the
     ASCII digit is read from a location in memory called ASCII. The hex result is
     left in the AL. Since the program converts only one digit number the AL is
     sufficient for the results. The result in AL is made FF if the character in ASCII
     is not the proper hex digit.
 ALGORITHM
     IF number <30h THEN error
     ELSE
     IF number <3Ah THEN Subtract 30h (it's a number 0-9)
     ELSE (number is >39h)
     IF number <41h THEN error (number in range 3Ah-40h which is not a valid
      A-F character range)
     ELSE
     IF number <47h THEN Subtract 37h for letter A-F 41-46 (Please note
     that 41h - 37h = Ah)
                      ERROR
     ELSE
 PORTS
                  : None used
                  : None
 PROCEDURES
                  : Uses CS, DS, AX,
: REGISTERS
DATA
               SEGMENT
               ASCII DB 39h
                                     : Any experimental data
DATA
               ENDS
CODE
               SEGMENT
       ASSUME CS:CODE, DS:DATA
                                     ; initialise data segment
START:
               MOV AX, DATA
               MOV
                      DS, AX
                                     ; Register using AX
                                     ; Get the ASCII digits of the number
               MOV AL, ASCII
                                     ; start the conversion
               CMP
                      AL, 30h
                                     ; If the ASCII digit is below 30h then it is not
                      ERROR
                                     ; a proper Hex digit
               JB
               CMP
                      AL, 3Ah
                                     ; compare it to 3Ah
               JB
                      NUMBER
                                     : If greater then possibly a letter between A-F
               CMP
                                     ; This step will be done if equal to or above
                      AL, 41h
               JВ
                      ERROR
                                     ; Between 3Ah and 40h is error
               CMP
                      AL, 46h
                                     ; The ASCII is out of 0-9 and A-F range
               JA
                      ERROR
               SUB
                                     ; It's a letter in the range A-F so convert
                      AL, 37h
               JMP
                      CONVERTED
NUMBER:
               SUB
                      AL, 30h .
                                     ; it is a number in the range 0-9 so convert
               JMP
                      CONVERTED
```

Assembly Language Programming (Part i)

ERROR: AL, 0FFh MOV

CONVERTED: MOV AX, 4C00h

21h

INT

; the hex result is in AL

; You can also display some message here

CODE

ENDS

END START

Discussions:

The above program demonstrates a single hex digit represented by an ASCII character. The above programs can be extended to take more ASCII values and convert them into a 16-bit binary number.

Check Your Progress 2

1.	write the code sequence in assembly for performing	g tollowing oper	ation.
	Z = ((A - B) / 10 * C) * * 2		

White the ende governor in agreembly for nonforming following angestions

2.	Write an assembly	code sequence	for adding an	array of binary	numbers.
----	-------------------	---------------	---------------	-----------------	----------

3.	An assembly program is to be written for inputting two 4 digits decimal
	numbers from console, adding them up and putting back the results. Will you
	prefer packed BCD addition for such numbers? Why?

4.	How can	we implement	nested	loops,	for example

in assembly language?

3.4 PROGRAMMING FOR ARITHMETIC AND STRING OPERATIONS

Let us discuss some more advanced features of assembly language programming in this section. Some of these features give assembly an edge over the high level language programming as far as efficiency is concerned. One such instruction is for string processing. The object code generated after compiling the HLL program containing string instruction is much longer than the same program written in assembly language. Let us discuss this in more detail in the next subsection:

3.4.1 String Processing

Let us write a program for comparing two strings. Consider the following piece of code, which has been written in C to compare two strings. Let us assume that 'str1' and 'str2' are two strings, initialised by some values and 'ind' is the index for these character strings:

for (ind = 0; ((ind <9) and (str1[ind] = = str2[ind])), ind
$$+ +$$
)

The intermediate code in assembly language generated by a non-optimising compiler for the above piece may look like:

```
MOV
                      IND, 00
                                            ; ind : = 0
L3:
           CMP
                      IND, 08
                                            ; ind < 9
           JG
                      L1
                                            ; not so; skip
           LEA
                      AX, STR1
                                            ; offset of str1 in AX register
           MOV
                      BX, IND
                                            ; it uses a register for indexing into
                                            ; the array
           LEA
                      CX, STR2
                                            str2 in CX
           MOV
                      DL, BYTE PTR CX[BX]
           CMP
                      DL, BYTE PTR AX[BX]
                                                    ; str1[ind] = str2[ind]
           JNE
                      L1
                                                    ; no, skip
           MOV
                      IND, BX
           ADD
                      IND, 01
L2:
           JMP
                      L3
                                                    ; loop back
L1:
```

What we find in the above code: a large code that could have been improved further, if the 8086 string instructions would have been used.

'FAILSAFE'

; source string

```
; Program 11: Matching two strings of same length stored in memory locations.; REGISTERS: Uses CS, DS, ES, AX, DX, CX, SI, DI
```

DB

```
DB
                                                  ; destination string
              DESTSTR
                                    'FEELSAFE'
              MESSAGE
                             DB
                                    'String are equal $'
DATA
              ENDS
CODE
              SEGMENT
          ASSUME CS:CODE, DS:DATA, ES:DATA
                     AX, DATA
              MOV
                     DS, AX
                                           ; Initialise data segment register
              MOV
                                           ; Initialise extra segment register
              MOV
                    ES, AX
; as destination string is considered to be in extra segment. Please note that ES is also
; initialised to the same segment as of DS.
                                           ; Load source pointer
              LEA
                     SI, PASSWORD
                                           ; Load destination pointer
              LEA
                     DI, DESTSTR
                                           ; Load counter with string length
              MOV
                     CX, 08
                                    ; Clear direction flag so that comparison is
              CLD
                                    ; done in forward direction.
                                    ; Compare the two string byte by byte
              REPE CMPSB
                                    ; If not equal, jump to NOTEQUAL
              JNE
                     NOTEQUAL
              MOV
                     AH, 09
                                    ; else display message
                     DX, OFFSET MESSAGE;
              MOV -
              INT
                     21h
                                    ; display the message
                     AX, 4C00h
                                    ; interrupt function to halt
NOTEQUAL: MOV
              INT
                     21h
CODE
              ENDS
              END
```

Discussion:

DATA

SEGMENT PASSWORD

In the above program the instruction CMPSB compares the two strings, pointed by SI in Data Segment and DI register in extra data segment. The strings are compared byte by byte and then the pointers SI and DI are incremented to next byte. Please note the last letter B in the instruction indicates a byte. If it is W, that is if instruction is CMPSW, then comparison is done word by word and SI and DI are incremented by 2,

Assembly Language Programming (Part I)

that is to next word. The REPE prefix in front of the instruction tells the 8086 to decrement the CX register by one, and continue to execute the CMPSB instruction, until the counter (CX) becomes zero. Thus, the code size is substantially reduced.

Similarly, you can write efficient programs for moving one string to another, using MOVS, and scanning a string for a character using SCAS.

3.4.2 Some More Arithmetic Problems

Let us now take up some more practical arithmetic problems.

Use of delay loops

A very useful application of assembly is to produce delay loops. Such loops are used for waiting for some time prior to execution of next instruction.

But how to find the time for the delay? The rate at which the instructions are executed is determined by the clock frequency. Each instruction takes a certain number of clock cycles to execute. This, multiplied by the clock frequency of the microprocessor, gives the actual time of execution of a instruction. For example, MOV instruction takes four clock cycles. This instruction when run on a microprocessor with a 4Mhz clock takes 4/4, i.e. 1 microsecond. NOP is an instruction that is used to produce the delay, without affecting the actual running of the program.

Time delay of 1 ms on a microprocessor having a clock frequency of 5 MHz would require:

1 clock cycle =
$$\frac{1}{5\text{MHz}}$$

$$= \frac{1}{5 \times 10^6} \text{ Seconds}$$

Thus, a 1-millisecond delay will require:

$$= \frac{1 \times 10^{-3}}{\left(\frac{1}{5 \times 10^{6}}\right)}$$
 clock cycles
$$= 5000$$
 clock cycles.

The following program segment can be used to produce the delay, with the counter value correctly initialised.

MOV CX, N ; 4 clock cycles N will vary depending on ; the amount of delay required

LOOP instruction takes 17 clock cycles when the condition is true and 5 clock cycles otherwise. The condition will be true, 'N' number of times and false only once, when the control comes out of the loop.

To calculate 'N':

Total clock cycles = clock cycles for MOV + N(2*NOP clock cycles + 17) - 12 (when
$$CX = 0$$
)

$$5000 = 4 + N(6 + 17) - 12$$

N = $5000/23 = 218 = 0DAh$

Therefore, the counter, CX, should be initialized by 0DAh, in order to get the delay of 1 millisecond.

Use of array in assembly

Let us write a program to add two 5-byte numbers stored in an array. For example, two numbers in hex can be:

Let us also assume that the numbers are represented as the lowest significant byte first and put in memory in two arrays. The result is stored in the third array SUM. The SUM also contains the carry out information, thus would be 1 byte longer than number arrays.

```
; Program 12: Add two five-byte numbers using arrays
: ALGORITHM:
          Make count = LEN
          Clear the carry flag
          Load address of NUM1
          REPEAT
              Put byte from NUM1 in accumulator
              Add byte from NUM2 to accumulator + carry
              Store result in SUM
              Decrement count
              Increment to next address
          UNTIL count = 0
          Rotate carry into LSB of accumulator
          Mask all but LSB of accumulator
          Store carry result, address pointer in correct position.
PORTS
                     : None used
                     : None used
; PROCEDURES
; REGISTERS
                     : Uses CS, DS, AX, CX, BX, DX
          SEGMENT
DATA
                                                          ,20h
          NUM1
                     DB
                             0FFh.
                                    10h
                                           ,01h
                                                   ,11h
                                                          ,0FFh
          NUM2
                     DB
                             10h,
                                    20h,
                                           30h,
                                                   40h
                     DB
                             6DUP(0)
          SUM
          ENDS
DATA
                                    ; constant for length of the array
          LEN
                     EQU
                            05h
CODE
          SEGMENT
          ASSUME CS:CODE, DS:DATA
START:
          MOV
                     AX, DATA
                                    ; initialise data segment
          MOV
                     DS, AX
                                    ; using AX register
                                    ; load displacement of 1st number.
          MOV
                     SI, 00
                                    ; SI is being used as index register
          MOV
                     CX, 0000
                                    ; clear counter
          MOV
                     CL, LEN
                                    ; set up count to designed length
          CLC
                                    ; clear carry. Ready for addition
AGAIN:
          MOV
                     AL, NUM1[SI]; get a byte from NUM1
          ADC
                     AL, NUM2[SI]; add to byte from NUM2 with carry
```

```
MOV
                       SUM[SI], AL ; store in SUM array
           INC
           LOOP
                       AGAIN
                                      ; continue until no more bytes
                       AL, 01h
           RCL
                                      ; move carry into bit 0 of AL
                       AL, 01h
                                      ; mask all but the 0th bit of AL
           AND
                                      ; put carry into 6<sup>th</sup> byte
           MOV
                       SUM[SI], AL
           MOV
FINISH:
                       AX, 4C00h
                       21h
           INT
CODE
           ENDS
                       START
           END
:Program 13: A good example of code conversion: Write a program to convert a
; 4-digit BCD number into its binary equivalent. The BCD number is stored as a
 word in memory location called BCD. The result is to be stored in location HEX.
 ALGORITHM:
           Let us assume the BCD number as 4567
           Put the BCD number into 4, 16bit registers
           Extract the first digit (4 in this case)
           by masking out the other three digits. Since, its place value is 1000.
           So Multiply by 3E8h (that is 1000 in hexadecimal) to get 4000 = 0FA0h
           Extract the second digit (5)
           by masking out the other three digits.
           Multiply by 64h (100)
           Add to first digit and get 4500 = 1194h
           Extract the third digit (6)
           by masking out the other three digits (0060)
           Multiply by 0Ah (10)
           Add to first and second digit to get 4560 = 11D0h
           Extract the last digit (7)
           by masking out the other three digits (0007)
           Add the first, second, and third digit to get 4567 = 11D7h
 PORTS
             : None used
; REGISTERS: Uses CS, DS, AX, CX, BX, DX
THOU
           EQU
                       3E8h
                                      ; 1000 = 3E8h
DATA
           SEGMENT
           BCD
                       DW
                               4567h
                               ?
           HEX
                       DW
                                      ; storage reserved for result
DATA
           ENDS
CODE
           SEGMENT
       ASSUME CS:CODE, DS:DATA
           MOV
                       AX, DATA
                                      ; initialise data segment
START:
                                      ; using AX register
           MOV
                       DS, AX
                                      ; get the BCD number AX = 4567
           MOV
                       AX, BCD
                                      ; copy number into BX; BX = 4567
           MOV
                       BX, AX
           MOV
                       AL, AH
                                      ; place for upper 2 digits in AX = 4545
                                      ; place for lower 2 digits in BX = 6767
            MOV
                       BH, BL
                                      ; split up numbers so that we have one digit
                                      ; in each register
           MOV
                       CL, 04
                                       ; bit count for rotate
                                      ; digit 1 (MSB) in lower four bits of AH.
           ROR
                       AH, CL
                                       AX = 5445
                                      ; digit 3 in lower four bits of BH.
           ROR
                       BH, CL
                                      BX = 76.67
                                      ; mask upper four bits of each digit.
            AND
                       AX, 0F0FH
```

AX = 04.05

AND BX, 0F0FH : BX = 06 07MOV CX, AX ; copy AX into CX so that can use AX for ; multiplication CX = 04 05; CH contains digit 4 having place value 1000, CL contains digit 5 ; having place value 100, BH contains digit 6 having place value 10 and ; BL contains digit 7 having unit place value. ; so obtain the number as CH \times 1000 + CL \times 100 + BH \times 10 + BL MOV ; zero AH and AL AX, 0000H ; now multiply each number by its place ; value MOV AL, CH ; digit 1 to AL for multiply MOV DI, THOU ; no immediate multiplication is allowed so ; move thousand to DI ; digit 1 (4)*1000 MUL DI ; result in DX and AX. Because BCD digit ; will not be greater than 9999, the result will ; be in AX only. AX = 4000MOV DH, 00H ; zero DH ; move BL to DL, so DL = 7MOV DL, BL ADD DX, AX ; add AX; so DX = 4007MOV AX, 0064h ; load value for 100 into AL ; multiply by digit 2 from CL MUL CL; add to total in DX. DX now contains ADD DX, AX ; (7 + 4000 + 500)MOV AX, 000Ah ; load value of 10 into AL MUL BH ; multiply by digit 3 in BH ADD DX, AX ; add to total in DX; DX contains ; (7 + 4000 + 500 +60) HEX, DX ; put result in HEX for return MOV MOV AX, 4C00h 21h INT CODE **ENDS END START** Check Your Progress 3 1. Why should we perform string processing in assembly language in 8086 and not in high-level language? What is the function of direction flag? 2.

What is the function of NOP statement?

3.

3.5 SUMMARY

In this unit, we have covered some basic aspects of assembly language programming. We started with some elementary arithmetic problems, code conversion problems, various types of loops and graduated on to do string processing and slightly complex arithmetic. As part of good programming practice, we also noted some points that should be kept in mind while coding. Some of them are:

- An algorithm should always precede your program. It is a good programming
 practice. This not only increases the readability of the program, but also makes
 your program less prone to logical errors.
- Use comments liberally. You will appreciate them later.
- Study the instructions, assembler directives and addressing modes carefully, before starting to code your program. You can even use a debugger to get a clear understanding of the instructions and addressing modes.
- Some instructions are very specific to the type of operand they are being used with, example signed numbers and unsigned numbers, byte operands and word operands, so be careful!!
- Certain instructions except some registers to be initialised by some values before being executed, example, LOOP expects the counter value to be contained in CX register, string instructions expect DS:SI to be initialised by the segment and the offset of the string instructions, and ES:DI to be with the destination strings, INT 21h expects AH register to contain the function number of the operation to be carried out, and depending on them some of the additional registers also to be initialised. So study them carefully and do the needful. In case you miss out on something, in most of the cases, you will not get an error message, instead the 8086 will proceed to execute the instruction, with whatever junk is lying in those registers.

In spite of all these complications, assembly languages is still an indispensable part of programming, as it gives you an access to most of the hardware features of the machine, which might not be possible with high level language. Secondly, as we have also seen some kind of applications can be written and efficiently executed in assembly language. We justified this with string processing instructions; you will appreciate it more when you actually start doing the assembly language programming. You can now perform some simple exercises from the further readings.

In the next block, we take up more advanced assembly language programming, which also includes accessing interrupts of the machine.

3.6 SOLUTIONS/ ANSWERS

Check Your Progress 1

1. False 2. False 3. True 4. True 5. True 6. False

Check Your Progress 2

1.	MOV	AX, A	; bring A in AX
	SUB	AX, B	; subtract B
	MOV	DX, 0000h	; move 0 to DX as it will be used for word division
	MOV	BX, 10	; move dividend to BX
	IDIV	$\mathbf{B}\mathbf{X}$; divide
	IMUL	C	; ((A-B) / 10 * C) in AX
	IMUL	AX	; square AX to get (A-B/10 * C) * * 2

2. Assuming that each array element is a word variable.

MOV CX, COUNT; put the number of elements of the array in

; CX register

MOV AX, 0000h ; zero SI and AX

MOV SI, AX

; add the elements of array in AX again and again

AGAIN: ADD AX, ARRAY[SI]; another way of handling array

ADD SI, 2; select the next element of the array LOOP AGAIN; add all the elements of the array. It will

terminate when CX becomes zero.

MOV TOTAL, AX; store the results in TOTAL.

3. Yes, because the conversion efforts are less.

4. We may use two nested loop instructions in assembly also. However, as both the loop instructions use CX, therefore every time before we are entering inner loop we must push CX of outer loop in the stack and reinitialize CX to the inner loop requirements.

Check Your Progress 3

- The object code generated on compiling high level languages for string processing commands is, in general, found to be long and contains several redundant instructions. However, we can perform string processing very efficiently in 8086 assembly language.
- Direction flag if clear will cause REPE statement to perform in forward direction.
 That is, in the given example the strings will be compared from first element to
 last.
- 3. It produces a delay of a desired clock time in the execution. This instruction is useful while development of program. A collection of these instructions can be used to fill up some space in the code segment, which can be changed with new code lines without disturbing the position of existing code. This is particularly used when a label is specified.

UNIT 4 ASSEMBLY LANGUAGE PROGRAMMING (PART-II)

Structi	ıre		Page No.
4.0	Introdu	action	77
4.1	Object	ives	77
4.2	Use of	Arrays in Assembly	77
4.3		ar Programming	80
	4.3.1	The stack	
	4.3.2	FAR and NEAR Procedures	
	4.3.3	Parameter Passing in Procedures	
	4.3.4	External Procedures	
4.4	Interfa	cing Assembly Language Routines to High Level Language	ge
	Progra	ms	93
	4.4.1	Simple Interfacing	
	4.4.2	Interfacing Subroutines With Parameter Passing	
4.5	Interru	pts	97
4.6	Device	Drivers in Assembly	99
4.7	Summary 10		
4.8		ons/ Answers	102

4.0 INTRODUCTION

In the previous units, we have discussed the instruction set, addressing modes, and other tools, which are needed to develop assembly language programs. We shall now use this knowledge in developing more advanced tools. We have divided this unit broadly into four sections. In the first section, we discuss the design of some simple data structures using the basic data types. Once the programs become lengthier, it is advisable to divide them into small modules, which can be easily written, tested and debugged. This leads to the concept of modular programming, and that is the topic of our second section in this unit. In the third section, we will discuss some techniques to interface assembly language programs to high level languages. We have explained the concepts using C and C ++ as they are two of the most popular high-level languages. In the fourth section we have designed some tools necessary for interfacing the microprocessor with external hardware modules.

4.1 OBJECTIVES

After going through this unit, you should be able to:

- implement simple data structures in assembly language;
- write modular programs in assembly language;
- interface assembly program to high level language program; and
- analyse simple interrupt routines.

4.2 USE OF ARRAYS IN ASSEMBLY

An array is referencing using a base array value and an index. To facilitate addressing in arrays, 8086 has provided two index registers for mathematical computations, viz. BX and BP. In addition two index registers are also provided for string processing, viz. SI and DI. In addition to this you can use any general purpose register also for indexing.

Assembly Language Programming

An important application of array is the tables that are used to store related information. For example, the names of all the students in the class, their CGPA, the list of all the books in the library, or even the list of people residing in a particular area can be stored in different tables. An important application of tables would be character translation. It can be used for data encryption, or translation from one data type to another. A critical factor for such kind of applications is the speed, which just happens to be a strength of assembly language. The instruction that is used for such kind of applications is XLAT.

Let us explain this instruction with the help of an example:

Example 1:

Let us assume a table of hexadecimal characters representing all 16 hexadecimal digits in table:

HEXA DB '0123456789ABCDEF'

The table contains the ASCII code of each hexadecimal digit:

. [Offset	00	01	02	03	04	05	.06	07	08	09	0A	0B	0C	0D	0E	0F
	Contents	30	31	32	33	34	35	36	37	38	39	41	42	43	44	45	46

(all value in hexadecimal)

If we place 0Ah in AL with the thought of converting it to ASCII, we need to set BX to the offset of HEXA, and invoke XLAT. You need not specify the table name with XLAT because it is implicitly passed by setting BX to the HEXA table offset. This instruction will do the following operations:

It will first add BX to AL, generating an effective address that points to the eleventh entry in the HEXA table.

The content of this entry is now moved to the AL register, that is, 41h is moved to AL.

In other words, XLAT sets AL to 41h because this value is located at HEXA table offset 0Ah. Please note that the 41h is the ASCII code for hex digit A. The following sequence of instructions would accomplished this:

MOV AL, 0Ah ; index value MOV BX, OFFSET HEXA ; offset of the table HEXA XLAT

The above tasks can be done without XLAT instruction but it will require a long series of instructions such as:

MOV	AL, 0Ah	; index value
MOV	BX, OFFSET HEXA	; offset of the table HEXA
PUSH :	$\mathbf{B}\mathbf{X}$; save the offset
ADD	BL, AL	; add index value to table
	· · · · · · · · · · · · · · · · · · ·	; HEXA offset
MOV	AL, [BX]	; retrieve the entry
POP	BX	; restore BX

Let us use the instruction XLAT for data encoding. When you want to transfer a message through a telephone line, then such encoding may be a good way of preventing other users from reading it. Let us show a sample program for encoding.

PROGRAM 1:

; A program for encoding ASCII Alpha numerics.

; ALGORITHM:

; create the code table

; read an input string character by character

; translate it using code table

; output the strings

DATA

SEGMENT

CODETABLE

DB 48 DUP (0)

; no translation of first

; 48 ASCII

DB '4590821367'

; ASCII codes 48 -

(30h - 39h)

DB 7 DUP (0)

; no translation of

these 7 characters 'GVHZUSOBMIKPJCADLFTYEQNWXR'

DB 6 DUP (0)

; no translation

'gvhzusobmikpjcadlftyegnwxr'

DB 133 DUP (0)

; no translation of remaining

; point to lookup table

; character

DATA

ENDS

CODE

SEGMENT

MOV

AX, DATA

MOV

DS, AX ; initialize DS

BX, OFFSET CODETABLE

MOV GETCHAR:

> MOV AH, 06 DL, 0FFh

; console input no wait

MOV

INT 21h ; specify input request ; call DOS

JZ**OUIT** ; quit if no input is waiting

MOV

DL, AL CODETABLE save character in DL

XLAT CMP

AL, 0

translate the character : translatable?

JΕ

PUTCHAR

; no : write it as is.

MOV

DL, AL

; yes: move new character

; to DL

PUTCHAR:

MOV

AH, 02

; write DL to output

; get another character

INT

JMP

21h **GETCHAR**

QUIT:

MOV

AX, 4C00h 21h

INT

CODE **ENDS**

END

Discussion:

The program above will code the data. For example, a line from an input file will be encoded:

A SECRET Message G TUHFUY Juttgou

(Read from an input file)

(Encoded output)

The program above can be run using the following command line. If the program file name is coding asm

coding infile > outfile

The infile is the input data file, and outfile is the output data file. You can write more such applications using 8086 assembly tables.

Check	Your	Progress	1
 CHECK	I UUI	I I OKI 622	

1.	Wı	rite a program to convert all upper case letters to lower case.
	•••	
2.	Sta	te True or False
	a.	Table handling cannot be done without using XLAT instruction.
	b.	In XLAT instruction AX register contains the address of the first entry of the table.
	c.	In XLAT instruction the desired element value is returned in AL register.


4.3 MODULAR PROGRAMMING

Modular programming refers to the practice of writing a program as a series of independently assembled source files. Each source file is a modular program designed to be assembled into a separate object file. Each object file constitutes a module. The linker collects the modules of a program into a coherent whole.

There are several reasons a programmer might choose to modularise a program.

- 1. Modular programming permits breaking a large program into a number of smaller modules each of more manageable size.
- 2. Modular programming makes it possible to link source code written in two separate languages. A hybrid program written partly in assembly language and partly in higher level language necessarily involves at least one module for each language involved.
- 3. Modular programming allows for the creation, maintenance and reuse of a library of commonly used modules.
- 4. Modules are easy to comprehend.
- 5. Different modules can be assigned to different programs.
- 6. Debugging and testing can be done in a more orderly fashion.
- 7. Document action can be easily understood.
- 8. Modifications may be localised to a module.

A modular program can be represented using hierarchical diagram:

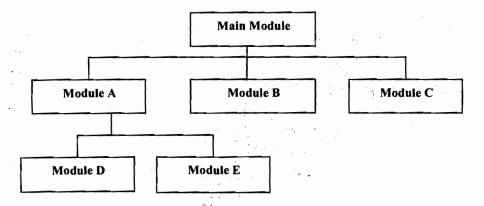

The advantages of modular programming are:

- 1. Smaller, easier modules to manage
- 2. Code repetition may be avoided by reusing modules.

You can divide a program into subroutines or procedures. You need to CALL the procedure whenever needed. A subroutine call transfers the control to subroutine instructions and brings the control back to calling program.

4.3.1 The Stack

A procedure call is supported by a stack. So let us discuss stack in assembly. Stacks are Last In First Out data structures, and are used for storing the return addresses of the procedures and for parameter passing and saving the return value.

In 8086 microprocessor a stack is created in the stack segment. The SS register stores the offset of stack segment and SP register stores the top of the stack. A value is pushed in to top of the stack or taken out (poped) from the top of the stack. The stack segment can be initialized as follows:

STACK SEG SEGMENT STACK AND ANALYSIS OF THE SECOND STACK

DW 100

DUP (0)

TOS LABEL

WORD

STACK SEG ENDS

CODE SEGMENT

ASSUME CS:CODE, SS:STACK SEG

MOV AX, STACK SEG

MOV SS,AX

; initialise stack segment

Company to the second of the contract of

The transfer of the confidence of a second confidence of a second confidence of the second confi

The territory of the

LEA SP,TOP

; initialise stack pointer

CODE ENDS

END

The directive STACK SEG SEGMENT STACK declares the logical segment for the stack segment. DW 100 DUP(0) assigns actual size of the stack to 100 words. All locations of this stack are initialized to zero. The stacks are identified by the stack top and that is why the Label Top of Stack (TOS) has been selected. Please note that the stack in 8086 is a WORD stack. Stack facilities involve the use of indirect addressing through a special register, the stack pointer (SP). SP is automatically decremented as items are put on the stack and incremented as they are retrieved. Putting something on to stack is called a PUSH and taking it off is called a POP. The address of the last element pushed on to the stack is known as the top of the stack (TOS).

Name	Mnemonics	Description
Push onto the stack	PUSH SRC	SP←SP – 2
		SP+1 and SP location are assign the SRC
Pop from the stack	POP DST	DST is a assigned values
in a super Calonia (1885).	esptin water did by the com-	stored at stack top SP← SP + 2

4.3.2 Far and Near Procedures

Procedure provides the primary means of breaking the code in a program into modules. Procedures have one major disadvantage, that is, they require extra code to

April 18 to the forting the first the action of the expression

Assembly Language Programming

join them together in such a way that they can communicate with each other. This extra code is sometimes referred to as linkage overhead.

A procedure call involves:


- 1. Unlike other branch instructions, a procedure call must save the address of the next instruction so that the return will be able to branch back to the proper place in the calling program.
- 2. The registers used by the procedures need to be stored before their contents are changed and then restored just before the procedure is finished.
- 3. A procedure must have a means of communicating or sharing data with the procedures that call it, that is parameter passing.

Calls, Returns, and Procedures definitions in 8086

The 8086 microprocessor supports CALL and RET instructions for procedure call.


The CALL instruction not only branches to the indicated address, but also pushes the return address onto the stack. In addition, it also initialized IP with the address of the procedure. The RET instructions simply pops the return address from the stack. 8086 supports two kinds of procedure call. These are FAR and NEAR calls.

The NEAR procedure call is also known as Intrasegment call as the called procedure is in the same segment from which call has been made. Thus, only IP is stored as the return address. The IP can be stored on the stack as:

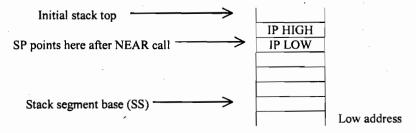

Please note the growth of stack is towards stack segment base. So stack becomes full on an offset 0000h. Also for push operation we decrement SP by 2 as stack is a word stack (word size in 8086 = 16 bits) while memory is byte organised memory.

FAR procedure call, also known as intersegment call, is a call made to separate code segment. Thus, the control will be transferred outside the current segment. Therefore, both CS and IP need to be stored as the return address. These values on the stack after the calls look like:

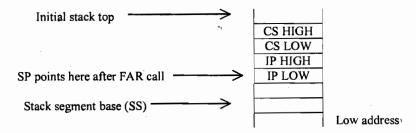

When the 8086 executes the FAR call, it first stores the contents of the code segment register followed by the contents of IP on to the stack. A RET from the NEAR procedure. Pops the two bytes into IP. The RET from the FAR procedure pops four bytes from the stack.

Procedure is defined within the source code by placing a directive of the form:

<Procedure name> PROC <Attribute>

A procedure is terminated using:

<Procedure name> ENDP

The procedure name> is the identifier used for calling the procedure and the <attribute> is either NEAR or FAR. A procedure can be defined in:

- The same code segment as the statement that calls it. 1.
- A code segment that is different from the one containing the statement that calls 2. it, but in the same source module as the calling statement.
- 3. A different source module and segment from the calling statement.

In the first case the <attribute> code NEAR should be used as the procedure and code are in the same segment. For the latter two cases the <attribute> must be FAR.

Let us describe an example of procedure call using NEAR procedure, which contains a call to a procedure in the same segment.

PROGRAM 2:

: REGISTERS

READ NEXT: IN

AND

MOV

CALL

AX, 0FFFH

[SI], AX

WAIT

Write a program that collects in data samples from a port at 1 ms interval. The upper 4 bits collected data same as mastered and stored in an array in successive locations.

:Uses CS, SS, DS, AX, BX, CX, DX, SI, SP

```
; PROCEDURES
                  : Uses WAIT
DATA SEG
              SEGMENT
      PRESSURE
                                       DUP(0)
                                                ; Set up array of 100 words
                      DW
                               100
      NBR_OF_SAMPLES
                              EQU
                                       100
       PRESSURE_PORT EQU
                              0FFF8h
                                                ; hypothetical input port
DATA SEG
              ENDS
STACK SEG SEGMENT STACK
                                                ; set stack of 40 words
       DW
                 40
                              DUP(0)
       STACK TOP LABEL WORD
STACK_SEG ENDS
CODE SEG
             SEGMENT '
      ASSUME CS:CODE SEG, DS:DATA SEG, SS:STACK SEG
START:
          MOV
                  AX, DATA SEG
                                           ; Initialise data segment register
          MOV
                  DS, AX
                  AX, STACK_SEG
          MOV
                                           ; Initialise stack segment register
          MOV
                  SS, AX
                  SP, OFFSET STACK - TOP; initialise stack pointer top of
          MOV
                                            ; stack
          LEA
                  SI, PRESSURE
                                            SI points to start of array
                                            : PRESSURE
          MOV
                  BX, NBR_OF_SAMPLES
                                            ; Load BX with number
                                            ; of samples
                  DX, PRESSURE PORT
                                            ; Point DX at input port
          MOV
                                           ; it can be any A/D converter or
                                            ; data port.
                      AX, DX
                                       ; Read data from port
```

; please note use of IN instruction

; Mask upper 4 bits of AX

; Store data word in array ; call procedures wait for delay

	INC INC DEC JNZ	SI SI BX READ_NEXT	; Increment SI by two as dealing with ; 16 bit words and not bytes ; Decrement sample counter ; Repeat till 100 ; samples are collected
STOP:	NOP		
WAIT	PROC	NEAR	
	MOV	CX, 2000H	; Load delay value
`		rate will be	; into CX
HERE:	LOOP	HERE	; Loop until CX = 0
	RET		The Control of the Control of
WAIT	ENDP		Bartis Commence de la servición de
CODE_SEG	ENDS		
7-2	END	e de la faire de	Let borne the control of the

Discussion:

Please note that the CALL to the procedure as above does not indicate whether the call is to a NEAR procedure or a FAR procedure. This distinction is made at the time of defining the procedure.

The procedure above can also be made a FAR procedure by changing the definition of the procedure as:

WAIT PROC FAR

WAIT ENDS

The procedure can now be defined in another segment if the need so be, in the same assembly language file.

4.3.3 Parameter Passing in Procedures

Parameter passing is a very important concept in assembly language. It makes the assembly procedures more general. Parameter can be passed to and from to the main procedures. The parameters can be passed in the following ways to a procedure:

- 1. Parameters passing through registers
- 2. Parameters passing through dedicated memory location accessed by name
- 3. Parameters passing through pointers passed in registers
- Parameters passing using stack.

Let us discuss a program that uses a procedure for converting a BCD number to binary number.

PROGRAM 3:

Conversion of BCD number to binary using a procedure.

Algorithm for conversion procedure:

Take a packed BCD digit and separate the two digits of BCD.

Multiply the upper digit by 10 (0Ah)

Add the lower digit to the result of multiplication

The implementation of the procedure will be dependent on the parameter-passing scheme. Let us demonstrate this with the help of three programs.

Program 3 (a): Use of registers for parameter passing: This program uses AH register for passing the parameter.

We are assuming that data is available in memory location. BCD and the result is stored in BIN

; storage for binary value

; stack of 200 words

:REGISTERS : Uses CS, DS, SS, SP, AX ;PROCEDURES : BCD-BINARY DATA SEG SEGMENT DB 25h BCD ; storage for BCD value BIN DB? DATA SEG ENDS STACK SEG SEGMENT STACK: DW 200 DUP(0) TOP STACK LABEL WORD STACK SEG **ENDS**

CODE SEG SEGMENT

ASSUME CS:CODE SEG, DS:DATA SEG, SS:STACK SEG START: MOV: AX, DATA SEG ; Initialise data segment ; Using AX register *** (6182) MOV DS, AX MOV AX, STACK SEG ; Initialise stack ; Segment register. Why MÒV SS, AX ; stack? MOV SP, OFFSET TOP_STACK; Initialise stack pointer MOV AH, BCD

; Do the conversion CALL **BCD BINARY** ; Store the result in the MOV BIN, AH ; memory

; Remaining program can be put here

: BCD_BINARY - Converts BCD numbers to binary. :PROCEDURE

: AH with BCD value as to the second of the :INPUT : AH with binary value OUTPUT. 17 4, 1 -

;DESTROYS : AX

BCD BINARY PROC NEAR

PUSHF ; Save flags **PUSH** BX; and registers used in procedure PUSH ; before starting the conversion ; Do the conversion MOV BH, AH ; Save copy of BCD in BH AND BH, 0Fh ; and mask the higher bits. The lower digit ; is in BH AND AH, 0F0h ; mask the lower bits. The higher digit is in AH ; but in upper 4 bits. ; so move upper BCD digit to lower MOV CH, 04 ROR AH, CH : four bits in AH MOV AL, AH ; move the digit in AL for multiplication MOV. BH, 0Ah ; put 10 in BH MUL BH ; Multiply upper BCD digit in AL ; by 0Ah in BH, the result is in AL ; the maximum/minimum number would not MOV AH. AL ; exceed 8 bits so move AL to AH ADD ; End of conversion, binary result in AH

; Restore registers POP CXBXPOP POPF

RET ; and return to calling program BCD_BINARY ENDP

CODE_SEG ENDS

END START

Discussion:

The above program is not an optimum program, as it does not use registers minimally. By now you should be able to understand this module. The program copies the BCD number from the memory to the AH register. The AH register is used as it is in the procedure. Thus, the contents of AH register are used in calling program as well as procedure; or in other words have been passed from main to procedure. The result of the subroutine is also passed back to AH register as returned value. Thus, the calling program can find the result in AH register.

The advantage of using the registers for passing the parameters is the ease with which they can be handled. The disadvantage, however, is the limit of parameters that can be passed. For example, one cannot pass an array of 100 elements to a procedure using registers.

Passing Parameters in General Memory

The parameters can also be passed in the memory. In such a scheme, the name of the memory location is used as a parameter. The results can also be returned in the same variables. This approach has a severe limitation. It is that you will be forced to use the same memory variable with that procedure. What are the implications of this bound? Well in the example above we will be bound that variable BCD must contain the input. This procedure cannot be used for a value stored in any other location. Thus, it is a very restrictive method of procedural call.

Passing Parameters Using Pointers

This method overcomes the disadvantage of using variable names directly in the procedure. It uses registers to pass the procedure pointers to the desired data. Let us explain it further with the help of a newer version of the last program.

Program 3 (c) version 2:

DATA SEG	SEGMENT	•		
-	BCD	DB	25h	; Storage for BCD test value
•	BIN	DB ·	?	; Storage for binary value
DATA_SEG	ENDS			
STACK_SEG S		ACK	(-)	
TOD 6	DV		UP(0)	; Stack of 100 words
-	ACK LABEL	WORD		
STACK_SEG E	INDS		•	- '
CODE SEG	SEGMENT			

STACK_SEG	ENDS		• •
CODE_SEG	SEGME	NT E CS:CODE SEG, DS:DATA	SEG, SS:STACK SEG
START:	MOV	AX, DATA SEG	; Initialize data
	MOV	DS, AX	; segment using AX register
	MOV	AX, STACK_SEG	; initialize stack
A Company	MOV	SS, AX	; segment. Why stack?
	MOV	SP, OFFSET TOP_STACK	; initialize stack pointer
; Put pointer to	BCD stor	rage in SI and DI prior to proce	dure call.
	MOV	SI, OFFSET BCD	; SI now points to BCD_IN
**	MOV	DI, OFFSET BIN	; DI points BIN VAL

; procedure ; Continue with program ; here

; PROCEDURE ; INPUT ; OUTPUT ; DESTROYS	: SI p	D_BINARY Converts BCD numbers to binary. points to location in memory of data points to location in memory for result thing
BCD BINARY	PROC	NEAR

CD_BINARY	PROC N	EAR
PUSHF	١.	; Save flag register
PUSH	AX	; and AX registers
PUSH	$\mathbf{B}\mathbf{X}$; BX
PUSH	CX	; and CX
MOV	AL, [SI]	; Get BCD value from memory
		; for conversion
MOV	BL, AL	; copy it in BL also
AND	BL, 0Fh	; and mask to get lower 4 digits
AND	AL, 0F01	
MOV	CL, 04	; initialize counter CL so that upper digit
ROR	AL, CL	; in AL can be brought to lower 4 bit
		; positions in AL
MOV	BH, 0Ah	; Load 10 in BH
MUL	BH	; Multiply upper digit in AL by 10
		; The result is stored in AL
ADD	AL, BL	; Add lower BCD digit in BL to result of
		; multiplication

; End of conversion, now restore the original values prior to call. All calls will be in reverse order to save above. The result is in AL register.

, icverse order to save	above. The result is	in AL register.
MOV	`[DI], AL	; Store binary value to memory
POP	CX	; Restore flags and
POP	BX	; registers
POP	AX ·	
POPF		
RET	V	,
BCD_BINARY	ENDP	
CODE SEG	ENDS	
END	START	

Discussion:

In the program above, SI points to the BCD and the DI points to the BIN. The instruction MOV AL,[SI] copies the byte pointed by SI to the AL register. Likewise, MOV [DI], AL transfers the result back to memory location pointed by DI.

This scheme allows you to pass the procedure pointers to data anywhere in memory. You can pass pointer to individual data element or a group of data elements like arrays and strings. This approach is used for parameters passing to BIOS procedures.

Passing Parameters Through Stack

The best technique for parameter passing is through stack. It is also a standard technique for passing parameters when the assembly language is interfaced with any high level language. Parameters are pushed on the stack and are referenced using BP register in the called procedure. One important issue for parameter passing through stack is to keep track of the stack overflow and underflow to keep a check on errors. Let us revisit the same example, but using stack for parameter passing.

PROGRAM 3: Version 3

```
DATA SEG
               SEGMENT
               BCD
                              DB
                                       25h
                                               ; Storage for BCD test value •
               BIN
                             DB.
                                               ; Storage for binary value
                                       ?
DATA SEG
               ENDS
STACK SEG
               SEGMENT
                              STACK
                                               ; Stack of 100 words
               DW
                              100 DUP(0)
               TOP STACK LABEL WORD
STACK SEG
               ENDS
CODE SEG
               SEGMENT
       ASSUME CS:CODE SEG, DS:DATA_SEG, SS:STACK_SEG
START:
                                                ; Initialise data segment
               MOV
                       AX, DATA
               MOV
                       DS, AX
                                                ; using AX register
                       AX, STACK-SEG.
               MOV
                                                ; initialise stack segment
               MOV
                       SS, AX
                                                : using AX register
             MOV
                       SP, OFFSET TOP STACK; initialise stack pointer
             MOV
                       AL, BCD
                                                : Move BCD value into AL
                     AX
                                                ; and push it onto word stack
               PUSH
               CALL
                       BCD BINARY
                                                : Do the conversion
               POP
                       AX1
                                                ; Get the binary value
               MOV BIN, AL
                                                ; and save it
                                                ; Continue with program
              BNOP:
                       BCD BINARY Converts BCD numbers to binary.
: PROCEDURE
                       : None - BCD value assumed to be on stack before call
; INPUT
                       : None - Binary value on top of stack after return
; OUTPUT
; DESTROYS
                       : Nothing
                       NEAR:
BCD BINARY
               PROC
               PUSHF
                                                 ; Save flags
                                                and registers! AX
               PUSH
                       AX
                                                 ; BX
               PUSH
                       BX
               PUSH
                       CX
                                                 ; CX
                                               BP. Why BP?
               PUSH
                       BP
                       BP, SP
                                                 : Make a copy of the
               MOV
                                                 stack pointer in BP
                                                 ; Get BCD number from
               MOV
                       AX, [BP+12]
                                                 ; stack. But why it is on
: BP+12 location? Please note 5 PUSH statements + 1 call which is intra-segment (so
; just IP is stored) so total 6 words are pushed after AX has been pushed and since it is
; a word stack so the BCD value is stored on 6 \times 2 = 12 locations under stack. Hence
; [BP + 12] (refer to the figure given on next page).
               MOV
                       BL, AL
                                     ; Save copy of BCD in BL
                       BL, OFh
               AND
                                      mask lower 4 bits
               AND
                       AL, FOH
                                      Separate upper 4 bits
               MOV
                       CL, 04
                                      Move upper BCD digit to low
                       AL, CL
                                     ; position BCD digit for multiply location
               ROR
                                      ; Load 10 in BH
               MOV
                       BH, 0Ah
                       BH
                                       ; Multiply upper BCD digit in AL by 10
               MUL
                                      the result is in AL
 MOV [BP + 12], AX Put binary result on stack
     with the less; Restore flags and registers and to constron the country
                       BP Decreber with a continue of the continue of the
               POP
               POP
                       .CX..g the William guident half latentie is a common of its envertic time of
               POP
                       BX
               POP
                        AX
```


POPF RET

BCD_BINARY CODE_SEG ENDP ENDS

END START

Discussion:

The parameter is pushed on the stack before the procedure call. The procedure call causes the current instruction pointer to be pushed on to the stack. In the procedure flags, AX, BX, CX and BP registers are also pushed in that order. Thus, the stack looks to be:

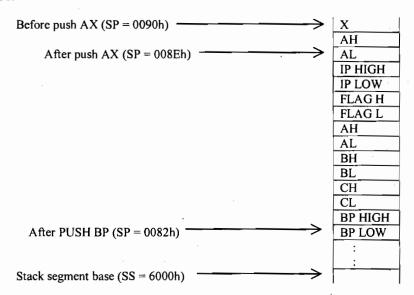

The instruction MOV BP, SP transfers the contents of the SP to the BP register. Now BP is used to access any location in the stack, by adding appropriate offset to it. For example, MOV AX, [BP + 12] instruction transfers the word beginning at the 12th byte from the top of the stack to AX register. It does not change the contents of the BP register or the top of the stack. It copies the pushed value of AH and AL at offset 008Eh into the AX register. This instruction is not equivalent to POP instruction.

Stacks are useful for writing procedures for multi-user system programs or recurvise procedures. It is a good practice to make a stack diagram as above while using procedure call through stacks. This helps in reducing errors in programming.

4.3.4 External Procedures

These procedures are written and assembled in separate assembly modules, and later are linked together with the main program to form a bigger module. Since the addresses of the variables are defined in another module, we need segment combination and global identifier directives. Let us discuss them briefly.

Segment Combinations

In 8086 assembler provides a means for combining the segments declared in different modules. Some typical combine types are:

- 1. PUBLIC: This combine directive combines all the segments having the same names and class (in different modules) as a single combined segment.
- 2. COMMON: If the segments in different object modules have the same name and the COMMON combine type then they have the same beginning address. During execution these segments overlay each other.

Assembly Language Programming

3. STACK: If the segments in different object modules have the same name and the combine type is STACK, then they become one segment, with the length the sum of the lengths of individual segments.

These details will be more clear after you go through program 4 and further readings.

Identifiers

- a) Access to External Identifiers: An external identifier is one that is referred in one module but defined in another. You can declare an identifier to be external by including it on as EXTRN in the modules in which it is to be referred. This tells the assembler to leave the address of the variable unresolved. The linker looks for the address of this variable in the module where it is defined to be PUBLIC.
- b) **Public Identifiers:** A public identifier is one that is defined within one module of a program but potentially accessible by all of the other modules in that program. You can declare an identifier to be public by including it on a PUBLIC directive in the module in which it is defined.

Let us explain all the above with the help of the following example:

PROGRAM 4:

Write a procedure that divides a 32-bit number by a 16-bit number. The procedure should be general, that is, it is defined in one module, and can be called from another assembly module.

```
:Uses CS, DS, SS, AX, SP, BX, CX
; REGISTERS
                    : Far Procedure SMART DIV
; PROCEDURES
                         WORD
                                   PUBLIC
            SEGMENT
DATA SEG
                         DW
                                   2345h, 89AB
                                                : Dividend =
            DIVIDEND
                                                ; 89AB2345H
                         DW
                                                ; 16-bit divisor
             DIVISOR
                                   5678H
                         DB
                                   'INVALID DIVIDE', '$'
             MESSAGE
DATA SEG
             ENDS
MORE_DATA SEGMENT
                         WORD
                                   2 DUP(0)
                         DW
         QUOTIENT
         REMAINDER
                         nW
MORE_DATA ENDS
                         STACK
STACK SEG
              SEGMENT
                                             ; Stack of 100 words
                         100 DUP(0)
         DW
                                             ; top of stack pointer
         TOP - STACK
                                   WORD
                         LABEL
              ENDS
STACK SEG
PUBLIC
              DIVISOR
PROCEDURES SEGMENT PUBLIC
                                        ; SMART DIVis declared as an
                                        ; external label in procedure
      EXTRN SMART DIV: FAR
                                        ; segment of type FAR
PROCEDURES ENDS
; declare the code segment as PUBLIC so that it can be merged with other PUBLIC
; segments
                                   PUBLIC
CODE SEG
             SEGMENT
                          WORD
       ASSUME CS:CODE, DS:DATA_SEG, SS:STACK SEG
                                           ; Initialize data segment
         MOV
                AX, DATA_SEG
START:
         MOV
                DS, AX
                                           ; using AX register
```

; Initialize stack segment

AX, STACK SEG

MOV

MOV SS. AX ; using AX register MOV SP, OFFSET TOP STACK : Initialize stack pointer MOV AX, DIVIDEND : Load low word of : dividend MOV DX DIVIDEND + 2 : Load high word of ; dividend : Load divisor MOV CX, DIVISOR CALL SMART DIV

This procedure returns Quotient in the DX:AX pair and Remainder in CX register.

; Carry bit is set if result is invalid.

JNC SAVE ALL **JMP** STOP

; IF carry = 0, result valid ; ELSE carry set, don't

; save result

ASSUME DS:MORE DATA ; Change data segment : Save old DS SAVE ALL:

PUSH DS MOV BX, MORE DATA

; Load new data segment

MOV DS. BX : register

MOV QUOTIENT, AX ; Store low word of

; quotient

MOV ; Store high word of QUOTIENT + 2, DX

; quotient

; Restore initial DS

MOV REMAINDER, CX : Store remainder

ASSUME DS:DATA SEG

POP DS

JMP ENDING

STOP: MOV DL, OFFSET MESSAGE

MOV AX, AH 09H

INT 21H

ENDING: NOP

CODE SEG **ENDS**

END START

Discussion:

PUBLIC

The linker appends all the segments having the same name and PUBLIC directive with segment name into one segment. Their contents are pulled together into consecutive memory locations.

The next statement to be noted is PUBLIC DIVISOR, It tells the assembler and the linker that this variable can be legally accessed by other assembly modules. On the other hand EXTRN SMART DIV:FAR tells the assembler that this module will access a label or a procedure of type FAR in some assembly module. Please also note that the EXTRN definition is enclosed within the PROCEDURES SEGMENT PUBLIC and PROCEDURES ENDS, to tell the assembler and linker that the procedure SMART DIV is located within the segment PROCEDURES and all such PROCEDURES segments need to be combined in one. Let us now define the PROCEDURE module:

; PROGRAM MODULE **PROCEDURES**

; INPUT : Dividend - low word in AX, high word in DX, Divisor in CX : Quotient - low word in AX, high word in DX. Remainder in CX : OUTPUT

> ; Carry - carry flag is set if try to divide by zero

: AX, BX, CX, DX, BP, FLAGS ; DESTROYS

SMART DIV

DATA SEG **PUBLIC** SEGMENT ; This block tells the assembler that ; the divisor is a word variable and is EXTRN DIVISOR: WORD DATA SEG **ENDS** ; external to this procedure. It would be ; found in segment named DATA SEG

; SMART DIV is available to

; other modules. It is now being defined

			, III PROCEDURES SEGMENT.
PROCEDURES	SEGMENT	PUBLIC	
SMART_DIV	PROC	FAR	
ASSUME	CS:PROCEDU	JRES, DS:	DATA SEG
CMP	DIVISOR, 0		; This is just to demonstrate the use of
			; external variable, otherwise we can
			; check it through CX register which
			; contains the divisor.
JE	ERROR_EXI	IT .	; IF divisor = 0, exit procedure
MOV	BX, AX		; Save low order of dividend
MOV	AX, DX		; Position high word for 1st divide
MOV	DX, 0000h		;•Zero DX
DIV	$\mathbf{C}\mathbf{X}$; DX:AX/CX, quotient in AX,
			; remainder in DX
MOV	BP, AX		; transfer high order of final result to BP
MOV	AX, BX		; Get back low order of dividend. Note
			; DX contains remainder so DX : AX is
			; the actual number
DIV	CX		; DX:AX/CX, quotient in AX,
			; 2 nd remainder that is final remainder
			; in DX
MOV	CX, DX		; Pass final remainder in CX
MOV	DX, BP		; Pass high order of quotient in DX
			; AX contains lower word of quotient
CLC			; Clear carry to indicate valid result
JMP	EXIT		; Finished
ERROR_EXIT: ST	C		; Set carry to indicate divide by zero
EXIT: RET			
SMART_DIV	ENDP		
PROCEDURES	ENDS		
END)		

Discussion:

The procedure accesses the data item named DIVISOR, which is defined in the main, therefore the statement EXTRN DIVISOR: WORD is necessary for informing assembler that this data name is found in some other segment. The data type is defined to be of word type. Please not that the DIVISOR is enclosed in the same segment name as that of main that is DATA_SEG and the procedure is in a PUBLIC segment.

ø	Check Your Progress 2	F
1.	State True or False	
(a)	A NEAR procedure can be called only in the segment it is defined.	
(b)	A FAR call uses one word in the stack for storing the return address.	
(c)	While making a call to a procedure, the nature of procedure that is NEAR or FAR must be specified.	
(d)	Parameter passing through register is not suitable when large numbers of parameters are to be passed.	
(e)	Parameter passing in general memory is a flexible way of passing parameters.	
(f)	Parameter passing through pointers can be used to pass a group of data elements.	

(f)	Parameter passing through stack is used whenever assembly language programs are interfaced with any high level language programs.	Assembly Languag Programmin (Part II
(h)	In multiuser systems parameters should be passed using pointers.	
(i)	A variable say USAGE is declared in a PROCEDURE segment, however it is used in a separate module. In such a case the declaration of USAGE should contain EXTRN verb.	
(i)	A segment if declared PUBLIC informs the linker to append all the segments with same name into one.	
2.	Show the stack if the following statements are encountered in sequence.	

a) Call to a NEAR procedure FIRST at 20A2h:0050h b)

- Call to a FAR procedure SECOND at location 3000h:5055h
- RETURN from Procedure FIRST. c)

INTERFACING ASSEMBLY LANGUAGE ROUTINES TO HIGH LEVEL LANGUAGE **PROGRAMS**

By now you can write procedures, both external and internal, and pass parameters, especially through stack, let us use these concepts, to see how assembly language can be interfaced to some high level language programs. It is very important to learn this concept, because then you can combine the advantages of both the types of languages, that is, the ease of programming of high level languages and the speed and the scope of assembly language. Assembly language can be interfaced with most of the high level languages like C, C + + and database management systems.

What are the main considerations for interfacing assembly to HLL? To answer that we need to answer the following questions:

- How is the subroutine invoked?
- How are parameters passed?
- How are the values returned?
- How do you declare various segments so that they are consistent across calling program?

The answer to the above questions are dependent on the high level language (HLL). Let us take C Language as the language for interfacing. The C Language is very useful for writing user interface programs, but the code produced by a C compiler does not execute fast enough for telecommunications or graphics applications. Therefore, system programs are often written with a combination of C and assembly language functions. The main user interface may be written in C and specialized high speed functions written in assembly language.

The guidelines for calling assembly subroutines from C are:

- Memory model: The calling program and called assembly programs must be . (i) defined with the same memory model. One of the most common convention that makes NEAR calls is .MODEL SMALL, C
- The naming convention normally involve an underscore () character preceding the segment or function name. Please note, however, this underscore is not used while making a call from C function. Please be careful about case sensitivity.

Assembly Language Programming

You must give a specific segment name to the code segment of your assembly language subroutine. The name varies from compiler to compiler. Microsoft C, and Turbo C require the code segment name to be_TEXT or a segment name with suffix_TEXT. Also, it requires the segment name _DATA for the data segment.

(iii) The arguments from C to the assembly language are passed through the stack. For example, a function call in C:

```
function_name (arg1, arg2, ..., argn);
```

would push the value of each argument on the stack in the reverse order. That is, the argument argn is pushed first and arg1 is pushed last on the stack. A value or a pointer to a variable can also be passed on the stack. Since the stack in 8086 is a word stack, therefore, values and pointers are stored as words on stack or multiples of the word size in case the value exceeds 16 bits.

- (iv) You should remember to save any special purpose registers (such as CS, DS, SS, ES, BP, SI or DI) that may be modified by the assembly language routine. If you fail to save them, then you may have undesirable/ unexplainable consequences, when control is returned to the C program. However, there is no need to save AX, BX, CX or DX registers as they are considered volatile.
- (v) Please note the compatibility of data types:

char Byte (DB)
int Word (DW)
long Double Word (DD)

(vi) Returned value: The called assembly routine uses the followed registers for returned values:

char AL
Near/ int AX
Far/ long DX : AX

Let us now look into some of the examples for interfacing.

4.4.1 Simple Interfacing

The following is a sample of the coding, used for procedure interfacing:

PUBLIC CUROFF

```
_TEXT SEGMENT WORD PUBLIC 'CODE'
ASSUME CS:_TEXT
_CUROFF PROC NEAR ; for small model
```

The same thing can be written using the newer simplified directives in the following manner:

PUBLIC CUROFF .MODEL small,C .CODE CUROFF PROC

This second source code is much cleaner and easier to read. The directives .MODEL and .CODE instruct the assembler to make the necessary assumptions and adjustments so that the routine will work with a small model of C program. (Please

refer to Assembler manuals on details on models of C program. The models primarily differ in number of segments).

PROGRAM 5:

Write an assembly function that hides the cursor. Call it from a C program.

```
. PUBLIC CUROFF
              . MODEL small, C
              . CODE
CUROFF PROC
                                      ; get the current cursor position
     MOV
              AH.3
                                       ; empty BX register
     XOR
              BX,BX
                                      ; use int 10hto do above
     INT
              10h
              CH,20h
                                      ; force to OFF condition
     OR
                                       ; set the new cursor values
     MOV
              AH,01
              10h
     INT
     RET
CUROFF ENDP
              END
```

For details on various interrupt functions used in this program refer to further readings.

The C program to test this routine is as follows:

```
# include < stdio.h
void curoff(void);
void main()

printf("%s\n, "The cursor is now turning off);
curoff();</pre>
```

You can write another procedure in assembly language program to put the cursor on. This can be done by replacing OR CH,20h instruction by AND CH,1Fh. You can call this new function from C program to put the cursor on after the curoff.

4.4.2 Interfacing Subroutines With Parameter Passing

Let us now write a C program that calls the assembly program for parameter passing. Let us extend the previous two programs such that if on function call 0 is passed then cursor is turned off and if 1 is passed then cursor is turned on. The calling C program for such may look like:

```
# include < stdio.h
void cursw(int);
void main()
{
         printf("%s\n", "the cursor is now turning off");
         cursw(0); /* call to assembly routine with 0 as parameter
         getchar();
         printf("%s\n","the cursor is now turning on");
         cursw(1); /* call to assembly routine with parameter as 1.
}</pre>
```

The variables in C or C + + are passed on the stack.

Let us now write the assembly routine:

PROGRAM 6:

Write a subroutine in C for toggling the cursor using old directives.

; use small memory model for C - near code segment

DATA	SEGMENT WORD 'DATA'				
CURVAL	EQU	[BP+4]	; parameters		
DATA	ENDS				
. -					
_TEXT	SEGMENT	BYTE PUBLI	C 'CODE'		
DGROUP	GROUP	DATA	•		
•	ASSUME	CS: TEXT,	DS:DGROUP, SS:DGROUP		
	PUBLIC	CURSW			
CURSW	PROC	_ NEAR			
_	PUSH	BP	; BP register of caller is saved		
	MOV	BP, SP	; BP is pointing to stack now		
	MOV	AX, CURVAL			
	CMP	AX, 0H			
	JZ	CUROFF	; Execute code for cursor off		
	CMP	AX, 01H			
1	JZ	CURON	; Execute code for cursor on		
	JMP	OVER	; Error in parameter, do nothing		
CUROFF:			; write code for curoff		
:			•		
:					
	JMP	OVER			
CURON:			; write code for curon		
:					
:					
OVER:	POP BP				
	RET				
CURSW	ENDP				
TEXT	ENDS				
_	END				

Why the parameter is found in [BP+4]? Please look into the following stack for the answer.

Parameter (0 or 1)	BP + 4
Return Address	BP + 2
Old value	BP + 0

PROGRAM 7:

Write a subroutine in C that toggles the cursor. It takes one argument that toggles the value between on (1) and off (0) using simplified directives:

PUBLIC CURSW .MODEL small, C .CODE

CURSW PROC switch:word

MOV	AX,SWITCH	; get flag value
XOR	AX,AX	; test zero / nonzero

// routine to test the switch and accordingly

CURSW ENDP END

In a similar manner the variables can be passed in C as pointers also. Values can be returned to C either by changing the variable values in the C data segment or by returning the value in the registers as given earlier.

4.5 INTERRUPTS

Interrupts are signals that cause the central processing unit to suspend the currently executing program and transfer to a special program called an interrupt handler. The interrupt handler determines the cause of the interrupt, services the interrupt, and finally returns the control to the point of interrupt. Interrupts are caused by events external or internal to the CPU that require immediate attention. Some external events that cause interrupts are:

- Completion of an I/O process
- Detection of a hardware failure

An 8086 interrupt can occur because of the following reasons:

- 1. Hardware interrupts, caused by some external hardware device.
- 2. Software interrupts, which can be invoked with the help of INT instruction.
- 3. Conditional interrupts, which are mainly caused due to some error condition generated in 8086 by the execution of an instruction.

When an interrupt can be serviced by a procedure, it is called as the Interrupt Service Routine (ISR). The *starting addresses* of the interrupt service routines are present in the first 1K addresses of the memory (Please refer to Unit 2 of this block). This table is called the interrupt vector table.

How can we write an Interrupt Servicing Routine? The following are the basic but rigid sequence of steps:

- 1. Save the system context (registers, flags etc. that will be modified by the ISR).
- 2. Disable the interrupts that may cause interference if allowed to occur during this ISR's processing
- Enable those interrupts that may still be allowed to occur during this ISR processing.
- 4. Determine the cause of the interrupt.
- 5. Take the appropriate action for the interrupt such as receive and store data from the serial port, set a flag to indicate the completion of the disk sector transfer, etc.
- 6. Restore the system context.
- 7. Re-enable any interrupt levels that were blocked during this ISR execution.
- 8. Resume the execution of the process that was interrupted on occurrence of the interrupt.

MS-DOS provides you facilities that enable you to install well-behaved interrupt handlers such that they will not interfere with the operating system function or other interrupt handlers. These functions are:

Function	Action
Int 21h function 25h	Set interrupt vector
Int 21h function 35h	Get interrupt vector
Int 21h function 31h	Terminate and stay residents

Assembly Language Programming

Here are a few rules that must be kept in mind while writing down your own Interrupt Service Routines:

- 1. Use Int 21h, function 35h to get the required IVT entry from the IVT. Save this entry, for later use.
- 2. Use Int 21h, function 25h to modify the IVT.
- 3. If your program is not going to stay resident, save the contents of the IVT, and later restore them when your program exits.
- 4. If your program is going to stay resident, use one of the terminate and stay resident functions, to reserve proper amount of memory for your handler.

Let us now write an interrupt routine to handle "division by zero". This file can be loaded like a COM file, but makes itself permanently resident, till the system is running.

This ISR is divided into two major sections: the initialisation and the interrupt handler. The initialisation procedure (INIT) is executed only once, when the program is executed from the DOS level. INIT takes over the type zero interrupt vector, it also prints a sign-on message, and then performs a terminate and "stay resident exit" to MS-DOS. This special exit reserves the memory occupied by the program, so that it is not overwritten by subsequent application programs. The interrupt handler (ZDIV) receives control when a divide-by-zero interrupt occurs.

CR	EQ U	ODH	; ASCII carriage return
LF	EQU	0Ah	; ASCII line feed
BEEP	EQU	07h	; ASCII beep code
BACKSP	EOU	Ó8h	; ASCII backspace code

CSEG SEGMENT PARA PUBLIC 'CODE'

ORG 100h

ASSUME CS:CSEG,DS:CSEG,ES:CSEG,SS:CSEG

		**	,
INIT P	ROC NE	AR	
	MOV	DX,OFFSET ZDIV	; reset in errupt 0 vector ; to address of new ; handler using function 25h, interrupt
	MOV	AX, 2500h	; 0 handles divide-by-zero
	INT	21h	, o handles divide by sele
	MOV	AH,09	; print identification message
	INT	21h	
			; DX assigns paragraphs of memory ; to reserve
	MOV	DX,((OFFSET PGM_I	LEN + 15)/16) + 10h
	MOV	AX,3100h	; exit and stay resident
	INT	21h	; with a return code = 0
INIT	ENDP	•	
ZDIV	PROC FA	AR ·	; this is the zero-divide; hardware interrupt handler.
	STI		; enable interrupts.
	PUSH	AX	; save general registers
	PUSH	BX	
	PUSH	CX	
	PUSH	DX	
	PUSH	SI	
*	PUSH	DI	and the second s
	PUSH	BP	
	PUSH PUSH	DS ES	
	rusn.	E5 .	•

```
MOV
                AX,CS
       MOV
                DS,AX
       MOV
                DX,OFFSET WARN
                                       ; Print warning "divide by
       MOV
                                        ; zero "and" continue or
                AH, 9
                21h
       INT
                                       ; quit?"
ZDIV1: MOV
                AH,1
                                       ; read keyboard
       INT
                21h
       CMP
                AL, 'C'
                                        ; is it 'C' or 'Q'?
       JE
                ZDIV3
                                       ; jump it is a 'C'.
       CMP
                AL, 'Q'
       JΕ
                ZDIV2
                                        ; jump it's a'Q'
       MOV
                DX, OFFSET BAD
                                        ; illegal entry, send a
       MOV
                AH,9
                                        ; beep, erase the bad char
       INT
                21h
                                        ; and try again
       JMP
                ZDIV1
ZDIV2: MOV
                AX, 4CFFh
                                        ; user wants to abort the
       INT
                21h ----
                                        ; program, return with
                                        ; return code = 255
ZDIV3: MOV
                DX,OFFSET CRLF
                                        ; user wishes to continue
       MOV
                AH,9
                                        ; send CRLF
                21h
       INT
       POP
                ES
                                        ; restore general registers
       POP
                DS
                                        ; and resume execution
                ΒP
       POP
       POP
                Dl
       POP
                SI
       POP
                DX
       POP
                CX
       POP
                BX
       POP
                AX
       IRET
ZDIV ENDP
SIGNON
                DB
                                  CR, LF, 'Divide by zero interrupt'
                DB
                                  'Handler Installed'
                DB
                                  CRLF,'$'
WARN
                DB
                                  CR, LF, 'Divide by zero detected:'
                DB
                                  CR, LF 'Quit or Continue (C/Q)?'
                DB
BAD
                DB
                                  BEEP, BACKSP, ",BACKSP,'$'
CRLF
                DB
                                  CR,LF,$'
PGM LEN
                EQU $-INIT
CSEG
        ENDS
                END
```

4.6 DEVICE DRIVERS IN ASSEMBLY

Device drivers are special programs installed by the config.sys file to control installable devices. Thus, personal computers can be expanded at some future time by the installation of new devices.

The device driver is .com file organized in 3 parts.

- 1) The leader
- 2) The strategy procedure

3) The interrupt procedure

The driver has either .sys or .exe extension and is originated at offset address 0000h.

The Header

The header contains information that allows DOS to identify the driver. It also contains pointers that allow it to chain to other drivers loaded into the system.

The header section of a device driver is 18 bytes in length and contains pointers and the name of the driver.

Following structure of the header:

CHAIN DD -1 : link to next driver
ATTR DW 0 : driver attribute
STRT DW START : address of strategy
INTER DW INT : address if interrupt
DNAME DB 'MYDRIVER' : driver name.

The first double word contains a -1 that informs DOS this is the last driver in the chain. If additional drivers are added DOS inserts a chain address in this double word as the segment and offset address. The chain address points to the next driver in the chain. This allows additional drivers installed at any time.

The attribute word indicates the type of headers included for the driver and the type of device the driver installs. It also indicates whether the driver control a character driver or a block device.

The Strategy Procedure

The strategy procedure is called when loaded into memory by DOS or whenever the controlled device request service. The main purpose of the strategy is to save the request header and its address for use by the interrupt procedure.

The request header is used by DOS to communicate commands and other informations to the interrupt procedure in the device driver

The request header contains the length of the request header as its first byte. This is necessary because the length of the request header varies from command to command. The return status word communicate information back to DOS from the device driver.

The initialise driver command (00H) is always executed when DOS initialises the device driver. The initialisation commands pass message to the video display indicating that the driver is loaded into the system and returns to DOS the amount of memory needed by the driver. You may only use DOS INT 21H functions 00H. You can get more details on strategy from the further readings.

The Interrupt Procedure

The interrupt procedure uses the request header to determine the function requested by DOS. It also performs all functions for the device driver. The interrupt procedures must respond to at least the initialised driver command (00H) and any other commands required to control the device operated by the device driver. You must refer to the further readings for more details and examples of device drivers.

Check Your Progress 3

Stat	e Tru	e or False	T F
	(a)	Assembly language routines cannot be interfaced with BASIC programs.	
	(b)	The key issue in interfacing is the selection of proper parameter passing method.	
	(c)	The value of arguments to be passed are pushed in the stack in reverse order.	
	(d)	AX, BX, CX or DX registers need not be saved in interfacing of assembly programs with high level language programs.	
	(e)	Hardware interrupts can be invoked with the help of INT function	n
2.	Wha	t are the sequences of steps in an interrupt service routine?	
_	·····	······································	•••••
4 7	CI	TAKAK A DAZ	

SUMINIARY

In the above module, we studied some programming techniques, starting from arrays, to interrupts.

Arrays can be of byte type or word type, but the addressing of the arrays is always done with respect to bytes. For a word array, the address will be incremented by two for the next access.

As the programs become larger and larger, it becomes necessary to divide them into smaller modules called procedures. The procedures can be NEAR or FAR depending upon where they are being defined and from where they are being called. The parameters to the procedures can be passed through registers, or through memory or stack. Passing parameters in registers is easier, but limits the total number of variables that can be passed. In memory locations it is straight forward, but limits the use of the procedure. Passing parameters through stack is most complex out of all, but is a standard way to do it. Even when the assembly language programs are interfaced to high level languages, the parameters are passed on stack.

Interrupt Service Routines are used to service the interrupts that could have arisen because of some exceptional condition. The interrupt service routines can be modified by rewriting them, and overwriting their entry in the interrupt vector table.

This completes the discussion on microprocessors and assembly language programming. The above programming was done for 8086 microprocessor, but can be tried on 80286 or 80386 processors also, with some modification in the assembler directives. The assembler used here is MASM, Microsoft assembler. The assembly language instructions remain the same for all assemblers, though the directives vary from one assembler to another. For further details on the assembler, you can refer to their respective manuals. You must refer to further readings for topics such as Interrupts, device drivers, procedures etc.


4.8 SOLUTIONS/ANSWERS

Check Your Progress 1

- 1. We will give you an algorithm using XLAT instruction. Please code and run the program yourself.
 - Take a sentence in upper case for example 'TO BE CONVERTED TO LOWER CASE' create a table for lower case elements.
 - Check that the present ASCII character is an alphabet in upper case. It implies that ASCII character should be greater than 40h and less than 58h.
 - If it is upper case then subtract 41h from the ASCII value of the character. Put the resultant in AL register.
 - Set BX register to the offset of lower case table.
 - Use XLAT instruction to get the required lower case value.
 - Store the results in another string.
- 2. (a) False (b) False (c) True

Check Your Progress 2

1. (a) True (b) False (c) False (d) True (e) False (f) True (g) True (h) False (i) False (j) True.

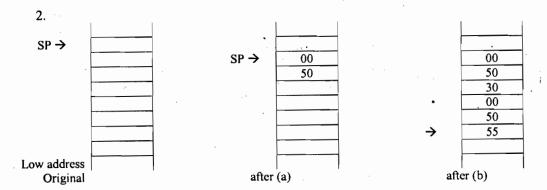

(c) The return for FIRST can occur only after return of SECOND. Therefore, the stack will be back in original state.

Check Your Progress 3

- 1. (a) False (b) False (c) True (d) True (e) False
- 2.
- · Save the system context
- · Block any interrupt, which may cause interference
- Enable allowable interrupts
- Determine the cause of interrupt
- Take appropriate action
- Restore system context
- Enable interrupts which were blocked in Step 2