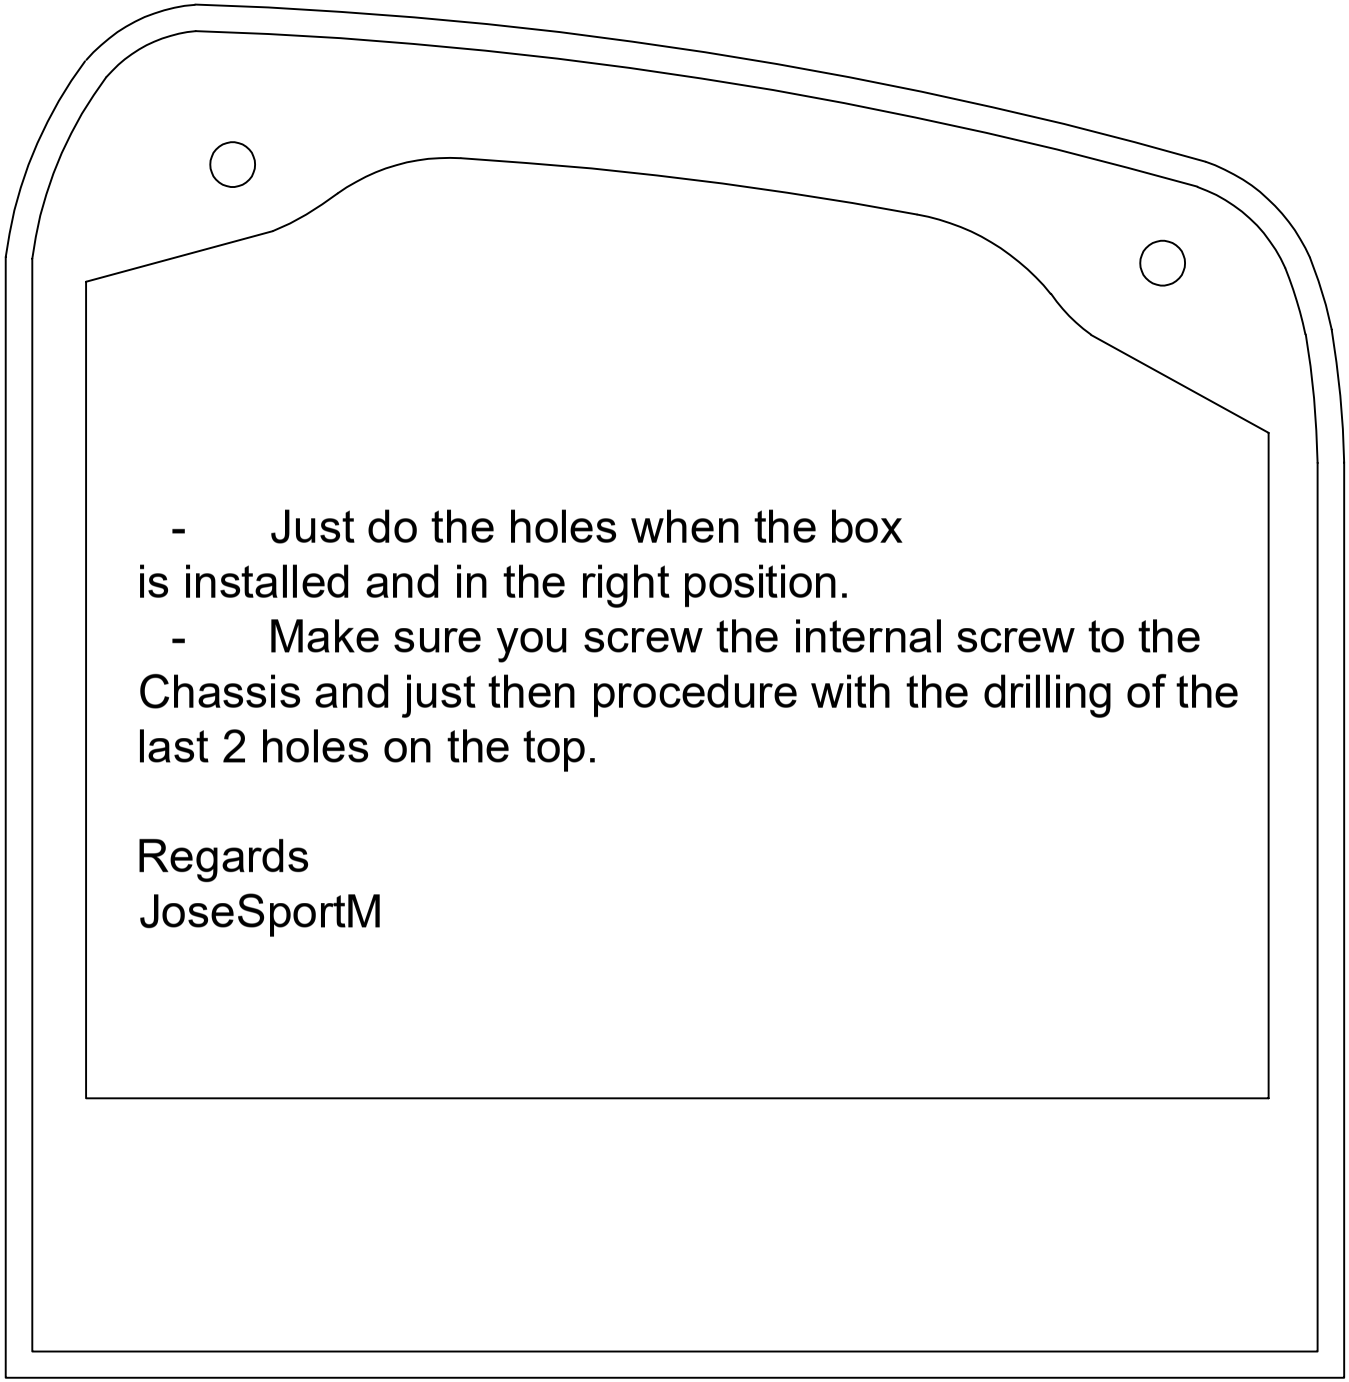

- Just do the holes when the box
is installed and in the right position.
- Make sure you screw the internal screw to the
Chassis and just then procedure with the drilling of the
last 2 holes on the top.
Regards
JoseSportM