

01 Hallway panelling

Material and cut planning pack | 8 October 2026 | Dimensions in millimetres unless shown otherwise

Three alternatives, each with a dado top at **1000 mm**. Quantities cover the hallway wall faces, including the small rear boxing and recess return. They exclude door openings and the interiors of adjoining rooms.

Option	DIY judgment	Main material allowance
1. Applied Shaker	EASY with supplier-cut strips. Medium if you rip the sheet yourself.	1 sheet of 9 mm MDF, 2440 x 1220. 6 cap lengths of 2400.
2. Fine moulded frames	MEDIUM . Forty-eight pieces need accurate mitres.	17 moulding lengths of 2400. 6 dado lengths of 2440.
3. Vertical grooved sheets	HARD for this room . Sheet fitting around heating and sockets drives the work.	5 sheets, 2440 x 1220 x 6. 6 lengths of 2440 for each cap component.

Measured inputs and proposed dimensions

Item	Basis used in this pack
Skirting height	About 90 mm. Latest user correction, replacing 95 mm.
Radiator body height / width	About 595 mm high and 795 mm wide. Valve projections are additional.
Radiator pipes	Photos show pipes above skirting and below radiator. No skirting notches are included.
Dado / skirting clearance	1000 mm rail top; proposed 5 mm gap above existing skirting. Confirm the top profile.
Wall geometry	Measured wall runs; square corners assumed. The survey has a small 20 x 10 mm closure difference.

How to use the schedules

Nominal size means the intended finished size before corner details and site variation. **Blank size** includes trimming stock. Do not batch-cut final lengths until the wall ends, profile samples and pipe positions are checked.

The older 3D previews used taller estimated skirting. These schedules use the corrected 90 mm height. Shaker uprights are now 763 mm; moulded frames are 705 mm high; grooved panels are 835 mm high. The rail remains at 1000 mm.

Stock allowances include saw cuts and spare material. They are not an instruction to buy a particular brand. Target trim sections may need a merchant cutting or machining service. Paint and adhesive allowances are on page 9.

The easiest route is Option 1 with strips supplied at width. Option 2 gives finer detail without covering the whole wall. Option 3 gives continuous texture but needs the most fitting around services.

02 Wall key and rail runs

The drawing is at 1:40 on A4 at 100%. Use the written dimensions for cutting.




Run	Wall section, in clockwise order	Nominal rail run
W2a	Rear to bathroom opening	2,000
W2b	Bathroom opening to corner	220
W3a	Corner to office opening	2,145
W3b	Office opening to storage corner	190
W4a	Storage side A - provisional	107.5
W4b	Storage side B - provisional	107.5
W5a	Storage corner to spare opening	190
W5b	Spare opening to entrance frame	2,380
W5c	Entrance frame to kitchen corner	235
W6a	Corner to kitchen opening	110
W6b	Kitchen opening to rear boxing	3,120
W7a	Rear boxing face	460
W8a	Rear recess return	180

Total: 11,445 mm (11.445 m) per continuous dado or cap component. Small wall sections receive rail but no Shaker bay or moulded frame. W4a and W4b assume the 990 mm storage frame is centred in the 1205 mm end wall.

03 Option 1: Shaker cuts

EASY with pre-cut strips | Target sections: 60 x 9 mm battens, 70 x 9 mm top rail, 12 high x 18 deep cap



Rail top: 1000 above floor

Top rail: 70 high; cap: 12 high

Upright: 763 between rails

Bottom rail: 95 to 155 above floor

Skirting: about 90 high; 5 gap above

Material	Installed quantity	Suggested supply
60 x 9 MDF: uprights + bottom rails	23.839 m gross	12 strips x 2440 (11 used, 1 spare)
70 x 9 MDF: flat top rail	11.445 m	6 strips x 2440 (5 used, 1 spare)
12 high x 18 deep cap	11.445 m	6 lengths x 2400 (5 used, 1 spare)

The MDF strips fit within one 2440 x 1220 x 9 mm sheet: $12 \times 60 + 6 \times 70 + 18 \times 3$ mm saw cuts = 1194 mm across the sheet. This leaves 26 mm for edge trimming. Ask the cutting service to confirm its saw width and minimum strip size. No backing sheets are needed.

Run	Bottom rail: quantity x length	Uprights: quantity x length
W2a	1 x 2,000	3 x 763
W3a	1 x 2,145	4 x 763
W5b	1 x 2,380	4 x 763
W6b	1 x 3,120	5 x 763
W7a	1 x 460	2 x 763

18 uprights in total. W6b is 3120 mm, so join two 1560 mm nominal pieces for its bottom rail and top rail when using 2440 mm stock. Page 4 gives longer rough blanks. All thirteen dado/cap runs use page 2.

Radiator-wall fitting

W2a and W3a bottom rails are full-span **material allowances**. The photos show pipes in this low wall zone. Split or omit the rail locally so that trim does not touch pipes, valves or covers. Set the adjacent upright positions from the complete valve footprint, not just the 795 mm radiator body. The 18-upright count is provisional on those two walls.

Installation order

Mark a level 1000 mm top line. Dry-fit cap and top rail at one doorway. Mark the bottom rail and uprights. Check the two radiator bays and sockets before fixing. Use square butt joints in the Shaker grid; fit corner and exposed cap ends to the actual wall angles. Fill, prime and paint after checking the full layout.

04 Option 1: stock cutting

ROUGH BLANKS, not finished cuts | 3 mm saw loss per cut | Keep each piece labelled

MDF blanks include 30 mm extra length per piece, plus a 10 mm stock-end allowance. B = bottom rail; U = upright. The W6b split is labelled -1 / -2. Retain the twelfth 60 mm strip and sixth 70 mm strip as spares.

60 x 9 mm strips, each 2440 mm long

Strip	Blank labels and lengths	Left over
1	W5b-B1: 2,410	17
2	W3a-B1: 2,175	252
3	W2a-B1: 2,030	397
4	W6b-B1-1: 1,590 + W2a-U1: 793	41
5	W6b-B1-2: 1,590 + W2a-U2: 793	41
6	W2a-U3: 793 + W3a-U1: 793 + W3a-U2: 793	42
7	W3a-U3: 793 + W3a-U4: 793 + W5b-U1: 793	42
8	W5b-U2: 793 + W5b-U3: 793 + W5b-U4: 793	42
9	W6b-U1: 793 + W6b-U2: 793 + W6b-U3: 793	42
10	W6b-U4: 793 + W6b-U5: 793 + W7a-U1: 793	42
11	W7a-U2: 793 + W7a-B1: 490	1,141

70 x 9 mm strips, each 2440 mm long

Strip	Blank labels and lengths	Left over
1	W5b: 2,410	17
2	W3a: 2,175 + W3b: 220	29
3	W2a: 2,030 + W2b: 250 + W4a: 138	3
4	W6b-1: 1,590 + W7a: 490 + W6a: 140 + W4b: 138	60
5	W6b-2: 1,590 + W5c: 265 + W5a: 220 + W8a: 210	133


Cap, each 2400 mm long

Stock	Blank labels and lengths	Left over
1	W5b: 2,390	2
2	W3a: 2,155 + W2b: 230	4
3	W2a: 2,010 + W5c: 245 + W6a: 120	11
4	W6b-1: 1,570 + W7a: 470 + W3b: 200 + W4a: 118	25
5	W6b-2: 1,570 + W5a: 200 + W8a: 190 + W4b: 118	305

Cap blanks allow 10 mm extra per piece, with only 5 mm total stock-end trimming. Some lengths are tight. Measure stock before cutting and use the sixth spare length if it is short, damaged, or needs a larger corner return. A 2440 mm cap length gives more trimming room.

05 Option 2: moulded frames

MEDIUM | Target panel mould: about 22 mm wide x 11 mm deep | Dado: about 50 mm high x 19 mm deep

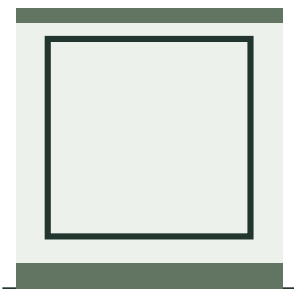

- Rail top: 1000 above floor
- Dado: 50 high; bottom at 950
- Frame outer height: 705
- Frame bottom: 185; top: 890
- All frame cuts use outer long points

Material	Installed quantity	Suggested supply
Decorative panel mould	33.562 m	17 x 2400 mm (16 used, 1 spare)
One-piece shaped dado	11.445 m	6 x 2440 mm (5 used, 1 spare)

A single shaped dado replaces the three small profile layers used to illustrate it in Blender. Select a sample before cutting. No backing sheet is required. Include one full frame behind each radiator. Check the pipe and bracket clearances on site.

Frame	Left edge*	2 horizontal cuts	2 vertical cuts
W2a-F1	95	815	705
W2a-F2	1,005	900	705
W3a-F1	95	460	705
W3a-F2	650	805	705
W3a-F3	1,550	500	705
W5b-F1	1,161	629.3	705
W5b-F2	1,950.3	629.3	705
W5b-F3	2,739.7	629.3	705
W6b-F1	1,060	810	705
W6b-F2	2,020	920	705
W6b-F3	3,090	935	705
W7a-F1	86	288	705

*Left edge is measured along the complete numbered wall, from its clockwise start, not from the opening. For example, W6b-F1 starts 1060 mm from the kitchen-wall corner, or 65 mm beyond the kitchen opening edge. Set out all frames before fixing.

Forty-eight pieces, twelve frames, forty-eight mitred joints. Sizes above are outside long-point to outside long-point. Both ends are mitred. Do not subtract two moulding widths from the horizontal cuts; that would make the finished frames too narrow. The model used simplified butt intersections.

Set the outside bottom edges 185 mm above the floor and the tops at 890 mm. This leaves 95 mm above the corrected skirting and 60 mm below the dado. The 629.3 mm wide frames can be set to equal widths on site; do not treat a decimal from the model as measured accuracy.

Dry-fit one complete frame as a template. Keep the frame corners square even if the room corners are not. The new W2a-F2 and W3a-F2 frames continue behind the radiators. Check all mouldings against valves, pipes and brackets; allow local gaps where needed. Radiator removal may need trade support.

06 Option 2: stock cutting

ROUGH BLANKS | 2400 mm panel mould lengths | 30 mm trimming allowance per piece

H1/H2 are the horizontal members; V1/V2 are the vertical members. Cut the mitres from these rough blanks to the long-point dimensions on page 5. The schedule includes 3 mm saw loss per blank and 10 mm total stock-end trimming. Keep length 17 as a spare.

Stock	Blank labels and lengths	Left over
1	W6b-F3H1: 965 + W6b-F3H2: 965 + W7a-F1H1: 318	133
2	W6b-F2H1: 950 + W6b-F2H2: 950 + W7a-F1H2: 318	163
3	W2a-F2H1: 930 + W2a-F2H2: 930 + W3a-F1H1: 490	31
4	W2a-F1H1: 845 + W2a-F1H2: 845 + W5b-F1H1: 660	31
5	W6b-F1H1: 840 + W6b-F1H2: 840 + W5b-F1H2: 660	41
6	W3a-F2H1: 835 + W3a-F2H2: 835 + W5b-F2H1: 660	51
7	W2a-F1V1: 735 + W2a-F1V2: 735 + W2a-F2V1: 735	176
8	W2a-F2V2: 735 + W3a-F1V1: 735 + W3a-F1V2: 735	176
9	W3a-F2V1: 735 + W3a-F2V2: 735 + W3a-F3V1: 735	176
10	W3a-F3V2: 735 + W5b-F1V1: 735 + W5b-F1V2: 735	176
11	W5b-F2V1: 735 + W5b-F2V2: 735 + W5b-F3V1: 735	176
12	W5b-F3V2: 735 + W6b-F1V1: 735 + W6b-F1V2: 735	176
13	W6b-F2V1: 735 + W6b-F2V2: 735 + W6b-F3V1: 735	176
14	W6b-F3V2: 735 + W7a-F1V1: 735 + W7a-F1V2: 735	176
15	W5b-F2H2: 660 + W5b-F3H1: 660 + W5b-F3H2: 660	401
16	W3a-F3H1: 530 + W3a-F3H2: 530 + W3a-F1H2: 490	831

Shaped dado

Use the same five-stock, 2440 mm rail schedule shown for the 70 mm Shaker strips on page 4. Buy six lengths, leaving one spare. Join the 3120 mm kitchen-wall run from two nominal 1560 mm pieces. The rail lengths on page 2 are wall-face runs, not final mitre long points.

At external corners, the visible long point can extend beyond the wall-face measurement by the profile projection. Internal corners may need a scribed joint. Use the rough allowance and a physical sample to establish each end. Do not cut every corner at 45 degrees without checking its actual angle.

A pre-made frame kit can reduce mitre work, but fixed kit widths will not reproduce these twelve frames. Treat a kit as a layout change and check the radiator and socket clearances again.

07 Option 3: grooved panels

HARD for this hallway | 6 mm grooved MDF | Vertical grooves at about 100 mm centres

Material	Installed quantity	Suggested supply
Grooved sheet panels	9.557 m2 gross	5 sheets x 2440 x 1220 x 6 mm
Flat cap rail, 55 high x 14 deep	11.445 m	6 lengths x 2440 mm
Cap lip, 15 high x 23 deep	11.445 m	6 lengths x 2440 mm

Alternatively, select one ready-made cap about 70 mm high with a detail suited to a 6 mm sheet. Then buy one set of six 2440 mm lengths instead of the two cap components. Confirm the profile and panel overlap before final height cuts.

Panel height: 835 mm. Panels run from 95 to 930 mm above the floor. The flat cap runs from 930 to 985 mm and the lip from 985 to 1000 mm. Sheet quantities include the area behind radiators and the cabinet; no deductions are made for holes.

Run	Panel widths, in wall order	Height of each
W2a	1,000 + 1,000	835
W2b	220	835
W3a	1,100 + 1,045	835
W3b	190	835
W4a	107.5	835
W4b	107.5	835
W5a	190	835
W5b	1,200 + 1,180	835
W5c	235	835
W6a	110	835
W6b	1,100 + 1,100 + 920	835
W7a	460	835
W8a	180	835

These are **18 rectangular panel blanks** before service cutouts. A plus sign marks a sheet joint, not a groove. Set the 1000/1100/1200 mm joins on the actual factory groove pattern where possible. Restart the groove layout at door openings rather than forcing it around the whole room.

Do not cut pipe, bracket or socket openings from photo estimates. Template each wall entry and fitting. Use a removable or split detail where a pipe prevents a full sheet sliding into place. Preserve access to valves, radiator brackets and the wall box. Any radiator or faceplate removal needs suitable trade support.

08 Option 3: sheet cutting

Five sheets | Diagram shows width nesting only | All labelled numbers below are rough blank widths in mm

Order grooves running parallel to the **2440 mm sheet direction**. Crosscut two 840 mm-high rough rows from each sheet, then rip the widths below. Finish to 835 mm after checking floor level, skirting and cap. Two rows + 3 mm saw loss per row + 10 mm end trimming use 1696 mm, leaving about 744 mm of height.

Sheet 1

Row 1	W5b-P1 1205
Row 2	W5b-P2 1185

Two rows, each 840 mm rough height. Remaining sheet height is offcut material.

Sheet 2

Row 1	W3a-P1 1105
Row 2	W6b-P1 1105

Two rows, each 840 mm rough height. Remaining sheet height is offcut material.

Sheet 3

Row 1	W6b-P2 1105
Row 2	W3a-P2 1050
	W6a-P1 115

Two rows, each 840 mm rough height. Remaining sheet height is offcut material.

Sheet 4

Row 1	W2a-P1 1005
Row 2	W2a-P2 1005
	W3b-P1 195
	W5a-P1 195

Two rows, each 840 mm rough height. Remaining sheet height is offcut material.

Sheet 5

Row 1	W6b-P3 925
Row 2	W7a-P1 465
	W2b-P1 225
	W8a-P1 185
	W4a-P1 113
	W4b-P1 113
	W5c-P1 240

Two rows, each 840 mm rough height. Remaining sheet height is offcut material.

Each width blank includes 5 mm extra, with 3 mm saw loss per cut and 5 mm stock-edge allowance per row. Do not rotate offcuts through 90 degrees: the grooves would become horizontal. Width nesting assumes at least 1220 mm before that edge allowance.

Supplier check before purchase: the linked 6 mm product page gives both 1220 x 2440 and 1200 x 2400 sizes in different sections. Confirm the actual usable size, groove datum and edge treatment in writing. The 1200 mm finished panel cannot come from a 1200 mm sheet with the trimming allowance shown. Re-plan its join if the delivered sheet is narrower.

Five sheets fit this planning layout. A sixth sheet is an optional contingency for groove alignment or a failed service cutout. Do not add it automatically if the supplier confirms the layout and cuts the blanks. The 835 mm height is too large for three rows along a 2440 mm sheet.

Cut each cap component using the 2440 mm rail schedule on page 4. There is one W6b join per component. If you use one ready-made cap, use that schedule once.

09 Supplies and fitting checks

Consumables are planning allowances, not manufacturer coverage guarantees. No prices or labour costs are included.

Item	Option 1	Option 2	Option 3
Paintable construction adhesive, 290-310 ml	6-8 cartridges	5-6 cartridges	10-12 cartridges
Decorators caulk	2-3 cartridges	2-3 cartridges	3 cartridges
Fine filler	1 small tub	1 small tub	1 small tub
Suitable MDF / timber primer	Allow 1 litre	Allow 1 litre	Allow 2.5 litres
Coloured topcoat, two coats	About 3 litres	About 3 litres	About 3 litres
Other supplies	Abrasives, masking tape, floor cover, suitable temporary pins/fixings as needed	Same as Option 1	Same, plus service templates

Paint basis: about 12.5 m² allowing for the lower walls, skirting and profile edges. At 10 m²/litre per coat, two coats plus 20% allowance need about 3 litres. Check the chosen coating: bare MDF, absorbent walls and colour changes can increase use. If buying one compatible finish for both wall and trim, a 5-litre pack covers this allowance. Existing radiators and doors are excluded.

Tools and work sequence

All options: tape, pencil, long level or laser, square, saw and mitre guide, caulk gun and sanding tools. Use dust extraction and suitable protection for MDF cutting. **Option 3:** also a guided sheet saw, jigsaw/multi-tool and templates for the fittings.

1. Check wall ends and choose physical trim samples. 2. Mark the rail height and all frames/strips. 3. Test one radiator bay and one inset doorway. 4. Cut and dry-fit labelled pieces. 5. Fix to prepared walls using the adhesive/profile instructions, then fill, prime and paint. Retain spare labelled stock.

Checks still needed before final cuts

Measure radiator floor gaps, valve reach, pipe routes and wall entries. Confirm skirting top projection and the proposed 5 mm gap detail. Check socket positions, recess depths, corner angles and the two storage-door margins. The access box remains above the rail and must open freely. Stop trim at the inset opening edge with a finished end return; no extra lining of door reveals is included.

Sources and purchase checks

[Shaker fitting method and example MDF strips](#)

[Panel moulding / dado guide and mitred corners](#)

[9 mm MDF, 2440 x 1220 sheet example](#)

[Dado stock lengths: 2440, 3050 and 4200 example](#)

[6 mm grooved sheet example; verify size discrepancy](#)

[Panelling and existing skirting fitting guidance](#)

Room quantities: local measured wall chain and concept layout at commit 4ce6a0f, plus the latest user corrections, photos 1000087404/1000087405 and the added frames behind both radiators. Proposed material sections, cutting allowances, consumable quantities and DIY ratings are design estimates. Sources checked 8 October 2026.