Method Statement

Ref. #: DCP00/08-0117-A-2026



DonFlash R

(Elastomeric reinforcement and flashing rubber)

Table of Content

SECTION A: GENERAL COMMENTS	**3**
General Notes	3
Storage and Handling	3
Tools and Equipment	4
SECTION B: APPLICATION	**5**
Substrate Preparation	5
Preparation of DonFlash R	5
Installation of DonFlash R	6
Laps	6
Angle Changes and Corners	6
Walls, Parapets and Kerbs	6
Termination of DonFlash R	8
Drains	8
Penetrations	9
Expansion Joints	10
Protection	10
SECTION C: CAUTIONS	**11**
Health & Safety	11
SECTION D: APPROVAL AND VARIATIONS	**11**

Section A: General Comments

General Notes:

The information below is a detailed overview of the application of DCP's **DonFlash R** elastomeric reinforcing and flashing membrane and should be read in conjunction with the **DonFlash R** technical data sheet prior to application. All DCP Products should be applied by experienced specialist contractors.

All the points below assume the correct preparation of the relevant surface.

DonFlash R is an elastomeric rubber sheet, 1.5 mm thick, designed to provide a durable, flexible, tear resistant reinforcing and flashing membrane. It is used at the following locations:

- Exposed walls and parapets.
- Drains.
- Penetrations.
- Expansion joints.
- Angle changes.

DonFlash R is installed embedded in, and encapsulated by, DCP's **AquaSure** hot-applied rubberised asphalt membrane. Melting, temperature control and field application of **AquaSure** are covered by the **AquaSure** installation manual.

The following accessories are used with **DonFlash R**:

- Bonding adhesive: bonds the exposed vertical part of **DonFlash R** to the wall.
- Termination bar: mechanically secures the top edge of **DonFlash R**.
- PU sealant: seals the top edge of the termination.
- **Cellrod** (foam rod): used at expansion joints and in the groove termination.

Storage and Handling:

Store **DonFlash R** rolls upright, off the ground, in the original unopened and undamaged packaging, fully protected from the weather. Do not use material that has been damaged, or that has become inflexible and hard to mould.

Tools and Equipment:

It is suggested that the following list of equipment are adopted as a minimum requirement

Personal protection	:	*Protective overalls (long sleeves)*
	:	*Goggles and face shield (for hot splash risk)*
	:	*Good quality gloves (heat-resistant)*
	:	*Safety shoes*
	:	*Safety helmet*
	:	*Respiratory protection, half-face respirator with organic vapour (OV) cartridges*



Equipment	:	*Broom and shovel (Fig.1)*
	:	*Metal bucket (Fig.2)*
	:	*Rubber squeegee (Fig.3)*
	:	*Hand-held sprayer, brush or roller (Fig.4)* *(for application of surface conditioner)*
	:	*Brushes or trowels (Fig.5)*
	:	*Dip thermometer (Fig. 6)* *(for checking membrane temperature)*
	:	*Back-pack blower or air compressor (Fig. 7)* *(for blowing clean the deck)*
	:	*Double-jacketed melter with a thermostat gauge. (Fig. 8)* *The melter must be capable of maintaining temperatures ranging from 175°C to 200°C.*
	:	*Thickness gauge (Fig. 9)*
	:	*Gas torch (Fig. 10)*
	:	*Utility knife (Fig. 11)*
	:	*Screwdrivers, hammer, pliers, wrenches (Fig. 12)*



Fig.1: Broom and shovel



Fig.2: Metal bucket



Fig.3: Rubber squeegee



Fig.4: Hand-held sprayer, brush or roller



Fig.5: Brushes or trowels



Fig.6: Dip thermometer



Fig.7: Back-pack blower or air compressor



Fig.8: Double-jacketed melter with a thermostat gauge



Fig.9: Thickness gauge



Fig.10: Hot-air welding machine, seam rollers



Fig.11: Utility knife



Fig.12: Screwdrivers, hammer, pliers, wrenches

Section B: Application

1.0 Substrate Preparation

1.1 All surfaces to receive **DonFlash R** (deck areas around drains, penetrations and joints, walls, parapets and kerbs) must be clean, dry and free from any contaminants that may affect adhesion, such as unapproved curing compounds, oil and dirt.

1.2 Do not install **DonFlash R** where ice, snow, moisture or dew is present, or when rain is expected. If it begins to rain or snow, stop the work and allow at least one full day for drying before continuing.

1.3 Wall and parapet faces where **DonFlash R** will be left exposed must be sound and even, so that the sheet can be fully bonded with no voids.

1.4 Concrete surfaces shall be conditioned with **Bituproof 40S** as per the **AquaSure** installation manual. Wood, plywood, metal or gypsum board substrates do not need to be conditioned.

1.5 Drain bodies and penetrations must be fixed in place and must not move. Penetrations made from PVC, copper or brass must be roughened/sanded and primed.

1.6 Expansion joint sidewalls must be parallel, smooth and straight.

2.0 Preparation of DonFlash R

2.1 Measure and pre-cut **DonFlash R** for each detail before starting the hot application, so that the sheet can be placed immediately while the membrane is still hot.

2.2 Cut **DonFlash R** to the following minimum sizes:

Detail	DonFlash R size
Walls, parapets, kerbs	75 mm onto the deck + minimum 200 mm above the finished roof surface
Drains	Centred over the drain, extending minimum 150 mm beyond the drain
Penetrations	Minimum 75 mm onto the deck + minimum 75 mm up the penetration
Expansion joints ≤ 25 mm	150 mm wide strip
Expansion joints 25 - 50 mm	300 mm wide sheet + 460 mm wide sheet

2.3 No piece of **DonFlash R** shall be narrower than 75 mm in any direction.

2.4 Remove any protective film from the sheet before installation, where supplied.

3.0 Installation of DonFlash R

3.1 Install all **DonFlash R** details before the field membrane application.

3.2 Apply a coat of **AquaSure** at a thickness of 3.0 mm over the detail area, extending beyond the edges of the **DonFlash R** sheet.

3.3 Immediately embed **DonFlash R** into the hot membrane.

3.4 Press **DonFlash R** firmly into the membrane with a roller, working from the horizontal surface upward. The sheet must be fully adhered, tight to the substrate and free from wrinkles, fishmouths and air pockets, with no unsupported bridging at changes of plane.

3.5 Apply a second coat of **AquaSure** at a thickness of 3.0 mm over the embedded **DonFlash R** to encapsulate it, except for the exposed vertical part at walls and parapets (6.0) and the loop over the **Cellrod** at expansion joints (10.0).

4.0 Laps

4.1 Where more than one length of **DonFlash R** is required, overlap adjacent sheets by a minimum of 75 mm.

4.2 Apply hot **AquaSure** between the overlapping sheets so that the lap is completely sealed, and press the lap with a seam roller.

4.3 On vertical surfaces, the upper sheet shall overlap the lower sheet so that laps shed water.

5.0 Angle Changes and Corners

5.1 At all angle changes (deck to wall, deck to kerb, internal and external corners), **DonFlash R** shall run continuously and follow the substrate, fully supported, with no bridging across the angle.

5.2 For angle changes or detailing conditions not covered by this method statement, DCP Technical Department should be contacted.

6.0 Walls, Parapets and Kerbs


6.1 **DonFlash R** is used as the exposed flashing at walls, parapets and kerbs, since **AquaSure** should never be left exposed.

6.2 Before applying **DonFlash R**, flash **AquaSure** vertically at a thickness of 3.0 mm from the horizontal surface up 100 mm of the wall/parapet.

6.3 Embed **DonFlash R** into the horizontal application, extending 75 mm onto the deck, and bring it up the wall/parapet to a minimum of 200 mm above the finished surface of the roof.


6.4 Bond the vertical part of **DonFlash R** above the **AquaSure** upstand to the wall using bonding adhesive.

6.5 Apply another coat of **AquaSure** on the horizontal surface to cover the 75 mm flashing and encapsulate the system, leaving the vertical part of **DonFlash R** exposed.

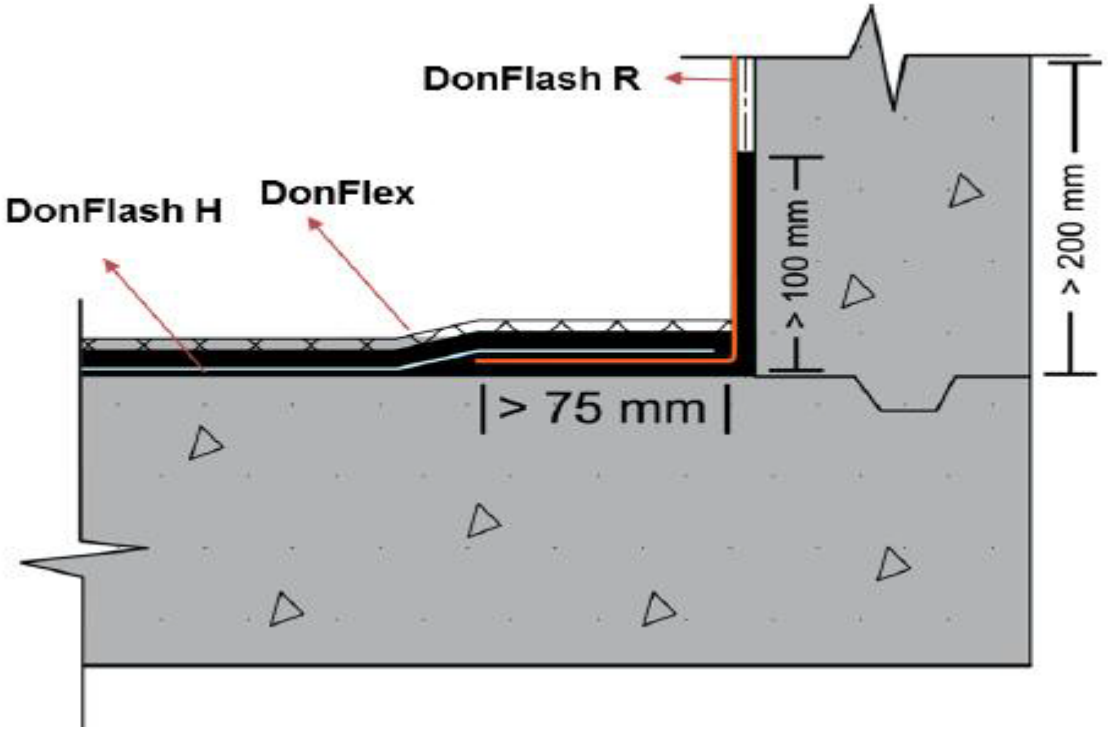

6.6 Terminate the top edge of **DonFlash R** as per 7.0.

DonFlash R at wall/parapet

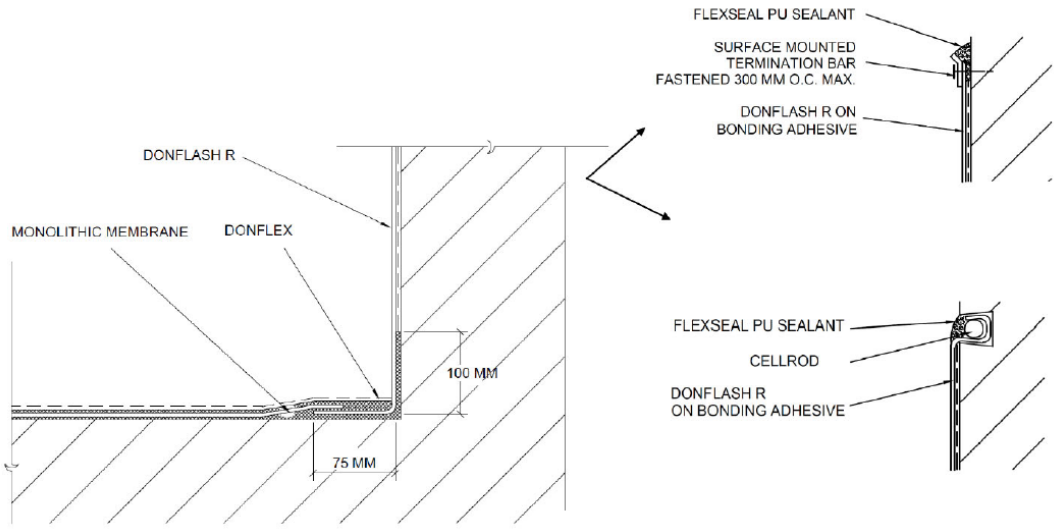

DonFlash R at parapet, with termination bar and Cellrod terminations

7.0 Termination of DonFlash R

The top edge of **DonFlash R** shall be terminated by one of the following two methods:

7.1 Termination Bar Method

7.1.1 Bond **DonFlash R** to the wall using bonding adhesive.

7.1.2 Fix a surface mounted termination bar along the top edge of **DonFlash R**, fastened at 300 mm centres maximum.

7.1.3 Seal the top of the termination bar with PU sealant.

7.2 Groove Method


7.2.1 Form a 20 mm x 20 mm groove in the wall/parapet at the termination height.

7.2.2 Bond **DonFlash R** to the wall using bonding adhesive and turn its top edge into the groove.

7.2.3 Insert **Cellrod** (foam rod) into the groove over **DonFlash R**.

7.2.4 Seal the groove with PU sealant.

7.2.5 Where counterflashing is specified, install it so that it sheds water over the top edge of **DonFlash R**.

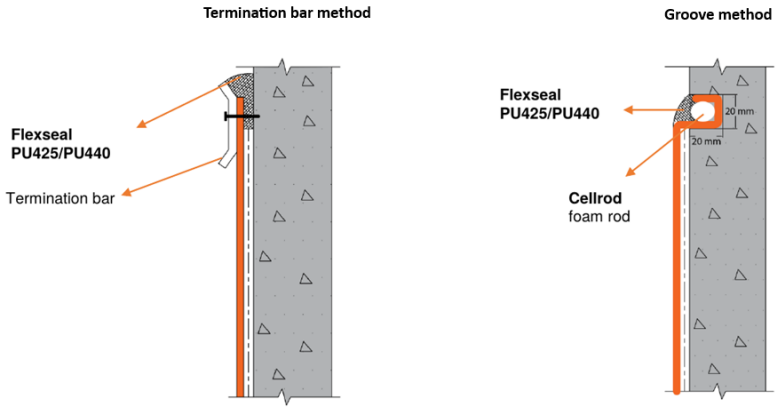

Termination of DonFlash R

8.0 Drains

8.1 Protect the drain opening during application to prevent hot membrane from entering the drain.


8.2 Before installing the drain clamping ring, apply **AquaSure** at a thickness of 3.0 mm around the drain.

8.3 Centre a **DonFlash R** sheet over the drain and embed it into the hot membrane, extending a minimum of 150 mm beyond the drain (Fig.4).

8.4 Cut the sheet at the centre of the drain, leaving **DonFlash R** extending into the drain under the clamping ring.

8.5 Install the clamping ring of the drain.

8.6 Apply another layer of **AquaSure** at a thickness of 3.0 mm to encapsulate **DonFlash R**.

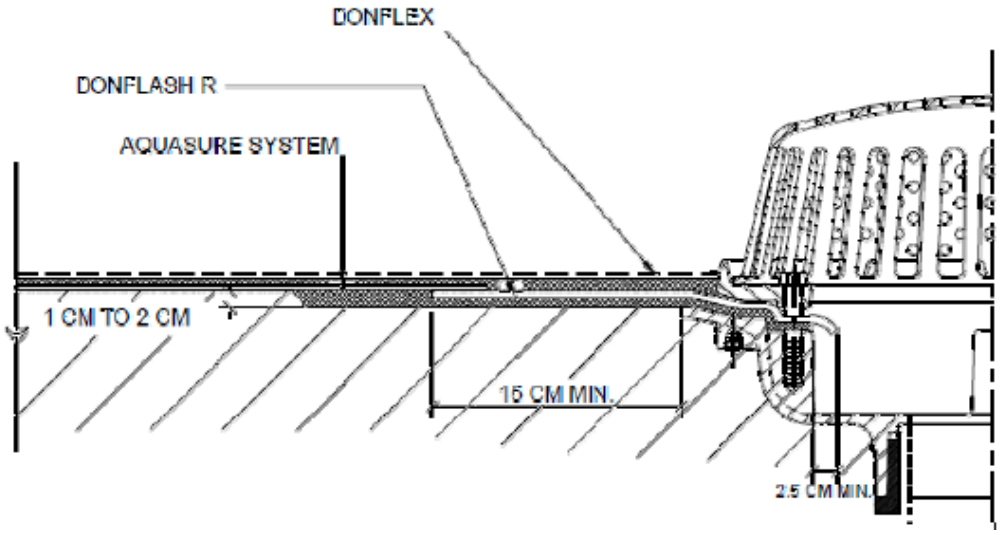

DonFlash R at drain

9.0 Penetrations


9.1 All penetrations (pipes, vents, angles, etc.) passing through the waterproofing must be flashed with **DonFlash R**.

9.2 Apply **AquaSure** at a thickness of 3.0 mm around the penetration and up the penetration to a minimum height of 100 mm.

9.3 Form a **DonFlash R** collar around the penetration, extending a minimum of 75 mm up the penetration and a minimum of 75 mm onto the deck (Fig.5). Slit the base of the collar to form the deck flange, and lap the collar ends as per 4.0.

9.4 Embed the collar into the hot membrane and press it tight to the penetration and the deck.

9.5 Apply another layer of **AquaSure** at a thickness of 3.0 mm to encapsulate the system.

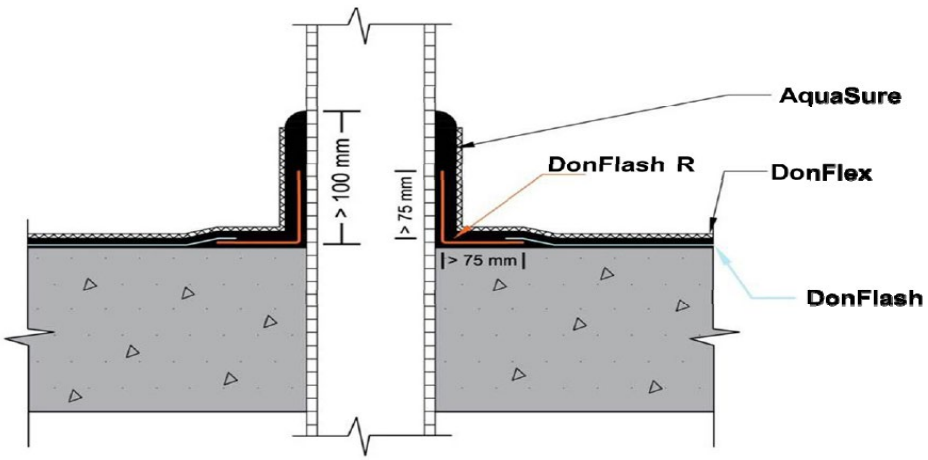

DonFlash R at penetration

10.0 Expansion Joints

10.1 Expansion joints equal to or less than 25 mm in width:

10.1.1 Apply **AquaSure** at a thickness of 3.0 mm over the joint area.

10.1.2 Embed a 150 mm wide **DonFlash R** strip over the joint into the hot membrane.

10.1.3 Apply another layer of **AquaSure** at a thickness of 3.0 mm over the **DonFlash R** strip.

10.2 Expansion joints between 25 mm and 50 mm in width:

10.2.1 Place **Cellrod** (foam rod) 25 mm larger than the joint width over the opening.

10.2.2 Apply **AquaSure** up to the joint area at 3.0 mm thickness.

10.2.3 Install a 300 mm wide DonFlash R sheet onto the Cellrod.

10.2.4 Apply a second coat of **AquaSure**, including the top of the DonFlash R sheet, at a thickness of 3.0 mm


10.2.5 Install a 460 mm wide **DonFlash R** sheet over the second coat.

10.2.6 Apply another layer of **AquaSure** over the second sheet, except where it is looped over the Cellrod.

10.2.7 The DonFlash R loop over the **Cellrod** shall allow for the full anticipated movement of the joint.

10.2.8 Provide additional protection over the completed joint assembly against backfilling and/or topping installation.

10.3 For joints wider than 50 mm, DCP Technical Department should be contacted.

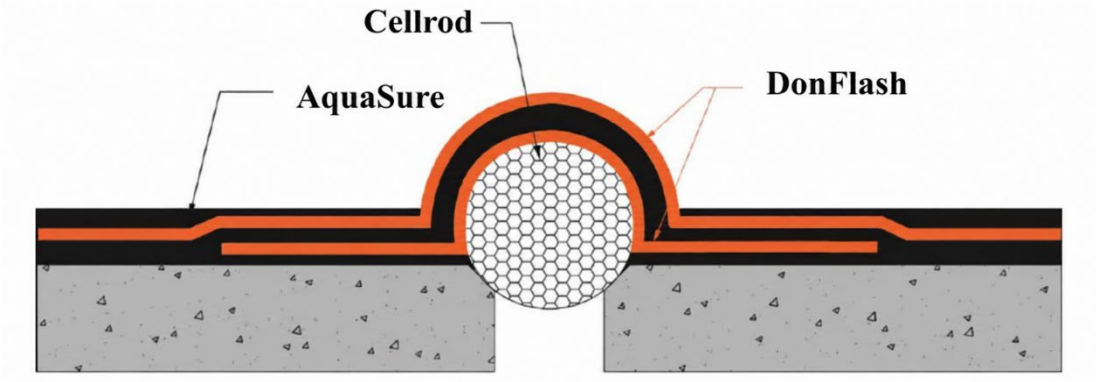

DonFlash R at expansion joint (25 mm - 50 mm)

11.0 Protection

11.1 Horizontal applications: protect the horizontal leg of **DonFlash R** and the encapsulating membrane with **DonFlex**, 2.0 mm thick, overlapping adjoining edges by 60 mm. Embed **DonFlex** while the membrane is still warm.

11.2 Buried vertical applications: use DCP **Plasti-board** (2.0 - 5.0 mm thickness) or extruded/expanded polystyrene boards.

11.3 The exposed vertical part of **DonFlash R** at walls, parapets and kerbs does not require a protection layer.

11.4 Protect completed **DonFlash R** details from damage by following trades.

Section C: Cautions

Health and safety

Avoid contact with skin and eyes. Gloves should be worn and the use of barrier cream is highly recommended. Avoid inhalation of vapours and ensure adequate ventilation, workers shall wear a respirator suitable for organic vapours (e.g., OV cartridge respirator) and work shall be arranged to maintain adequate ventilation.

Safety Around Melter:

Check with the manufacturer of the melter for instructions regarding the melter's correct operating procedures, safety and maintenance before firing it up. Proper clothing is essential when working around or near a melter.

A fire extinguisher should be within easy reach of the melter.

Skin Burns Treatment:

Rinse the burn area with plenty of water to cool it, without using ice.

Do not attempt to remove membrane or burnt clothing from the burn area. Rush burn victim to a doctor immediately for first aid treatment.

Fire:

Ensure adequate ventilation. Do not use near a naked flame and do not smoke during use. A fire extinguisher should be within easy reach of the melter.

For further information on refer to the Material Safety Data Sheet.

Section D: Approval and Variations

This method statement is offered by DCP as a 'standard proposal' for the application of **DonFlash R**. It remains the responsibility of the Engineer to determine the correct method for any given application. Where alternative methods are to be used, these must be submitted to DCP for approval, in writing, prior to commencement of any work. DCP will not accept responsibility or liability for variations to the above method statement under any other condition.