
Method Statement

Ref. #: DCP00/08-0201-B-2026

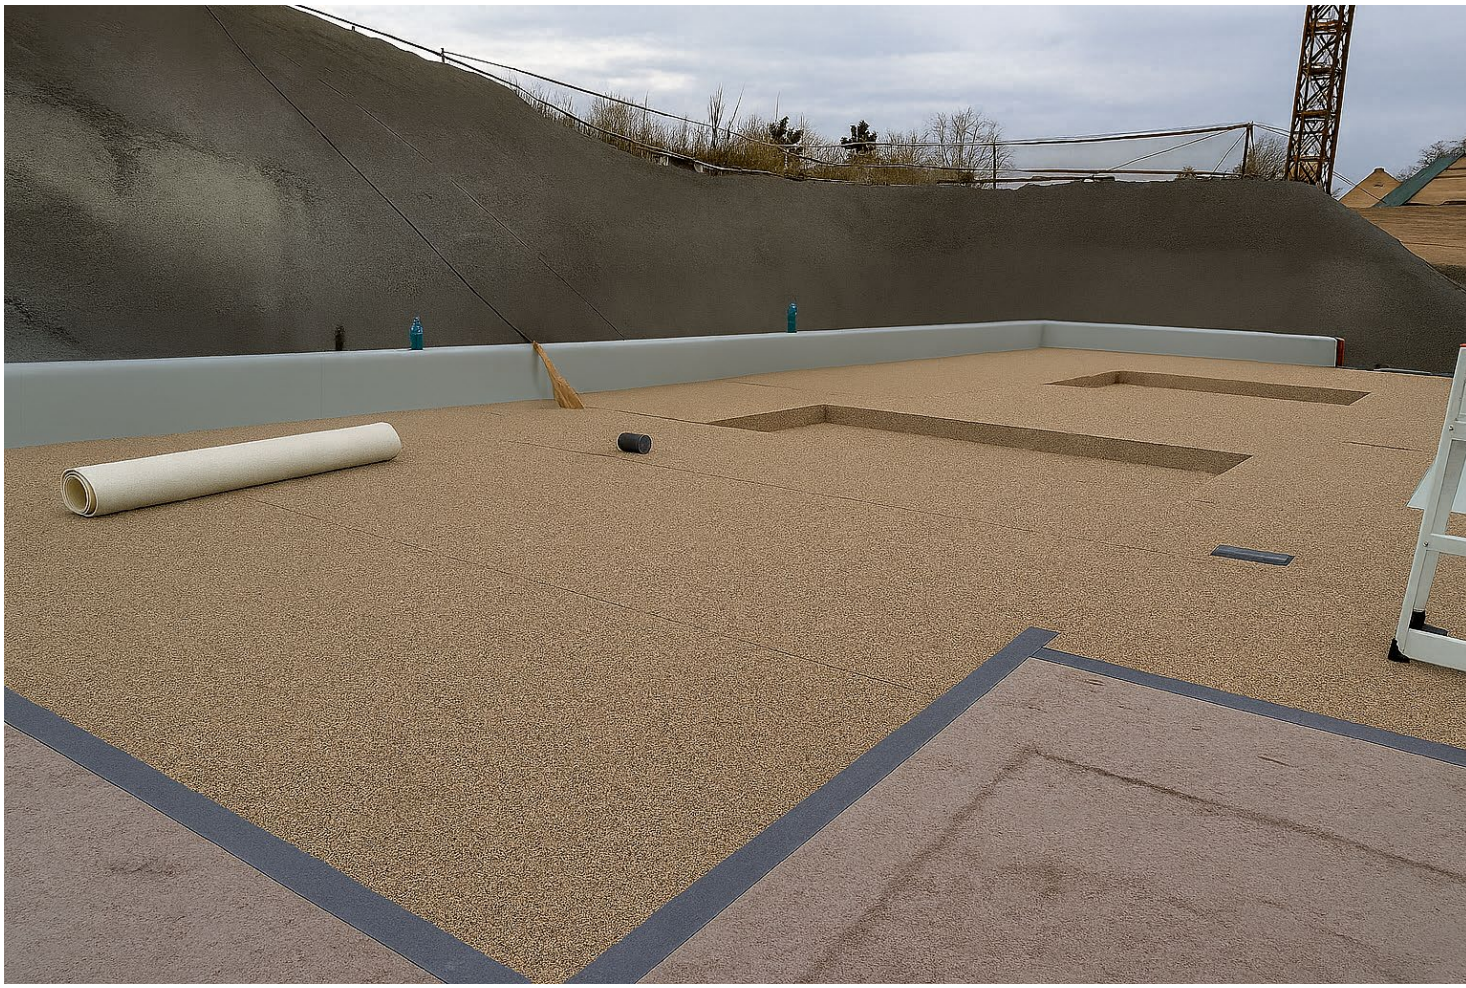

DonProof HS

(Pre-applied, fully bonded HDPE Waterproof Membrane “with sand finish”)

Table of Content

SECTION A: GENERAL COMMENTS	**3**
General Notes	3
System Products	3
Tools and Equipment	4
SECTION B: APPLICATION	**5**
Substrate Preparation	5
Installation of DonProof HS Membrane	5
Detailing of Overlaps	7
Placement of Reinforcement	8
Cleaning	9
SECTION C: CAUTIONS	**9**
Health & Safety	9
SECTION D: APPROVAL AND VARIATIONS	**9**

Section A: General Comments

General Notes:

The information below is a detailed overview of the application of DCP's **DonProof HS** waterproofing membrane and should be read in conjunction with the relevant technical data sheet prior to application. All DCP Products should be applied by experienced specialist contractors.

All the points below assume the correct preparation of the relevant surface.


- Guidelines and recommendations as described in BS 8102:2009 should be followed.
- A suitable water management system should be installed to provide a dry environment until such time as the detailing of critical points, the installation of the membrane, the placement and the curing of the concrete is completed.
- Manufacturer's installation instructions must be followed at all times.
- Concrete must be of a high quality, fully compacted, properly placed and properly cured.
- Care should be taken when using vibrating equipment to prevent damage to the installed waterproofing system.
- The waterproofing system should be installed by fully trained personnel.
- All non-movement construction joints must be detailed using **Hydrostop range** PVC waterstops or alternatively **Hyperseal DP** swellable bar.
- Expansion joints must be detailed with **Hydrostop range** PVC waterstops (internal or external).
- Pipe penetrations must be detailed with **Hyperseal DP** swellable bar.
- Piles must be detailed with **Hyperseal DP** waterstop or injection hose system can be used additionally.
- All site details as well as the concrete mix design must be designed in advance.

System Products:

Waterproofing Membrane: **DonProof H / DonProof HS**

Double sided tape

Single sided plain tape/single sided sanded tape

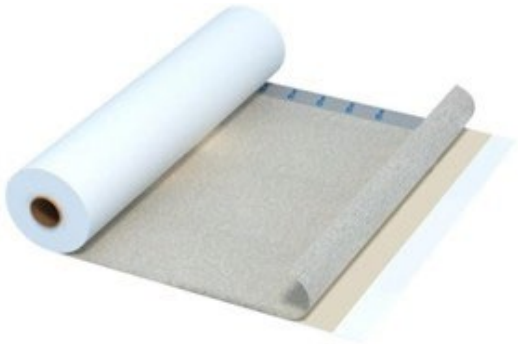

Tools and Equipment:

It is suggested that the following list of equipment are adopted as a minimum requirement

Personal protection	:	*Protective overalls*
	:	*Goggles or a face mask*
	:	*Good quality gloves*
	:	*Safety shoes*
	:	*Safety helmet*
Application equipment	:	*Utility knife with blade (Fig.1)*
	:	*Steel pressure roller (Fig.2)*
	:	*Nail gun + Nails (Fig.3)*
	:	*Measuring & marking tools (Fig.4)*





Fig.1: Utility knife with blade



Fig.2: Steel pressure roller



Fig.3: Nail Gun + Nails



Fig.4: Measuring & marking tools

Section B: Application

1.0 Substrate Preparation

1.1 Ensure all substrates are solid, clean, and free of debris, sharp edges, or voids.

1.2 Uniform and regular concrete blinding, compacted sand-stone cushion are suitable base substrates.

1.3 All surface defects, protrusions, loose or weak concrete must be removed and repaired using an appropriate concrete repair mortar from the DCP range, selected according to the extent of the damage.

1.4 All standing or ponded water must be removed before applying the membrane.

2.0 Installation of DonProof HS Membrane

2.1 **Detailing corners**

2.1.1 The internal and external corners where horizontal and vertical surfaces meet in underground works must be formed into a rounded cove or a 45° chamfer.





2.2 **Horizontal substrates**

2.2.1 **DonProof HS** membrane should be unrolled onto the properly prepared surface with the HDPE film facing the substrate.

2.2.2 Align the first roll of the membrane, carefully adjust the membrane's position.

2.2.3 The plastic release liner over the selvedge area must be left in place until the overlapping procedure is completed.

2.2.4 To avoid excessive membrane buildup, end laps should be staggered.


2.2.5 Succeeding membrane sheets should be accurately positioned to provide a 75 mm overlap along the self adhesive selvedge.

2.2.6 Before bonding, it must be ensured that the underside of the succeeding sheet and the surface of the release liner are clean, dry, and free from any contamination, wiping with damp cloth if necessary.

2.2.7 The plastic release liner is then peeled back and progressively removed as the two membrane layers are bonded together.

2.2.8 All overlaps should be thoroughly pressed using a steel roller to eliminate gaps or creases, enabling a consistent, watertight seal.

2.2.9 A continuous, crease-free bond must be ensured.

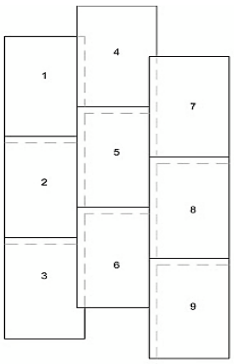






2.2.10 For areas without selvedge, laps should be bonded using a suitable double-sided adhesive tape **(Donproof Tape H200)**, and the bonded joints must be rolled firmly to secure the system.

2.2.11 Where the double-sided adhesive is used, the sand layer must be removed using a shovel and a hot air gun to a width similar to the width of the tape, before installing the adhesive. This will increase the adhesion between the tape and the host layer, as bonding on a smooth HDPE layer is stronger than bonding on a rough sand-finished layer.

2.2.12 Repeat this process until the entire surface area has been fully covered.

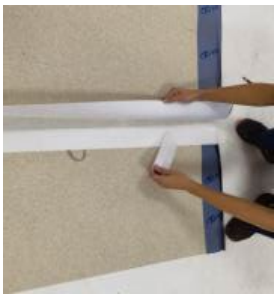





2.3 **Vertical substrates**



2.3.1 **DonProof HS** membrane should be applied with the white HDPE film side facing the substrate (flush pointed Block work, plum concrete wall or plywood shuttering).

2.3.2 **DonProof HS** should be mechanically fastened vertically using flat-headed fixings that are appropriate for the specific substrate.

2.3.3 The membrane can be installed at convenient lengths, depending on site conditions.



2.3.4 The top edge of the membrane should be secured using a batten or suitable fixing approximately 50 mm below the top edge.

2.3.5 To ensure the membrane lies flat against the surface, fixings should be placed at intervals of approximately 600 mm centers.

2.3.6 These fixings may be made through the selvedge area, allowing subsequent sheets to overlap and be firmly rolled, ensuring the fasteners are covered by the next membrane layer.

2.3.7 Before bonding, it must be ensured that the underside of the succeeding sheet and the surface of the release liner are clean, dry, and free from any contamination, wiping with damp cloth if necessary.

2.3.8 The plastic release liner is then peeled back and progressively removed as the two membrane layers are bonded together.

2.3.9 All overlaps should be thoroughly pressed using a steel roller to eliminate gaps or creases, enabling a consistent, watertight seal.

3.0 Detailing of Overlaps

3.1 **Side-lap overlaps:**

3.1.1 Using a clean dry cloth, clean the face of the selvedge on the first roll.

3.1.2 Position the subsequent roll in order that the edge-selvedge on the previous roll will overlap by a minimum of 75 mm along the self adhesive selvedge.

3.1.3 All overlaps must be detailed and compressed using a roller.

3.1.4 remove the release liner in the selvage, and using a lap iron roller apply extra pressure to secure overlaps to ensure full adhesion to bottom membrane sheet.

3.2 **Roll end overlaps:**

3.2.1 The ends of the membrane should be staggered by a minimum of 300 mm, to achieve this, simply butt the ends of the subsequent roll tightly together.

3.2.2 Overlap all roll ends and cut edges by a minimum 75mm and ensure the area is clean and free from contamination, wiping with a damp cloth if necessary.


3.2.3 Apply Tape on the previous sheet along the 75 mm of non-selvedge joint.

3.2.4 Spread the tape covering 75 mm x 1 m surface homogeneously.

3.2.5 Accurately position succeeding sheets to overlap the previous sheet 75 mm applied with double sided tape.

3.2.6 Ensure a continuous bond is achieved without creases and then roll or press-down firmly.

3.2.7 Use a roller to compress the overlaps to ensure complete adhesion.

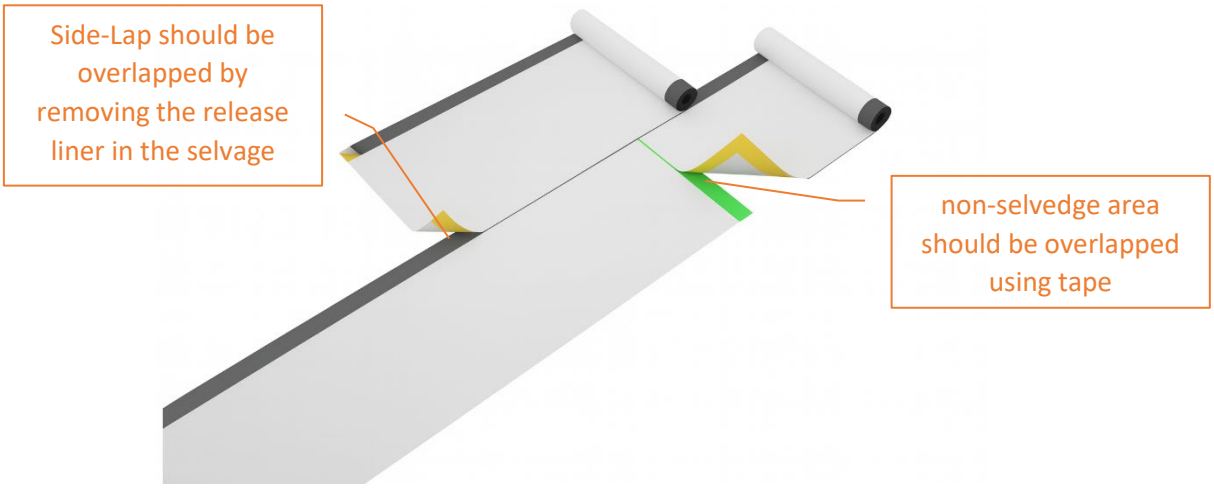

4.0 Placement of Reinforcement

4.1 The steel reinforcement should be placed as soon as possible after the membrane is installed.

4.2 Do not use reinforcement carriers which have sharp ends.

4.3 Flat cement-based carriers should be used.

4.4 Where possible place the carriers along the overlaps.



Delay in Placement of the Reinforcement/Concrete

Where there will be a delay in the placing of the reinforcement or the concrete, extend the membrane by at least 1 m past the termination point of the reinforcement/concrete, fold-back the extended membrane and cover with plastic to ensure it is kept free from damage, clean and dry.

1.1 **Damages:**

4.4.1 The membrane should be inspected for damages prior to the placement of the concrete.

4.4.2 After the placement of the bottom reinforcement bars, the membrane must be inspected for any damage or punctures.

4.4.3 Any identified damage should be repaired immediately. Damaged areas must be patched with an oversized piece of membrane, which is to be applied over a clean and dry surface.

4.4.4 For minor damage, such as surface scratches, repairs may be carried out directly by applying sanded tape **(Donproof Tape H100),** centrally over the affected area.

5.0 Cleaning

5.1 Tools and equipment can be cleaned with water.

Section C: Cautions

Health and safety

- Apply in well-ventilated areas. In closed areas use force ventilation and wear approved respirators when necessary.
- **DonProof HS** should not come into contact with skin and eyes. In case of contact with eyes wash immediately with plenty of water and seek medical advice promptly.
- Vapor and atomized liquids are harmful.

Fire:

DonProof HS is nonflammable.

For further information on refer to the Material Safety Data Sheet.

Section D: Approval and Variations

This method statement is offered by DCP as a 'standard proposal' for the application of **DonProof HS**. It remains the responsibility of the Engineer to determine the correct method for any given application. Where alternative methods are to be used, these must be submitted to DCP for approval, in writing, prior to commencement of any work. DCP will not accept responsibility or liability for variations to the above method statement under any other condition.