


Wireless UVC Sanitizer

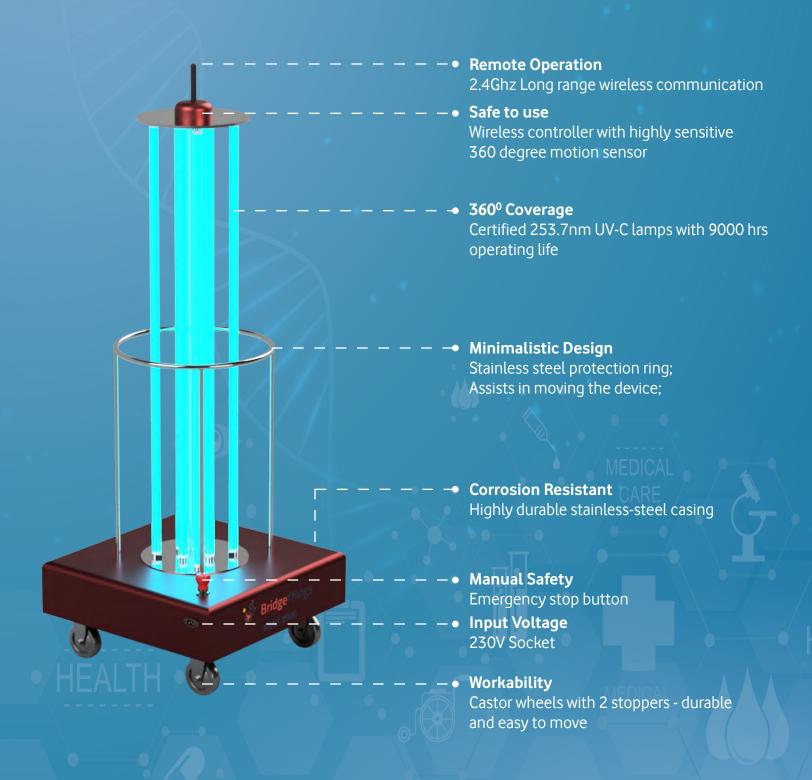

Easy to operate

Room disinfection process

The Wireless UVC Sanitizer delivers a programmed dose of UV-C light to inactivate pathogens on environmental surfaces. After terminal cleaning is complete, prepare the room for UV disinfection. Depending on the room size, process may vary slightly. Below is an example of a room prepared for UV disinfection.



Before using the UV unit, you must perform regular cleaning as per local policy. This is to remove any visible soiling which may reduce the efficacy of the machine. First clean the bathroom.



After cleaning, roll the UV unit into the bathroom and apply the appropriate warning signage. Ensure the shower curtain is bunched into the middle and the toilet seat is up. Step out of the room, close the door behind you and Sset the unit to run for 10 minutes through the mobile app.



Whilst the UV unit is disinfecting the bathroom, perform a regular terminal clean in the room, ensuring the room is cleaned in a thorough and methodical manner, as per SOPs laid by the Government/your organization.



When you have finished, roll the UV unit to the left, at the foot of the bed. Ensure all bed rails are up and all the linen is removed. Expose common touch points by opening drawers and cupboards etc. Step out of the room, close the door behind you and set the unit to run for 10 minutes through the mobile app.



After 10 minutes, as you enter the room, smell a metallic odour which is normal. Turn items such as remote controls upside down. Reposition the unit to the other side of the bed. Step out of the room, close the door behind you and set the unit to run for 10 minutes through the mobile app.



After 10 minutes, as you enter the room, you might smell a metallic odour, which is normal. Wear fresh PPE make the bed and tidy the room. Dispose of PPE, remove the UV unit and all the warning signage.