(B) Parallel comparator type :-

⇒ For n bit
- → $2^n - 1$ comparator required.
- → 2^n resistor required.
- → $2^n \times n$ priority encoder.

⇒ Also called Flash ADC (fastest ADC).

(B.) 3 Bit parallel comparator :-

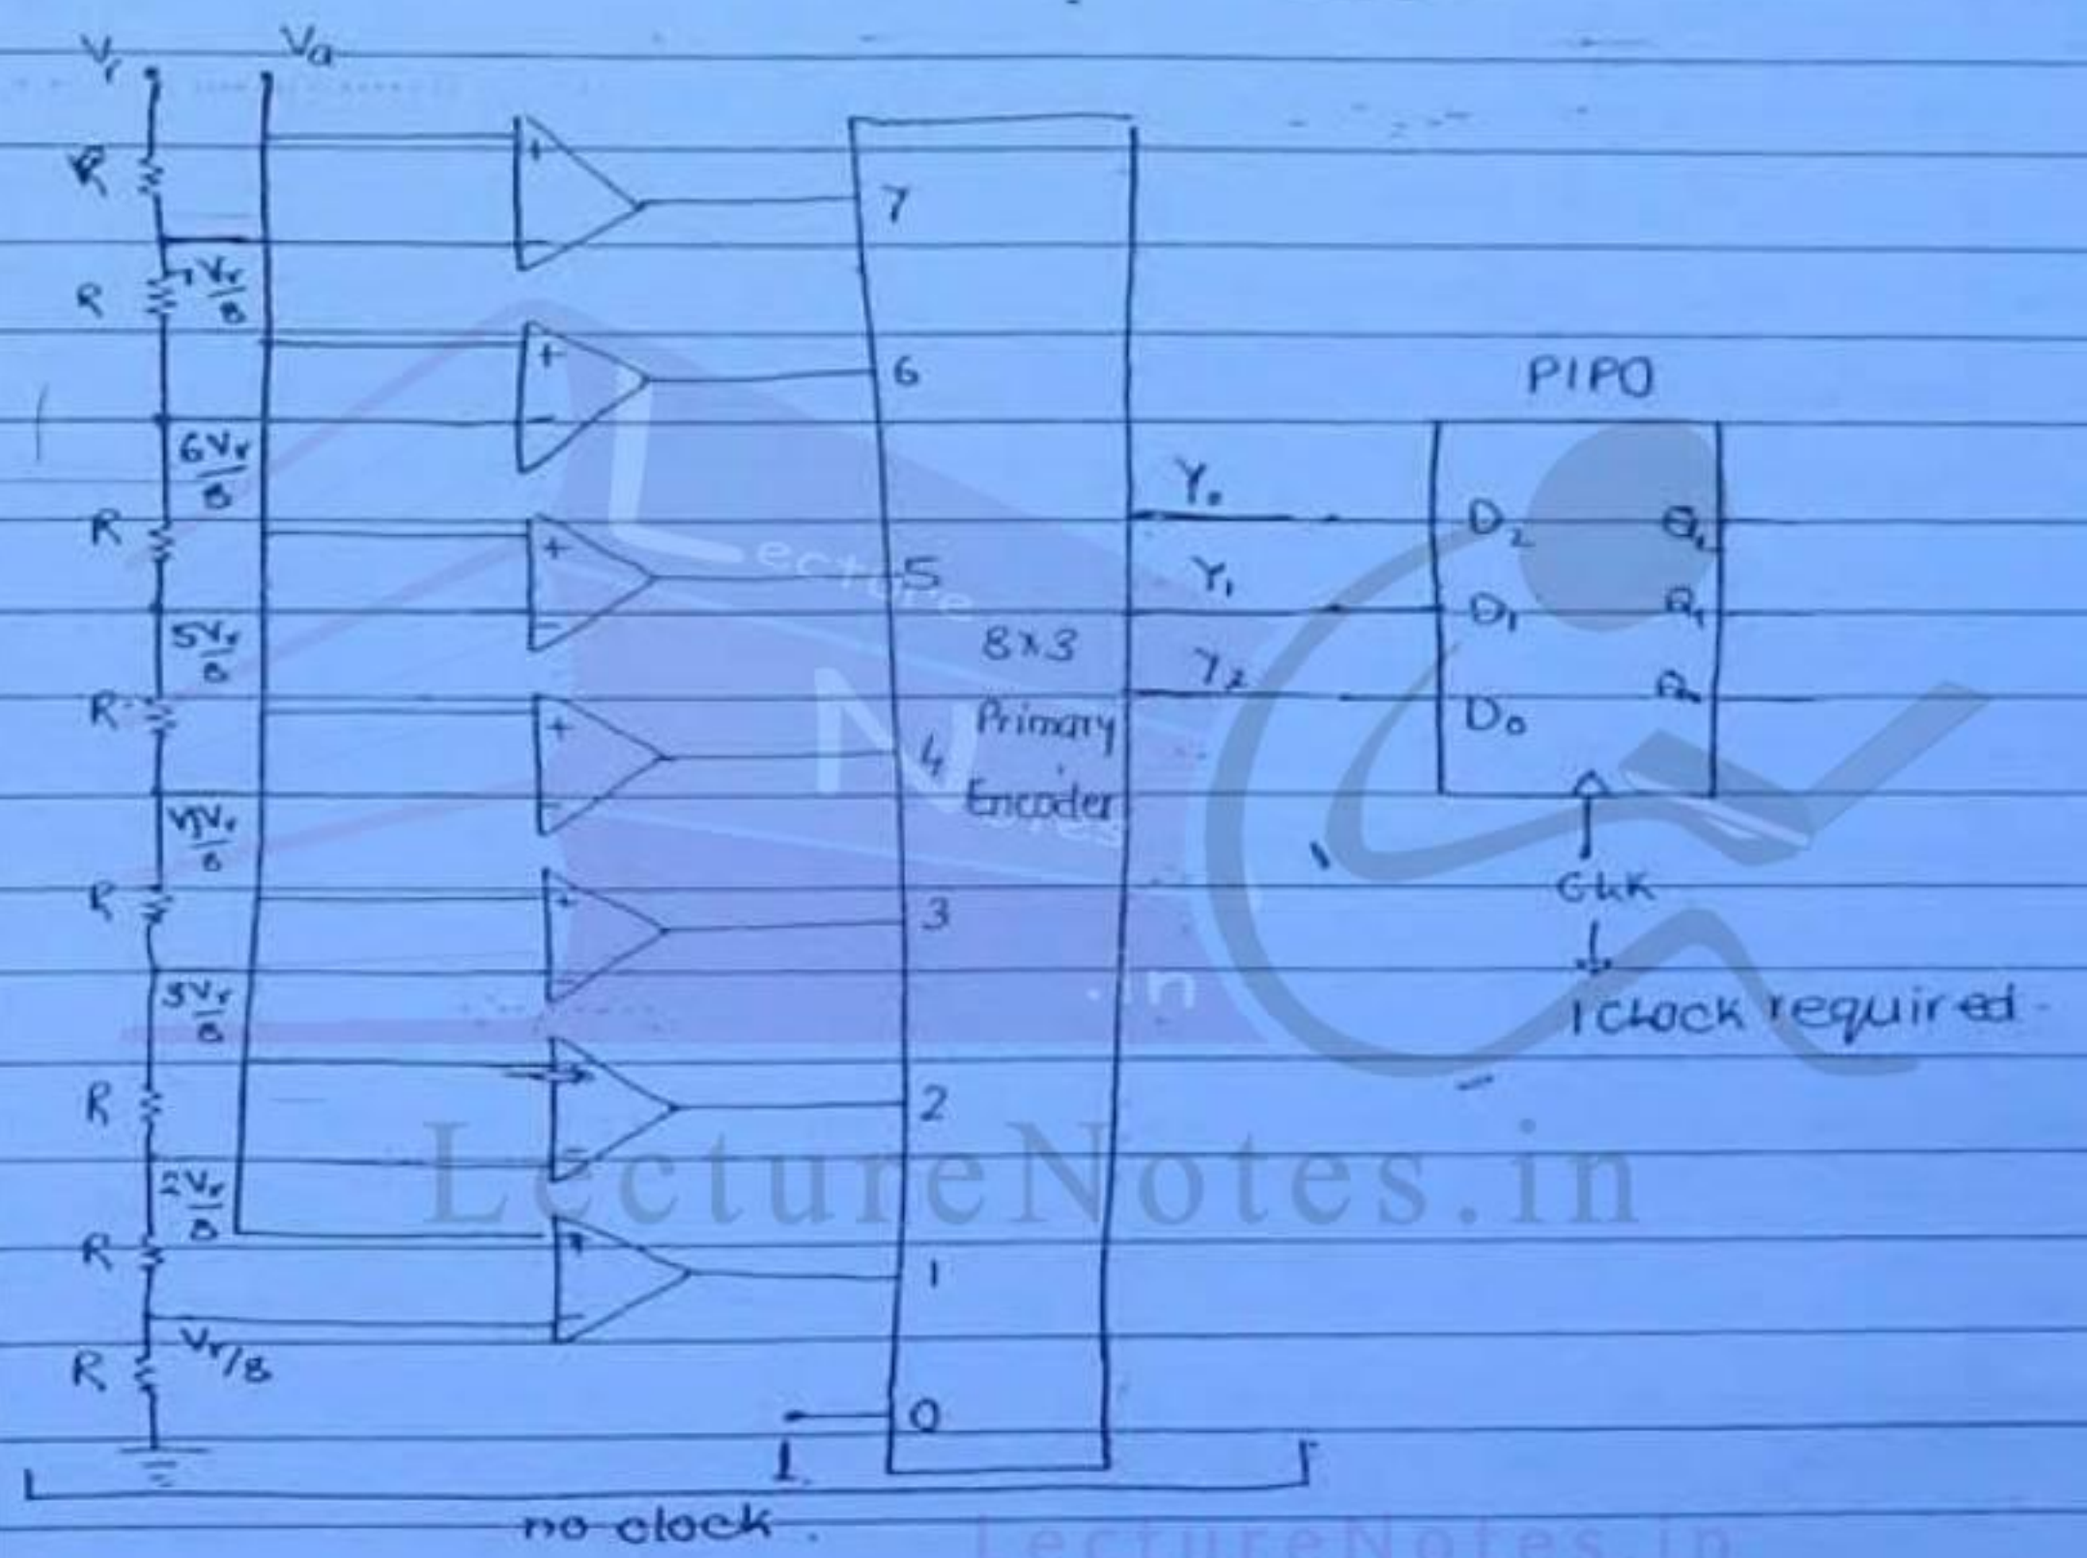

⇒ No clock pulse is required.

⇒ Therefore it is fastest ADC among all.

⇒ Max no. of clock pulse required for n bit conversion is which is Inside PIPO.

© Wiki Engineering

BOOLEAN ALGEBRA.

DATE

⇒ Boolean Algebra :-

(·) when no. of variable are less. (1,2,3)

(·) It is preffered when output is 0 or 1.

3

⇒ K - map :-

(·) When no. of variables are 2,3,4,5 (upto 5 variable)

(·) output is 0, 1 or, x.

⇒ Tabulation method.

(·) It is used when no. of variables are more.

Boolean Algebra :-

3

⇒ A complement → $\bar{A}$ or, A'

$\bar{\bar{A}} = A$

⇒ NOT :-

$0 = 1$

$1 = 0$

⇒ AND :-

$0 \cdot 0 = 0$	$A \cdot A = A$
$0 \cdot 1 = 0$	$A \cdot 1 = A$
$1 \cdot 0 = 0$	$A \cdot 0 = 0$
$1 \cdot 1 = 1$	$A \cdot \bar{A} = 0$

⇒ OR :-

$0+0 = 0$	$A+A = A$
$0+1 = 1$	$A+1 = 1$
$1+0 = 1$	$A+0 = A$
$1+1 = 1$	$A+\bar{A} = 1$

Problem:- $AB + A\bar{B}$

Sol:- $A(B+\bar{B})$ $(\because B+\bar{B} = 1)$

$= A$

classmate

PAGE

© Wiki Engineering

www.raghul.org

Problem:- $AB + A\bar{B}C + A\bar{B}\bar{C}$, find the min. no. of NAND Gate.

option. (a) 0 (b) 1

(c) 2 (d) 3.

(4)

Sol:- $AB + A\bar{B}C + A\bar{B}\bar{C}$ (4)

$= AB + A\bar{B}(C+\bar{C})$

$= AB + A\bar{B}$ $(\because C+\bar{C} = 1)$

$= A(\bar{B}+B)$

$= A$

No NAND gate required.

Advantage of Minimization :-

⇒ No. of logic gate ↓

⇒ Speed ↑

⇒ Power dissipation ↓

⇒ complexity of circuit less

⇒ fan in ↓ (no. of input ↓)

⇒ Cost ↓.

Problem:- Simplify :-

(a) $A\bar{B} + AB\bar{C} + A\bar{B}\bar{C}D$

Sol:- $A\bar{B}\bar{C} + A\bar{B}(1+\bar{C}D)$

$= AB\bar{C} + A\bar{B}$ $(1+x = 1)$

$= A(\bar{B} + B\bar{C})$ $(\because \bar{B} + B\bar{C} = \bar{B}+\bar{C})$

$= A(\bar{B}+\bar{C})$

$= A\bar{B} + A\bar{C}$

(b) $(A+B)(A+C)$

Sol:- $A\cdot A + A\cdot C + AB + BC$

$= A + A(C+B) + BC$

$= A(1+B+C) + BC$

$= A + BC$

$$\boxed{(A+B)(A+C) = A + BC}$$

Transposition Theorem

classmate

PAGE

© Wiki Engineering

www.raghul.org

Similarly :

$$\boxed{(\bar{x}+y)(\bar{x}+z) = \bar{x}+yz}$$

(c) $(A+B+C)(A+\bar{B}+C)(A+B+\bar{C})$

Sol: take $A+B = X$

$= (x+C)(A+\bar{B}+C)(x+\bar{C})$

$= (x+C\bar{C})(A+\bar{B}+C)$

$= x(A+\bar{B}+C)$

$= (A+B)(A+\bar{B}+C)$

$= A+B(\bar{B}+C)$

$= A+B\bar{B}+BC$

$= A+BC$

(d) $(A+B)(A+\bar{B})(\bar{A}+B)(\bar{A}+\bar{B})$

Sol: $(A+B)(A+\bar{B})$ $(\bar{A}+B)(\bar{A}+\bar{B})$

$= (A+B\bar{B})(\bar{A}+B\bar{B})$

$= (A)(\bar{A})$

$= 0$

$$\boxed{A+BC = (A+B)(A+C)}$$ Distribution theorem.

(e) $A+\bar{A}B$

Sol: $(A+\bar{A})(A+B)$

$= 1(A+B) = A+B$

(f) $A+\bar{A}\bar{B}$

Sol: $(A+\bar{A})(A+\bar{B})$

$= 1(A+\bar{B}) = A+\bar{B}$

(g) $AB+\bar{A}\bar{B}+A\bar{B}$

Sol: $A(B+\bar{B})+\bar{A}\bar{B}$

$= A+\bar{A}\bar{B}$

$= (A+\bar{A})(A+\bar{B})$

$= A+\bar{B}$ Ans.

LectureNotes.in

© Wiki Engineering www.raghul.org

(h) $AB + \bar{A}B + A\bar{B}$

Sol^n:- $B(A+\bar{A}) + A\bar{B}$

$= B + A\bar{B}$

$= (B+A)(B+\bar{B})$

$= A+B$ Ans.

(6)

(i) $AB\bar{C} + A\bar{B}C + \bar{A}BC$

Sol^n:- $AB\bar{C} + ABC + ABC + \bar{A}BC$ $(\because A+A=A)$

$= AB(C+\bar{C}) + (A+\bar{A})BC$

$= AB + BC$

$= B(A+C)$

(j) $AB + \bar{A}C + BC \longrightarrow$ redundant term

Sol^n:- $AB + \bar{A}C + BC(A+\bar{A})$

$= AB + \bar{A}C + BCA + \bar{A}BC$

$= AB(1+C) + \bar{A}C(1+B)$

$= AB + \bar{A}C$

Note:- In this case BC is known as redundant term i.e. not used or not compulsory term.

$\Rightarrow$ $AB + \bar{A}C + BC = AB + \bar{A}C$, called consensus theorem or redundancy theorem.

$\Rightarrow$ Shortcut method :-

(a) Three variable.

(b) each variable comes twice.

(c) One variable is complemented.

(k) $AB + B\bar{C} + AC$

Sol^n:- $B\bar{C} + AC$ { The term which is complemented is taken.

(l) $A\bar{B} + BC + AC$

Sol^n: $A\bar{B} + BC$

© Wiki Engineering www.raghul.org

(m) $(\bar{A}+B)(\bar{A}+C)(B+C)$

Sol: $(A+B)(\bar{A}+C)$, $\because (B+C)$ is redundant term.

(n) $(A+\bar{B})(\bar{B}+C)(A+C)$

Sol: $(A+\bar{B})(\bar{B}+C)$

7

(o) $\bar{A}\bar{B} + A\bar{C} + \bar{B}\bar{C}$

Sol: In this case all the variable are complemented only one are uncomplemented then.

$= \bar{A}\bar{B} + A\bar{C}$ ($\because$ The term which is uncomplemented is taken)

(p) $\bar{A}\bar{B} + \bar{B}C + \bar{A}\bar{C}$

Sol: $\bar{B}C + \bar{A}\bar{C}$

(q) $(\bar{A}+\bar{B})(\bar{B}+\bar{C})(\bar{A}+\bar{C})$

Sol: $(\bar{B}+\bar{C})(\bar{A}+C)$

$$\boxed{\begin{aligned} \overline{ABC} &= \bar{A}+\bar{B}+\bar{C} \\ \overline{A+B+C} &= \bar{A}\cdot\bar{B}\cdot\bar{C} \end{aligned}}$$ Demorgan's theorem.

Boolean Algebra :-

↳ Minimization

⇒ SOP → minimal, canonical

⇒ POS → minimal, canonical

⇒ Dual

⇒ Complement Expression

⇒ Truth table

⇒ Venn Diagram

⇒ Switching circuit

⇒ Statement

LectureNotes.in

(A) Minimization :-

(a) $XY + \overline{XY}WZ$

Sol: $A = XY$ and $B = WZ$

Then.

$= A + \bar{A}B$

$= (A+\bar{A})(A+B)$

$= A+B$

$= XY + WZ$

8

(b) let $f(A,B) = \bar{A} + B$ Then the value of $f[f(x+y, y), z)$ is

(a) $xy + z$

(b) $x\bar{y} + z$

(c) $\bar{x}y + z$

(d) x

Sol: $f[f[(x+y), y], z]$

$= F[\overline{x+y} + y, z]$

$= F[\bar{x}.\bar{y} + y, z]$

$= \overline{\bar{x}\bar{y} + y} + z$

$= \overline{\bar{x}\bar{y}} . \bar{y} + z$

$= (\bar{\bar{x}} + \bar{\bar{y}})\bar{y} + z$

$= x\bar{y} + y\bar{y} + z$

$= x\bar{y} + z$ Ans.

(c) let $x * y = \bar{x} + y$ and $z = x * y$

Then the value of $z * x$ is

(a) x

(b) 1

(c) 0

(d) $\bar{x}$

LectureNotes.in

(B) SOP (Sum of Product Form)

$\underbrace{ABC} + \underbrace{\bar{A}BC} + \underbrace{AB\bar{C}}$ ↳ minterm

(9)

⇒ In SOP Form, each product term is known as Minterm or Implicant

⇒ Sop Form is used when o/p of logical expression is 1.

(means $1 \rightarrow A$ and $0 \rightarrow \bar{A}$)

Ex :- $5 \rightarrow 101 \rightarrow A\bar{B}C$

$9 \rightarrow 1001 \rightarrow A\bar{B}\bar{C}D$

Ques:- For the given truth table, minimize SOP expression.

	A	B	Y
$\bar{A}\bar{B}$	0	0	1 ✓
	0	1	0
$A\bar{B}$	1	0	1 ✓
	1	1	0

Sol:- In SOP form only 1 taken

$= \bar{A}\bar{B} + A\bar{B}$

$= \bar{B}(\bar{A} + A)$

$= \bar{B}$

⇒ Y can written as :-

$Y(A, B) = \Sigma m(0, 2)$

Ques:- Simplified the expression for

$Y(A, B) = \Sigma m(0, 2, 3)$

00 10 11

Sol:-

logical expression in SOP form :-

$Y = \bar{A}\bar{B} + A\bar{B} + AB$

$= \bar{B}(\bar{A} + A) + AB$

$= \bar{B} + AB$

$= (\bar{B} + A)(\bar{B} + B)$

$= A + \bar{B}$

$= A + \bar{B}$

© Wiki Engineering

www.raghul.org

SOP can be of two form.

(a) Minimal form

(b) Canonical form.

10

⇒ $A + \bar{A}B = A + B$ (It is a minimal form)

⇒ In canonical form, each term must have all variable.

e.g. $A + \bar{A}B$

$= A(B+\bar{B}) + \bar{A}B$

$= AB + A\bar{B} + \bar{A}B$

Thus each min-term will contain all variable.

GS-2003

Problem:- In canonical SOP form, no. of min term presenting the logical expression $A + \bar{B}C$ is.

(a) 4 (c) 6

(b) 5 (d) 7

Sol^n:- $A + \bar{B}C$

$= A(B+\bar{B})(C+\bar{C}) + \bar{B}C(A+\bar{A})$

$= (AB + A\bar{B})(C+\bar{C}) + A\bar{B}C + \bar{A}\bar{B}C$

$= ABC + AB\bar{C} + A\bar{B}C + A\bar{B}\bar{C} + A\bar{B}C + \bar{A}\bar{B}C$

$= ABC + AB\bar{C} + A\bar{B}C + A\bar{B}\bar{C} + \bar{A}\bar{B}C$

i.e. 5 terms.

LectureNotes.in

(C) POS Form (Product of Sum) :-

$(A+B+\bar{C})\ (\bar{A}+B+C)\ (A+B+C)$

↳ max term

⇒ POS form are used when o/p is logic '0'.

$0 \rightarrow A$

$1 \rightarrow \bar{A}$

Ex :- $5 \rightarrow 101 \rightarrow \bar{A}B\bar{C}$

$9 \rightarrow 1001 \rightarrow \bar{A}BC\bar{D}$

Ques:- For a given th truth table minimize POS expression.

	A	B	Y
	0	0	1
$A+\bar{B}$	0	1	0 ✓
	1	0	1
$\bar{A}+\bar{B}$	1	1	0 ✓

Sol:- we take only that value at which o/p is '0'.

$Y = (A+\bar{B})(\bar{A}+\bar{B})$

$= \bar{B} + A\bar{A}$

$= \bar{B}$

⇒ Y can be written in POS form as,

$Y(A,B) = \Pi M(1,3) = \bar{B}$

and for SOP :-

$Y(A,B) = \Sigma m(0,2) = \bar{B}$

i.e.

$\Sigma m(0,2) = \Pi M(1,3)$

⇒ If $F(A,B,C) = \Sigma m(0,1,4,7)$

There are 3 variable then 8 combination then max. term are, 2,3,5,6.

$F(A,B,C) = \Sigma m(0,1,4,7) = \Pi M(2,3,5,6)$

© Wiki Engineering

⇒ With 'n' variable, maximum possible minterms or maxterms are 2^n. eg.

(12)

(-) for, $n = 2$. i.e. (A, B)

Total no. of min or max terms are $2^2 = 4$.

(-) for, $n = 3$ i.e. (A, B, C)

Total no. of min or max terms are $2^3 = 8$

⇒ For $n = 2$, (A, B) total 16 logical expression i.e.

1	A	$A\bar{B}$	AB
0	$\bar{A}$	$\bar{A}B$	$A+B$
$\bar{A}B + A\bar{B}$	B	$A+\bar{B}$	$\bar{A}\bar{B}$
$AB + \bar{A}\bar{B}$	$\bar{B}$	$\bar{A}+B$	$\bar{A}+\bar{B}$

Note :- With n variable maximum possible logical expression are 2^{2^n}.

eg. for $n = 2$, logical expression $= 2^{2^2} = 16$

for $n = 3$ $= 2^{2^3} = 256$

DES-2004
GATE-2002
ITO-2001
ITO-2002

Problem:- For $n = 4$, what is the total no of logical expression.

Sol^n:- logical expression $= 2^{2^4}$

$= 2^{16} = 35536.$

LectureNotes.in

(D) Dual Form :-

+ive logic

⇒ +ive logic means higher voltage corresponds to logic '1'.

⇒ logic '0' → 0 V
logic '1' → +5V

−ive logic

⇒ −ive logic means higher voltage corresponds to logic '0'.

⇒ logic 0 = +5V
logic 1 = 0V

Ques:- logic 0 → −5V
logic 1 → 0V

Sol:- Higher value of voltage (0V) for logic 1. then +ive logic.

Ques:- ECL :
logic '0' → −1.7V
logic 1 → −0.8V

Sol:- −0.8V is larger value than −1.7V then it is +ive logic.

+ive logic AND

A	B	Y
0	0	0
0	1	0
1	0	0
1	1	1

−ive logic AND

A	B	Y
1	1	1
1	0	1
0	1	1
0	0	0

+ive logic OR

A	B	Y
0	0	0
0	1	1
1	0	1
1	1	1

−ive logic OR

A	B	Y
1	1	1
1	0	0
0	1	0
0	0	0

⇒ For −ive logic or gate, convert 1 to 0 and 0 to 1.

⇒ We can say that +ive logic AND gate is equal to −ive logic OR gate and −ive logic AND gate is equal to +ive logic OR gate.

© Wiki Engineering
www.raghul.org

⇒ Dual expression is used to convert +ive logic into -ive logic or, -ive logic to +ive logic.

(14)

⇒ $AB \xrightarrow{\text{Dual}} A+B$

Dual is nothing but -ive logic.

⇒ AND $\xrightarrow[\text{Dual}]{\text{-ive logic}}$ OR

⇒ OR $\xrightarrow[\text{Dual}]{\text{-ive logic}}$ AND

LectureNotes.in

(-) AND $\longleftrightarrow$ OR
(-) $\cdot$ $\longleftrightarrow$ $+$
(-) 1 $\longleftrightarrow$ 0
(-) keep variable as it is

} Dual.

em:- Find Dual.

$AB\bar{C} + \bar{A}BC + ABC$

:- Dual :-

$(A+B+\bar{C})(\bar{A}+B+C)(A+B+C)$

if we find again dual then,

$AB\bar{C} + \bar{A}BC + ABC$

⇒ For any logical expression, if two times dual is used resulting same expression.

LectureNotes.in

Self Dual :-

$AB + BC + AC$

Dual :-

$= (A+B)(B+C)(A+C)$

$= (B+AC)(A+C)$

$= BA + BC + AC + AC$

$= AB + BC + AC$ (again same expression)

⇒ In some of the logical expression not all its dual gives the same expression.

LectureNotes.in

© Wiki Engineering www.raghul.org

⇒ In self Dual expression, if one time dual is used resut in same expression.

(15)

$$\boxed{n \text{ variable} \rightarrow \text{self Dual} = 2^{2^{n-1}}}$$

If there are n variables then total no. of self dual expression is $2^{2^{n-1}}$.

eg :-

(i) For $n = 1$. $\Rightarrow 2^{2^0} = 2$.

Then 2 dual expression.

$A \rightarrow$ Self dual $\rightarrow A$
$\bar{A} \rightarrow \bar{A}$

} Total self dual expression are 2.

(ii) For $n = 2$ $\Rightarrow 2^{2^1} = 4$.

Then 4 dual expression.

$A \rightarrow A$, $B \rightarrow B$
$\bar{A} \rightarrow \bar{A}$, $\bar{B} \rightarrow \bar{B}$

(iii) For $n = 3$ $\Rightarrow 2^{2^{3-1}} = 16$.

Then 16 dual expression.

$A, \bar{A}, B, \bar{B}, C, \bar{C}, \bar{A}\bar{B}+\bar{B}\bar{C}+\bar{C}\bar{A}, AB+BC+CA, ---$

LectureNotes.in

(E) Complement :-

if $Y = ABC + \bar{A}BC + A\bar{B}C$

complement is,

$\bar{Y} = (\bar{A}+\bar{B}+\bar{C})(A+\bar{B}+\bar{C})(\bar{A}+B+\bar{C})$

(·) AND ⟷ OR
(·) · ⟷ +
(·) 1 ⟷ 0
(·) complement of each variable.

} complement.

(F) Venn Diagram :-

For two variable (A, B).

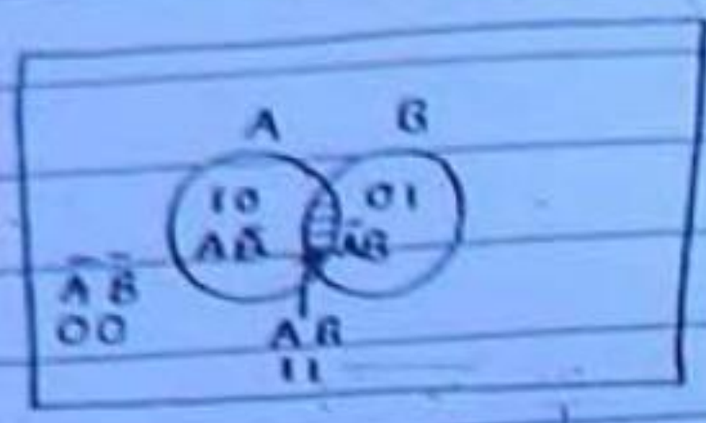

Ques :- For a given venn diagram, minimize the SOP expression for shaded region.

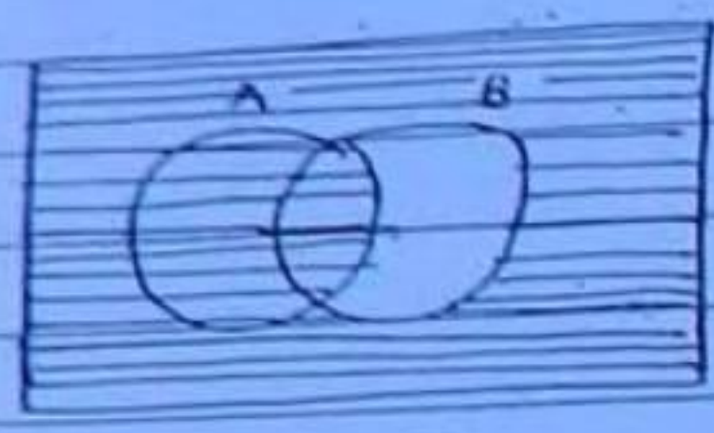

Sol :-

$$Y = \bar{A}\bar{B} + A\bar{B} + AB$$
$$= \bar{B}(\bar{A}+A) + AB$$
$$= \bar{B} + AB$$
$$= (\bar{B}+A)(\bar{B}+B)$$
$$= A+\bar{B}$$

(0 1) for POS form.

Ques :- SOP expression for shaded region.

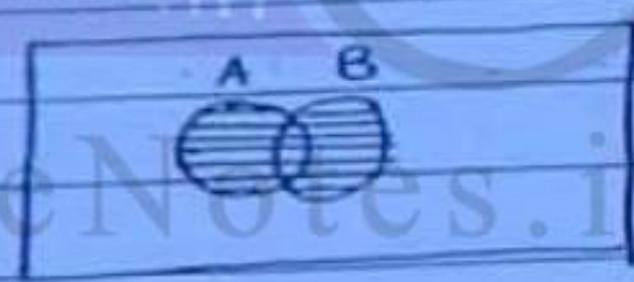

Sol :-

$$Y = AB + A\bar{B} + \bar{A}B$$
$$= A(B+\bar{B}) + \bar{A}B$$
$$= A + \bar{A}B$$
$$= (A+\bar{A})(A+B)$$
$$= A+B$$

(0, 0) ⟶ (in POS form)

Ques :- SOP expression

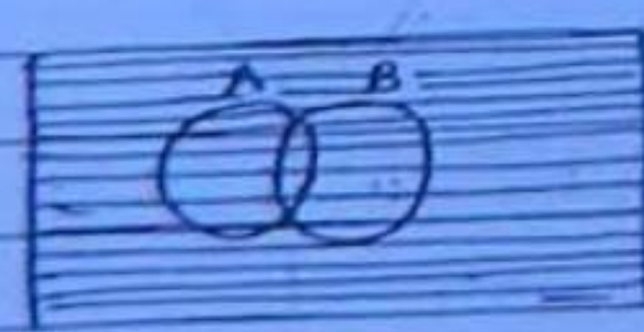

© Wiki Engineering
www.raghul.org

Sol:- $\bar{A}B + A\bar{B} + AB + \bar{A}\bar{B}$

$= B(A+\bar{A}) + \bar{B}(A+\bar{A})$

$= B + \bar{B}$

$= 1.$

⇒ For 3- variable :-

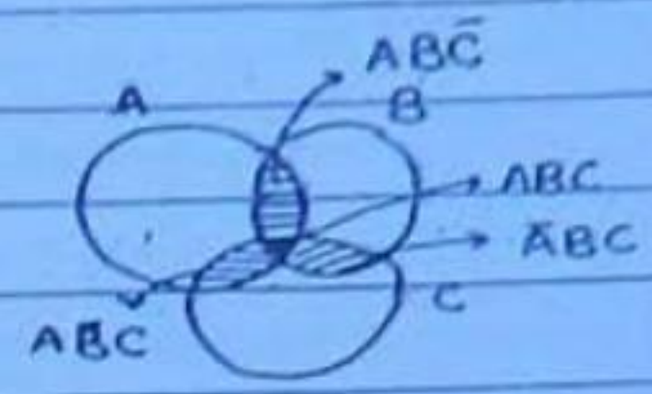

SOP form for shaded portion

$= ABC + \bar{A}BC + AB\bar{C} + A\bar{B}C + \underbrace{ABC + ABC}_{\text{extradded}}$

$= BC(A+\bar{A}) + AB(\bar{C}+C) + AC(B+\bar{B})$

$= AB + BC + CA$

LectureNotes.in

(G) Switching Circuit :-

(16)

For Series :-

Truth table :-

A	Y
0	0
1	1

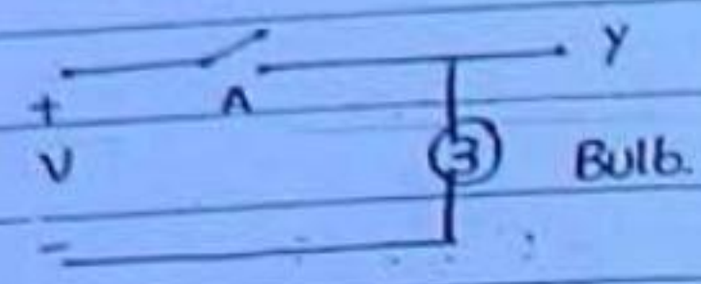

For Parallel :-

A	Y
0	1
1	0

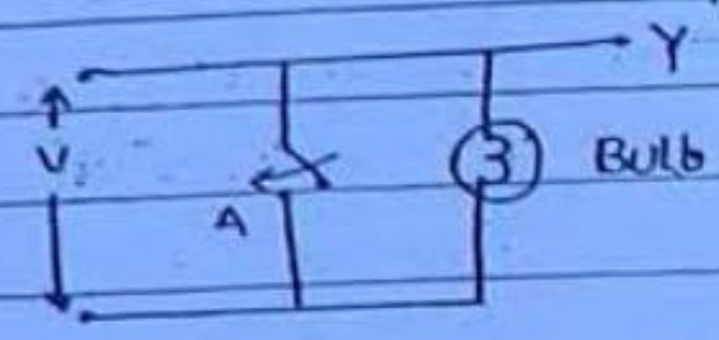

⇒ In place of bulb if there is resistor then answer remains the same but some drop.

Truth table :-

A	Y
0	1
1	0

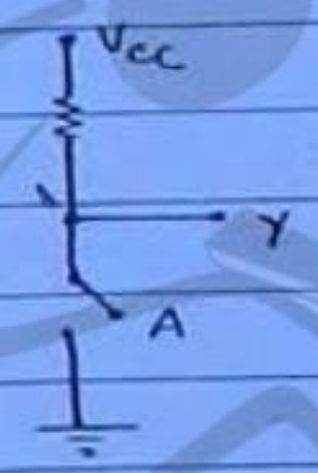

⇒ In place of switch if there is a transistor.

A	Y
0	1
1	0

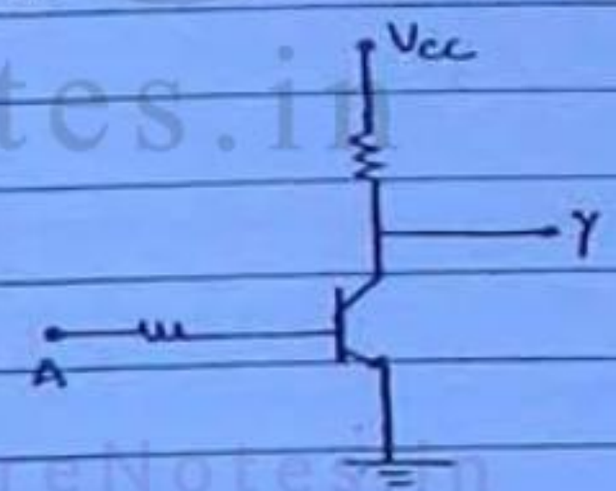

(•) For A = L. transistor becomes short circuit.

For two switch A and B :-

AND ⇒

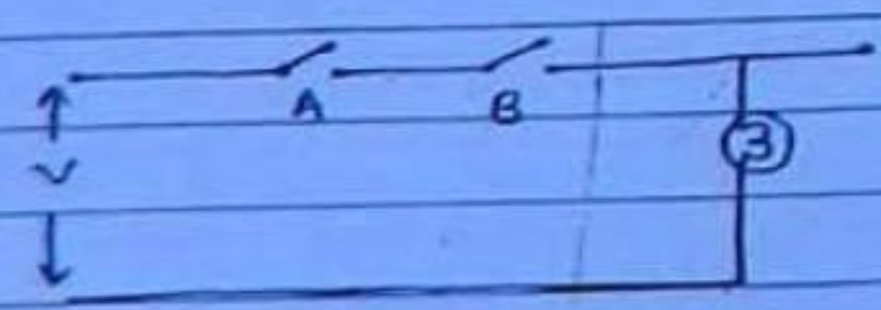

Y = AB
= AB

A	B	Y
0	0	0
0	1	0
1	0	0
1	1	1

LectureNotes.in

NAND ⇒

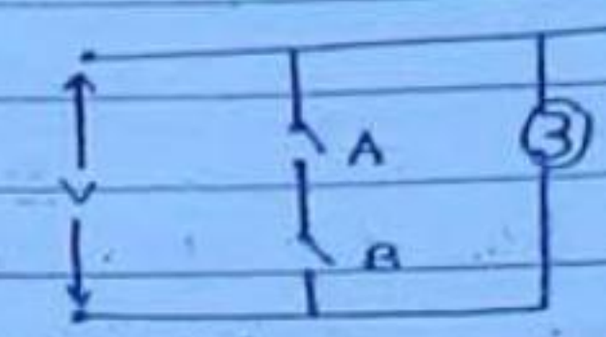

$Y = \overline{AB}$
$= \overline{AB}$

A	B	Y
0	0	1
0	1	1
1	0	1
1	1	0

OR ⇒

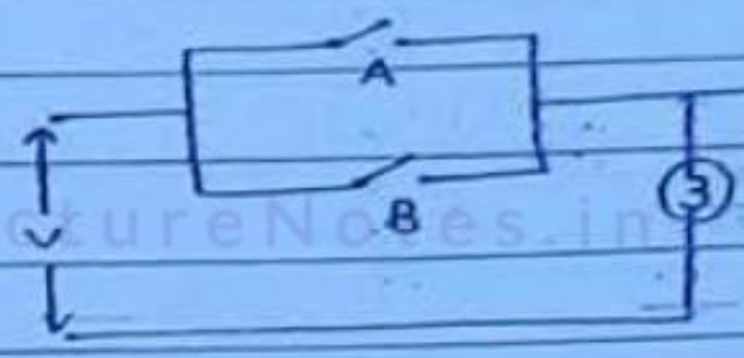

$Y = A+B$
$= A+B$

A	B	Y
0	0	0
0	1	1
1	0	1
1	1	1

NOR ⇒

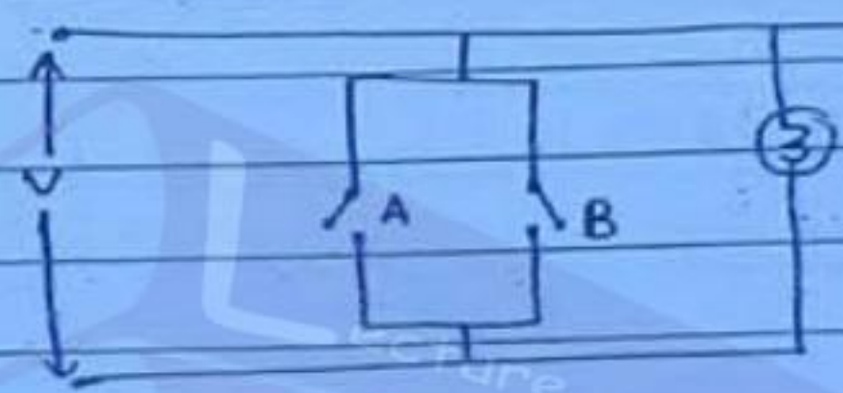

$Y = \overline{A+B}$

A	B	Y
0	0	1
0	1	0
1	0	0
1	1	0

Ques:

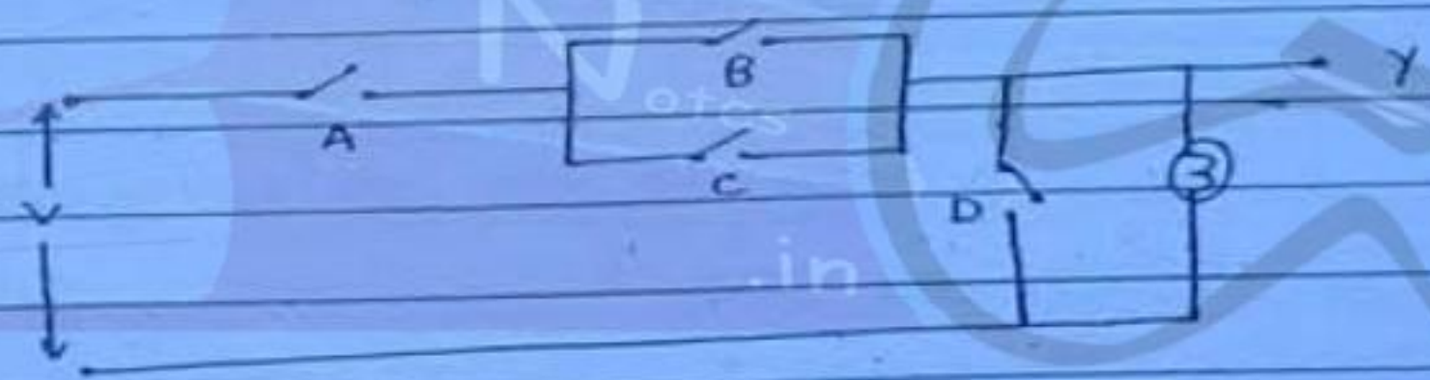

Sol: $Y = A \cdot (B+C) \cdot \bar{D}$

$= (AB + AC)\bar{D}$

$= AB\bar{D} + AC\bar{D}$

LectureNotes.in

(H) STATEMENT :-

Ques:- A logic circuit have 3 input A, B, C and o/p is Y.
o/p Y is 1. for the following combination.

(i) B and C are true $= BC$
(ii) A and C are false $= \bar{A}\bar{C}$
(iii) A, B and C are true $= ABC$
(iv) A, B and C are false $= \bar{A}\bar{B}\bar{C}$

then minimize the o/p for Y.

Sol:- o/p Y = 1. (take min term = SOP form)

$$Y = BC + \bar{A}\bar{C} + ABC + \bar{A}\bar{B}\bar{C}$$
$$= BC(1+A) + \bar{A}\bar{C}(1+\bar{B})$$
$$= BC + \bar{A}\bar{C}$$

if o/p Y = 0, then take max term (POS form).

Ques:- A logic ckt have 3 input A, B, C and o/p is F = 1. when majority no. of I/ps are logic 1.

(i) minimizing expression F
(ii) Imolement logic ckt

Sol:-

A	B	C	F
0	0	0	0
0	0	1	0
0	1	0	0
0	1	1	1 ✓
1	0	0	0
1	0	1	1 ✓
1	1	0	1 ✓
1	1	1	1 ✓

$$F = \bar{A}BC + A\bar{B}C + AB\bar{C} + ABC$$
$$= \bar{A}BC + ABC + ABC + A\bar{B}C + AB\bar{C} + ABC$$
$$= BC(A+\bar{A}) + AC(B+\bar{B}) + AB(\bar{C}+C)$$
$$= AB + BC + CA.$$

© Wiki Engineering
www.raghul.org

classmate

(I) LOGIC GATES :-

⇒ Basic Building Blocks

NOT, AND, OR } → Basic gate

NAND, NOR } → universal gate

EXOR, EXNOR } → Arithmetic ckt, comparator, parity generator/checker, code converter (Binary to gray, Gray to Binary)

NOT :-

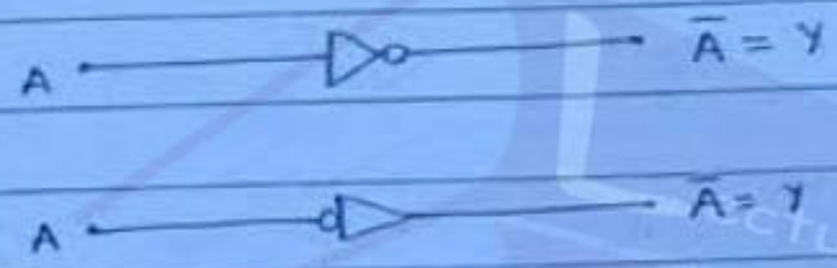

A	Y
0	1
1	0

IES-2010
GATE-2010

Ques:- Circuit shown in the fig are

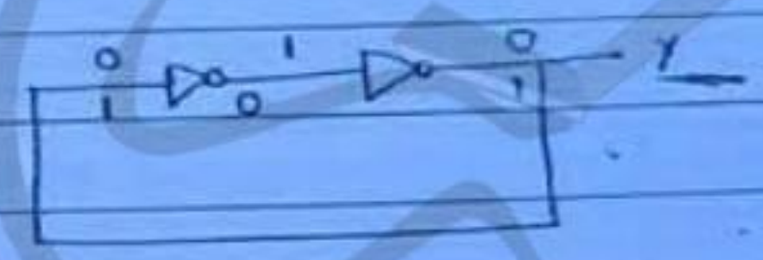

(a) Buffer
(b) Astable MV
(c) Bistable MV
(d) square wave generator.

Sol:- If there is no feedback then it is buffer. In Buffer if we apply 0 then get 0
" 1 ⇒ " 1.
" no I/P " " no I/P.

Buffer means whatever the I/P ie. the O/P.

⇒ But there is a feedback and the O/P is stable if we give 1 as I/P, O/P is also 1 and if gives 0 then O/P is 0 then two stable state.

⇒ Hence it is Bistable multivibrator.

classmate
© Wiki Engineering
www.raghul.org

Ques: ckt shown is

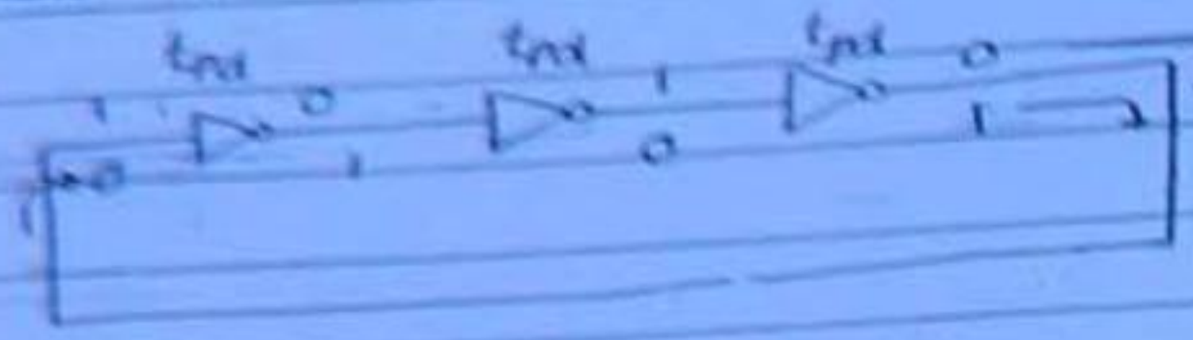

(22)

Sol:- t_{pd} = Propogation delay.

"0" for = $5\,t_{pd}$

1 for = $5\,t_{pd}$

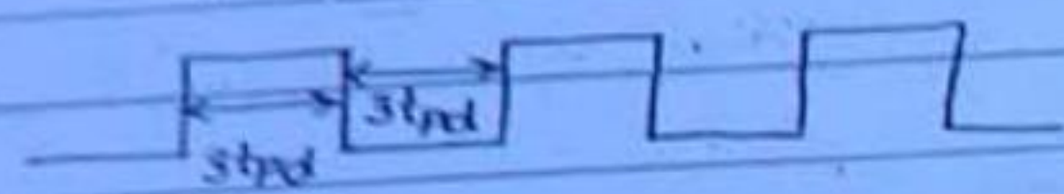

It is called

(i) Square wave generator.

(ii) As o/p is not stable sometime 1 and sometime 0 Hence it is also called astable multivibrator.

(iii) clock generator

(iv) Ring oscillator

Total time period (T) = $6\,T_{pd}$

then,

$$\boxed{T = 2N\,t_{pd}}$$

N = no. of inverters in feedback.

Ques:- In a ckt shown in fig the propogation delay of each NOT gate is 100 P Sec Then frequency of generator square wave is

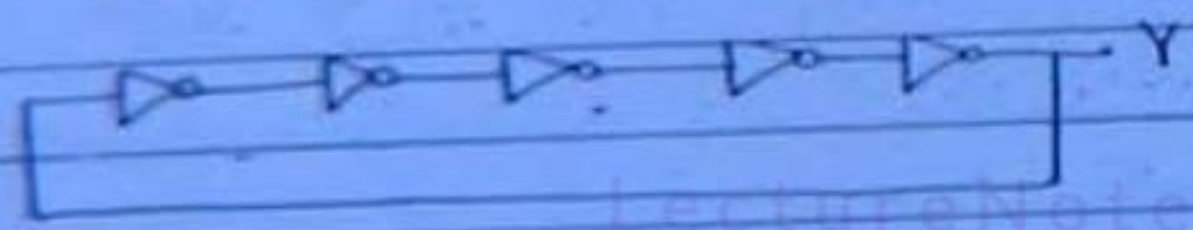

(a) 10GHz

(b) 1GHz

(c) 100 MHz

(d) 10 MHz

Sol:- $T = 2Nt_{pd}$

$= 2 \times 5 \times 100\,PSec = 1000\,PSec$

$f = \frac{1}{T} = \frac{1}{1000 \times 10^{-12}\,sec} = 10^{9}\,Hz$

$= 1GHz$

© Wiki Engineering

Ques:

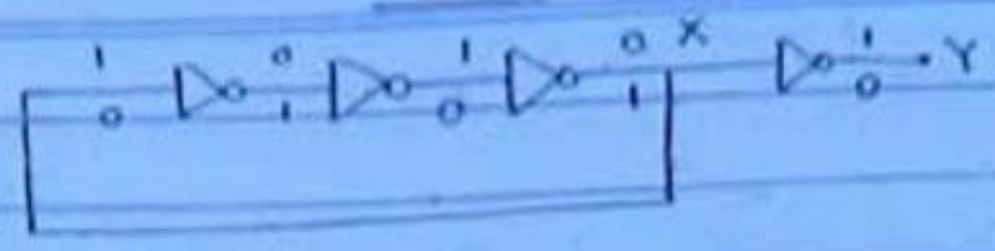

(23)

Sol^n:- The ckt shown in the fig the propogation delay of each NOT gate is 2nsec. Then time period of generated square wave is.

(a) 6 ns (c) 14 ns

(b) 12 ns (d) 16 ns

Sol^n:- Astable Multivibrator, square wave generator.

$T = 2 N t_{pd}$

$= 2 \times 3 \times 2 nsec = 12 nSec.$

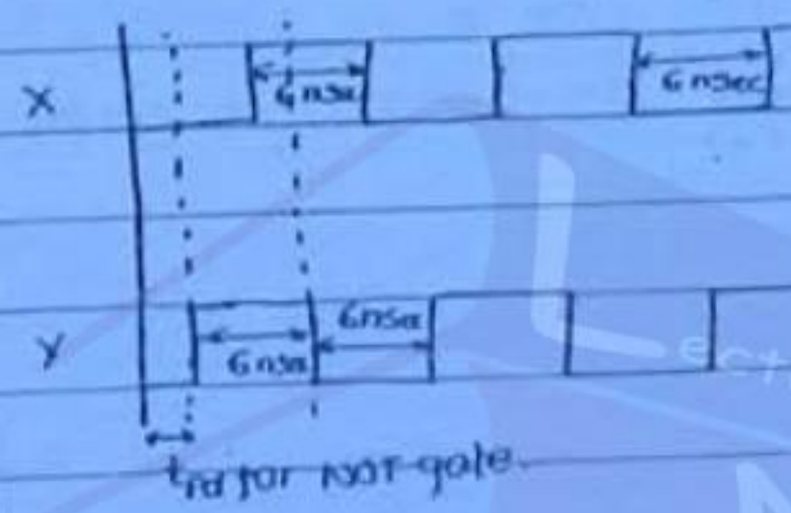

Thus time period at x and y is same.

AND GATE :-

A	B	Y
0	0	0
0	1	0
1	0	0
1	1	1

⇒ o/p is low if any of the i/p is low i.e logic '0'.

⇒ AND gate follow both commutative law and associative law.

(·) AB = BA

i.e.

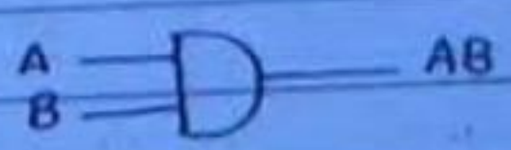

or.

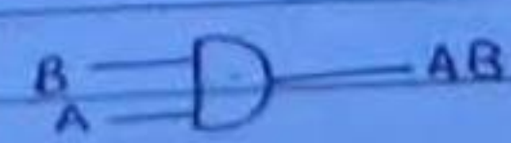

© Wiki Engineering classmate

www.raghul.org

(·) $ABC = (AB)\cdot C = A(BC)$

i.e.

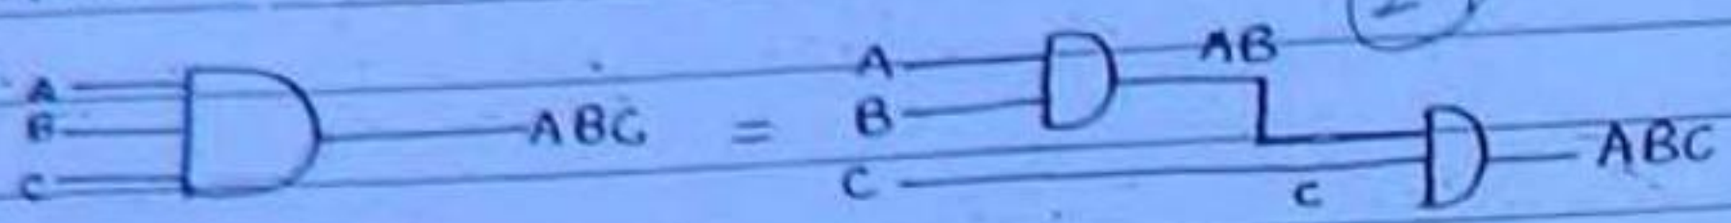

⇒ Disable & Enables :-

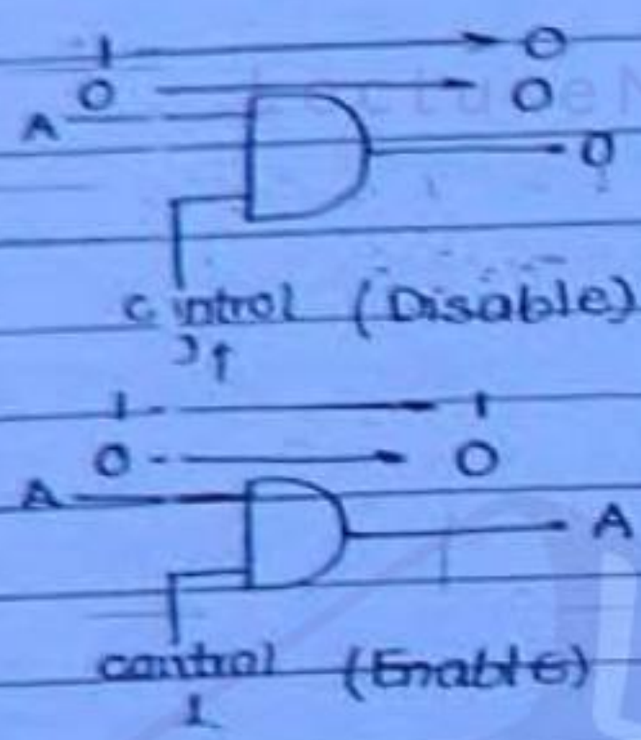

⇒ Thus o/p remains in '0' due to control I/P disable. AND gate is not in working state.

⇒ AND gate is in working state o/p is changing in Enabled state.

⇒ In TTL logic family, If any I/P is open and float then it will act as '1'.

⇒ In ECL logic family, floating input will act as logic '0'.

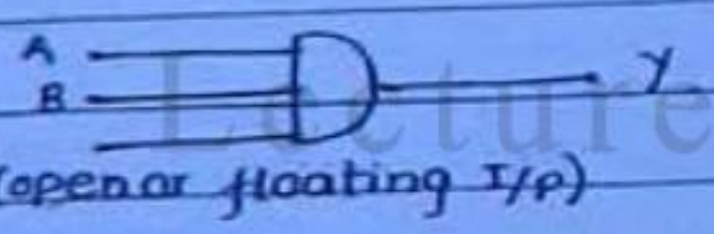

* Question occurs mostly from ECL and TTL in Exam.

Unused I/P's :-

1.

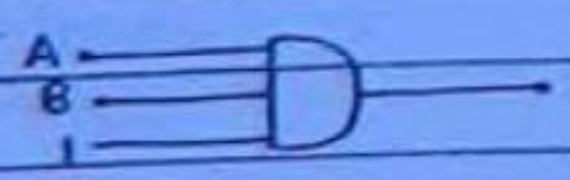

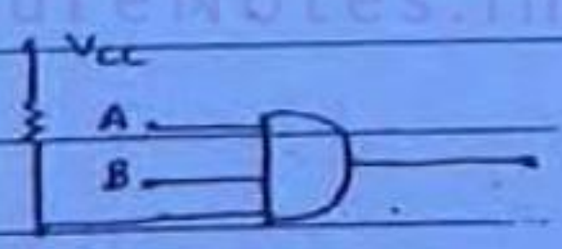

⇒ In Multipin (I/P) AND gate unused I/P can be connected to logic 1. or "pull ~~off~~ up".

⇒ unused I/P can be connected to logic '0' or "pull Down".

© WikiEngineering

2.

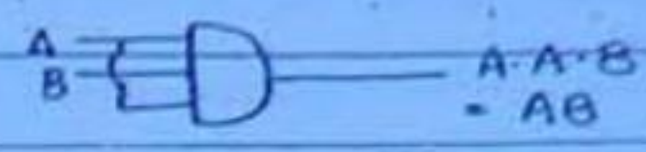

⇒ unused I/P can be connected to one of the used I/P.

3. 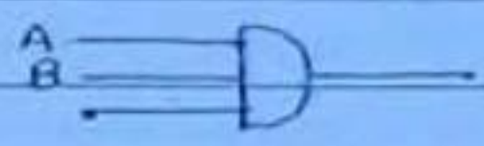

$Y = AB$ (only for TTL)

⇒ If it is TTL logic family, then unused I/P can be open or floated. (unconnected)

Note:- Because of unnecessary I/P attached to B, fan in will be down.

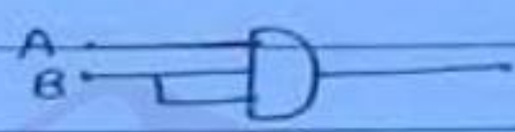

$Y = AB$.

⇒ Best way to connecting unused pin (I/P) in AND gate is connecting to logic '1'.

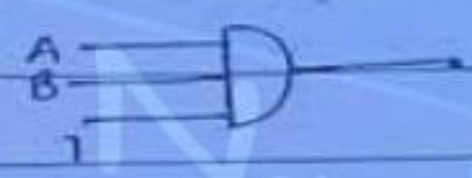

$Y = AB$

LectureNotes.in

© Wiki Engineering
classmate

www.raghul.org

OR Gate :- (Inclusive OR)

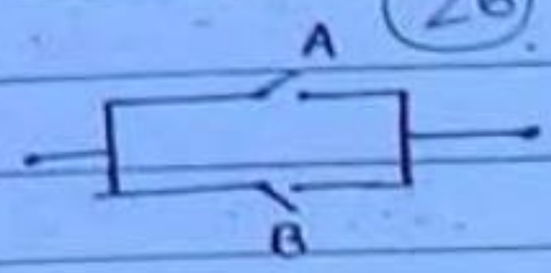

OR

A	B	Y
0	0	0
0	1	1
1	0	1
1	1	1

⇒ when any of the I/P is High in OR gate then o/p is High.

⇒ OR gate follows both commutative and Associative law.

(i) Commutative law :-

$A+B = B+A$

(ii) Associative law :-

$A+B+C = (A+B)+C = A+(B+C)$

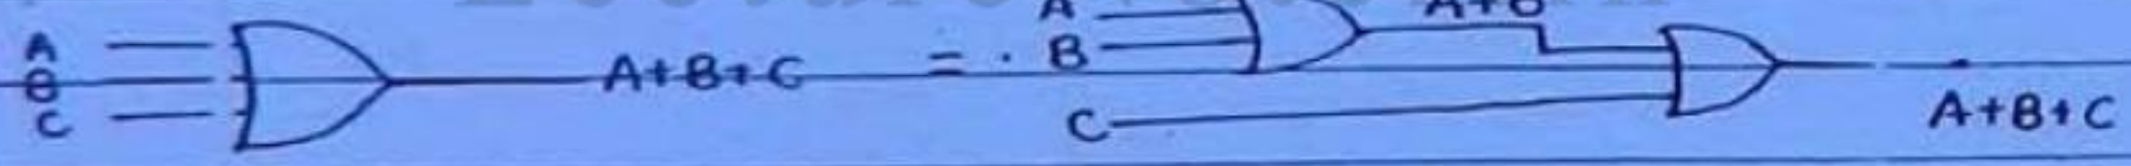

⇒ Enable and Disable :-

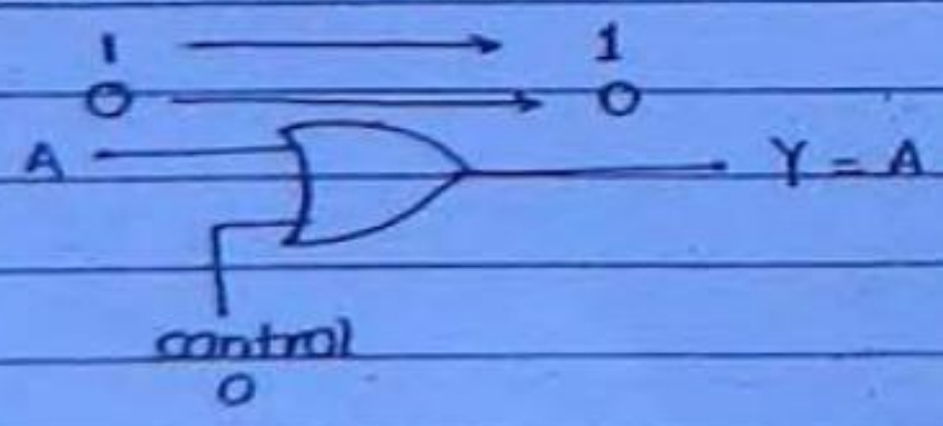

⇒ O/P is changing as I/P is changing or we say the gate is enabled.

© Wiki Engineering Classmate
www.eghtul.org

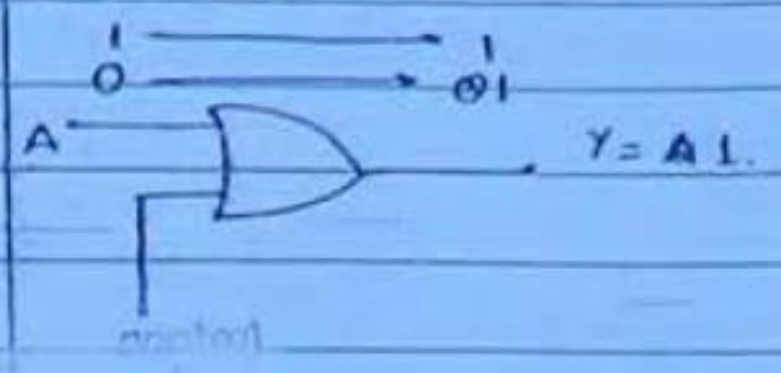

⇒ o/p is fixed or not changed. it is said to be disable.

27

Unused I/P's :-

1. In OR gate, unused I/P is connected to logic '0'- "pull down."

2. Connect to one of the used I/P.

3. If it is ECL then unused I/P can be open or floated.

⇒ In OR gate, Best way of connecting the unused I/P is to connect to logic '0'.

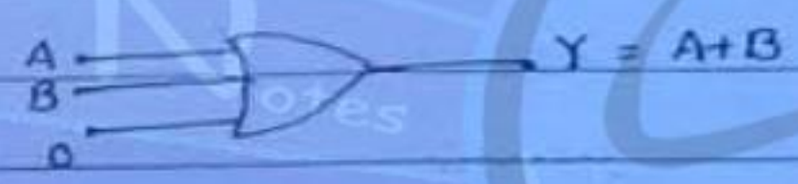

Gate-2004.

Problem:- In the ckt shown in fig. in TTL, AND, OR, INVERTER ckt for the given I/P O/P is

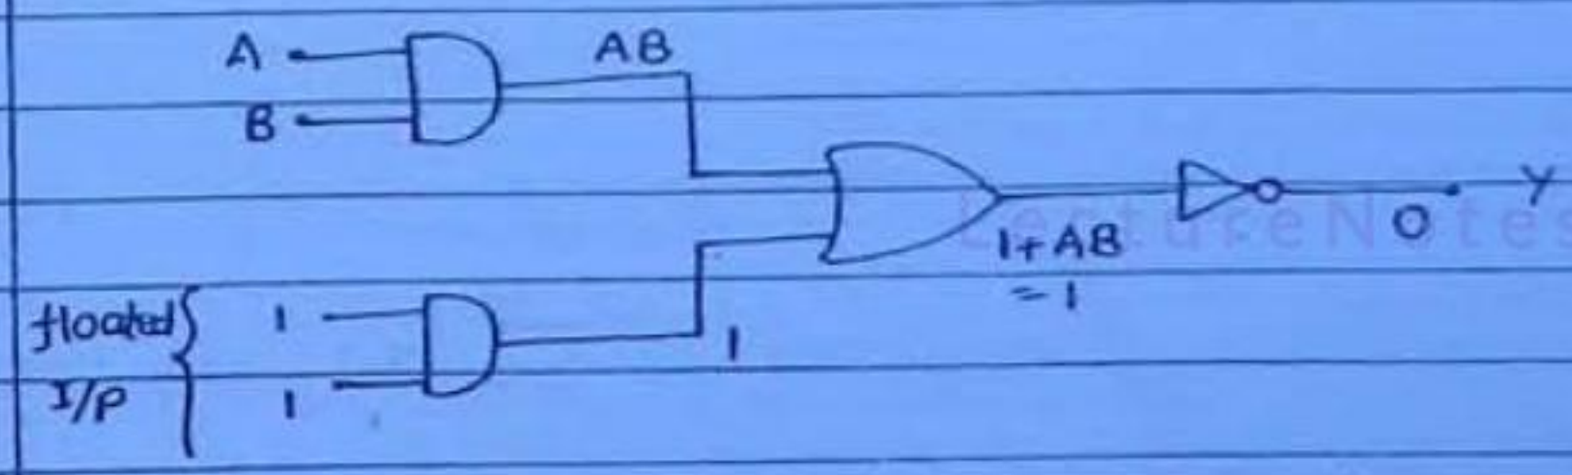

(a) 0

(b) 1

(c) AB

(d) $\overline{AB}$

Sol: In TTL, all I/P's are float then it is logic 1

© Wiki Engineering
www.raghul.org

Problem For ECL AND, OR, INVERTER.

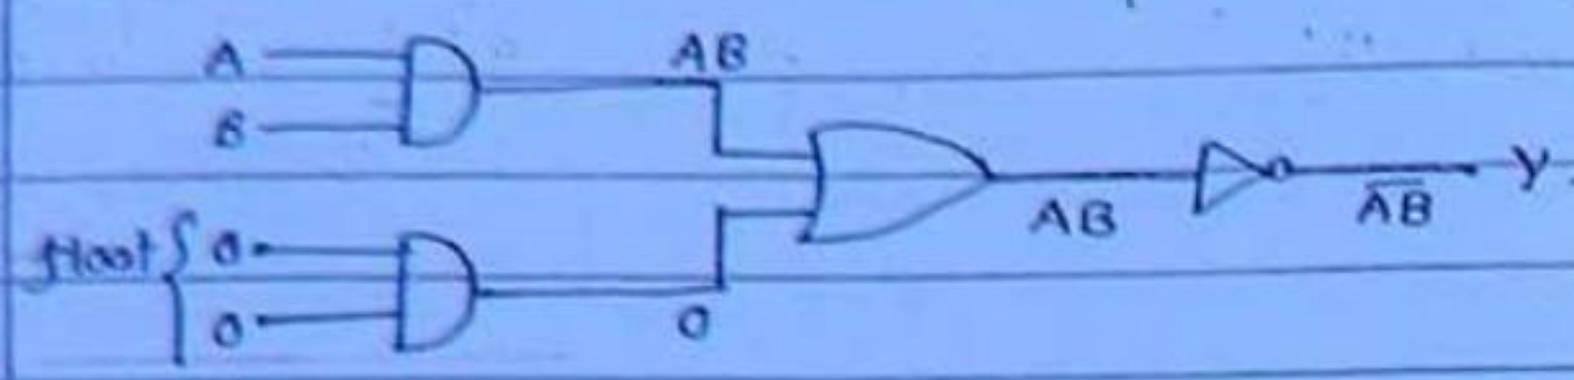

(A) 0

(B) 1

(C) AB

(D) $\overline{AB}$

Sol:- If all I/P are floating in ECL then it is '0' and O/P $Y = \overline{AB}$ Ans C.

LectureNotes.in

NAND GATE :- (Bubbled OR)

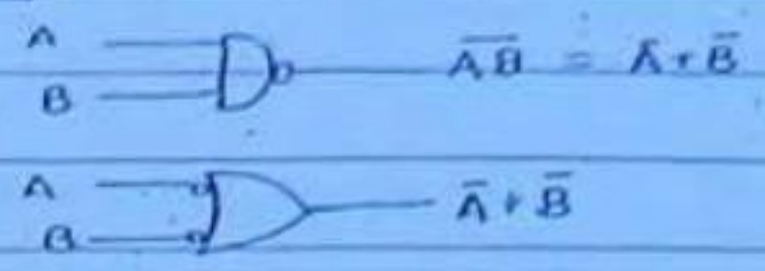

A	B	Y
0	0	1
0	1	1
1	0	1
1	1	0

⇒ When both I/p high the O/p is low.

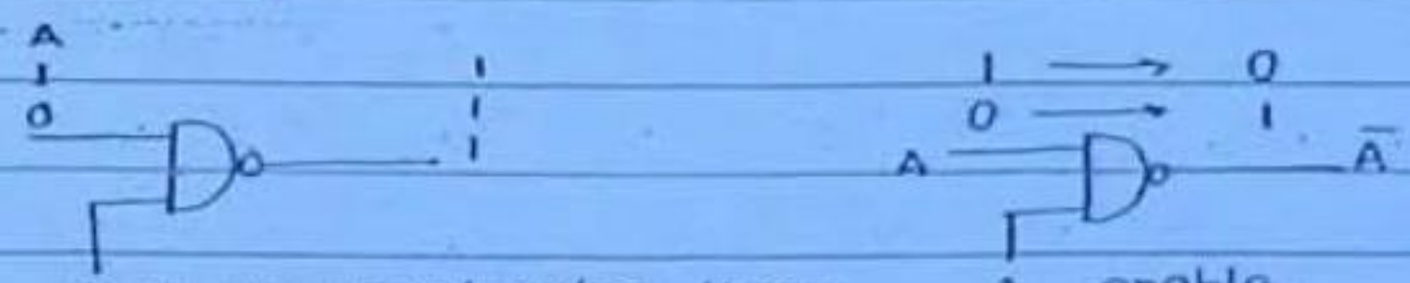

⇒ NAND gate follow commutative law but not follow associative la

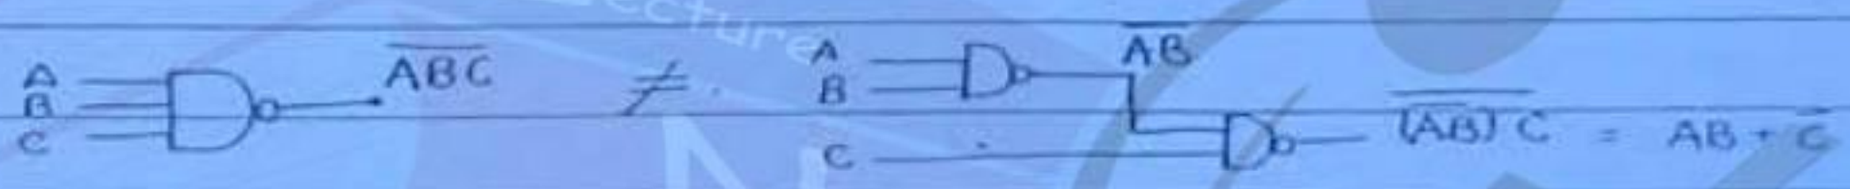

⇒ The only two gate not follow associative law i.e universal gate NAND or NOR gate.

⇒ Unused I/p in NAND gate can be connected similar to unused I/p in AND gate

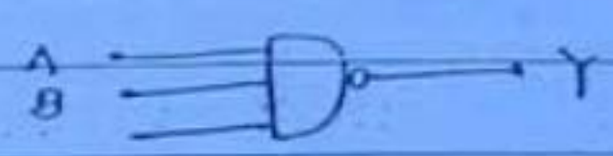

NOR GATE :- (Bubbled AND)

⇒ OR gate followed by NOT gate.

© Wiki Engineering
classmate
PAGE
www.raghul.org

A	B	Y
0	0	1
0	1	0
1	0	0
1	1	0

⇒ when both I/P is low the o/p is High.

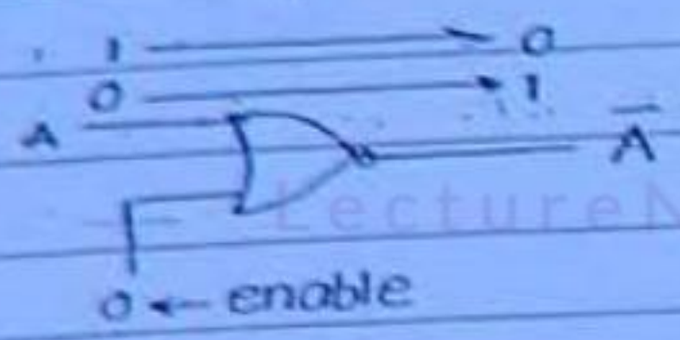

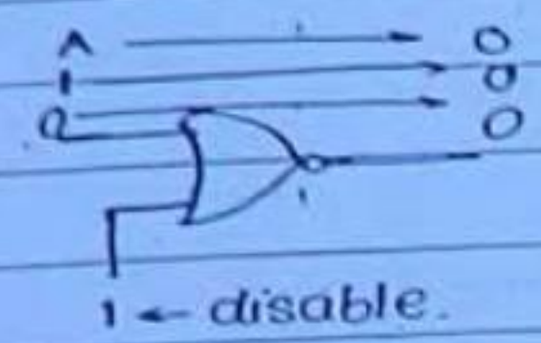

⇒ enable and disable both are same as OR gate.

⇒ NOR gate follow commutative law and not follow associative law.

i.e (i) $\overline{A+B} = \overline{B+A}$

(ii) $\overline{A+B+C} \neq \overline{\overline{A+B}\ C}$

⇒ unused I/P in NOR gate can be connected similar to OR gate.

EXOR or XOR :-

⇒ Exclusive OR gate.

⇒ OR gate is also called as inclusive OR gate.

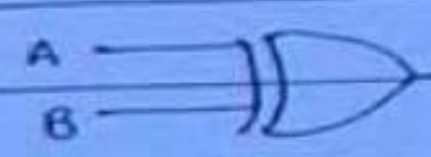

$Y = A \oplus B$

A	B	Y
0	0	0
0	1	1
1	0	1
1	1	0

⇒ when A = B, o/p is low i.e '0'.

⇒ when A ≠ B, o/p is High i.e. logic '1'.

© Wiki Engineering

www.rahul.org

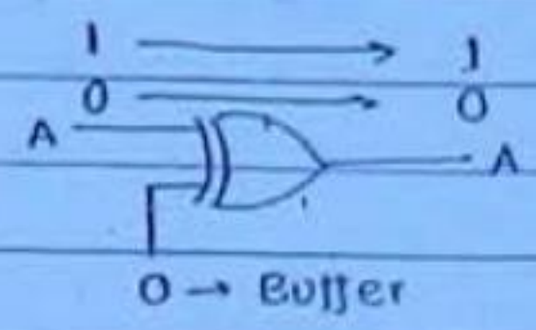

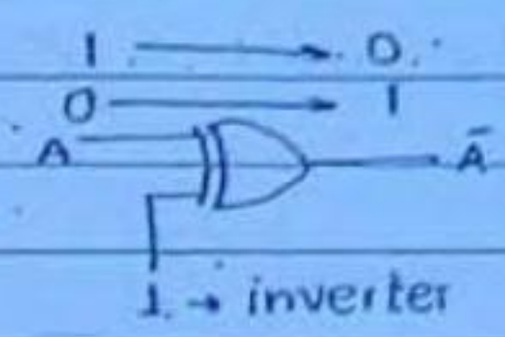

31

⇒ It is also called controlled inverter.

Note:- $A \oplus A = 0$

$A \oplus \bar{A} = 1$

$A \oplus 0 = A$

$A \oplus 1 = \bar{A}$

⇒ If $A \oplus B = C$ then.

(·) $A \oplus C = B$

(·) $B \oplus C = A$

(·) $A \oplus B \oplus C = 0$

⇒ Since, $A \oplus A = 0$

$A \oplus A \oplus A = A$

$A \oplus A \oplus A \oplus A = 0$

and so on ---

Then we say odd no. of same I/P gives same O/P and even no. same I/P gives zero as O/P.

⇒ $B \oplus B \oplus B \oplus \text{----} n = B$, if n is odd

$= 0$, if n is even.

Problem:- The ckt shown in fig. contains cascading of 20 EXOR gate. If x is the I/P then O/P is.

(a) 0

(b) 1

(c) x

(d) $\bar{x}$

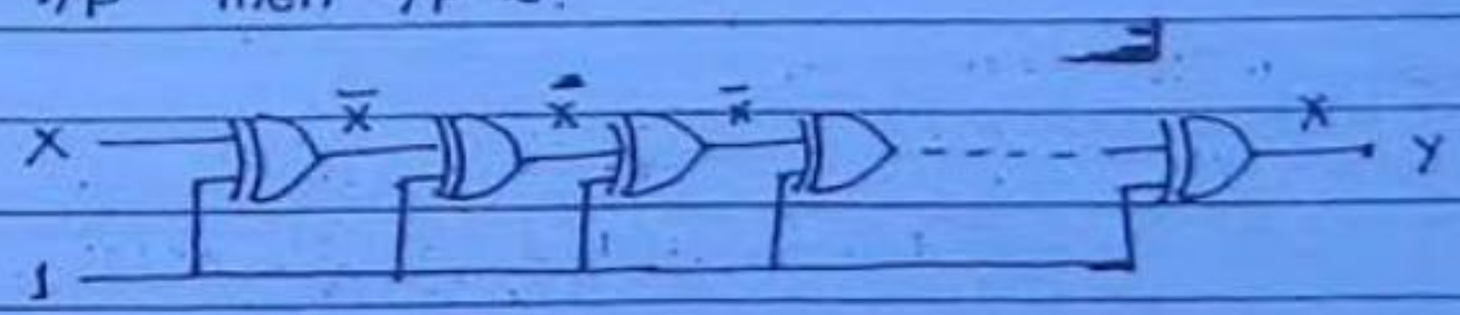

Sol: O/P of even EXOR gate have same O/P.

$\bar{x}$ Ans c.

LectureNotes.in
©Wiki Engineering
www.raghul.org

EXNOR or XNOR :-

A	B	Y
0	0	1
0	1	0
1	0	0
1	1	1

⇒ whenever the I/p is same O/p is High.

SOP expression = $\bar{A}\bar{B} + AB$

POS expression = $(A+\bar{B})(\bar{A}+B)$

EXOR :-	EXNOR :-
$\bar{A}B + A\bar{B}$ ← SOP →	$\bar{A}\bar{B} + AB$
$(A+B)(\bar{A}+\bar{B})$ ← POS →	$(A+\bar{B})(\bar{A}+B)$

⇒ when $A = B$, then O/P is High.
therefore coincedence logic ckt and also called as equivalent detector.

⇒ When $A \neq B$, The O/P is low.

⇒ Enable and Disable :-

(i)

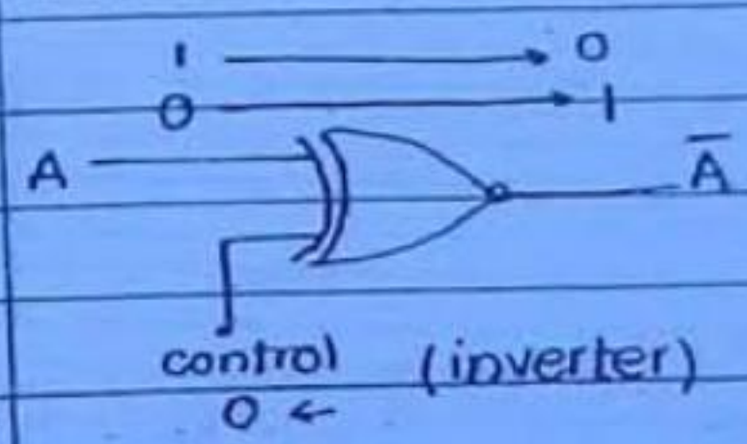

(ii)

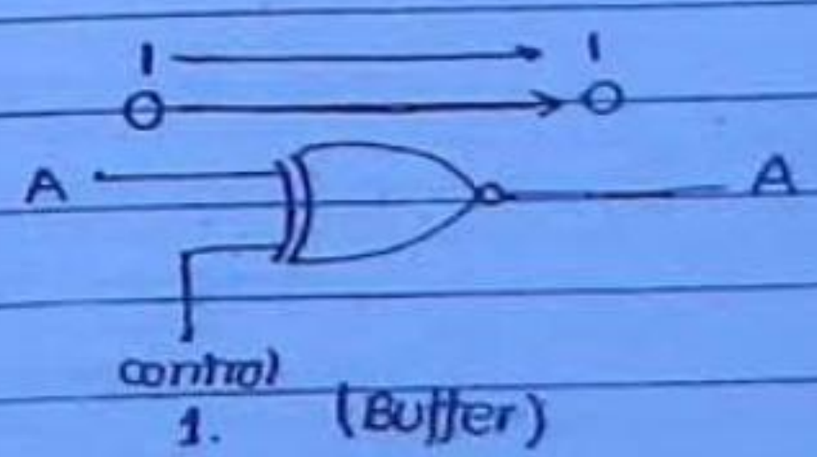

© Wiki Engineering
www.raghul.org

$A \odot A = 1$

$A \odot \bar{A} = 0$

$A \odot 0 = \bar{A}$

$A \odot 1 = A$

(34)

since, $A \odot A = 1$

$A \odot A \odot A = A$

$A \odot A \odot A \odot A = 1$

and so on.

$B \oplus B \odot B \odot \cdots n = \begin{cases} 1, & \text{if } n = \text{even} \\ B & \text{if } n = \text{odd.} \end{cases}$

⇒ EXOR and EXNOR is not always complement, it is complement only when the no. of I/P is even. and if I/P is odd then EXOR and EXNOR are same.

i.e. $A \oplus B \oplus C = A \odot B \odot C$ ⇒ same.

and, $A \oplus B \odot C \oplus D = \overline{A \odot B \odot C \odot D}$ ⇒ complement

Ques:- Find expression of $A \odot B \odot C$.

Sol:- $A \odot B \odot C$

$= (\bar{A}\bar{B} + AB) \odot C$

$= (\overline{\bar{A}\bar{B} + AB})\bar{C} + (\bar{A}\bar{B} + AB)C$

$= (\overline{\bar{A}\bar{B}} \cdot \overline{AB})\bar{C} + (\bar{A}\bar{B} + AB)C$

since, $\overline{(\bar{A}\bar{B} + AB)} = (\overline{A \odot B}) = A \oplus B = \bar{A}B + A\bar{B}$

$= (\bar{A}B + A\bar{B})\bar{C} + (\bar{A}\bar{B} + AB)C$

$= \bar{A}B\bar{C} + A\bar{B}\bar{C} + \bar{A}\bar{B}C + ABC$

$= A \oplus B \oplus C$

© Wiki Engineering

www.raghul.org

JTO-2009

Ques:- Minimize.

A	B	C	Y
0	0	0	1
0	0	1	0
0	1	0	0
0	1	1	1
1	0	0	0
1	0	1	1
1	1	0	1
1	1	1	0

(A) $A \oplus B \oplus C$ (35)

(B) $A \odot B \odot C$

✓(C) $\overline{A \odot B \odot C}$

(D) $AB + BC + AC$

Sol:- for EXOR → O/P is 1 when odd no. of 1's at I/P.

In this case.,

$$Y = \overline{A \oplus B \oplus C}$$

$$= \overline{A \odot B \odot C} \quad \text{Ans}_{C}$$

⇒ EXOR and EXNOR are never always complemented, It is complement only when even variable occurs.

⇒ EXNOR gate is even no. of 1's detector when no. of I/P's are even.

⇒ EXNOR gate is odd no. of 1's detector when no. of I/P's are odd.

Problem:- $\bar{A} \oplus B = A \odot B$

Sol:- Put $X = \bar{A}$, $Y = B$

$$X \oplus Y$$

$$= X\bar{Y} + \bar{X}Y$$

$$= \bar{A}\bar{B} + AB = A \odot B.$$

Problem:- $\bar{A} \oplus \bar{B}$

Sol:- Put $X = A$, $Y = \bar{B}$

$$= X \oplus Y$$

$$= X\bar{Y} + Y\bar{X}$$

$$= AB + \bar{A}\bar{B}$$

$$= A \odot B.$$

classmate

© Wiki Engineering

www.raghul.org

Problem:- $A \oplus B \oplus AB$.

Sol:- $(A\bar{B} + \bar{A}B) \oplus AB$

(36)

$= (A\bar{B} + \bar{A}B)\overline{AB} + (\overline{A\bar{B} + \bar{A}B})AB$

$= A\bar{B}(\bar{A} + \bar{B}) + \bar{A}B(\bar{A} + \bar{B}) + (\overline{A\bar{B}} \cdot \overline{\bar{A}B})AB$

$= A\bar{B} + \bar{A}B + [(\bar{A} + B)(A + \bar{B})]AB$

$= A\bar{B} + \bar{A}B + [\bar{A}\bar{B} + AB]AB$

$= A\bar{B} + \bar{A}B + AB$

$= A(\bar{B} + B) + \bar{A}B = A + \bar{A}B$

$= (A + \bar{A})(A + B) = A + B$ Ans$_c$

$$\boxed{A \oplus B \oplus AB = A + B}$$

Problem:-

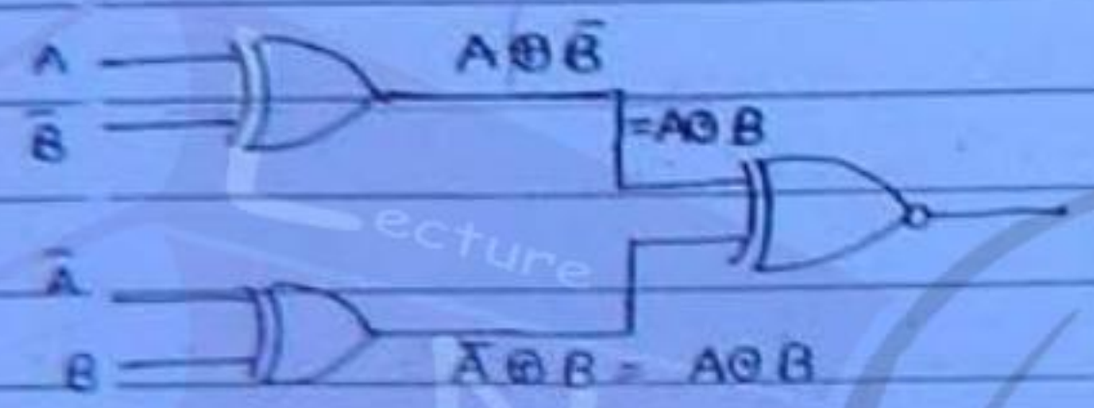

$Y = 1$ $\because X \odot X = 1$

$A \odot A$ $Y = 1$.

(a) 0

(b) 1

(c) $A \oplus B$

(d) $A \odot B$

Sol:- $Y = 1$ Ans$_r$.

SYMBOLS :-

NAND ⇒ 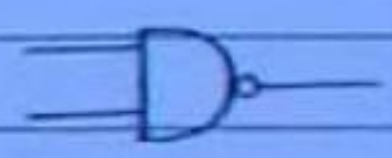 ⇒ 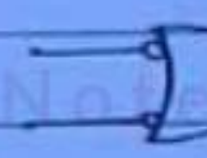 Bubbled OR

NOR ⇒ 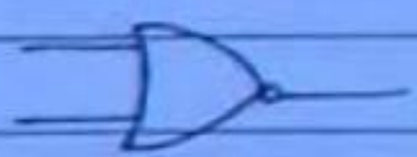 ⇒ Bubbled AND.

AND ⇒ 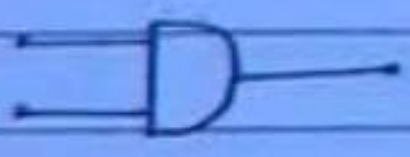 ⇒ 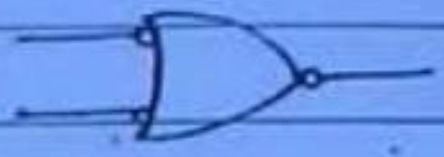

OR ⇒ 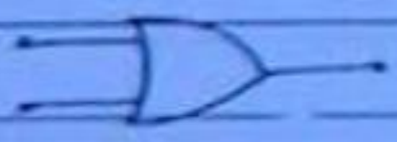 ⇒ 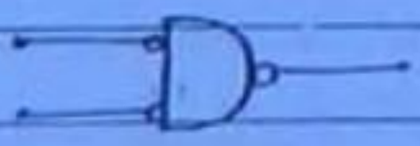

© Wiki Engineering

www.raghul.org

NAND as Universal :-

(i) NOT :-

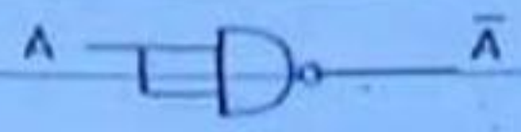

$\Rightarrow$ 1 gate required

(ii) AND :-

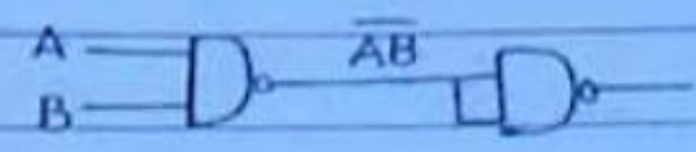

$\Rightarrow$ 2 gate

LectureNotes.in

(iii) OR :-

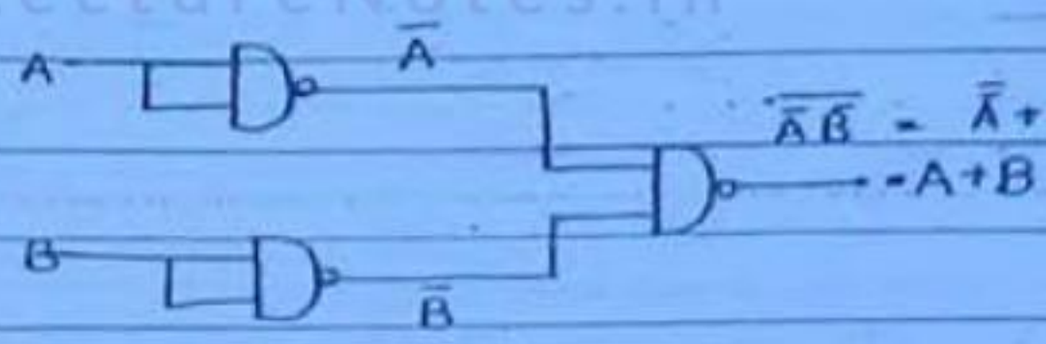

$\Rightarrow$ 3 gate.

(iv) EXOR :-

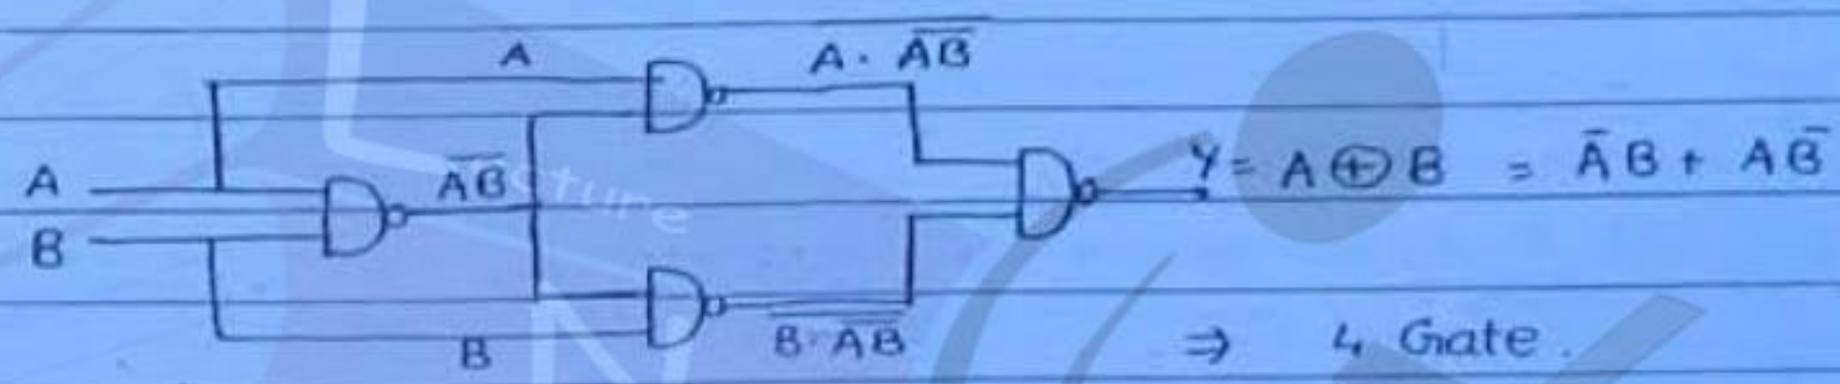

$\Rightarrow$ 4 Gate.

$$Y = \left(\overline{A \cdot \overline{AB} \cdot B \cdot \overline{AB}}\right)$$
$$= \left(A \cdot \overline{AB} + B \cdot \overline{AB}\right)$$
$$= \left(A(\bar{A} + \bar{B}) + B(\bar{A} + \bar{B})\right)$$
$$= A\bar{B} + B\bar{A} = A \oplus B$$

(v) EXNOR :-

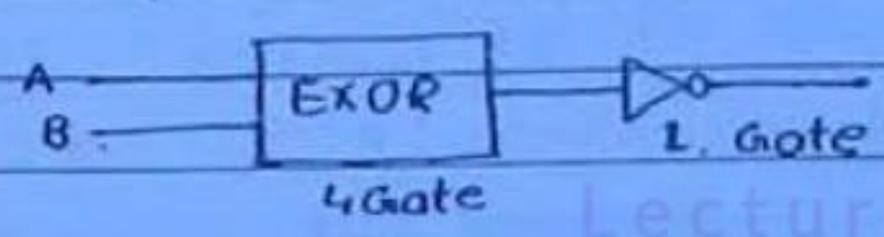

$\Rightarrow$ 5 Gate

LectureNotes.in

(vi) NOR :-

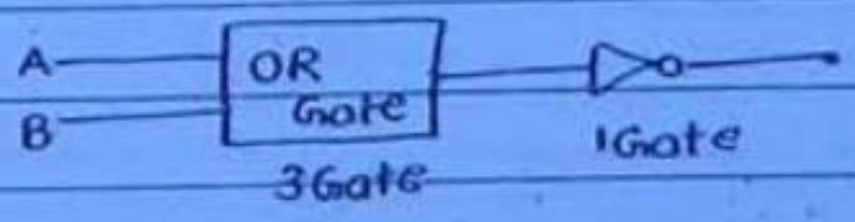

$\Rightarrow$ 4 Gate

© Wiki Engineering

NOR as universal :-

(i) NOT :-

⇒ 1 gate

(ii) AND :-

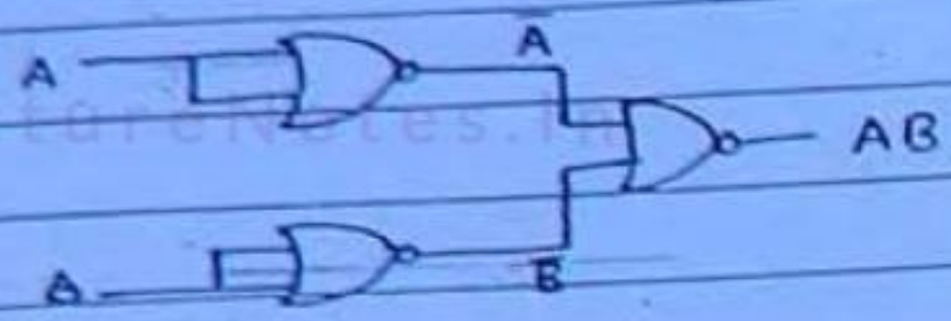

⇒ 3 gate

(iii) OR :-

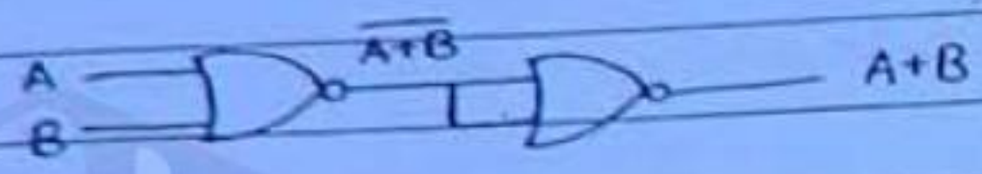

⇒ 2 gate

(iv) EXNOR :-

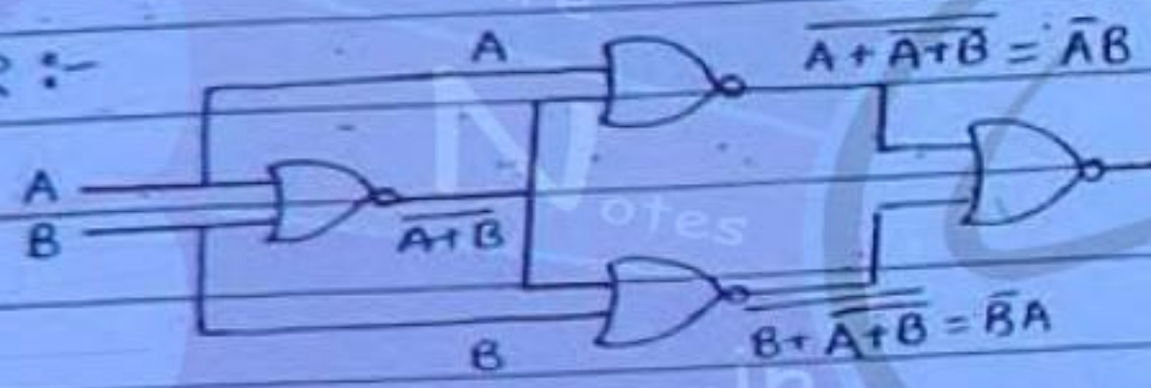

⇒ 4 gate

$$y = \overline{\overline{(A+\overline{A+B})} + (\overline{B+\overline{A+B}})} = \overline{\bar{A}(A+B) + \bar{B}(A+B)}$$

$$= \bar{A}B + \bar{B}A = \overline{A \oplus B}$$

$$\cancel{= (A+\overline{A+B})(B+\overline{A+B})}$$

$$\cancel{= AB + A(\bar{A}\bar{B}) + B(\bar{A}\bar{B}) + \bar{A}\bar{B}} = A \odot B$$

(v) EXOR :-

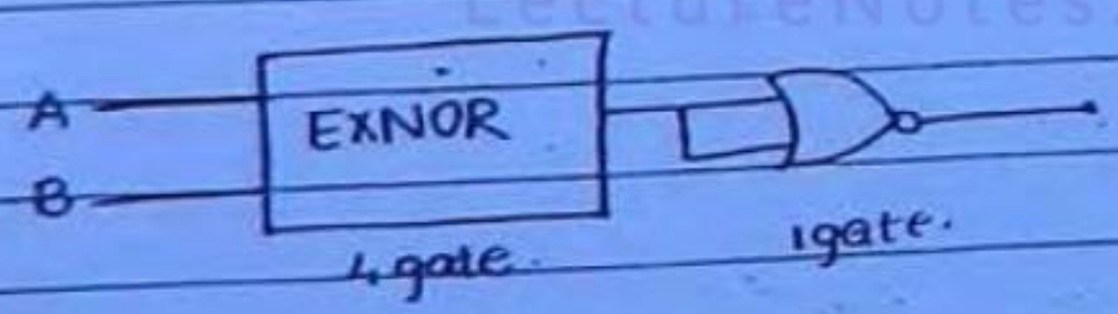

EXOR ⇒ 5 gate

(vi) NAND

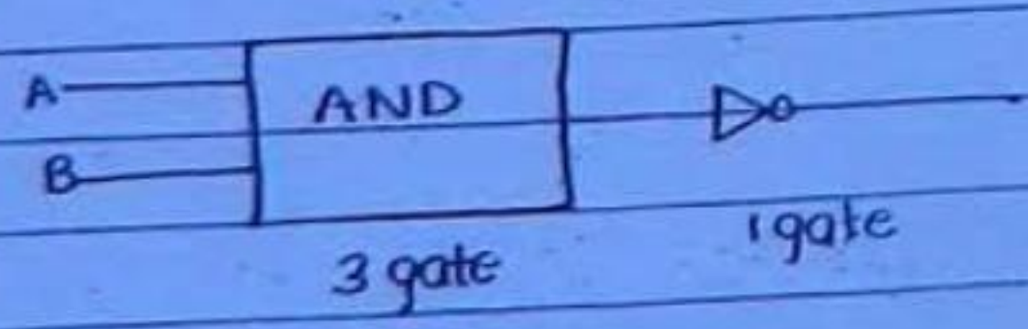

NAND ⇒ 4 gate

© Wiki Engineering
www.raghul.org

Note:-

Logic gate	No. of NAND	No. of NOR.
NOT	1	1
AND	2	3
OR	3	2
EXOR	4	5
EXNOR	5	4.

(39)

Problem:- To implement $\bar{X}YZ$. The min no. of two I/P NAND gate required.

Sol:-

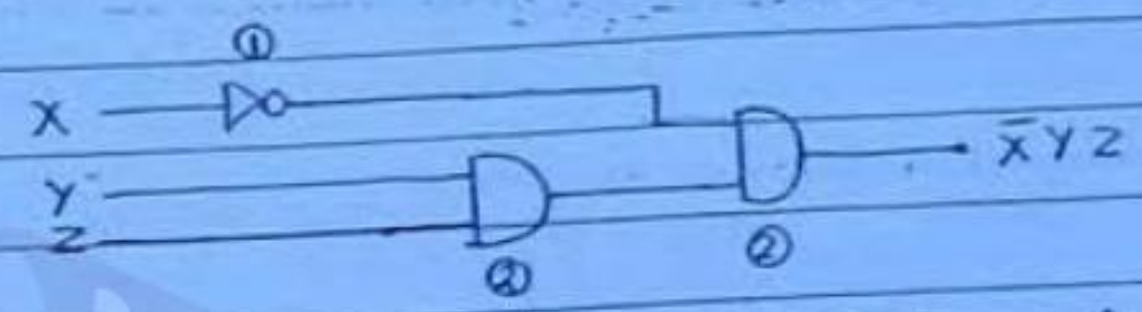

Total no. of NAND gate = 2+2+1 = 5. Ans.

Problem:- To implement $XY + WZ$, the min no. of 2 input NAND gate required.

Sol:-

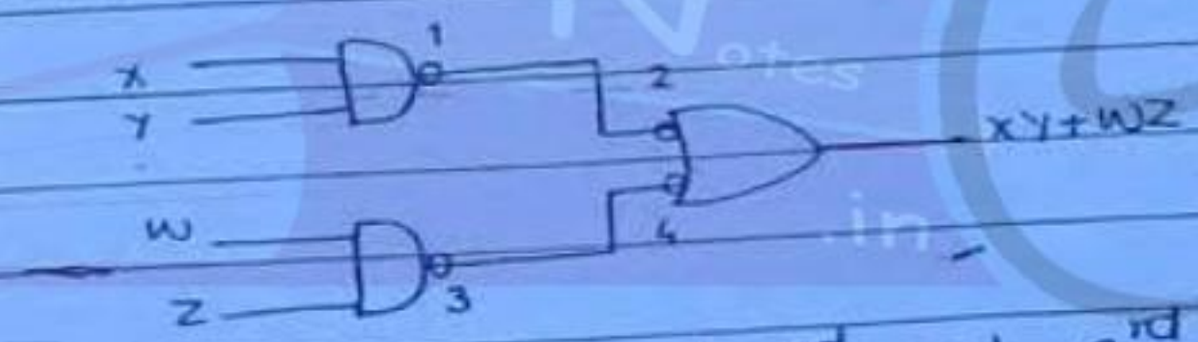

⇒ 1st inverter cancelled 2nd and 3rd cancelled 4th.

⇒ Now the total no. of NAND gate is.

= 2 + Bubbled OR (= NAND)

= 2 + 1 = 3.

= 3 NAND gate required.

Note:-

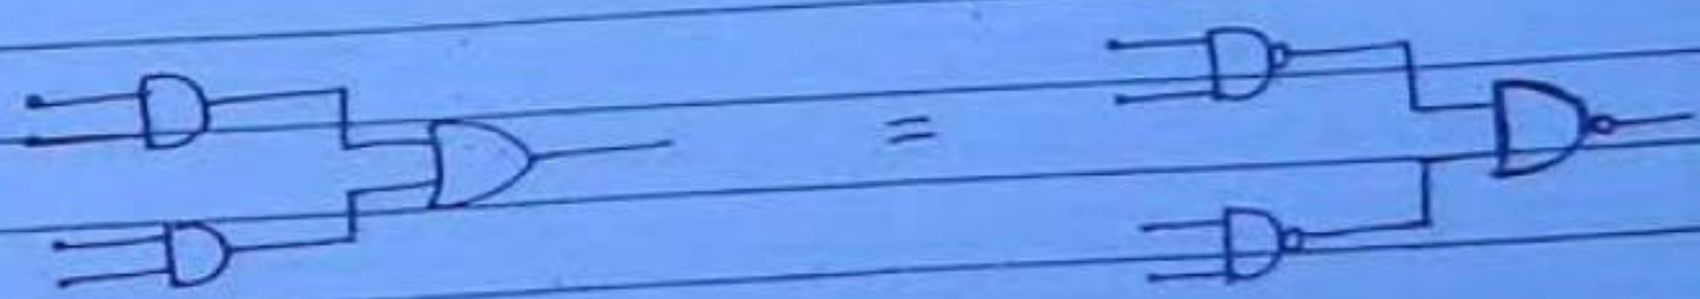

Two level AND-OR = Two level NAND-NAND

$\boxed{\text{AND-OR} = \text{NAND-NAND}}$

© Wiki Engineering

DATE

⇒ To implement SOP form, only NAND gate alone.

⇒ To implement POS form, only NOR gate alone.

(40)

Q:- if (A+B)(C+D) then min no. of Gate.

Sol:-

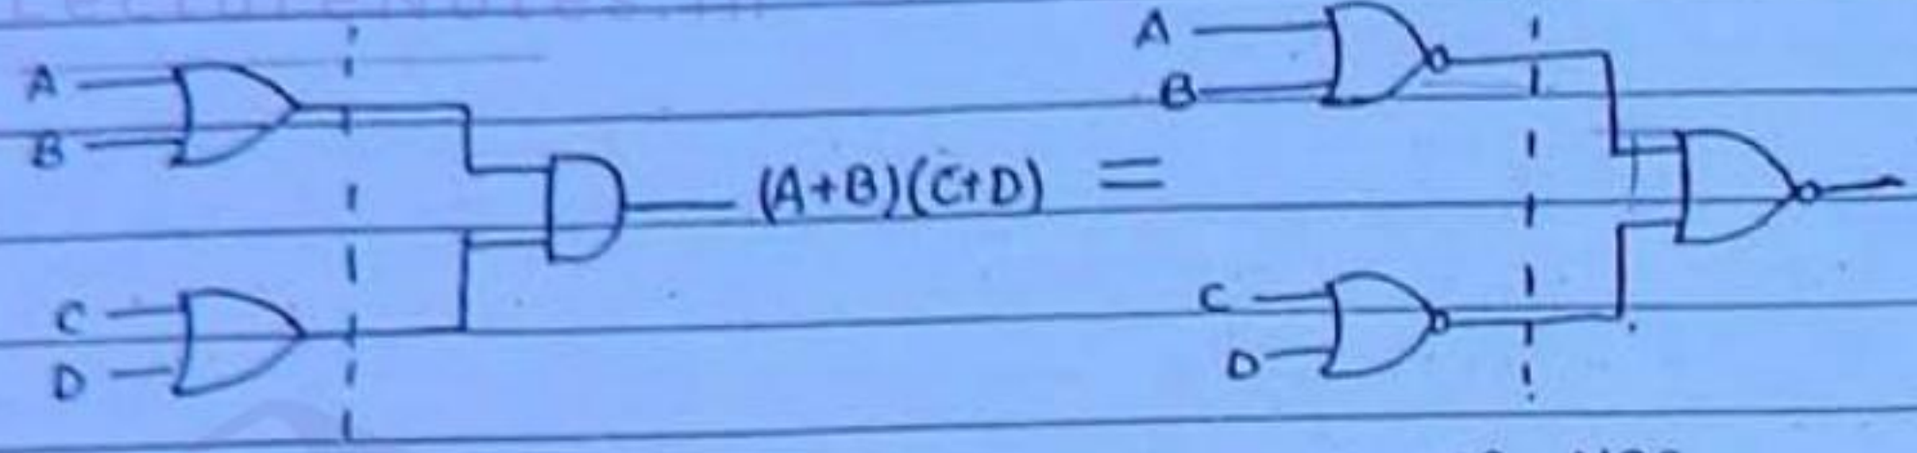

Two level OR - AND Two level NOR - NOR.

⇒ $\boxed{\text{OR- AND} = \text{NOR- NOR}}$

LectureNotes.in

Digital circuits

combination ckt	Sequential ckt
⇒ Present O/P is only depend on present I/P.	⇒ Present O/P → Present I/P, Previous O/P
⇒ No feedback	⇒ feedback.
⇒ No memory	⇒ Memory.
⇒ e.g. Half Adder (HA) FA MUX DEMUX	⇒ eg:- FlipFlop (FF) Register Counter.

LectureNotes.in

COMBINATIONAL CIRCUIT

DATE

Procedure to Design :-

(-) Identify I/P and O/P.
(-) Construct truth table
(-) Write logical expression in SOP or POS form.
(-) Minimize logical expression if possible
(-) Implement logic circuits.

LectureNotes.in

(A) HALF ADDER (HA) :-

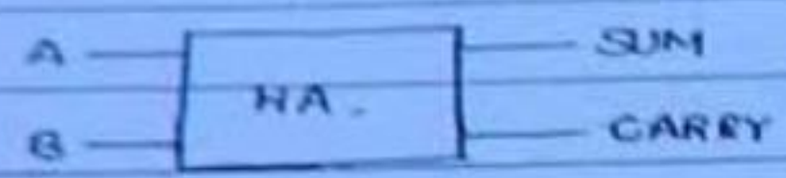

(i) Truth table :-

A	B	SUM	CARRY
0	0	0	0
0	1	1	0
1	0	1	0
1	1	0	1

(ii) logical expression :-

$$SUM = \bar{A}B + A\bar{B} = A \oplus B$$

$$CARRY = AB$$

LectureNotes.in

(iv) Implement :-

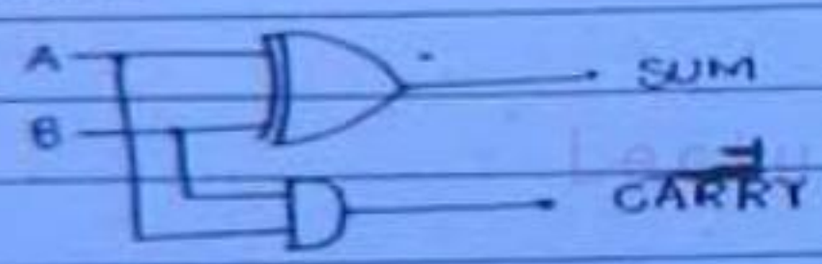

Important Ques :-

(-) logical Expression for SUM :- $A \oplus B$ CARRY : AB
(-) Min. no. of NAND Gate : 5
(-) Min no. of NOR Gate : 5
(-) no. of MUX : 3
(-) no. of DECODER : 1, 2x4 Decoder and 1 OR Gate

classmate

PAGE

HA using NAND gate :-

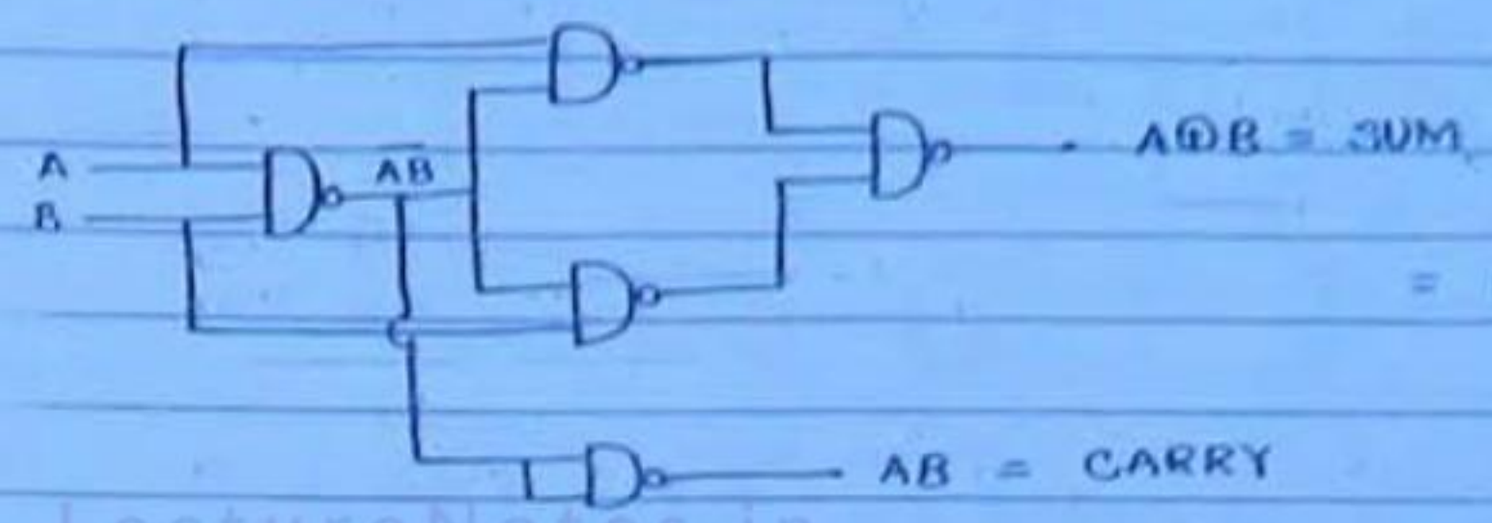

43

= no. of gate = 5.

LectureNotes.in

HA using NOR Gate :-

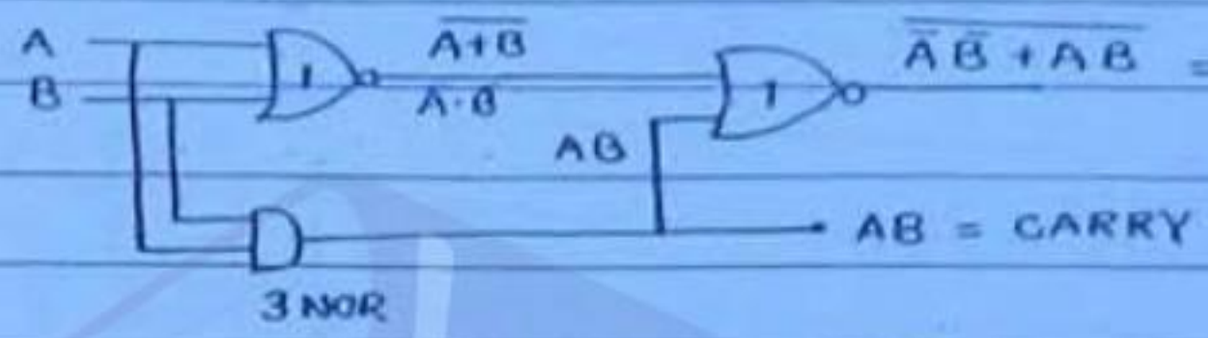

⇒ No. of NOR gate !

Total no. of gate = 2+3 = 5.

(B) HALF SUBTRACTOR :-

(i)

(ii) Truth table :-

A	B	Diff	Barrow
0	0	0	0
0	1	1	1
1	0	1	0
1	1	0	0

LectureNotes.in

(iii) logical expression :-

Difference = $\bar{A}B + A\bar{B}$

BARROW = $\bar{A}B$

(iv) Implement :-

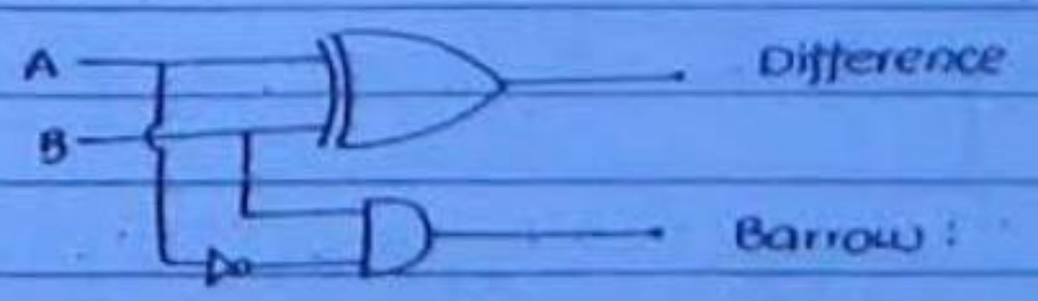

© Wiki Engineering

www.raghul.org

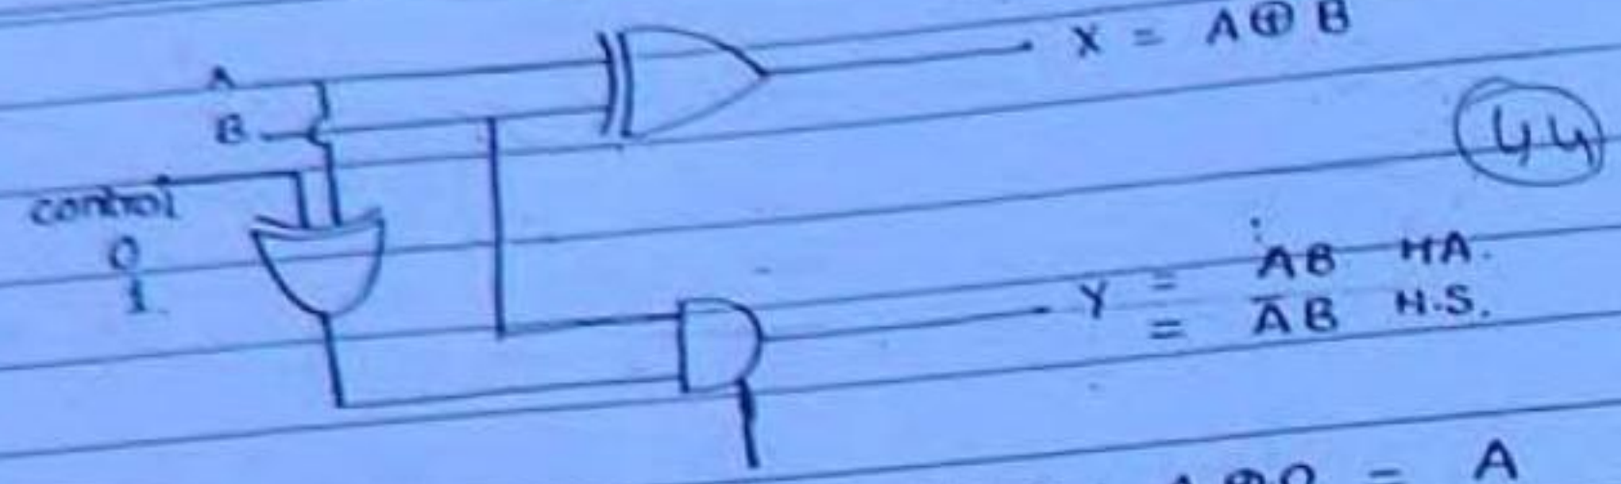

Note :- i) if control = 0 then $A \oplus 0 = A$
then $Y = AB$ and ckt is HA.
ii) if control = 1 then, $A \oplus 1 = \bar{A}$
then $Y = \bar{A}B$ and ckt is HS.

Important Ques :-

No. of NAND Gate = 5
No. of NOR Gate = 5
No. of MUX :- 3 . (2x1 MUX)
No. of DECODER :- 1 (2x4) Decoder and 1 OR Gate
logica expression for Difference = $A\bar{B} + \bar{A}B$, Barrow : $\bar{A}B$.

HS using NAND gate :-

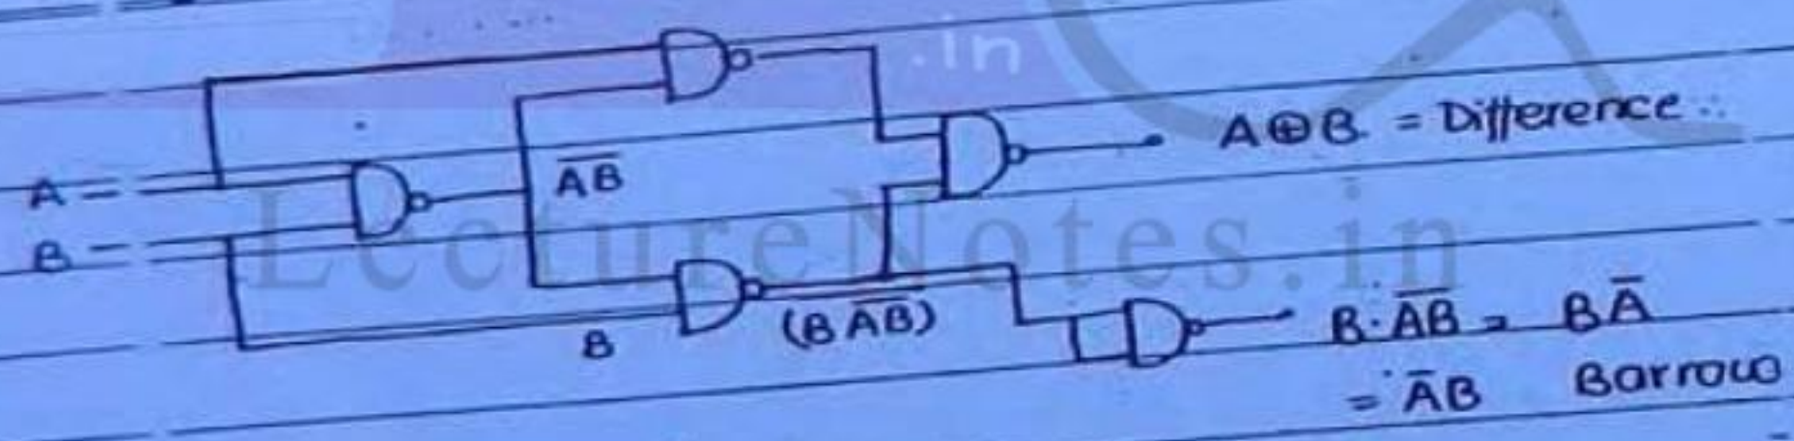

No. of NAND Gate = 5

HS using NOR Gate :-

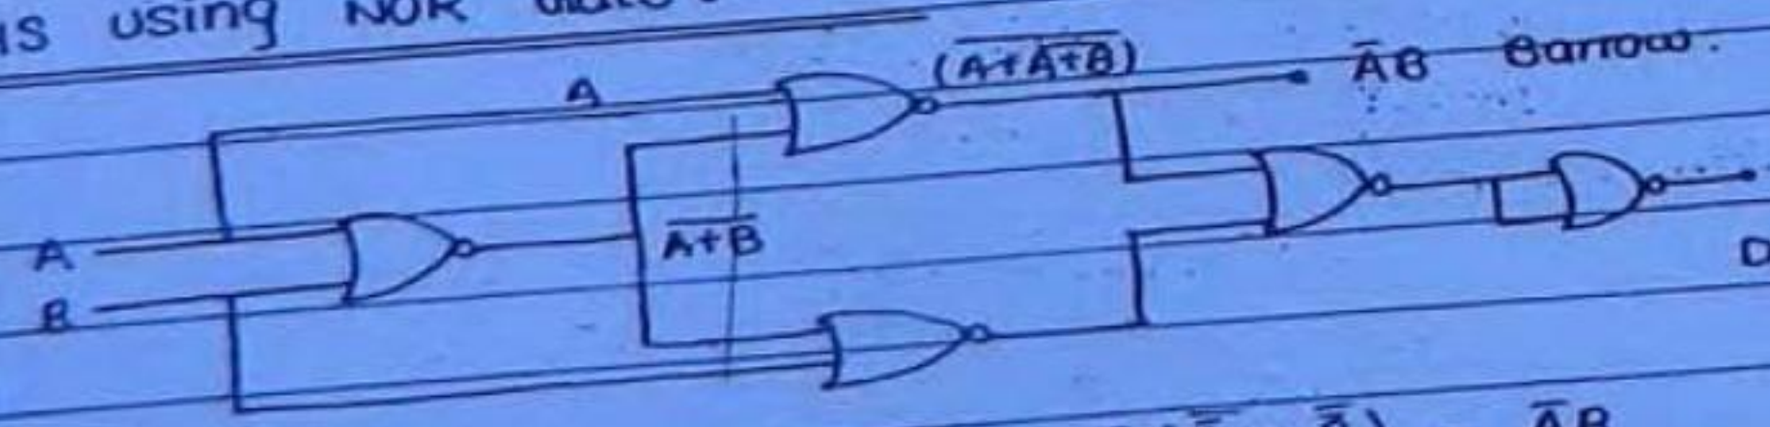

Now, $\overline{A+\bar{A}\cdot\bar{B}} = \bar{A}(\overline{\bar{A}\cdot\bar{B}}) = \bar{A}(\bar{\bar{A}}+\bar{\bar{B}}) = \bar{A}B$

⇒ No of NOR gate = 5

classmate

PAGE

© Wiki Engineering
www.raghul.org

(C) FULL ADDER :-

(i)

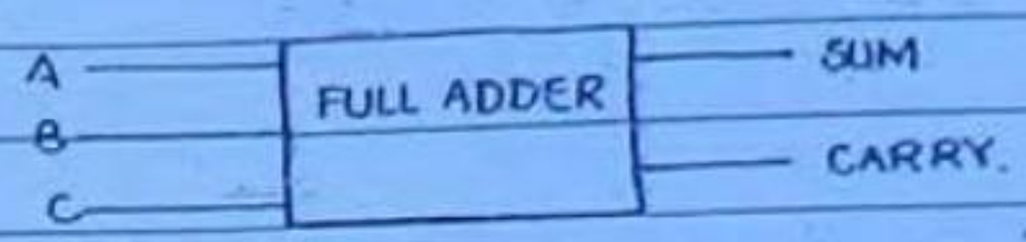

45

(ii) Truth table :-

A	B	C	SUM	CARRY
0	0	0	0	0
0	0	1	1	0
0	1	0	1	0
0	1	1	0	1
1	0	0	1	0
1	0	1	0	1
1	1	0	0	1
1	1	1	1	1

(iii) logical expression :-

$$SUM = \bar{A}\bar{B}C + \bar{A}B\bar{C} + A\bar{B}\bar{C} + ABC = A \oplus B \oplus C$$

$$= \Sigma m(1,2,4,7)$$

$$CARRY = \bar{A}BC + A\bar{B}C + AB\bar{C} + ABC$$

$$= AB + BC + AC$$

⇒ The truth table of carry shows the majority of 1's function.

$$= \Sigma m(3,5,6,7)$$

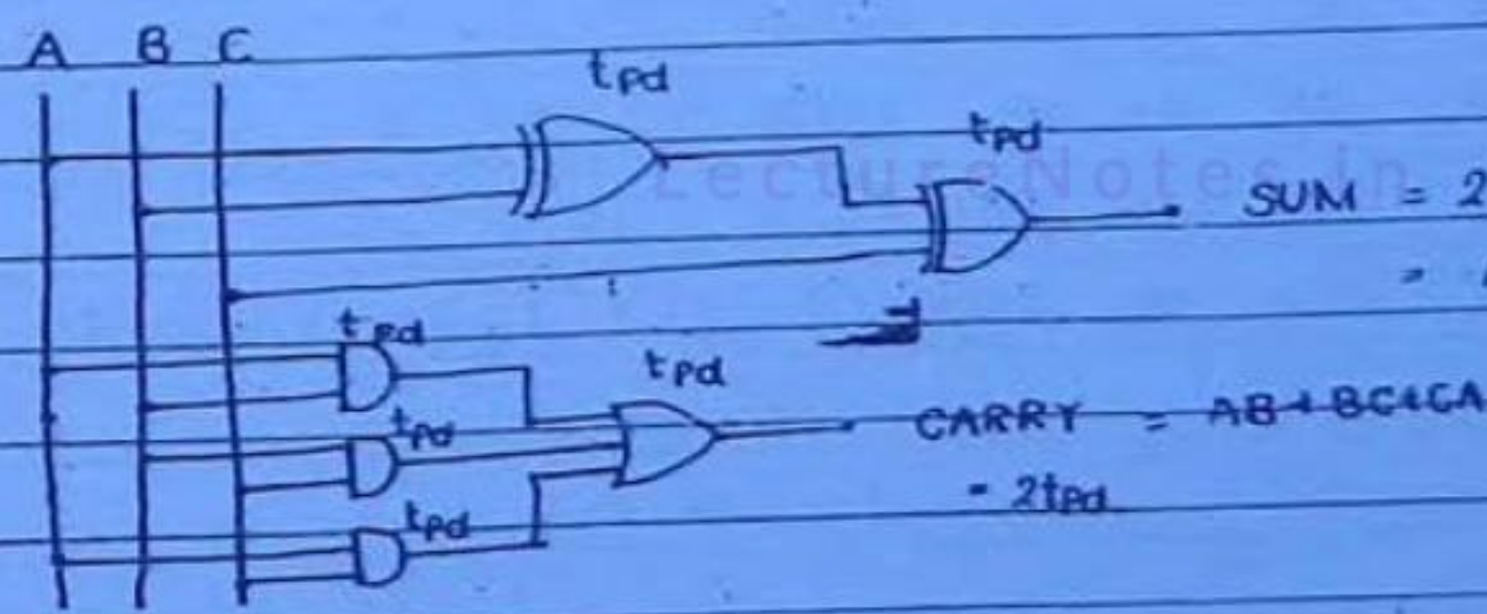

⇒ In full adder each logic gate have propogation delay of t_{pd} to provid sum or carry o/p, it requires to $2t_{pd}$ delay.

© Wiki Engineering
www.raghul.org

Now, CARRY = $\bar{A}BC + A\bar{B}C + AB\bar{C} + ABC$

$= AB(C+\bar{C}) + C(\bar{A}B + A\bar{B})$

$= AB + C(A \oplus B)$ —(ii)

46

$$\boxed{\text{CARRY} = AB + C(A \oplus B)}$$

Implementation :-

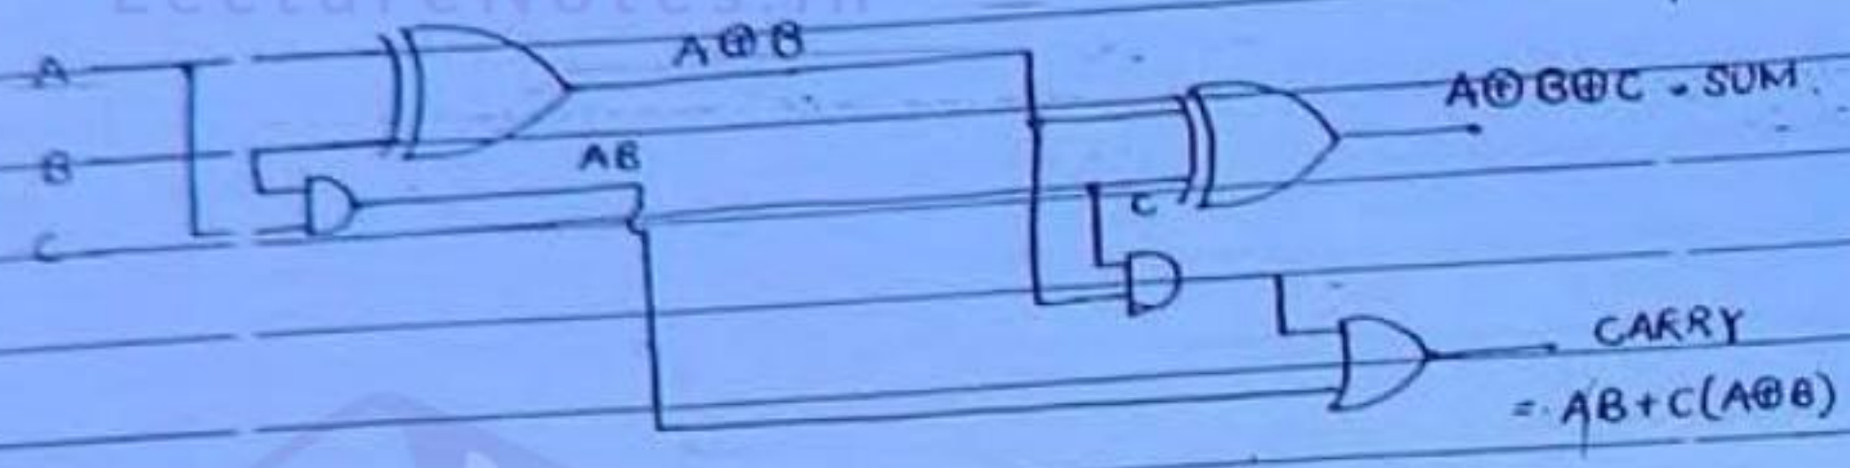

i.e.

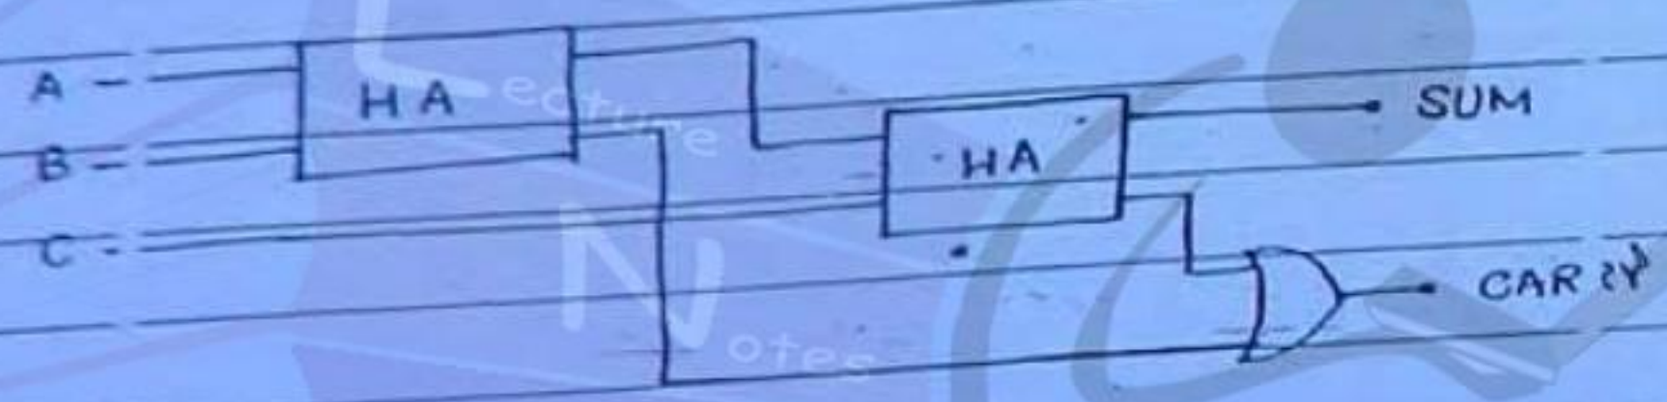

Important ques :-

(i) logical expression for SUM = $A \oplus B \oplus C$ CARRY = $AB+BC+AC$

(ii) No. of HA and OR gate = 2HA, 1-OR

(iii) Min. no. of NAND = 9

(iv) min. no. of NOR = 9

(v) No. of MUX = 1

(vi) No. of DECODER = 1, (3x8) Decoder and 2-OR gate

© Wiki Engineering

(i) Implementation of Full adder using NAND gate :-

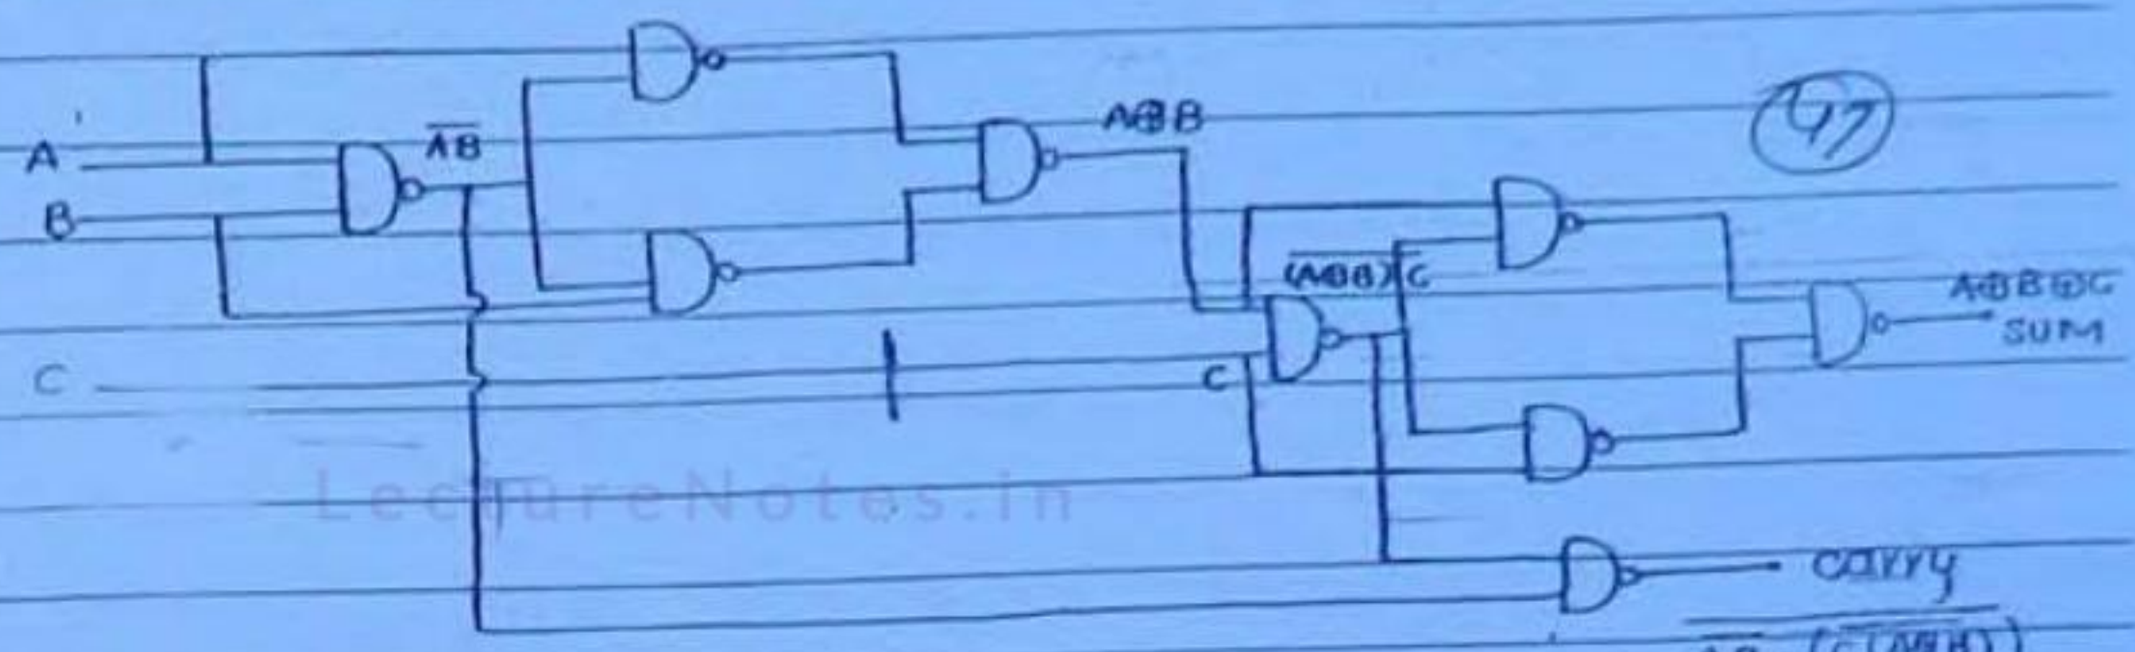

$\overline{\overline{AB} \cdot (\overline{C(A \oplus B)})}$

$= AB + C(A \oplus B)$

(ii) Implementation of Full adder using NOR Gate :-

since $A \oplus B \oplus C = A \odot B \odot C$. The the ckt is same only NAND is replaced by NOR.

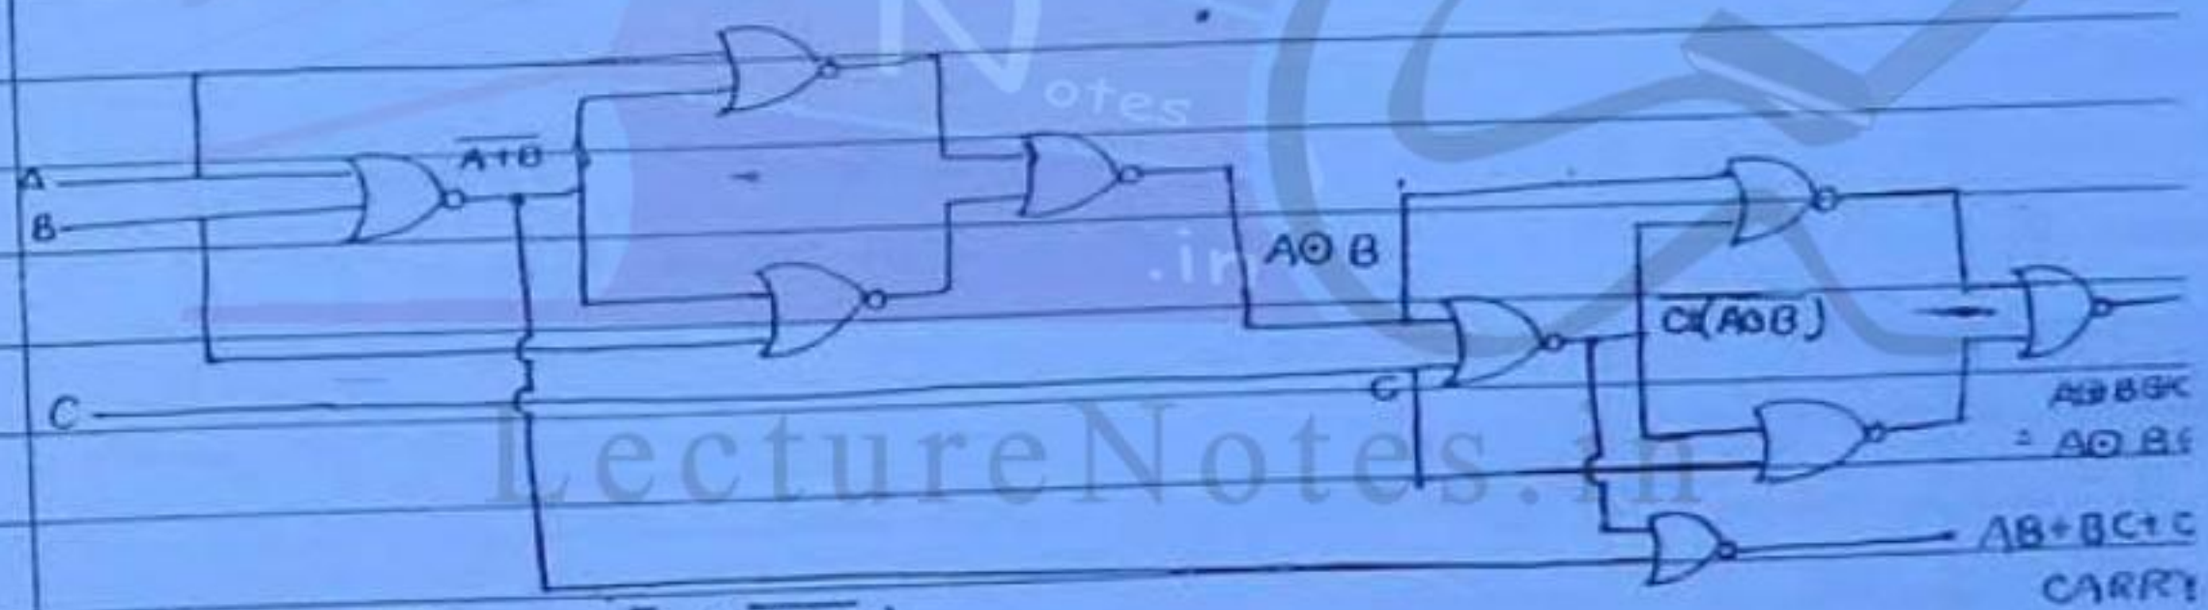

$\overline{C + (A \odot B)} = \overline{C} \cdot (\overline{A \odot B})$

and,

$$\overline{A+B} + \overline{C} \cdot (\overline{A \odot B}) = \overline{\overline{(A+B)}} \cdot \overline{C(A \oplus B)}$$

$$= (A+B)(C + \overline{A \oplus B})$$

$$= AC + A\bar{A}\bar{B} + AAB + BC + B\bar{A}\bar{B} + BAB$$

$$= AC + AB + BC + AB$$

$$= C(A+B) + AB$$

CARRY $= AB + BC + CA$

© Wiki Engineering

LectureNotes.in

LectureNotes.in

LectureNotes.in

PARALLEL ADDER :-

There are three type of adder

1. Serial adder (we write with sequential ckt)
2. Parallel adder.
3. Look ahead carry adder.

(49)

⇒ In serial adder only one Full adder (FA) is used to add grou of bits.

⇒ It is slowest adder.

Parallel adder :-

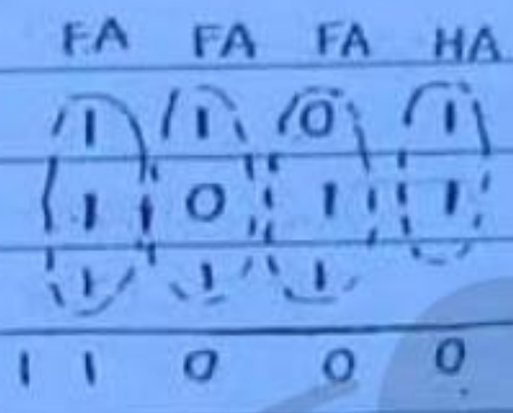

⇒ For 4 bit adder

:- 3 FA and 1 HA required.

:- or 4 FA is required.

⇒ Parallel adder is used to add group of bits.

⇒ To add two N bit no. it requires (N-1) Full adder and 1 Half adder. or,

N Full adder or,

(2N-1) Half adder and (N-1) OR gates required.

Now,

Diagram of Parallel adder :-

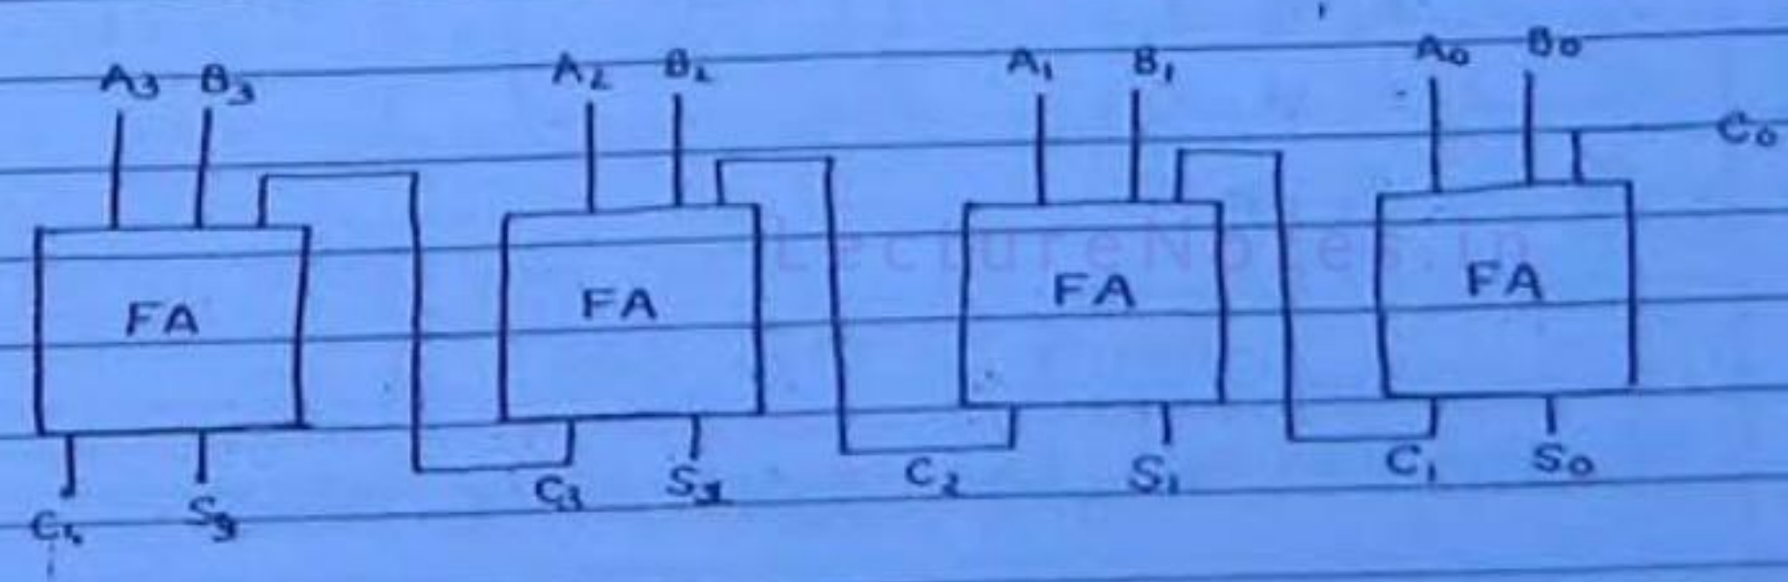

A_3	A_2	A_1	A_0
1	1	0	1
1	0	1	1
B_3	B_2	B_1	B_0

$\underbrace{C_4}_{\text{CARRY}}$ $\underbrace{S_3\ S_2\ S_1\ S_0}_{\text{SUM}}$

© Wiki Engineering

www.raghul.org

⇒ Parallel adder is also called Ripple carry adder.

⇒ Propogation delay from I/P array to O/P array. Hence it is also known as Ripple carry adder. (50)

⇒ In parallel adder each FA will provide 2 logic gate delay In n bit parallel adder provide total delay of.

$$\boxed{T_{delay} = 2n t_{pd}}$$

LectureNotes.in

LOOK AHEAD CARRY CIRCUIT :-

⇒ Disadvantage of parallel adder is carry propogation delay present.

⇒ As no of bit increases - speed of operation reduced.

⇒ To avoid this look ahead carry adder is used.

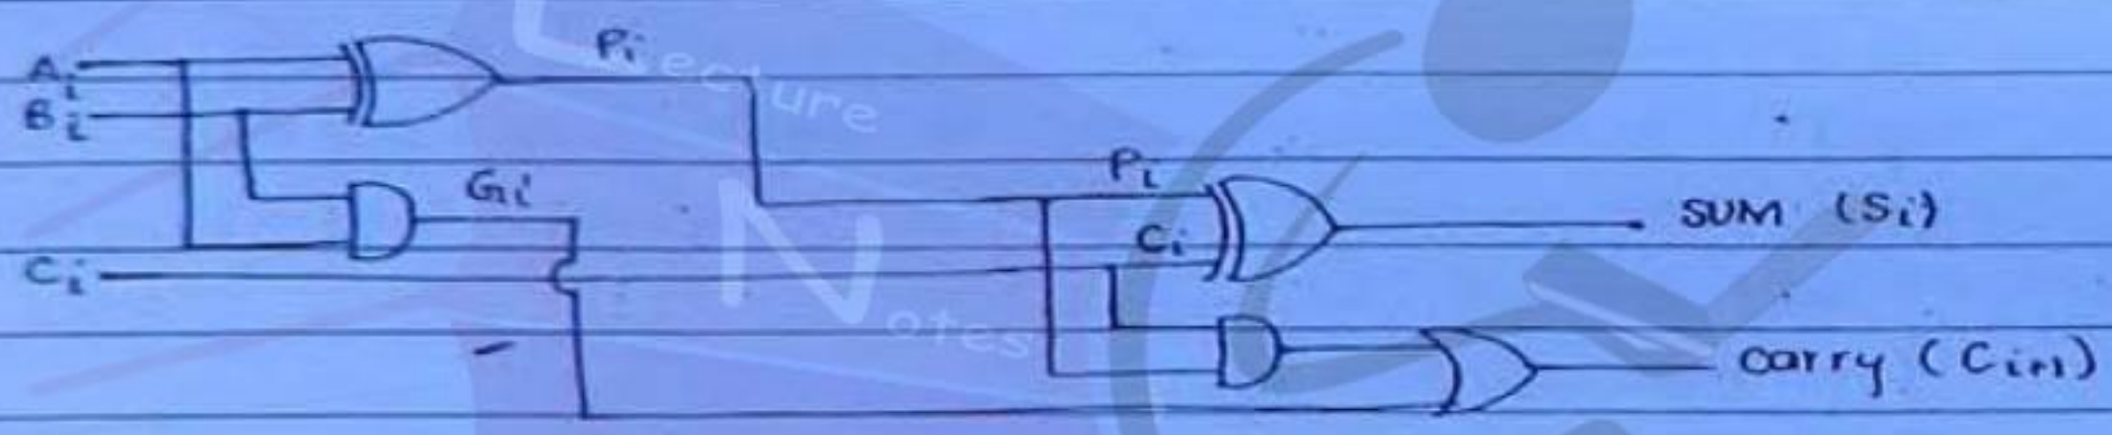

P_i = Propogation

G_i = Generation term

$P_i = A_i \oplus B_i$

$G_i = A_i \cdot B_i = A_i B_i$

$S_i = P_i \oplus C_i$

$C_{i+1} = P_i C_i + G_i$

LectureNotes.in

For four (4) bit look ahead carry adder :-

I/P. $A_3 \; A_2 \; A_1 \; A_0$

$B_3 \; B_2 \; B_1 \; B_0$

Then $P_0 = A_0 \oplus B_0$

$P_1 = A_1 \oplus B_1$

$P_2 = A_2 \oplus B_2$

$P_3 = A_3 \oplus B_3$

© Wiki Engineering

www.raghul.org

$G_0 = A_0B_0$ $\qquad$ $S_0 = P_0 \oplus C_0$

$G_1 = A_1B_1$ $\qquad$ $S_1 = P_1 \oplus C_1$

$G_2 = A_2B_2$ $\qquad$ $S_2 = P_2 \oplus C_2$

$G_3 = A_3B_3$ $\qquad$ $S_3 = P_3 \oplus C_3$

57

$$\boxed{C_{i+1} = P_iC_i + G_i}$$ look ahead carry generator expression.

$C_1 = P_0C_0 + G_0$

$C_2 = P_1C_1 + G_1 = P_1(P_0C_0 + G_0) + G_1 = P_1P_0C_0 + P_1G_0 + G_1$

$C_3 = P_2C_2 + G_2 = P_2P_1P_0C_0 + P_2P_1G_0 + P_2G_1 + G_2$

$C_4 = P_3C_3 + G_3 = P_3P_2P_1P_1C_0 + P_3P_2P_1G_0 + P_3P_2G_1 + P_3G_2 + G_3$

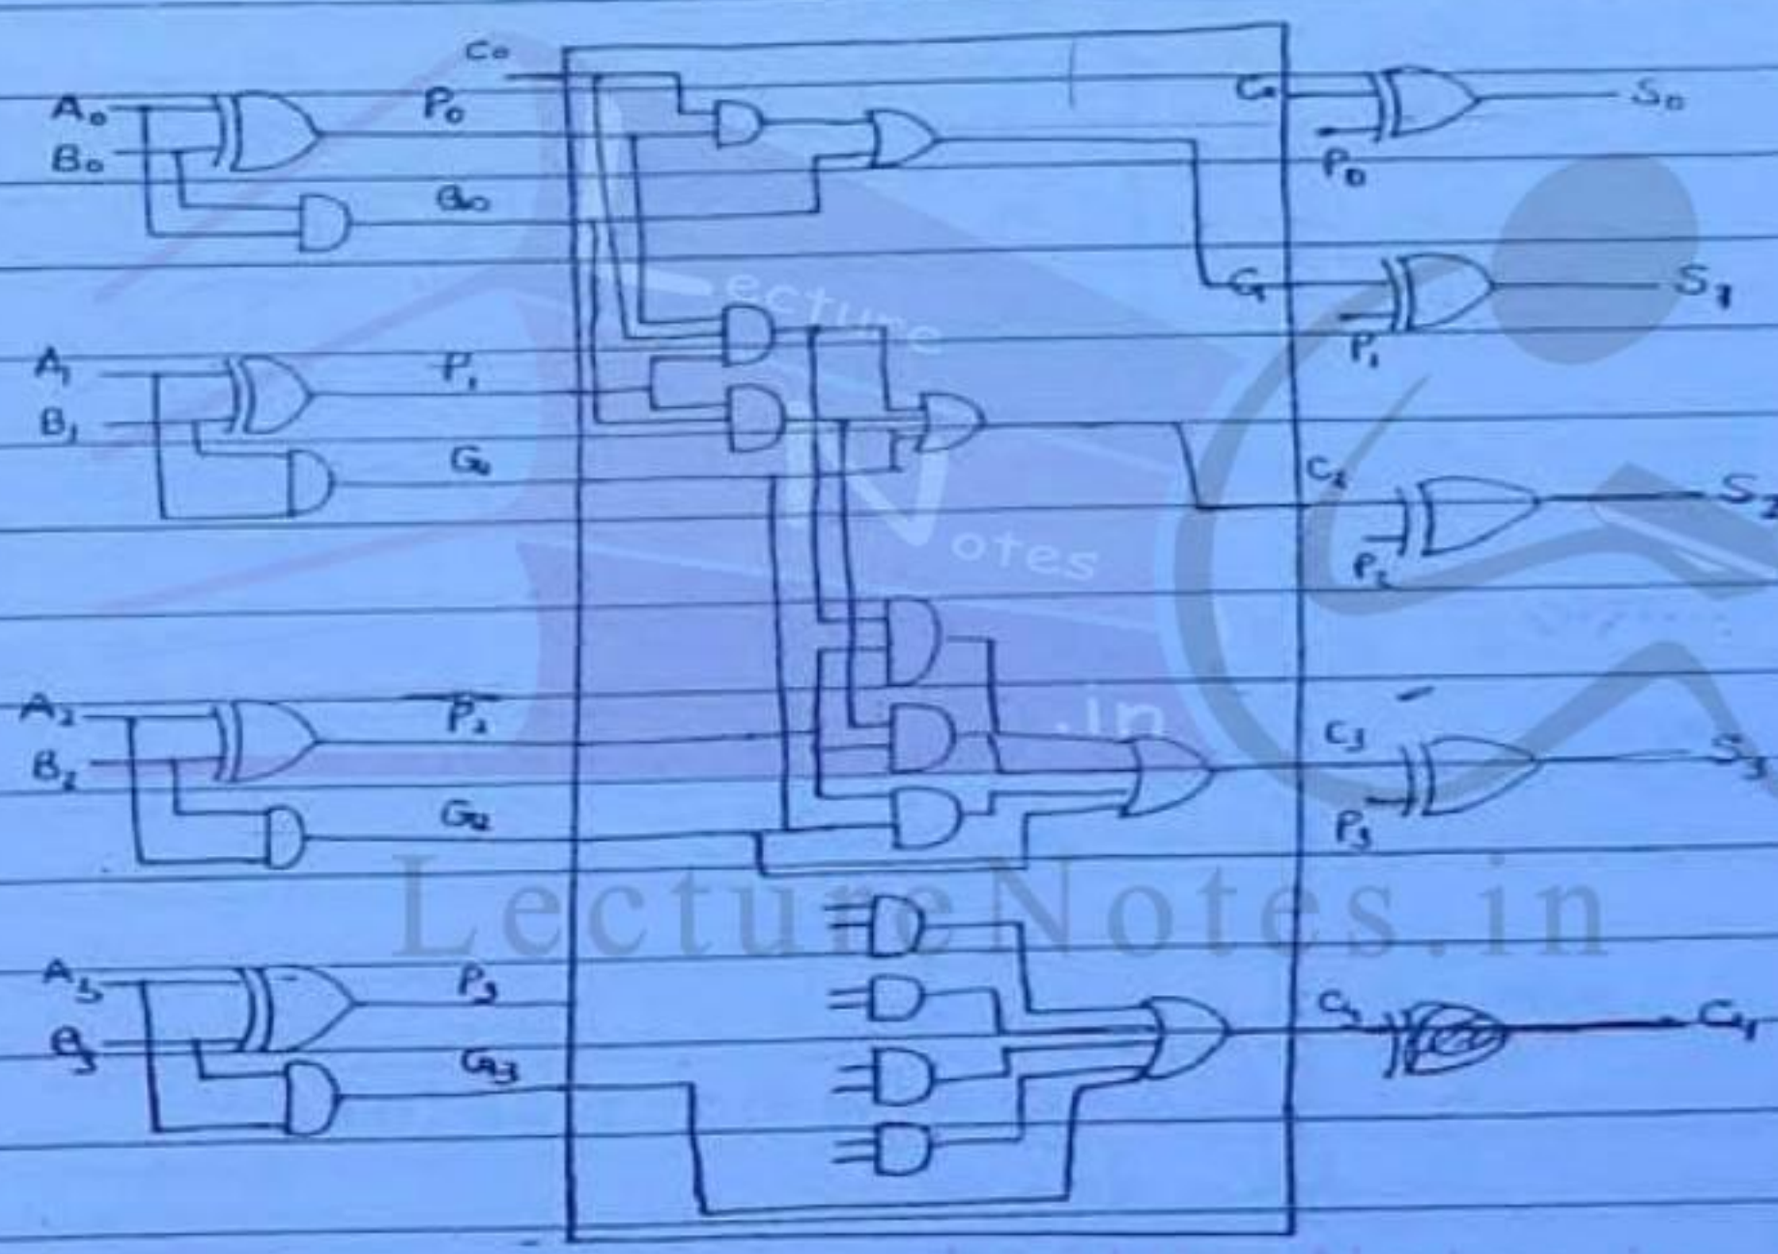

⇒ Total no. of AND Gate inside $= 1+2+3+4 = \frac{n(n+1)}{2} = \frac{4 \times 5}{2}$

no. of AND Gate $= \frac{n(n+1)}{2}$.

no. of OR Gate $= n$.

⇒ Total propogation delay $= 2t_{pd}$.

⇒ This is faster than parallel adder.

© Wiki Engineering
www.raghul.org

FULL SUBTRACTOR :-

(i)

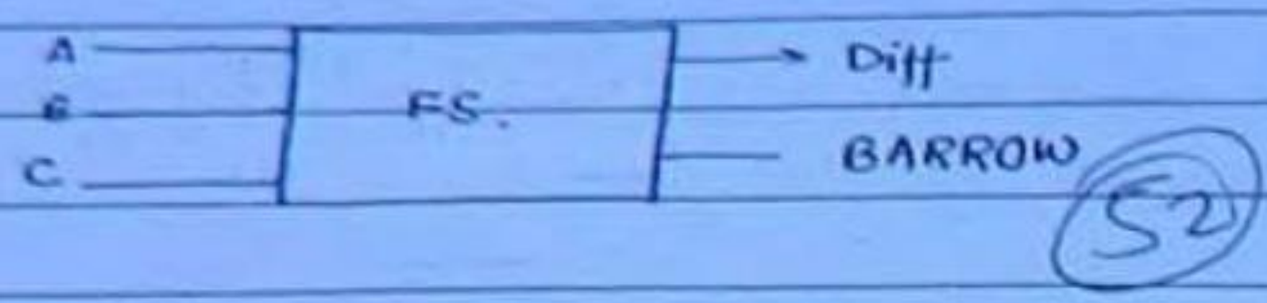

(ii) Truth table :-

A	B	C	Diff (A-B-C)	BARROW
0	0	0	0	0
0	0	1	1	1
0	1	0	1	1
0	1	1	0	1
1	0	0	1	0
1	0	1	0	0
1	1	0	0	0
1	1	1	1	1

(iii) logic expression :-

Diff :- $\Sigma m(1,2,4,7)$

$= A \oplus B \oplus C$

BARROW $= \bar{A}\bar{B}C + \bar{A}B\bar{C} + \bar{A}BC + ABC$

$= BC + \bar{A}(\bar{B}C + B\bar{C})$

$= BC + \bar{A}(B \oplus C)$

add $\bar{A}BC$ two more :-

$= \bar{A}B(\bar{C} + C) + (\bar{A} + A)BC + C\bar{A}(B + \bar{B})$

$= \bar{A}B + \bar{A}C + BC$

$= \Sigma m(1,2,3,7)$

(iv) Implementation :-

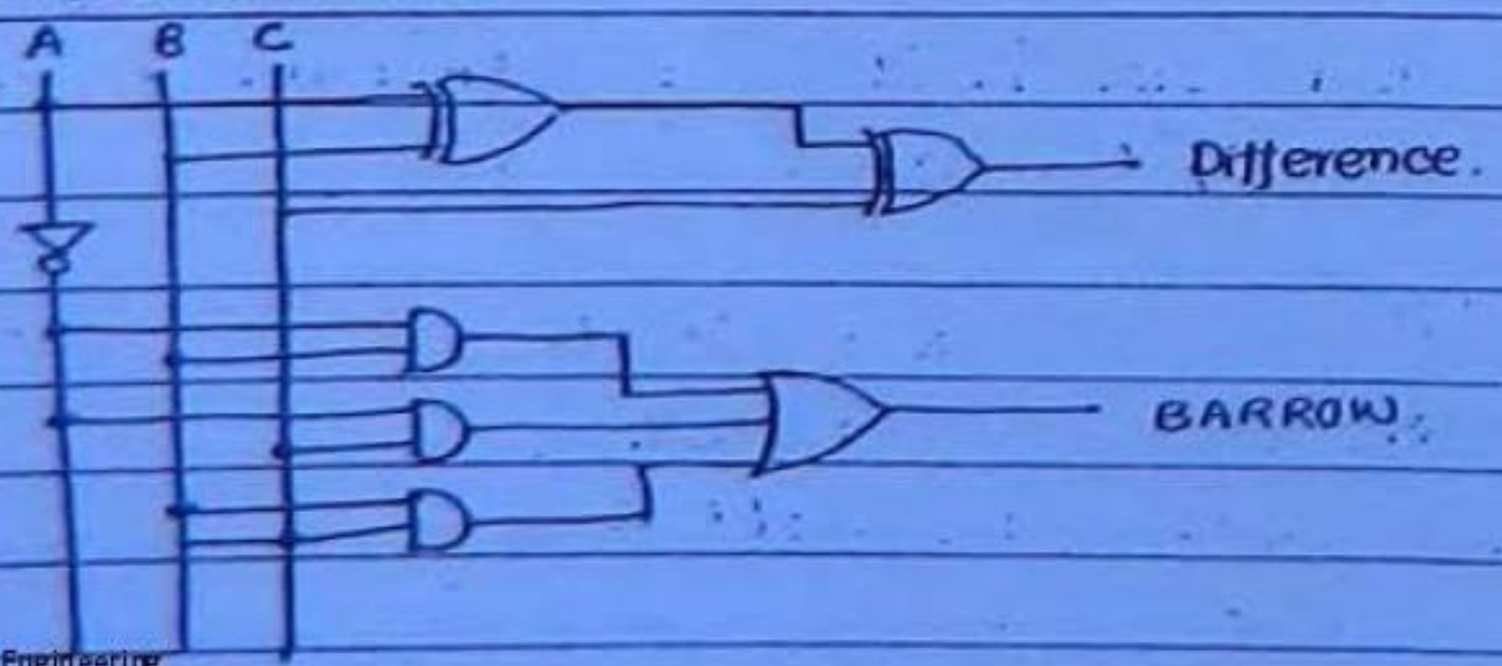

© Wiki Engineering
www.raghul.org

Barrow expression :-

$$\bar{A}\bar{B}C + \bar{A}B\bar{C} + \bar{A}B\bar{\bar{C}} + ABC$$

$$= \bar{A}B(C+\bar{C}) + C(\bar{A}\bar{B} + AB)$$

$$= \bar{A}B + C(A \odot B)$$

58

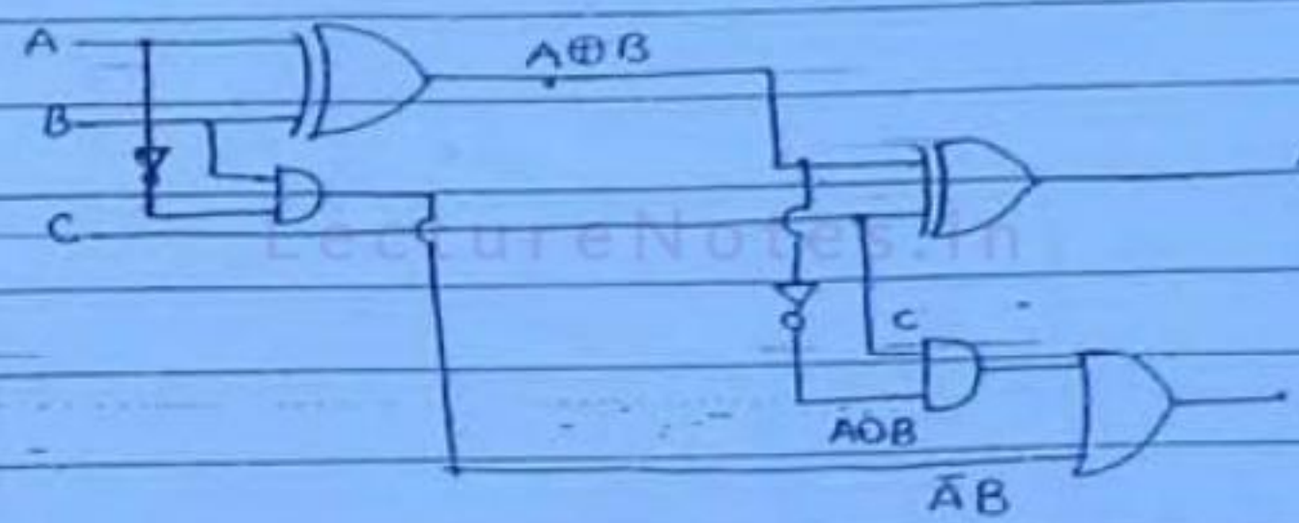

⇒ Full subtractor will be implemented with 2-HS and 1 OR Gate.

Important ques :-

no. of NAND gate = 9

no. of NOR gate = 9

logical expression for Difference = $A \oplus B \oplus C$

logical expression for Barrow = $\bar{A}B + \bar{A}C + BC$ or, $\bar{A}B + C(A \odot B)$

no. of Mux :-

no. of Decoder :- 1 (3×8) Decoder and 2 OR gate

LectureNotes.in

COMPARATOR :-

(i)

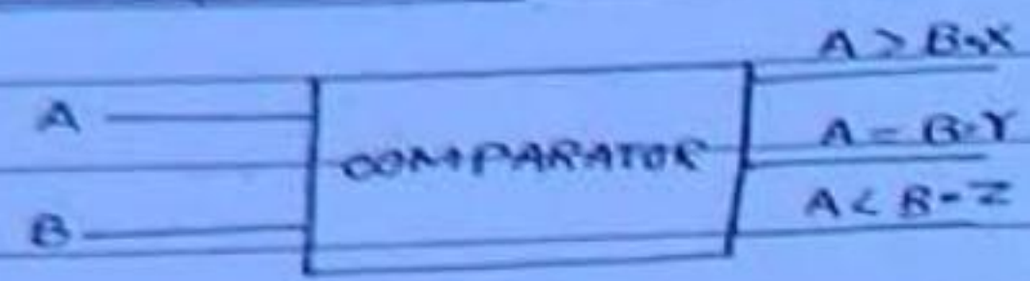

(54)

(ii) Truth table :-

A	B	X	Y	Z
0	0	0	1	0
0	1	0	0	1
1	0	1	0	0
1	1	0	1	0
		$X = A\bar{B}$	$Y = A \odot B$	$Z = \bar{A}B$

(iii) Expression :-

$X = A\bar{B}$

$Y = A \odot B = \bar{A}\bar{B} + AB$

$Z = \bar{A}B$

(iv) Implementation :-

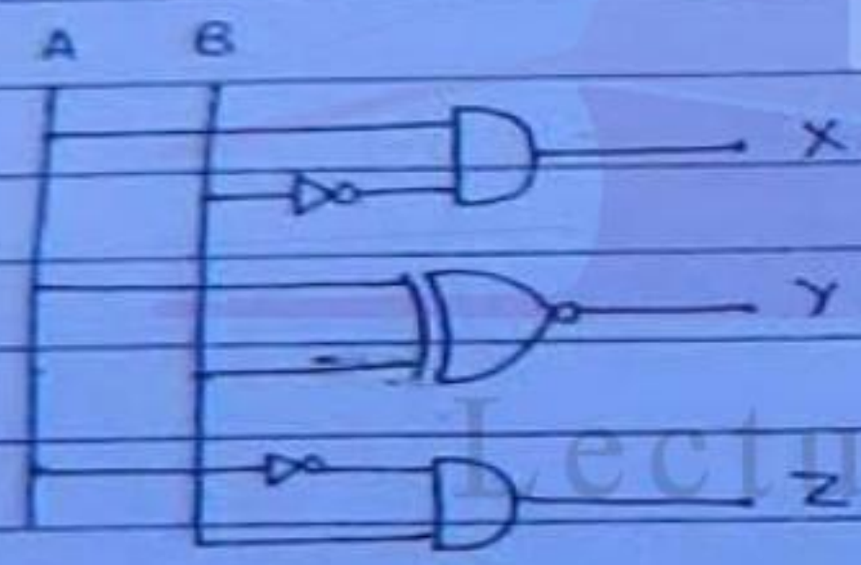

⇒

⇒ 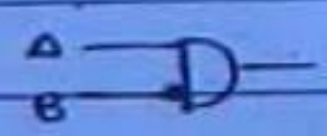

⇒ 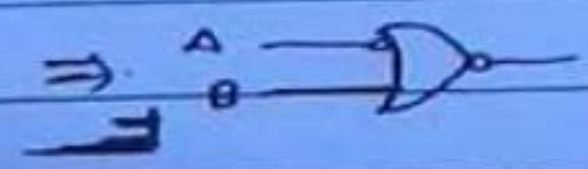

⇒ 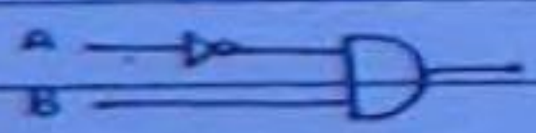

⇒ 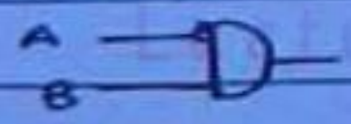

⇒

⇒ Note: for equality condition $A \odot B$ condition Holds.

⇒ If $A_3 A_2 A_1 A_1$ are equal to $B_3 B_2 B_1 B_0$

Then the equality condition is.

$(A_3 \odot B_3)\ (A_2 \odot B_2)\ (A_1 \odot B_1)(A_0 \odot B_1)$

discrete

PAGE

© Wiki Engineering

www.raghul.org

Then the ckt is :-

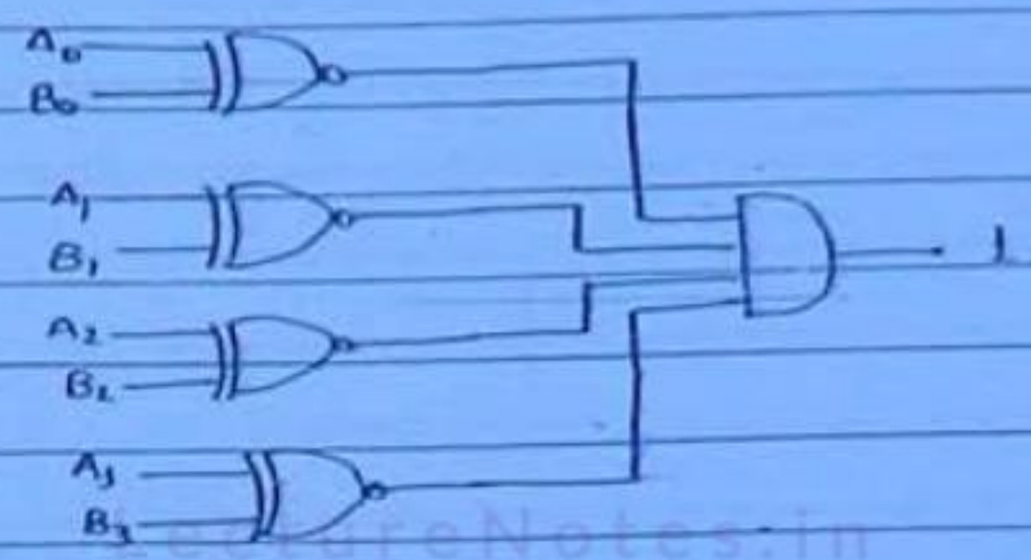

55

K - MAP :-

⇒ It is used when o/p is 0, 1, and X (don't care)

⇒ In K-MAP gray code representation is used

⇒ K-map is graphical representation

⇒ Gray code representation

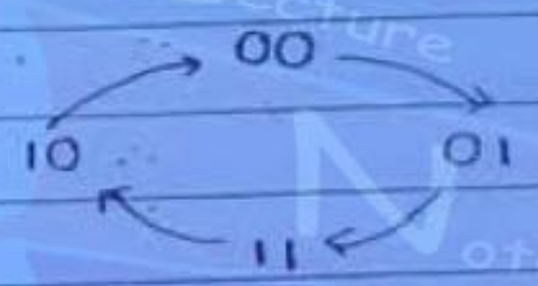

⇒ each successive term is changed by only one bit.

Two variable :-

A \ B	0	1
0	0 00	1 01
1	2 10	3 11

(For Two variable)

For Three variable :-

A \ BC	00	01	11	10
0	0 00	1 01	3 11	2 10
1	4	5	7	6

© WikiEngineering.tc
www.raghul.org

DATE

four variable :-

AB \ CD	00	01	11	10
00	0	1	3	2
01	4	5	7	6
11	12	13	15	14
10	8	9	11	10

⇒ Minimize :-

Q:- $f(A, B) = \Sigma m(0, 2, 3)$

Sol:-

A \ B	0	1
0	1	
1	1	1

$f(A, B) = A + \bar{B}$ (+ is put due to SOP form)

Q: $f(A, B) = \Sigma m(1, 2, 3)$

Sol:-

A \ B	0	1
0		1
1	1	1

$f(A, B) = A + B$

Q: $f(A, B) = \Sigma m(0, 1, 2, 3)$

Sol: $f(A, B) = 1$.

⇒ In K-map if all are one means the function is 1.

Q:- $f(A, B) = \Sigma m(1, 3) + \Sigma d(2)$

Sol:-

A \ B		
		1
	X	1

$f(A, B) = B$ (no need of any gate)

© Wiki Engineering

www.raghul.org

Q: $f(A,B) = \Sigma m(0,3) + \Sigma d(2)$

Sol:

A \ B	0	1
0	1	
1	1	*

$f(A,B) = A + \bar{B}$

Q: $f(A,B) = \Sigma(0,3) + \Sigma d(2,1)$ (59)

Sol:

A \ B		
	1	*
	*	1

$f(A,B) = 1.$

⇒ In SOP form if all are 1's means o/p is 1.

⇒ All are don't care means dont care.

Three variable :-

Q: $f(A,B,C) = \Sigma m(1,3,5,7)$

Sol:

A \ BC	00	01	11	10
0		1	1	
1		1	1	

$f(A,B,C) = C$

Q: $f(A,B,C) = \Sigma m(0,1,3,6)$

Sol:

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1		
A				1

$f(A,B,C) = \bar{A}\bar{B} + \bar{A}C + AB\bar{C}$

Q: $f(A,B,C) = \Sigma m(1,3,6,7)$

Sol:

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$		1	1	
A			1	1

⇒ if we take BC then it is redundant term and it must be removed.

$f(A,B,C) = \bar{A}C + AB$

© Wiki Engineering
www.raghul.org

Procedure :-

(i) Octets
(ii) Quads
(iii) Pairs
(iv) Single term
(v) Remove redundant

Priority.

Q:- $f(A,B,C) = \Sigma m(0,1,2,4,7)$ (60)

Sol:-

A \ BC	$B\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1		1
A	1		1	

$= \bar{A}\bar{B} + \bar{A}\bar{C} + \bar{B}\bar{C} + ABC$

Q:- $f(A,B,C) = \Sigma m(0,1,5,6,7)$

Sol:-

A \ BC	$B\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1		
A		1	1	1

$f(A,B,C) = \bar{A}\bar{B} + \bar{B}C + AB$
$= \bar{A}\bar{B} + AB + AC$ } two sol^n

⇒ K-map provide minimize expression but not neccesarly unique. ie two sol^n also.

Q:- $f(A,B,C) = \Sigma m(0,1,2,5,7) + \Sigma d(3,6)$

Sol:-

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1	X	1
A		1	1	X

$f(A,B,C) = \bar{A} + C$

Q:- $f(A,B,C) = \Sigma m(0,1,6,7) + \Sigma d(3,5)$

© Wiki Engineering
www.raghul.org

DATE

Sol:-

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1	X	
A		X	1	1

$f(A,B,C) = \bar{A}\bar{B} + AB$

(6)

Q:- $f(A,B,C) = \Sigma m(0,1,6,7) + \Sigma d(3,4,5)$

Sol:-

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$	1	1	*	
A	*	*	1	1

$f(A,B,C) = \bar{B} + AB$

Four Variable :-

Q:- $f(A,B,C,D) = \Sigma m(0,1,3,5,7,8,9,11,13,15)$

Sol:-

AB \ CD	$\bar{C}\bar{D}$	$\bar{C}D$	CD	$C\bar{D}$
$\bar{A}\bar{B}$	1	1	1	
$\bar{A}B$	1	1	1	
AB		1	1	
$A\bar{B}$	1	1		

$f(A,B,C,D) = D + \bar{B}\bar{C}$

Q:- $f(A,B,C,D) = \Sigma m(0,1,4,5,8,9,13,15)$

Sol:-

AB \ CD	$\bar{C}\bar{D}$	$\bar{C}D$	CD	$C\bar{D}$
$\bar{A}\bar{B}$	1	1		
$\bar{A}B$	1	1		
AB		1	1	
$A\bar{B}$	1	1		

$f(A,B,C,D) = \bar{A}\bar{C} + \bar{B}\bar{C} + ABD$

Q:- $f(A,B,C,D) = \Sigma m(0,2,8,10,14) + \Sigma d(5,15)$

© Wiki Engineering www.raghul.org

Sol:-

AB \ CD	$\bar{C}\bar{D}$	$\bar{C}D$	CD	$C\bar{D}$
$\bar{A}\bar{B}$	1			1
$\bar{A}B$		*		
AB			*	1
$A\bar{B}$	1			1

$f(A,B,C,D) = \bar{B}\bar{D} + AC\bar{D}$

62

LectureNotes.in

POS (Product of Sum) :-

Simplify :-

Q:- $f(A,B) = \pi M(0,2,3)$

Sol:-

A \ B	$\bar{B}, 0$	$\bar{B}, 1$
0, A	0	
1 $\bar{A}$	0	0

$f(A,B) = B \cdot \bar{A}$

Q:- $f(\bar{A},\bar{B}) = \pi M(0,3) + \pi d(1)$

Sol:-

A \ B	B	$\bar{B}$
A	0	X
$\bar{A}$		0

$f(A,B) = A + \bar{B} = A\bar{B}$

Q: $f(A,B,C) = \pi M(0,1,3,5,7)$

Sol:-

A \ B+C	$B+C$	$B+\bar{C}$	$\bar{B}+\bar{C}$	$\bar{B}+C$
A 0	1	1	1	
$\bar{A}$ 1		1	1	

$f(A,B,C) = \bar{C} + (A+B)$

$= \bar{C}(A+B)$

Gate - 2003

DATE

Q:- for the K-map minimize POS expression is.

Sol:-

A \ BC	$B+C$	$B+\bar{C}$	$\bar{B}+\bar{C}$	$\bar{B}+C$
A	0	x	x	1
$\bar{A}$	0	1	0	x

(63)

$(A,B,C) = (B+C)(B+\bar{C})$

⇒ The two function are same if the position of 1's are 0's are same in K-map. and if the 1's place 0 are placed and at 0's place 1's are placed then the function is complemen to each other.

⇒ Problem - 26 - page - 13

Q:- $W = R + \bar{P}Q + \bar{R}S$ $\quad X = PQ\bar{R}\bar{S} + \bar{P}\bar{Q}\bar{R}\bar{S} + P\bar{Q}R\bar{S}$

PQ \ RS	$\bar{R}\bar{S}$	$\bar{R}S$	RS	$R\bar{S}$
$\bar{P}\bar{Q}$		1	1	1
$\bar{P}Q$	1	1	1	1
PQ		1	1	1
$P\bar{Q}$		1	1	1

PQ \ RS	$\bar{R}\bar{S}$	$\bar{R}S$	RS	$R\bar{S}$
$\bar{P}\bar{Q}$	1			
$\bar{P}Q$				
PQ	1	1		
$P\bar{Q}$	1			

$Y = RS + PR + P\bar{Q} + \overline{\bar{P}Q}$ $\quad Z = R + S + \overline{PQ + \bar{P}\bar{Q}\bar{R} + P\bar{Q}\bar{S}}$

PQ \ RS	$\bar{R}\bar{S}$	$\bar{R}S$	RS	$R\bar{S}$
$\bar{P}\bar{Q}$	0	0	1	0
$\bar{P}Q$	1	1	1	1
PQ	1	1	1	0
$P\bar{Q}$	0	0	1	0

PQ \ RS	$\bar{R}\bar{S}$	$\bar{R}S$	RS	$R\bar{S}$
$\bar{P}\bar{Q}$	0	1	1	1
$\bar{P}Q$	1	1	1	1
PQ	0	1	1	1
$P\bar{Q}$		1	1	1

⇒ Then $W = Z = \bar{X}$

© Wiki Engineering

www.raghul.org

MULTIPLEXER

DATE

⇒ Many I/P and one O/P.

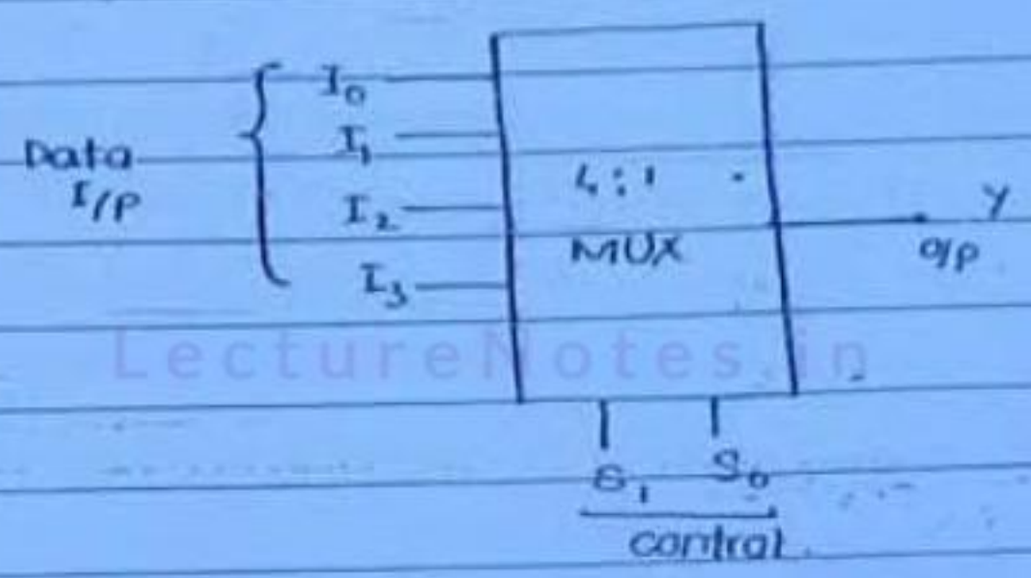

⇒ It is combinational circuits.

⇒ Depending on control or select I/P, one of the I/P is transfere to the O/P line.

⇒ It is select I/P then also called as Data selector, or Many to one ckt or, universal logic ckt or, parallel to serial ckt.

$$m = 2^n$$
$$\text{or, } n = \log_2 m$$

where m = no. of data I/P

n = no. of select i/P (control i/P)

2:1 MUX :-

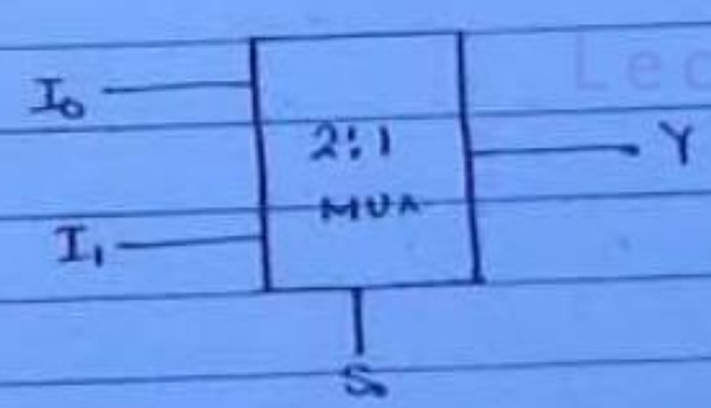

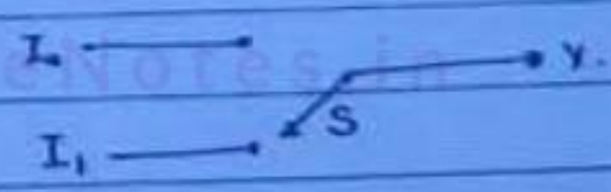

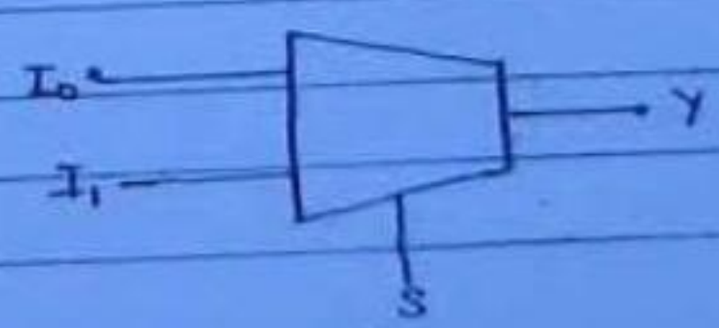

(symbol of MUX)

PAGE

classmate
© Wiki Engineering
www.raghul.org

(i) Truth table :-

S	Y
0	I_0
1	I_1

(ii) logical expression :-

$$Y = \bar{S} I_0 + S I_1$$

(iii) Implementation :-

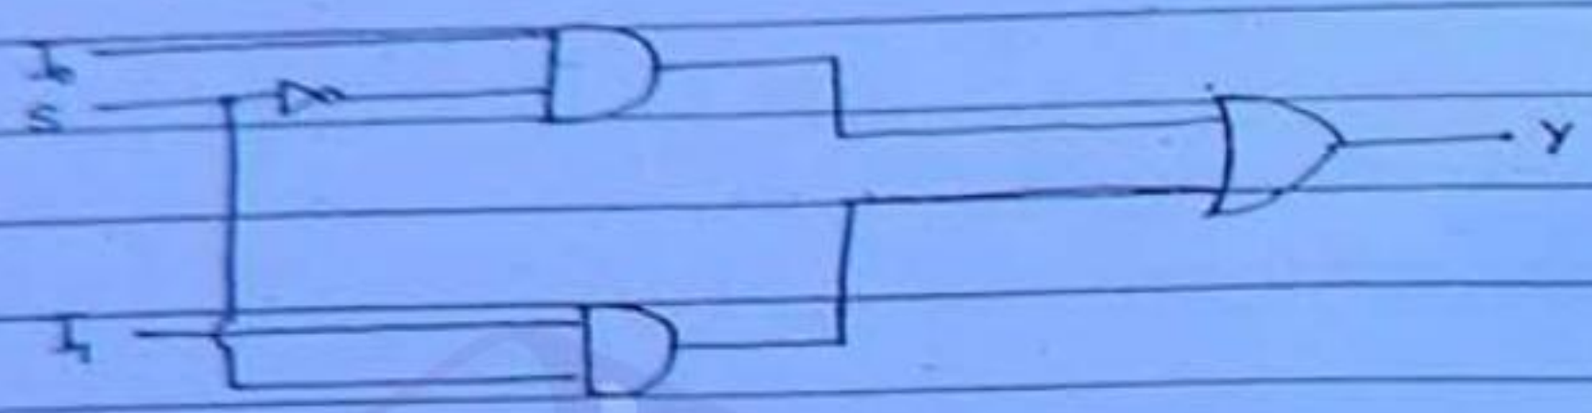

⇒ In MUX, generally an AND gate followed by OR gate.

4:1 MUX :-

(i)

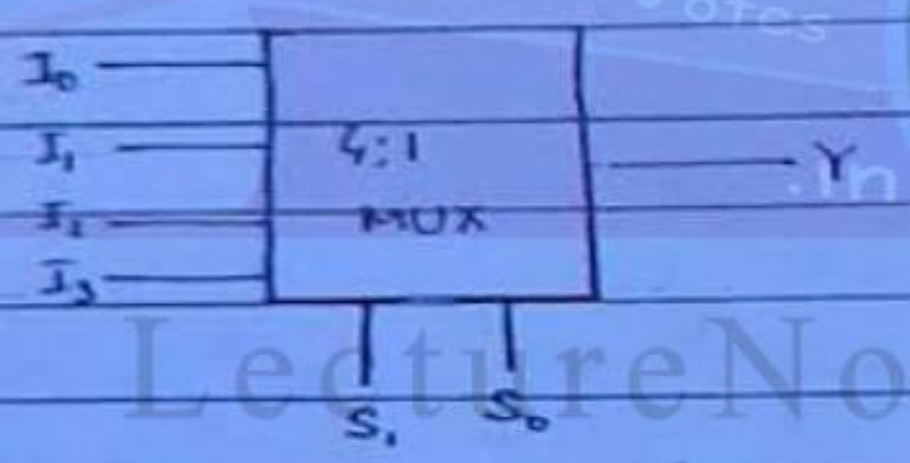

(ii) Truth table :-

S_1	S_0	Y
0	0	I_0
0	1	I_1
1	0	I_2
1	1	I_3

(iii) logical expression :-

$$Y = \bar{S_1}\bar{S_0} I_0 + S_0 \bar{S_1} I_1 + S_1 \bar{S_0} I_2 + S_1 S_0 I_3$$

© Wiki Engineering
www.raghul.org

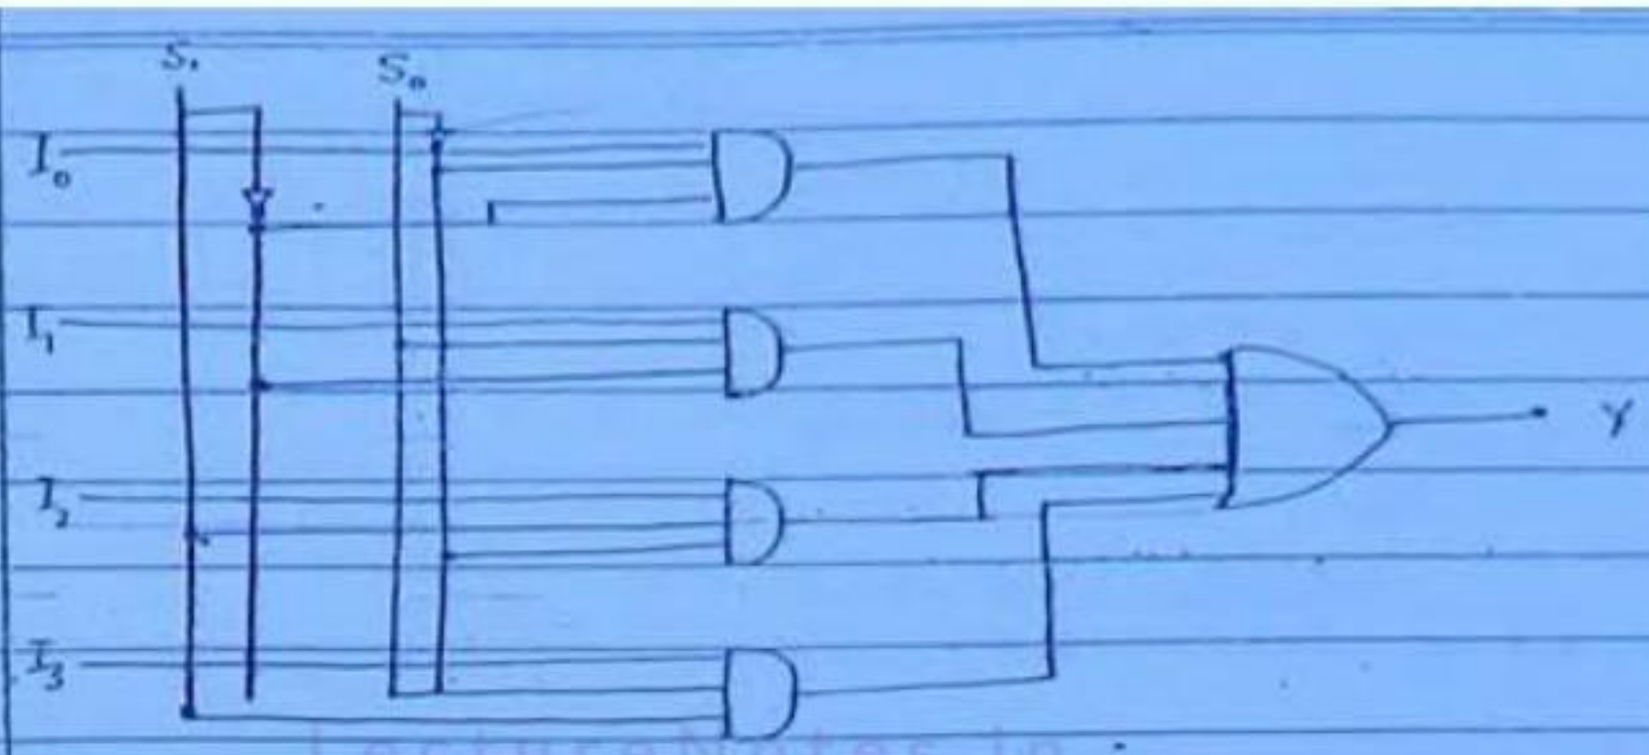

I. Implementation of higher order MUX with lower order :-

(A) Implement 4 : 1 MUX using 2 : 1 mux :-

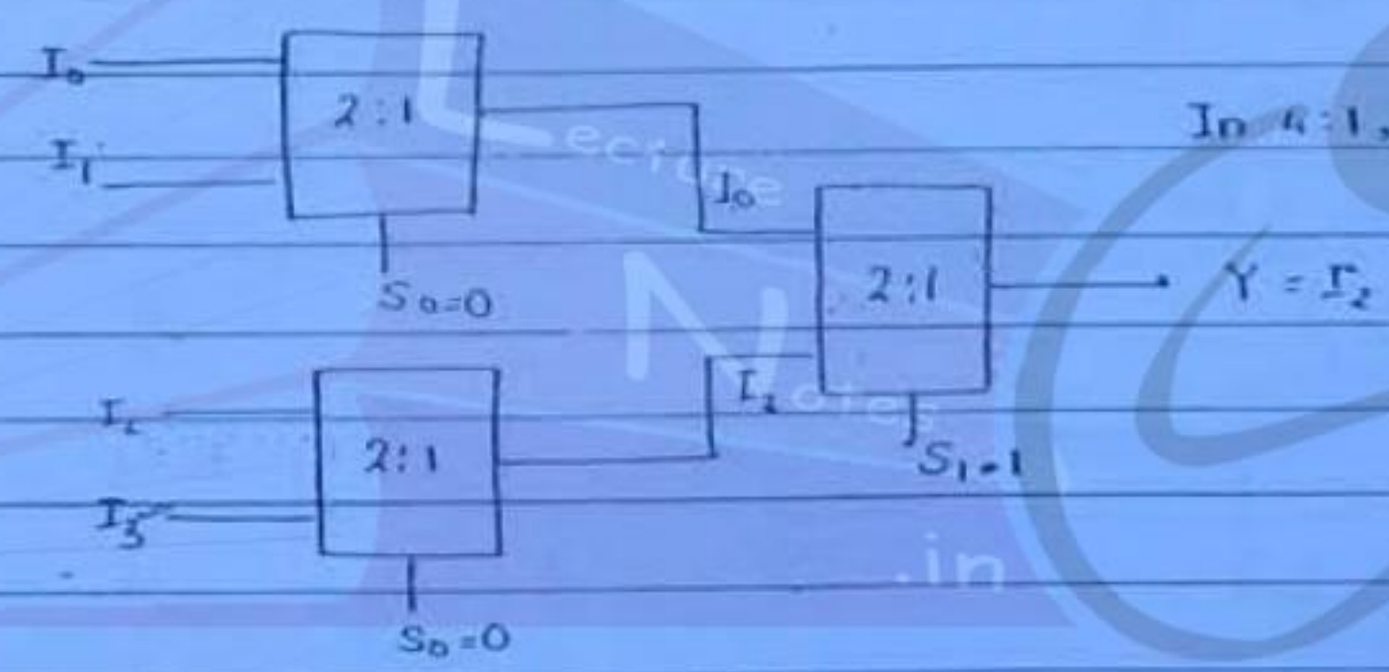

In 4 : 1, no. of 2 : 1 MUX = 3

S_1	S_0	Y
1	0	I_2

(B) Implement 8 : 1 MUX using 2 : 1 MUX :-

no. of MUX $= \frac{8}{2} + \frac{4}{2} + \frac{2}{2} = 4 + 2 + 1 = 7$

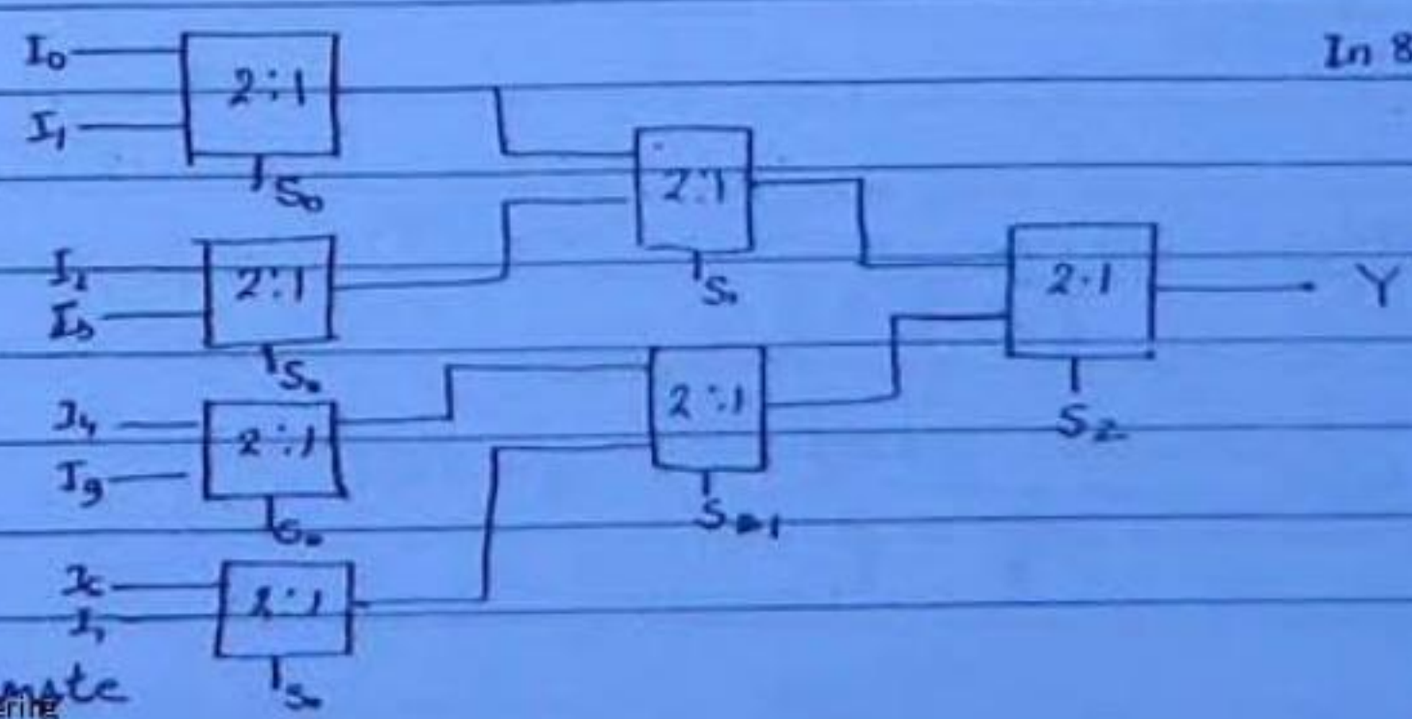

In 8 : 1, no. of 2 : 1 MUX = 7

© WikiEngineering
classmate
PAGE
www.raghul.org
LectureNotes.in

(C) 16×1 $\xrightarrow[\text{15 MUX}]{8+4+2+1}$ 2×1 MUX

(D) 64×1 $\xrightarrow[32+16+8+4+2+1]{63\ \text{MUX}}$ 2×1 MUX

(E) 256×1 $\xrightarrow[128+64+32+16+8+4+2+1]{255\ \text{MUX}}$ 2×1 MUX

⇒ Therefore for $2^n \times 1$ MUX the no of 2:1 mux is $2^n - 1$ MUX required.

(F) 16×1 MUX from 4×1 MUX :-

no. of MUX = $\frac{16}{4} + \frac{4}{4} = 4+1 = 5$

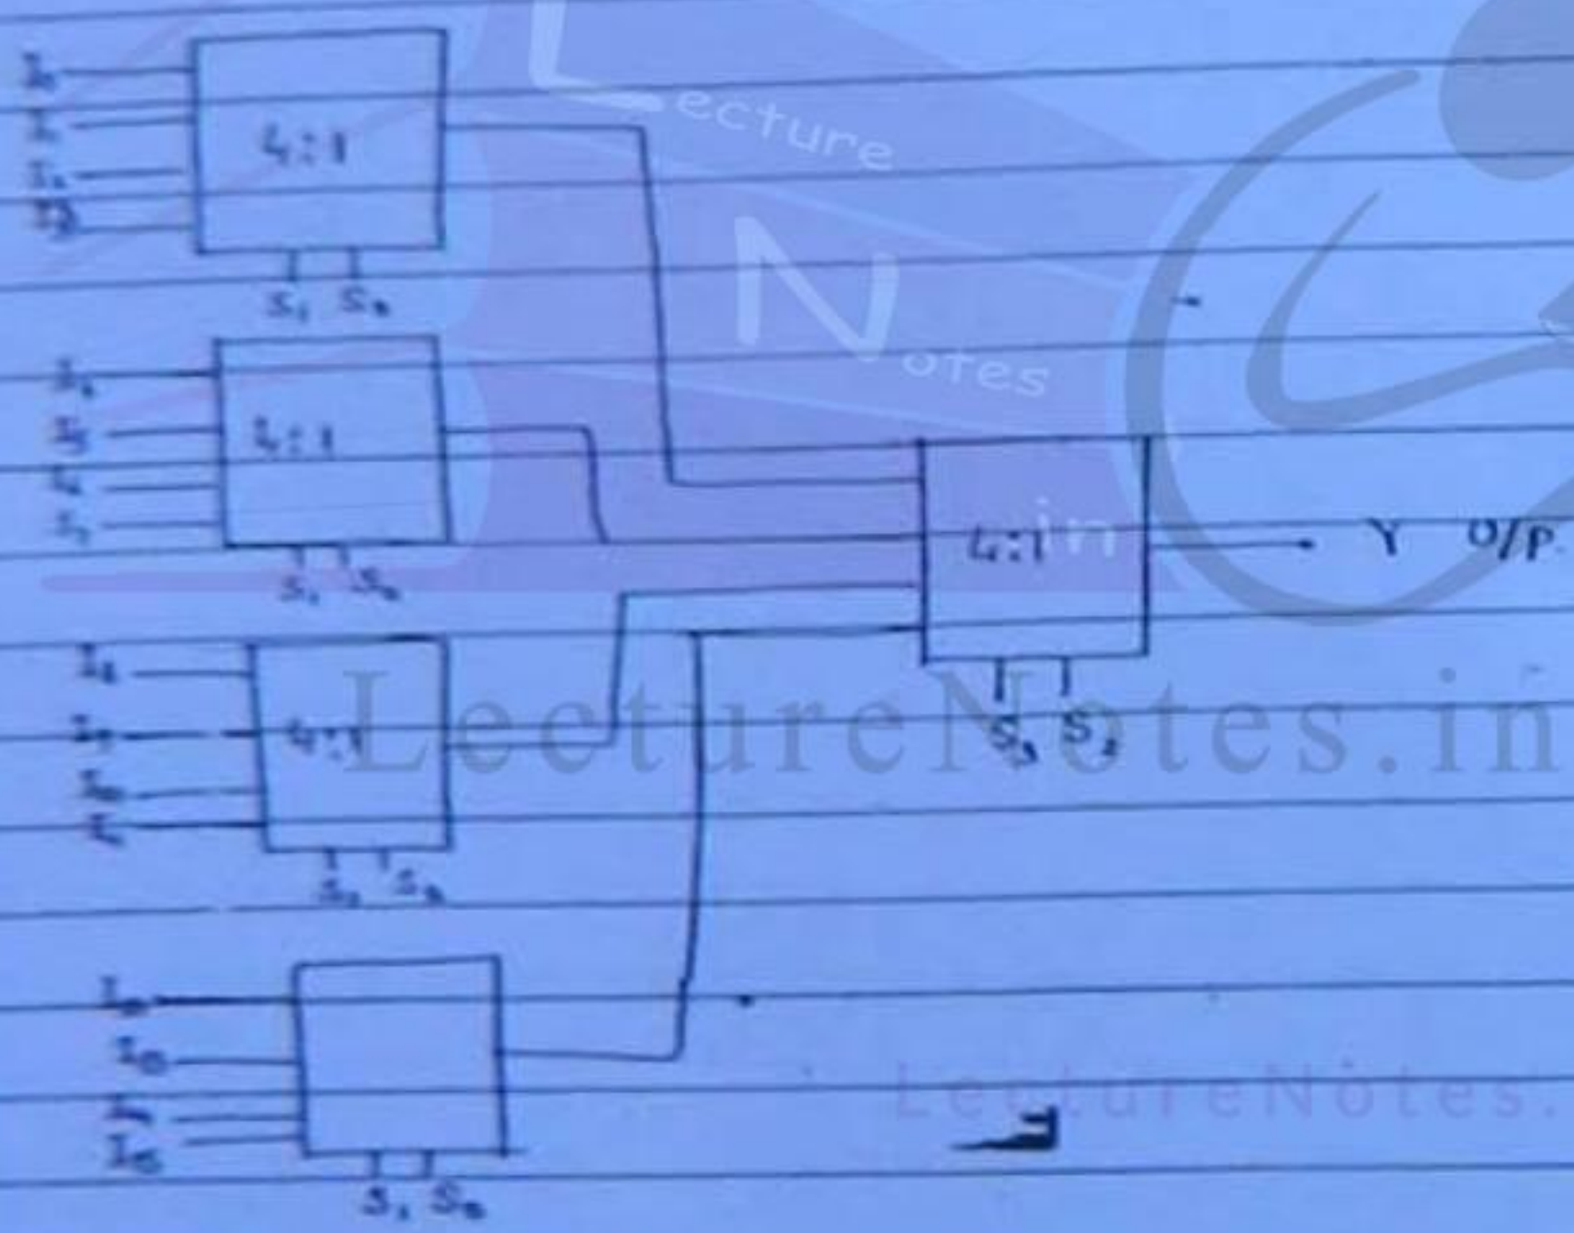

(G) 16×1 MUX $\xrightarrow[\frac{16}{4} + \frac{4}{4} + \frac{2}{1}]{21\ \text{MUX}}$ 4:1 MUX

(H) 64:1 MUX $\xrightarrow[\frac{64}{8} + \frac{8}{8}]{9\ \text{MUX}}$ 8:1 MUX

© Wiki Engineering
www.raghul.org

II MUX as universal :-

☆ 2:1 MUX :-

NOT :-

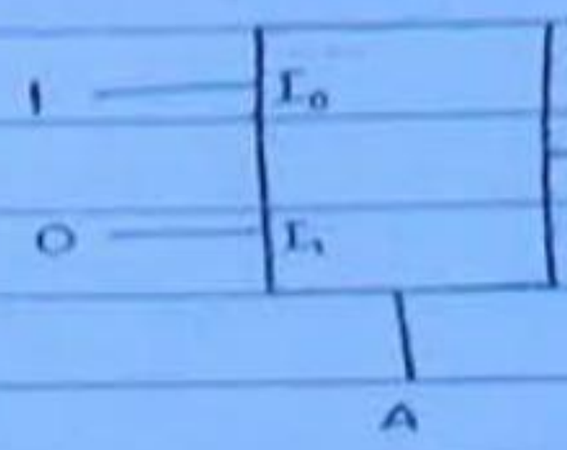

$Y = \bar{S_0} I_0 + S_0 I_1$

$= \bar{A} \times 1 + 0 \times A$

$= \bar{A}$

A	Y
0	1
1	0

⇒ 1- MUX is required for NOT Gate.

AND :-

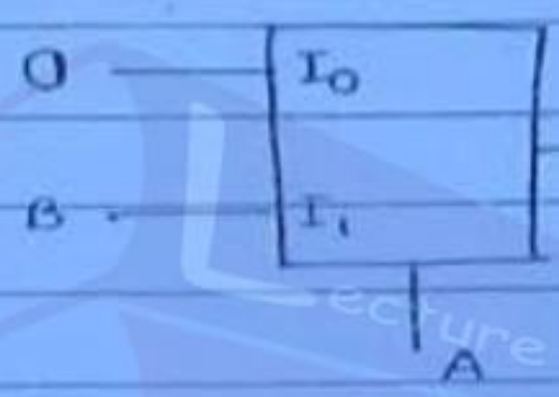

$Y = \bar{A} \times 0 + AB$

$= AB$

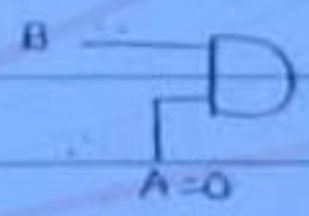

$0 = I_0$

$B = I_1$

⇒ 1- MUX (2:1) is required for AND Gate

OR :-

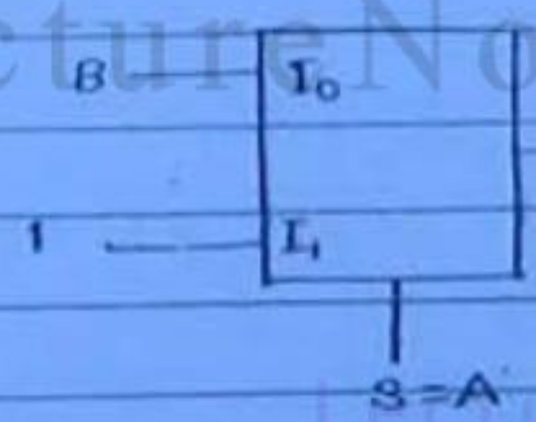

$Y = AB + A \times 1$

$= A + B$

⇒ 1 MUX (2:1) is required for OR gate.

NAND :-

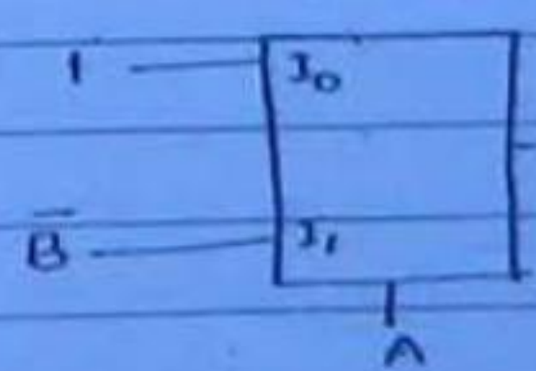

$Y = \bar{A} \times 1 + \bar{B} A$

$= \bar{A} + \bar{B}$

$= \overline{AB}$

for $\bar{B}$:-

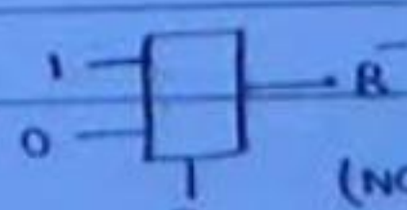

(NOR gate).

© Wiki Engineering

www.raghul.org

⇒ 2-MUX required for NAND gate.

(70)

NOR :-

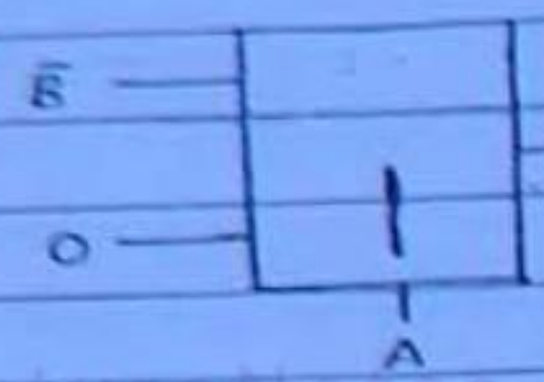

$Y = \bar{A}\bar{B} + A*0$

$= \overline{A+B}$

LectureNotes.in

for $\bar{B}$ ⇒

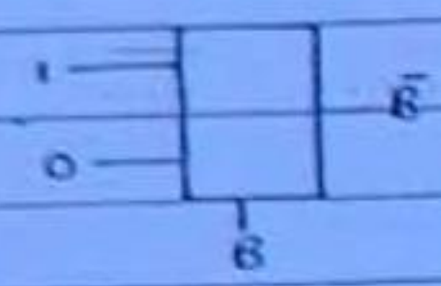

⇒ 2 MUX (2:1) required for NOR gate.

EXOR :-

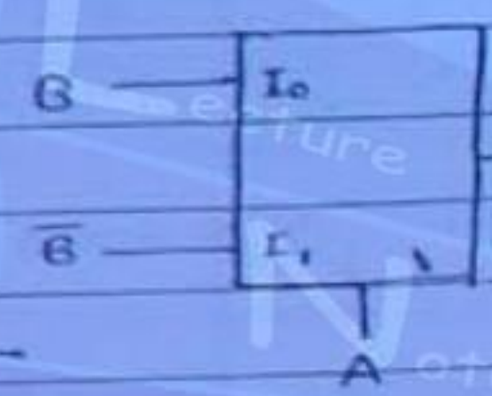

$Y = B\bar{A} + \bar{B}A$

⇒ 2 MUX (2:1) required for EXOR gate.

EXNOR :-

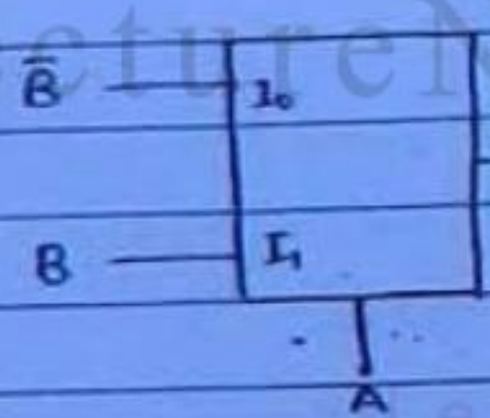

$Y = \bar{A}\bar{B} + AB$

⇒ 2 MUX (2:1) required for EXNOR gate.

Ques:- EXOR, AND gate required 2×1 MUX.

(a) 1, 1

(b) 2, 1

(c) 1, 2

(d) 2, 2

Sol:- EXOR = 2 , AND = 1

© Wiki Engineering

⇒ for HA – 3 Mux required (2:1)

⇒ for HS – 3 Mux required (2:1)

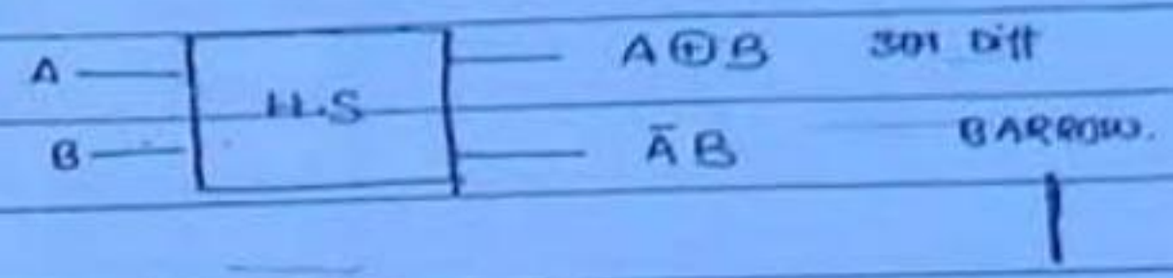

$A \oplus B$ = 2 MUX required and.

$\bar{A}B$ = 1 MUX.

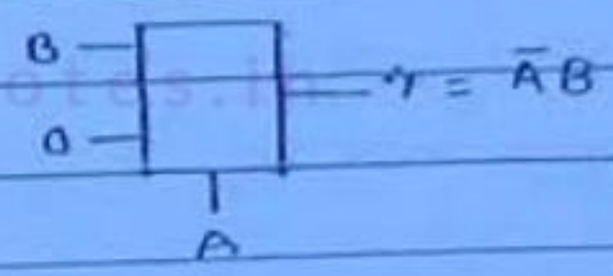

☆ 4:1 MUX :-

AND :-

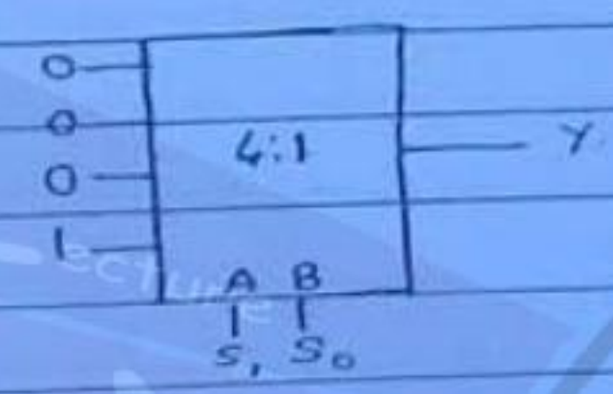

OR :-

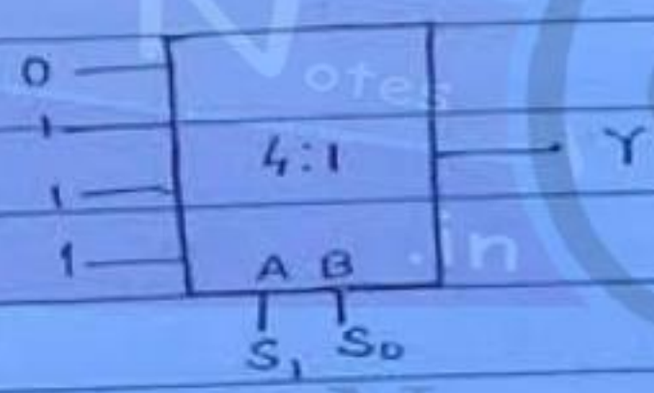

EXOR :-

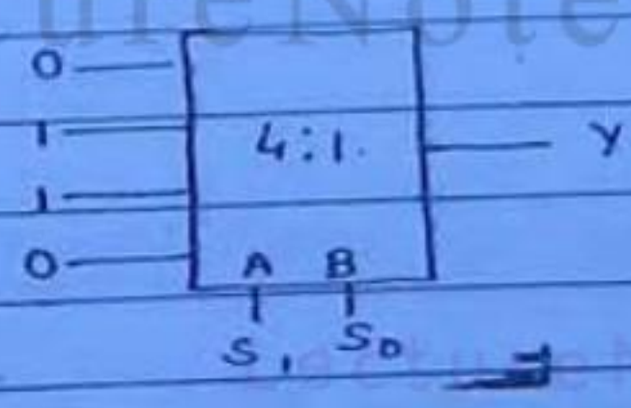

⇒ Any two variable function is implemented with 4:1 MUX.

EXNOR :-

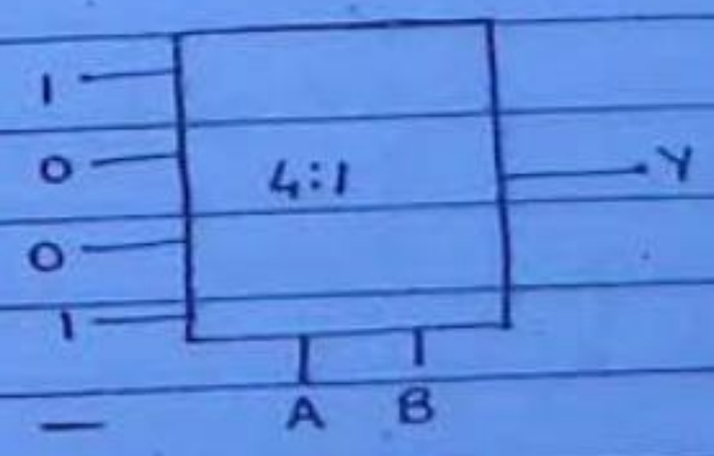

LectureNotes.in

III. Determine minimize o/p logical expression:-

Simplify:-

(72)

Q:-

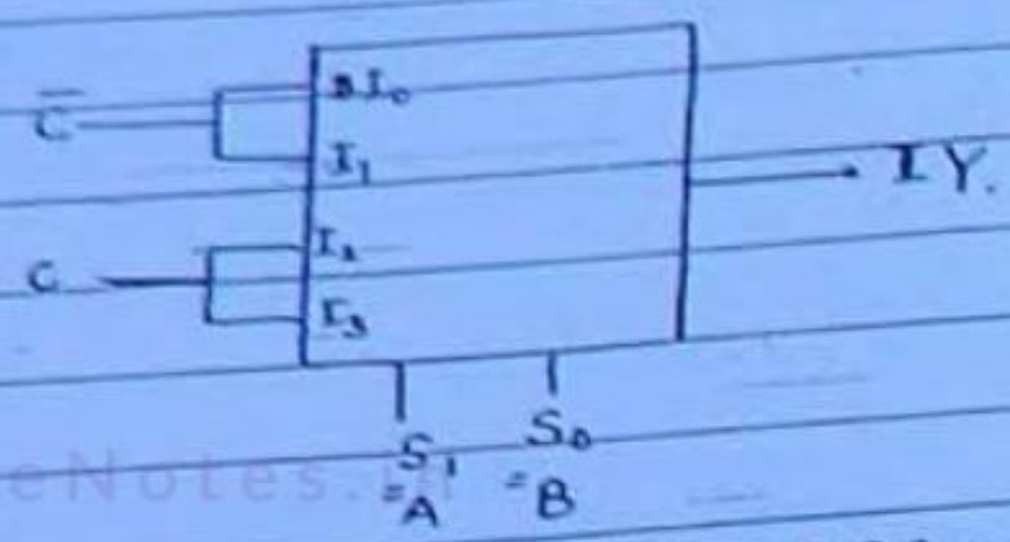

Sol:- $Y = \bar{A}\bar{B}\bar{C} + \bar{A}B\bar{C} + A\bar{B}C + ABC$

$= \bar{A}\bar{C}(B+\bar{B}) + AC(\bar{B}+B)$

$= \bar{A}\bar{C} + AC$

$= A \odot C$

Q:-

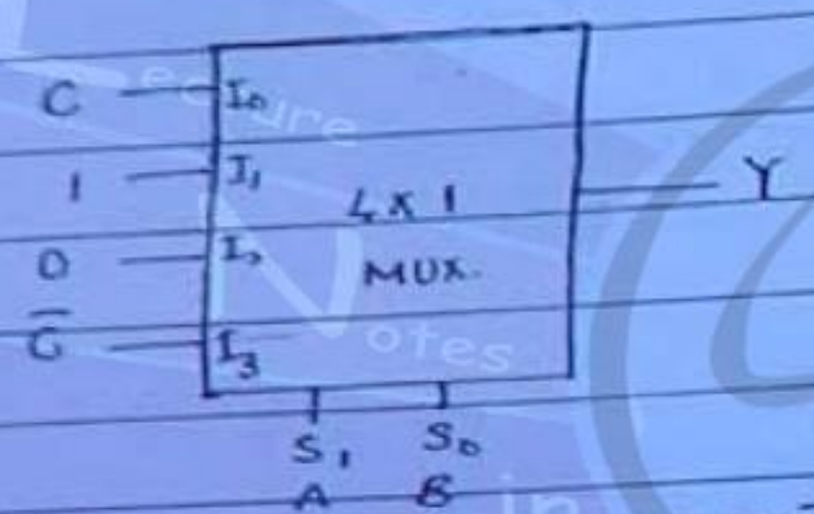

Sol:- $Y = \bar{A}\bar{B}C + \bar{A}B + A\bar{B}\times 0 + \cancel{A\bar{B}\bar{C}}$

$= \bar{A}\bar{C}C + \bar{A}B + AB\bar{C}$

$= \bar{A}C + B\bar{C}$

A \ BC	$\bar{B}\bar{C}$	$\bar{B}C$	BC	$B\bar{C}$
$\bar{A}$		1	1	1
A				1

IV. Implementation of given logical expression:-

Q:- $f(A,B,C) = \Sigma m(0,1,4,6,7)$

Sol:-

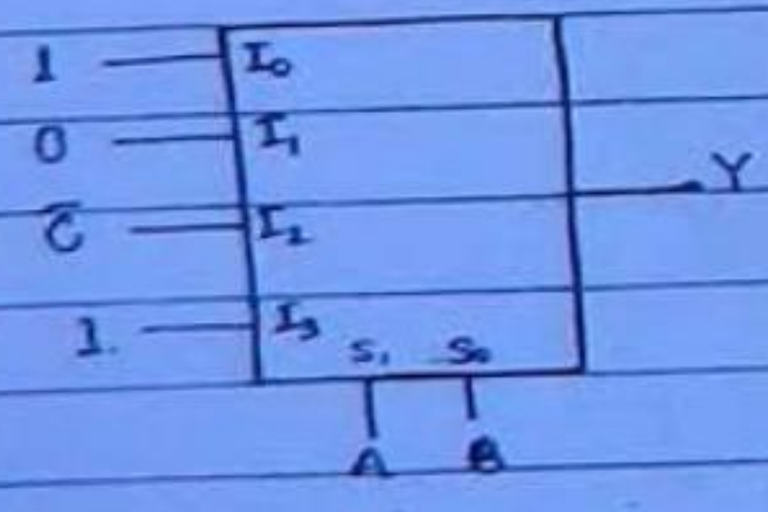

© Wiki Engineering

www.raghul.org

	I_0	I_1	I_2	I_3
$\bar{C}$	0	2	4	6
C	1	3	5	7
	1.	0	$\bar{C}$	1.

23

A	B	C			
0	0	0	→ $\bar{C}$	$\bar{B}$	$\bar{A}$
0	0	1	→ C	$\bar{B}$	$\bar{A}$
0	1	0	→ $\bar{C}$	B	$\bar{A}$
0	1	1	→ C	B	$\bar{A}$
1	0	0	→ $\bar{C}$	$\bar{B}$	A
1	0	1	→ C	$\bar{B}$	A
1	1	0	→ $\bar{C}$	B	A
1	1	1	→ C	B	A

⇒ 1 - 4:1 MUX and 1 - NOT gate required.

Q:- Implement logical expression

$$f(A,B,C) = (1,2,3,5,6,7)\ m\Sigma$$

(i) AB as select line

(ii) AC

(iii) BC

Sol:- (i)

	I_0	I_1	I_2	I_3
$\bar{C}$	0	2	4	6
C	1	3	5	7
	1	C	1	C

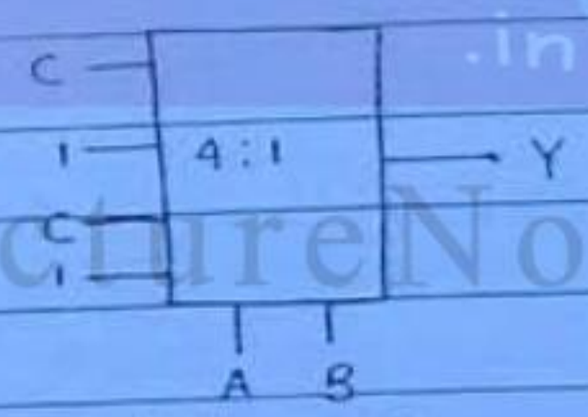

⇒ 1 - 4:1 MUX required.

(ii)

	$\bar{A}\bar{C}$	$\bar{A}C$	AC	AC
	I_0	I_1	I_2	I_3
$\bar{B}$	0	1	4	5
B	2	3	6	7
	B	1	B	1

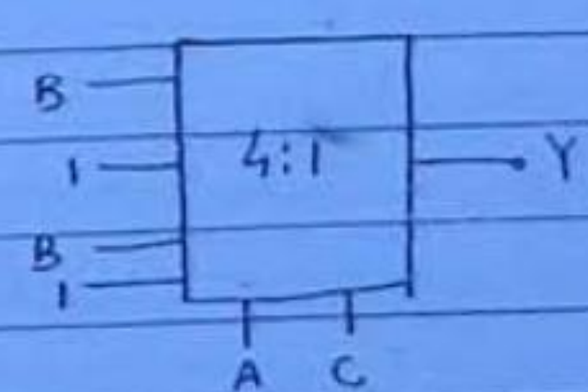

© Wiki Engineering
www.raghul.org

(iii) BC control :-

	I_0	I_1	I_2	I_3
$\bar{A}$	0	1	2	3
A	4	5	6	7
	0	1	1	1

74

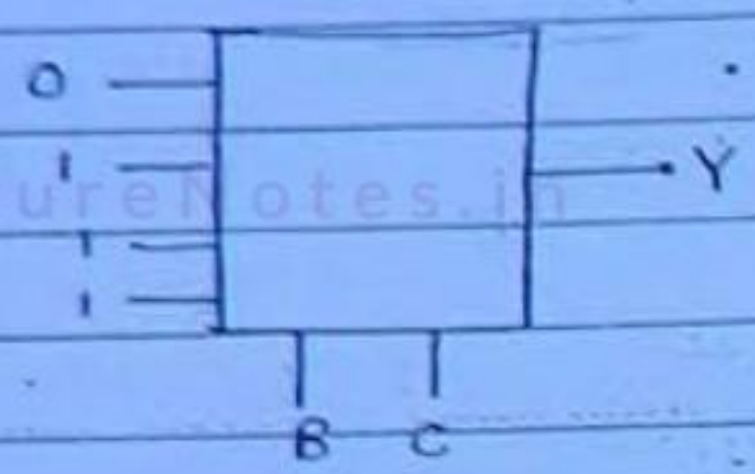

⇒ using one 4:1 MUX → Any two variable function implement
→ some of three variable implement.

⇒ one 4x1 MUX and one NOT → All Two, All Three → implement

⇒ one 8 x 1 MUX → all Three
→ Some four.

⇒ one 8x1 MUX and one NOT → All Three are ~~four~~ implement
→ All Four are implemented

JTO-2005

Ques:- $f = \pi M(0,1,4,7)$

Sol:- first convert it into minterm expression $f = \Sigma m(2,3,5,6)$

LectureNotes.in

Hazard :-

⇒ Hazard is occurs due to propogation delay of the logic ckt.

⇒ This is unwanted change at the o/p.

(75)

For the give ckt Determine o/p waveform when no propogation delay.

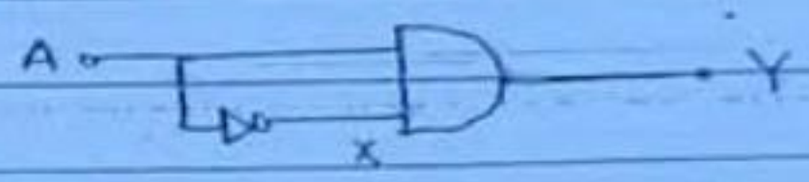

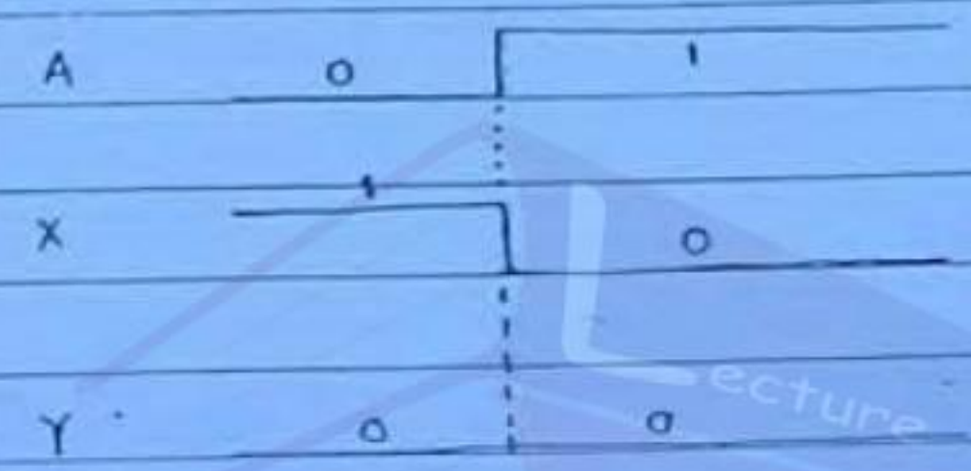

case II :-

If there is propagation delay of 1ns in NOT gate and no delay in AND gate.

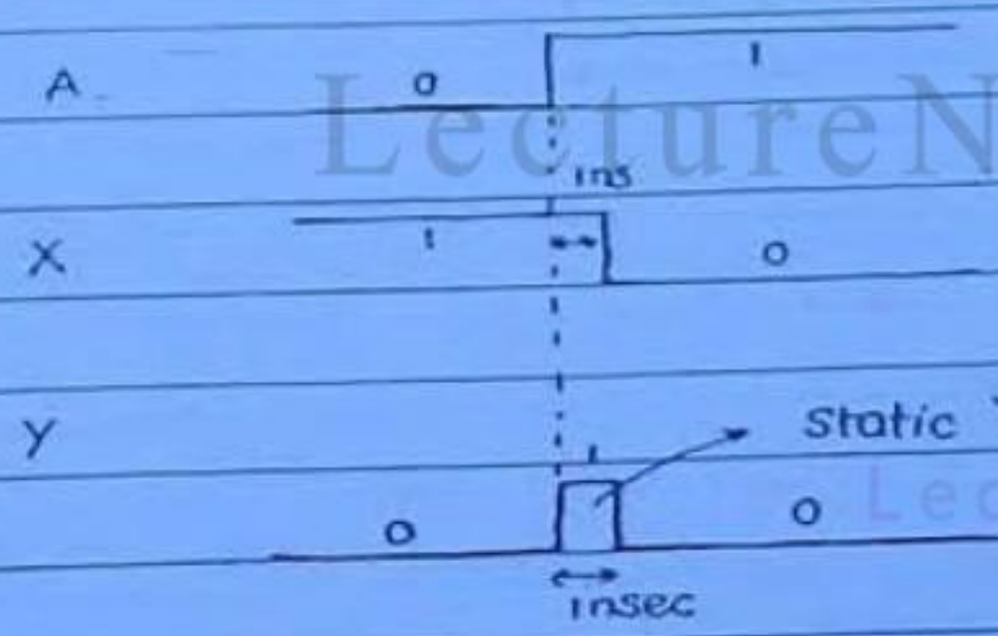

case III :-

If t_{pd} (NOT) = 1nsec , t_{pd} (AND) = 2nsec.

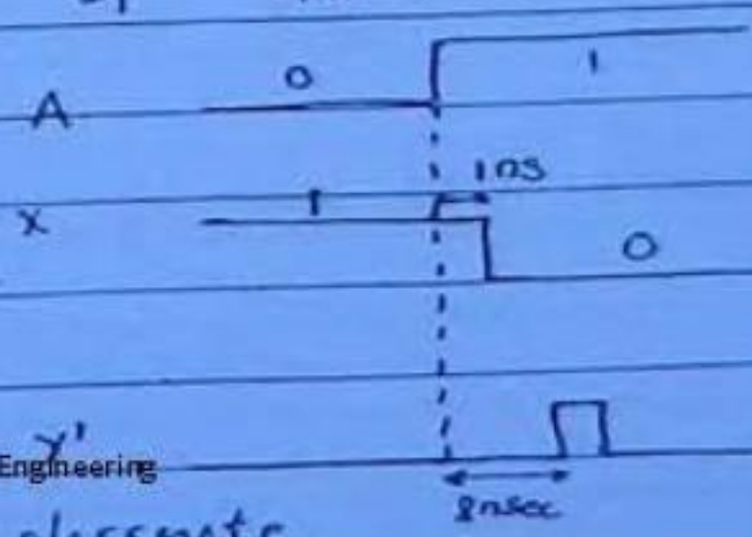

© Wiki Engineering
www.raghul.org
LectureNotes.in

classmate

LectureNotes.in

Hazard

Static

- ⇒ occur in two level ckt
- ⇒ occur in combinat^n ckt
  - Static 1 Hazard
    - ⇒ AND-OR circuit
    - ⇒ IN SOP FORM
  - Static 0 Hazard
    - ⇒ OR-AND circuit
    - ⇒ IN POS FORM.

Dynamic

- ⇒ occur in multilevel ckt
- ⇒ in combinational circuit.
- ⇒ Avoid by adding redundant term

Essential

- ⇒ occurs in Asynchronous Sequential ckt.

LectureNotes.in

LectureNotes.in

⇒ To avoid static and dynamic Hazard redundant terms are added in combinational ckt.

⇒ Essential Hazard :- These Hazards can not be avoided but feels essential.

Memories

- Primary
- Secondary

	ROM	Semi random	Serial access memory
⇒ Read/write	⇒ Read only	⇒ Al disk	⇒ magnetic tape
⇒ Random access	⇒ Random access	⇒ CD	⇒ Magnetic bubb
⇒ Volatile	⇒ Non volatile	⇒ DVD	⇒ Ferrite core
⇒ Temparary data	⇒ Permanent data	⇒ HD	⇒ CCD (charged couple device)
	BIOS/ System program		

⇒ Ferrite core → DRO → Discrictive read only out.

RAM (Random access memory) :-

⇒ Each memory location if m bits are stored then memory capacity $(2^n \times m)$

⇒ with n-bit address - max. no. of memory location requir is $= 2^n$

⇒ $4^K \times 8$ memory

$= 2^2 \times 2^{10} \times 8 = 2^{12} \times 8$

= 12 - address line

8 - data lines.

RAM

Static	Dynamic
1. Stored like FF	1. Data stored in MOS capac

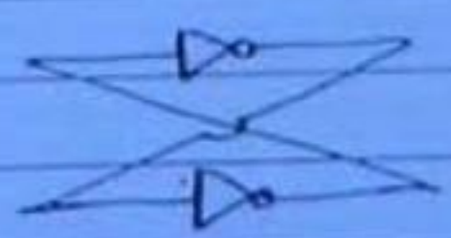

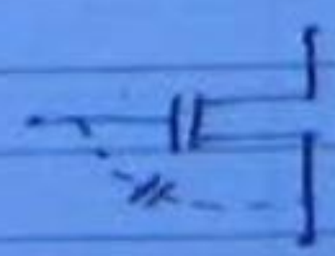

© Wiki Engineering
classmate

www.raghul.org

Memories

(78)

- Primary
  - RAM
  - ROM
- Semi random
- Secondary
  - Serial access memory

RAM	ROM	Semi random	Serial access memory
⇒ Read / write	⇒ Read only	⇒ All disk	⇒ magnetic tape
⇒ Random access	⇒ Random access	⇒ CD	⇒ Magnetic bubb
⇒ Voltaile	⇒ Non volataile	⇒ DVD	⇒ Ferrite core
⇒ Temporary data	⇒ Permanent data	⇒ HD	⇒ CCD (charged couple device)
	BIOS / System program		

⇒ Ferrite core → DRO → Discrictive read only out.

RAM (Random access memory) :-

⇒ Each memory location if m bits are stored then memory capacity $(2^n \times m)$

⇒ With n-bit address - max. no. of memory location requir is $= 2^n$.

⇒ $4^K \times 8$ memory.

$= 2^2 \times 2^{10} \times 8 = 2^{12} \times 8$

= 12 - address line

8 - data lines.

RAM

- Static
- Dynamic

Static	Dynamic
1. Stored like FF	1. Data stored in MOS capac.

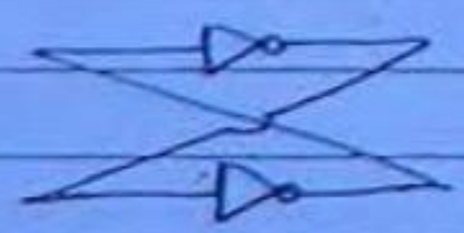

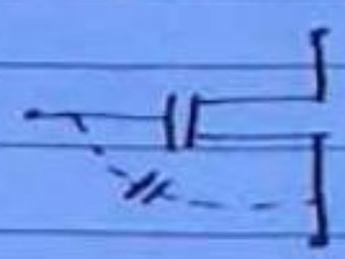

© Wiki Engineering

www.raghul.org

DEMUX (DEMULTIPLEXER) :-

⇒ Single I/P and Many O/P.

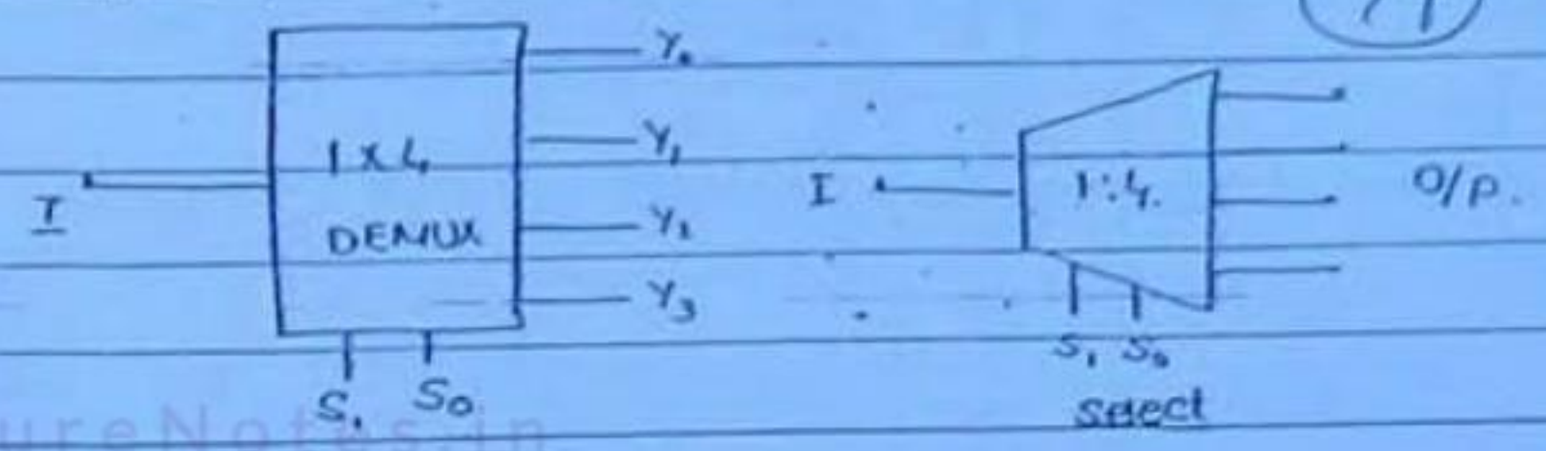

⇒ DEMUX is combinational ckt which have one I/P and may O/P depe on select I/P, I/P is transfered to any of the O/P.

⇒ Also known as 1 to many ckt or, data distributor.

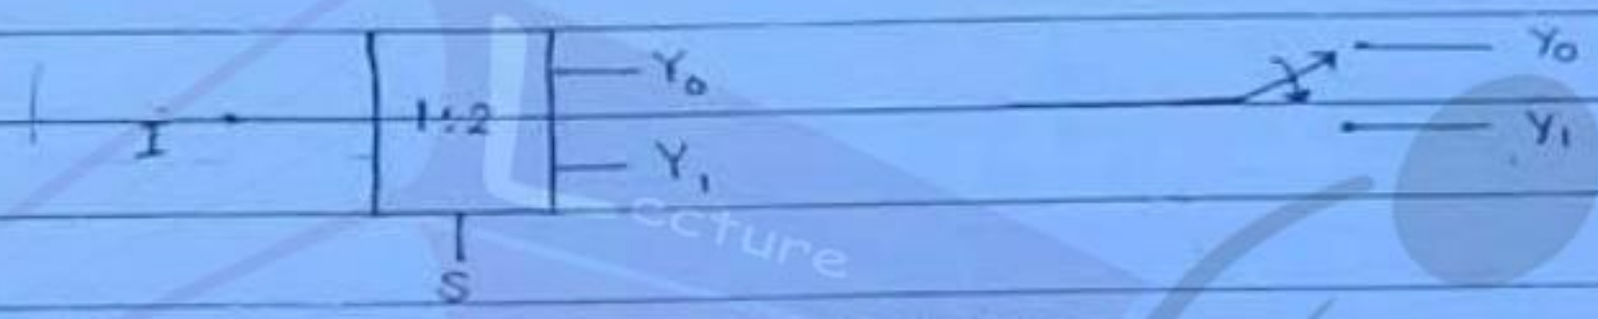

Truth table :-

S	Y_1	Y_0
0	0	I
1	I	0

Expression :-

$$Y_0 = \bar{S} I$$
$$Y_1 = S I$$

implementation :-

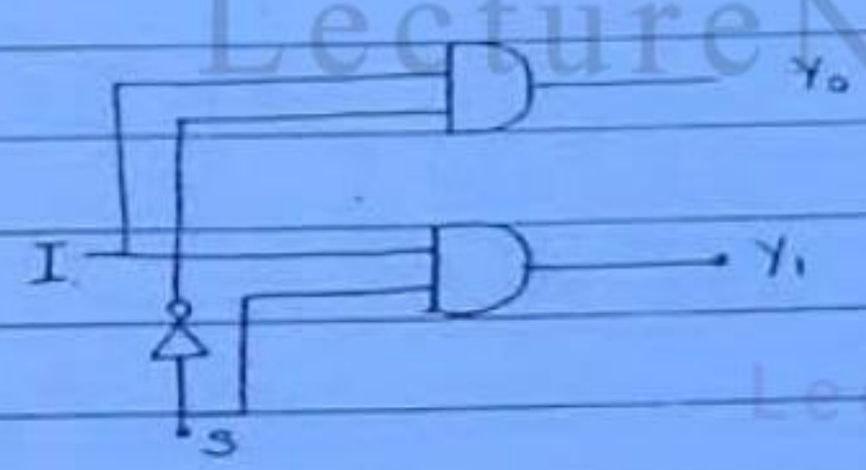

4:1 or 1:4 DEMUX :-

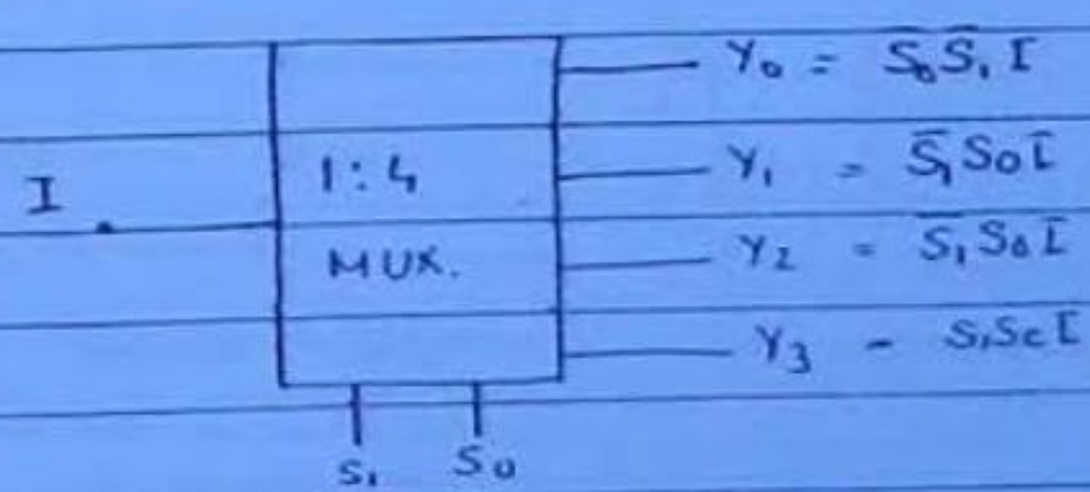

LectureNotes.in

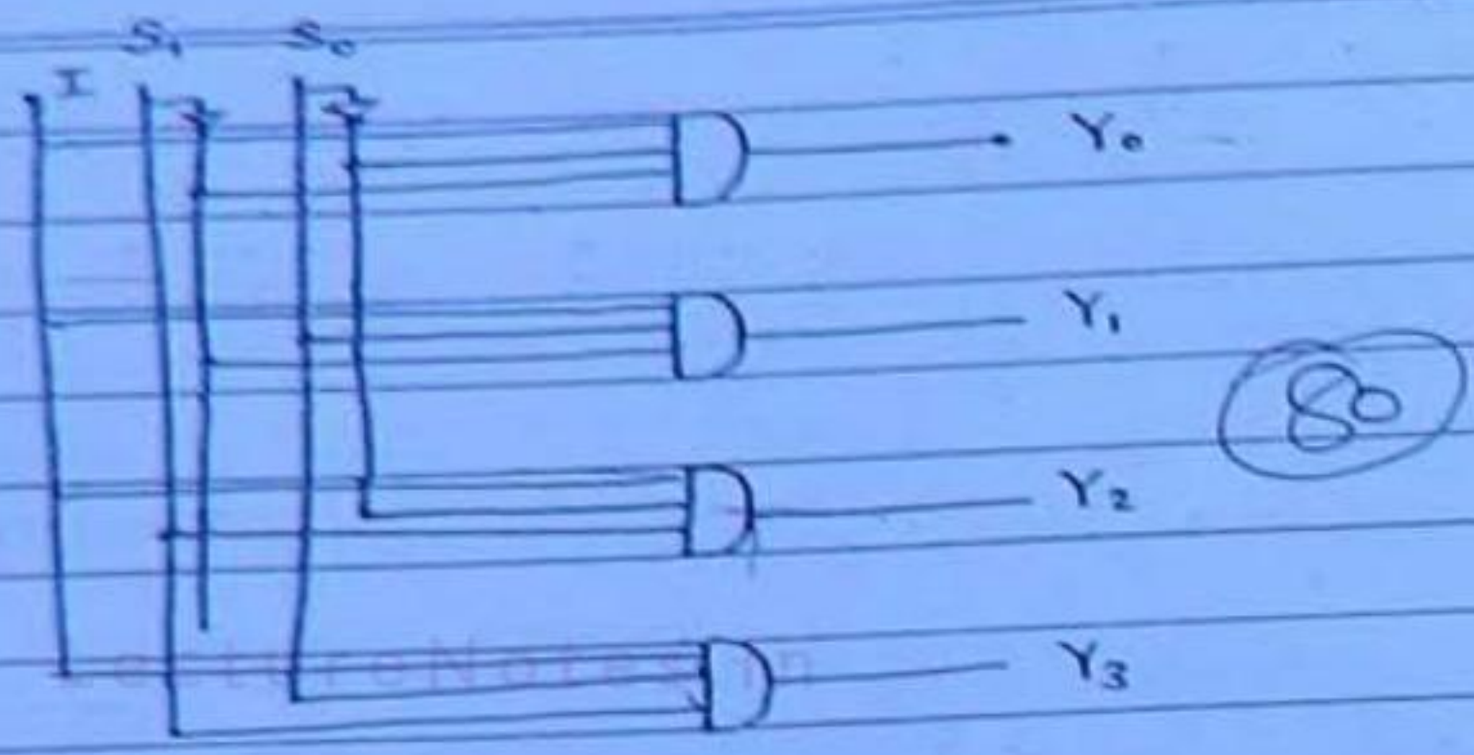

80

Implementation of Higher order DEMUX from lower order:-

(i) 1X4 DEMUX $\xleftrightarrow{3}$ 1X2 DEMUX

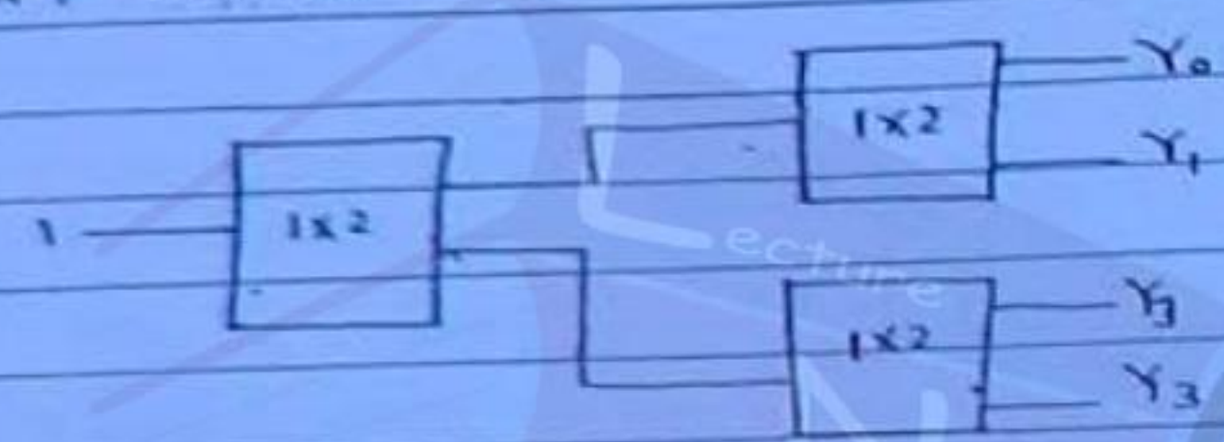

(ii) 1X8 DEMUX $\xleftrightarrow{7}$ 1X2 DEMUX

(iii) 1X16 DEMUX $\xleftrightarrow{5}$ 1X4 DEMUX

(iv) 1X64 DEMUX $\xleftrightarrow{21}$ 1X4 DEMUX $\quad \frac{64}{4} + \overbrace{\frac{16}{4} + \frac{4}{4} + 1}^{21}$

(v) 1X64 DEMUX $\xleftrightarrow{9}$ 1X8 DEMUX

(vi) 1X256 DEMUX $\xleftrightarrow{7}$ 1X16 DEMUX

LectureNotes.in

© Wiki Engineering

www.raghul.org

DECODER :-

⇒ Decoder is a combinational ckt which have many I/P and m
O/P.

⇒ It is used to convert binary data to other code (binary to

eg. Binary to octal (3×8)
BCD to Decimal (4×10)
Binary to Hexadecimal
BCD to seven segment

(81)

⇒ 2 to4 decoder is minimum possible decoder.

2×4 Decoder :-

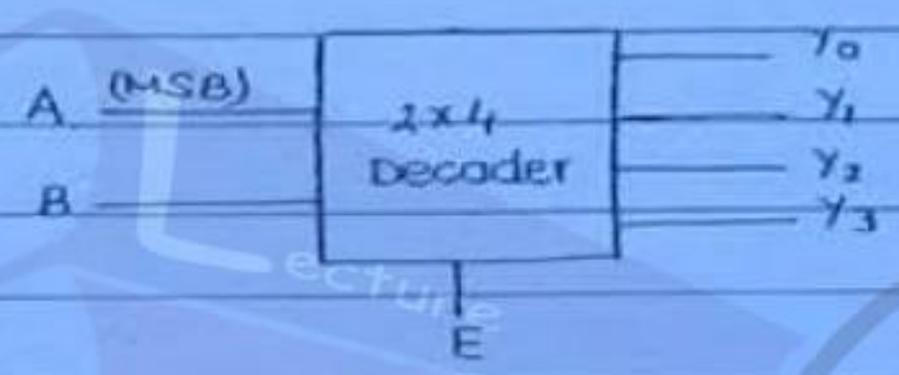

Truth table :-

E	A	B	Y_3	Y_2	Y_1	Y_0
0	x	x	0	0	0	0
1	0	0	0	0	0	1
1	0	1	0	0	1	0
1	1	0	0	1	0	0
1	1	1	1	0	0	0

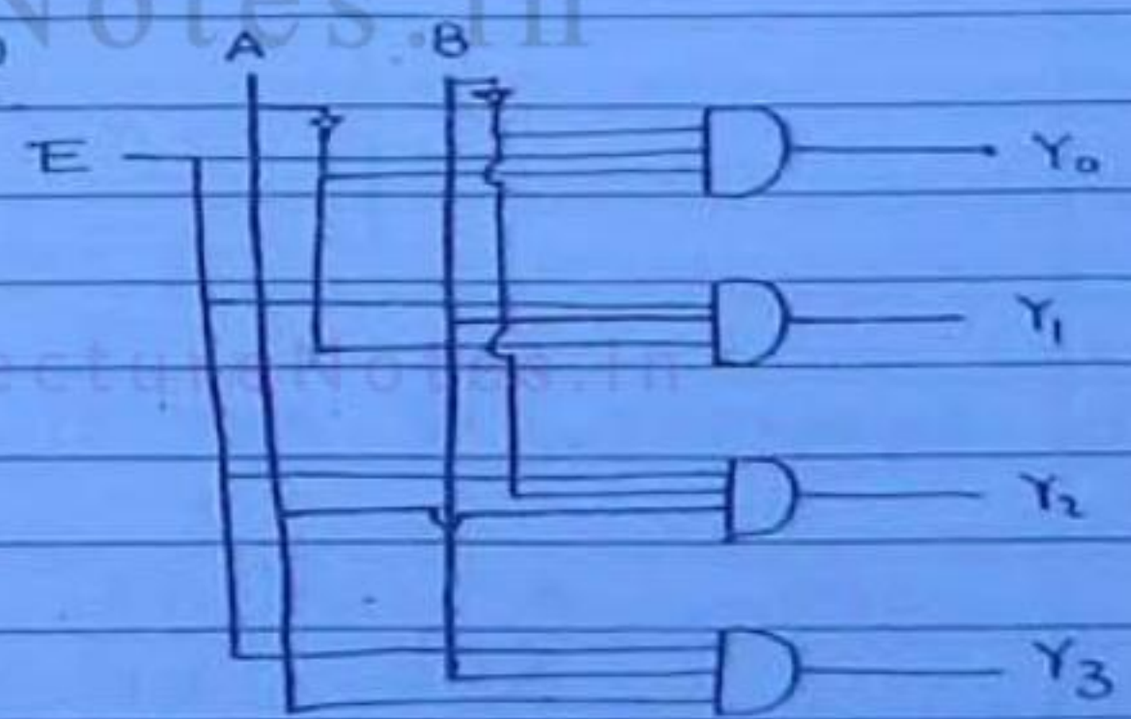

logical Expression :-

$Y_0 = \bar{A}\bar{B}E$

$Y_1 = \bar{A}BE$

$Y_2 = A\bar{B}E$

$Y_3 = ABE$

⇒ Decoder and DEMUX internal ckt remains sam.

© WikiEngineering
www.raghul.org

DATE

Q:- Implement Half adder using 2x4 Decoder.

(82)

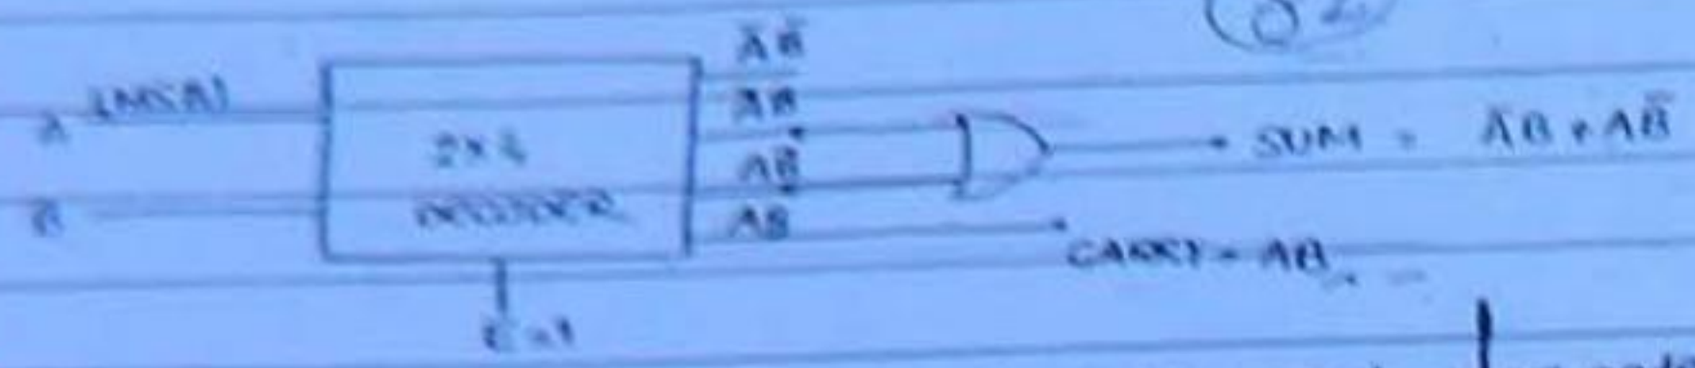

Q. Implement HA using 1 - 2x4 Decoder and 1 OR gate and same for HS.

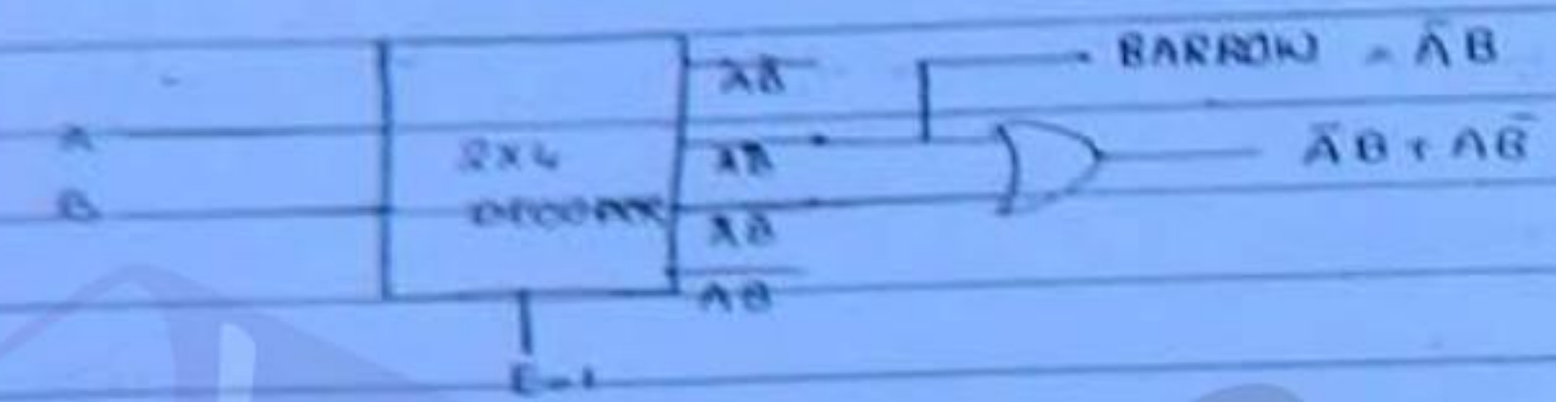

Binary to octal DECODER :-

= Also called as 3x8 Decoder.

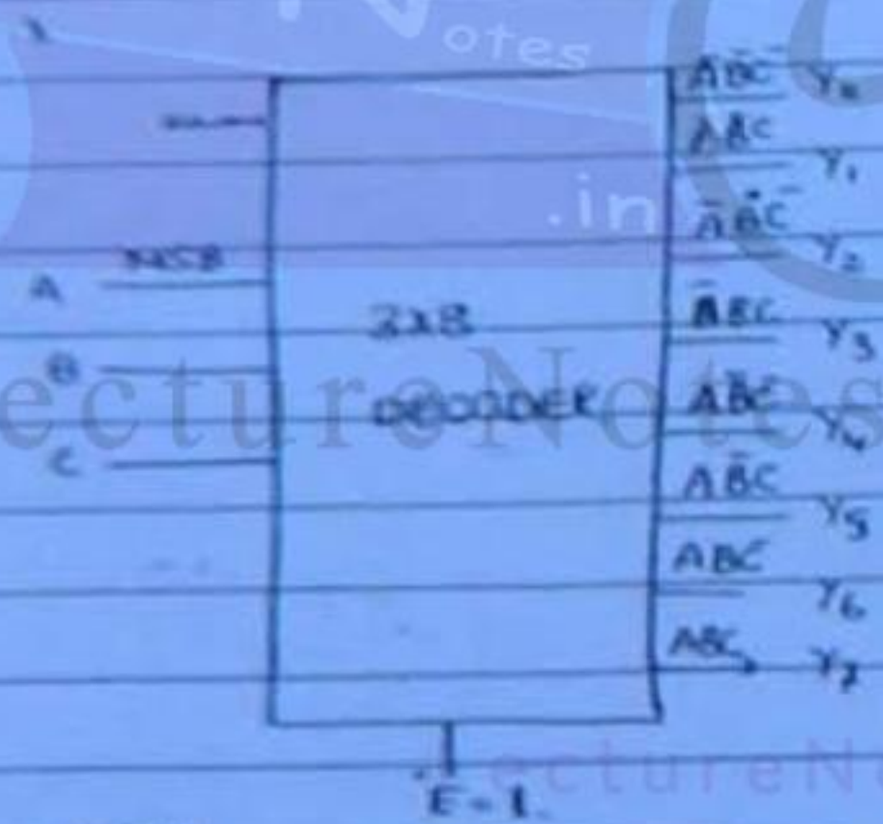

Q. Implement using 3x8 Decoder make FA.

Sol^n -

SUM = $\Sigma m(1,2,4,7)$

$= \bar{A}\bar{B}C + \bar{A}B\bar{C} + A\bar{B}\bar{C} + ABC$

CARRY = $\Sigma m(3,5,6,7)$

© Wiki Engineering
www.raghul.org

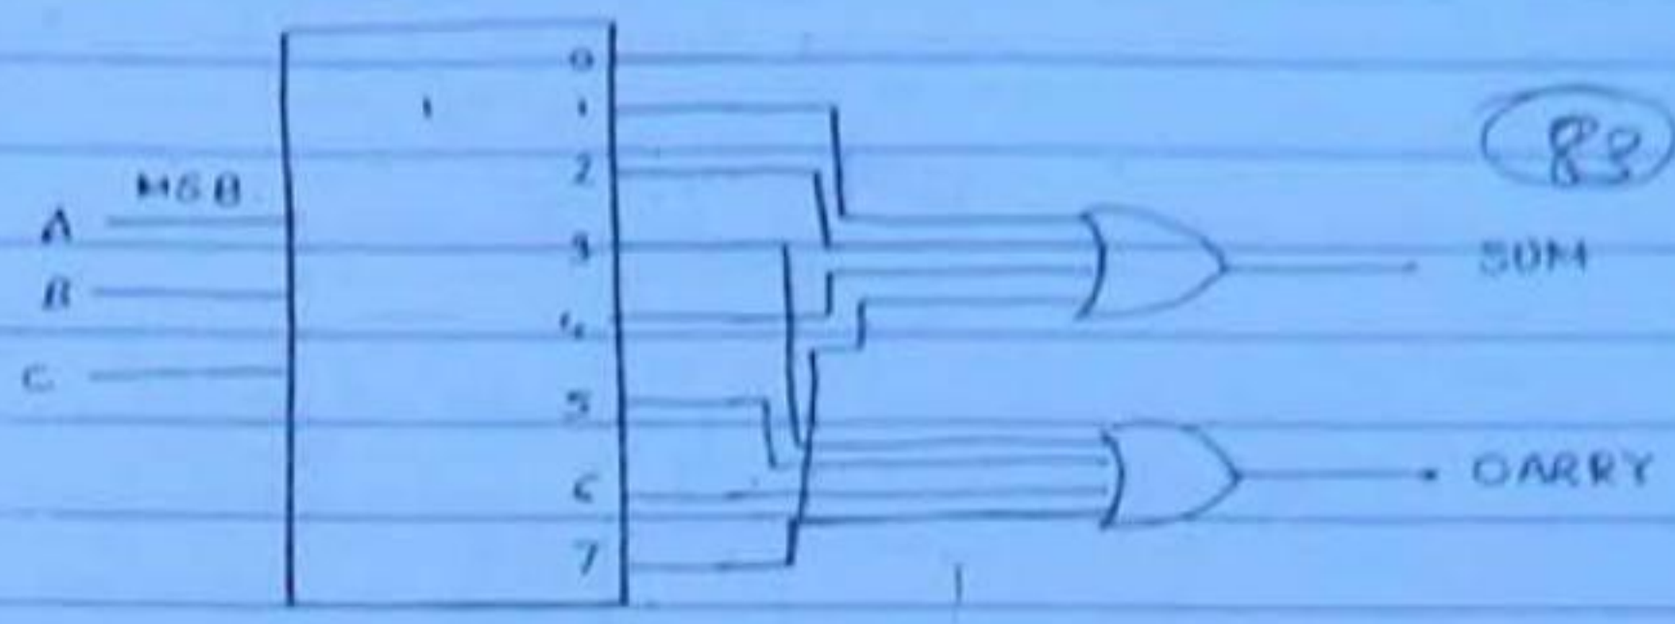

LectureNotes.in

Q: Implementation of Higher order decoder using lower order:-

4×16 $\xleftrightarrow{5}$ 2×4 ⟶ (Since 2×4 Decoder means 1×4 DEMUX using 2 select line

$\begin{cases} 1\times16 \xleftrightarrow{5} 1\times4 \\ 16\times1 \xleftrightarrow{5} 4\times1 \end{cases}$

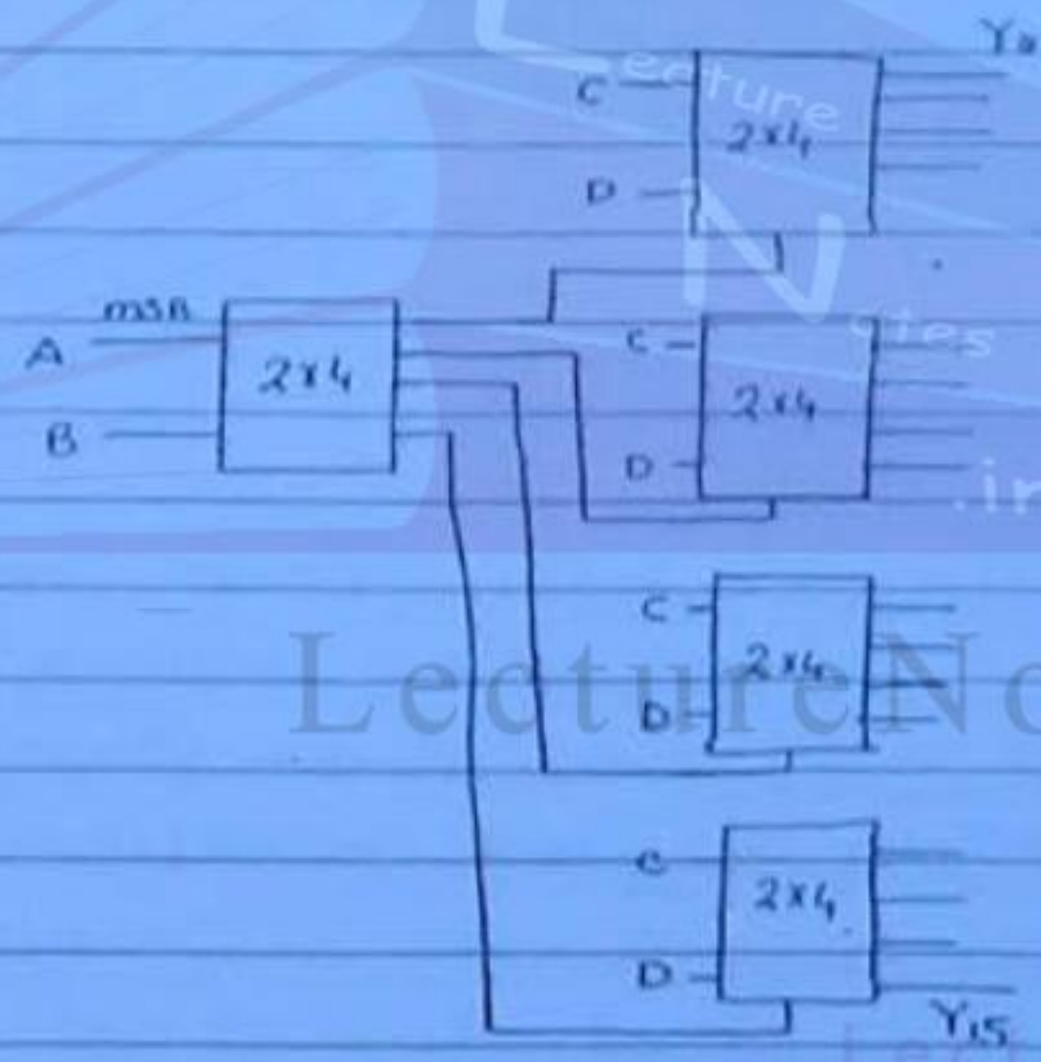

LectureNotes.in

⇒ 4 16 6×64 $\xleftrightarrow{21}$ 2×4

⇒ 8×256 $\xleftrightarrow{17}$ 4×16

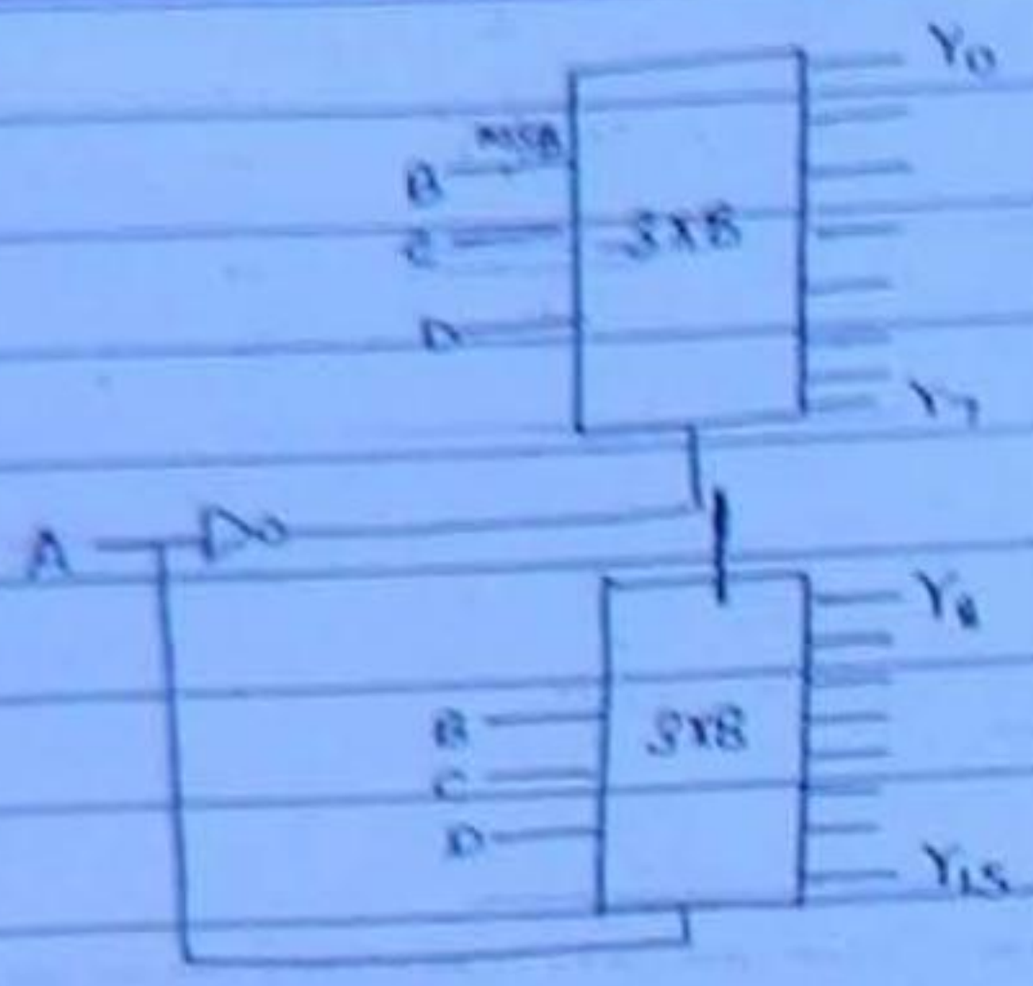

(84)

LectureNotes.in

LectureNotes.in

LectureNotes.in

ENCODER :-

⇒ Encoder is the combinational ckt which have many I/P and many O/P.

- Encoder is used to convert other code to Binary.
  - octal to Binary
  - Decimal to BCD
  - Hexadecimal to Binary

Octal to Binary Encoder :-

⇒ In normal encoder one of the I/P line is high and correspon Binary available at the O/P.

⇒ In priority encoder no. of I/P is high only highest priority no corresponding Binary is available at the O/P.

Truth table :-

I_{07}	I_6	I_5	I_4	I_3	I_2	I_1	I_0	Y_2	Y_1	Y_0
0	0	0	0	0	0	0	1	0	0	0
0	0	0	0	0	0	1	0	0	0	1
0	0	0	0	0	1	0	0	0	1	0
0	0	0	0	1	0	0	0	0	1	1
0	0	0	1	0	0	0	0	1	0	0
0	0	1	0	0	0	0	0	1	0	1
0	1	0	0	0	0	0	0	1	1	0
1	0	0	0	0	0	0	0	1	1	1

© Wiki Engineering www.raghul.org

logical expression :-

$Y_0 = I_1 + I_3 + I_5 + I_7$

$Y_1 = I_2 + I_3 + I_6 + I_7$

$Y_2 = I_4 + I_5 + I_6 + I_7$

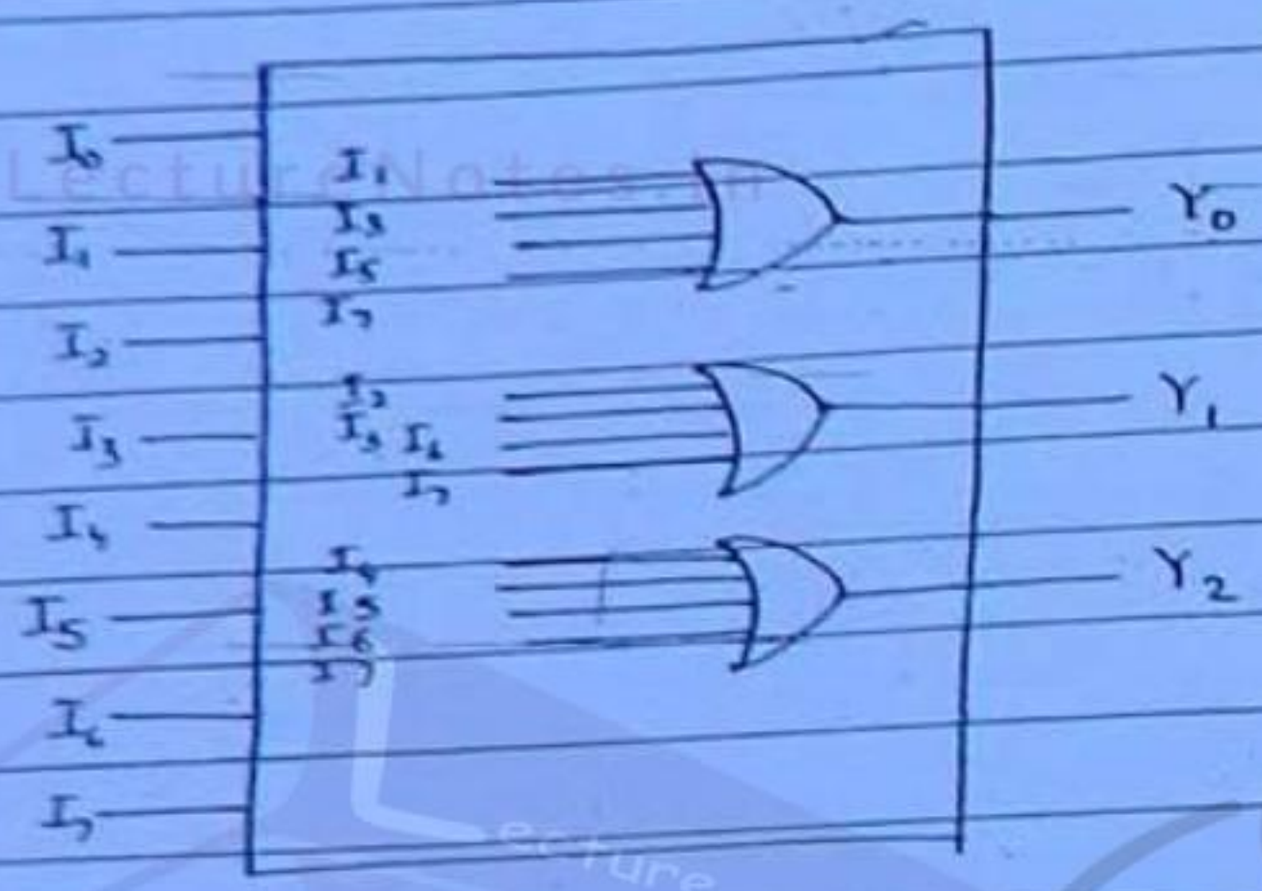

⇒ Decoder contains AND Gate.

⇒ DEMUX contains AND Gate

⇒ ENCODER contains OR Gate.

LectureNotes.in

FLIP-FLOP

DATE

(87)

⇒ It is basic memory element.

⇒ It can store 1 bit.

⇒ FF have two o/p which have complemented to each other

⇒ It have two stable state hence it is known as bistable multivibrator.

CONTENT :-

0. SR latch → NAND
   → NOR

1. SR FF	⇒ Ckts
2. JK FF	⇒ Truth table
3. D FF	⇒ characteristic table
4. T FF	⇒ characteristic equation
	⇒ Excitation table
	⇒ conversion from one to another
	⇒ simple ckt.

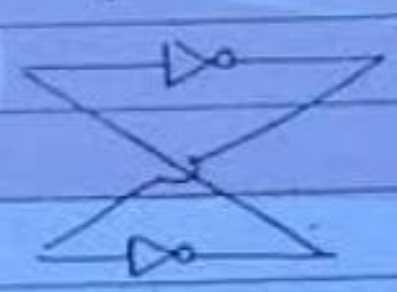

latch

⇒ using NOT gate the problem is, it have only one I/P then we use NAND or NOR gate instead of NOT gate.

⇒ FF is not only used for storing 1 bit but it also used for frequency divider.

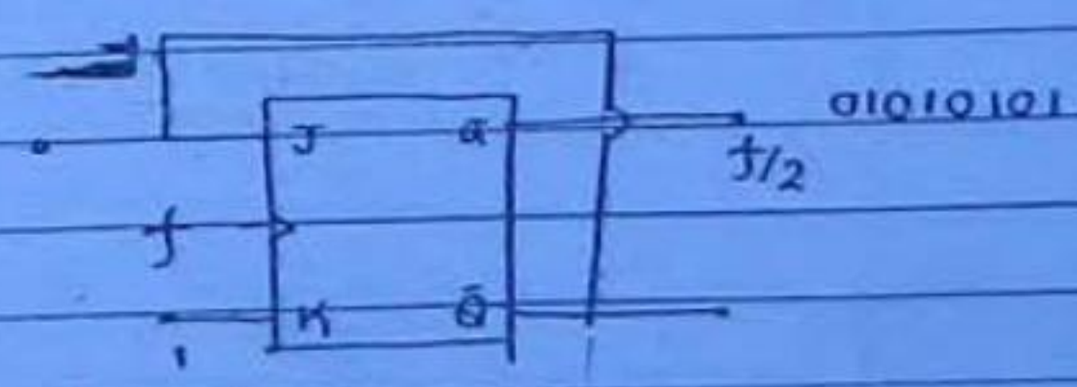

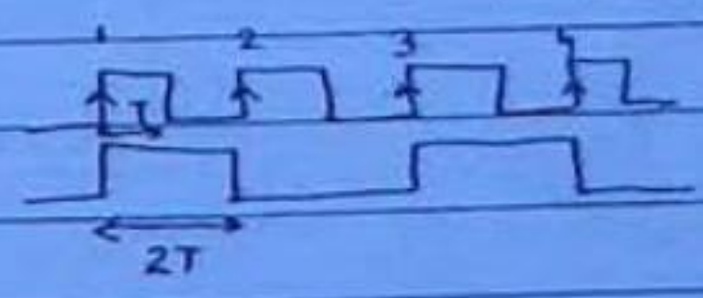

© Wiki Engineering

www.raghul.org

SR latch using NAND :-

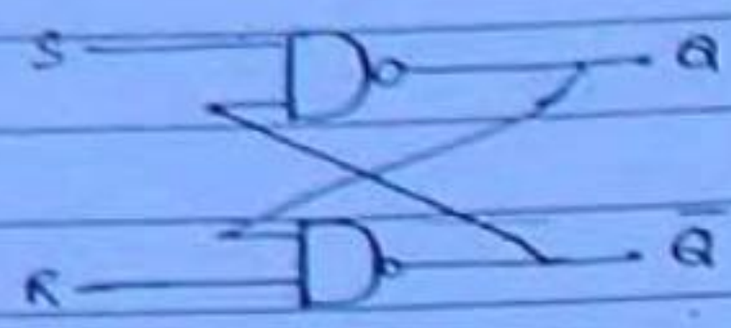

NAND :-

enable - 1.

Disable - 0

A B	Y
0 0	1
0 1	1
1 0	1
1 1	0

Truth table :-

S	R	Q
0	0	Invailid ($Q = \bar{Q} = 1$)
0	1	1
1	0	0
1	1	Previous state (no change)

⇒ In SR latch if both gates are enabled o/p remains same previous state and both are disable then o/p remains same invailid state.

SR latch using NOR gate :-

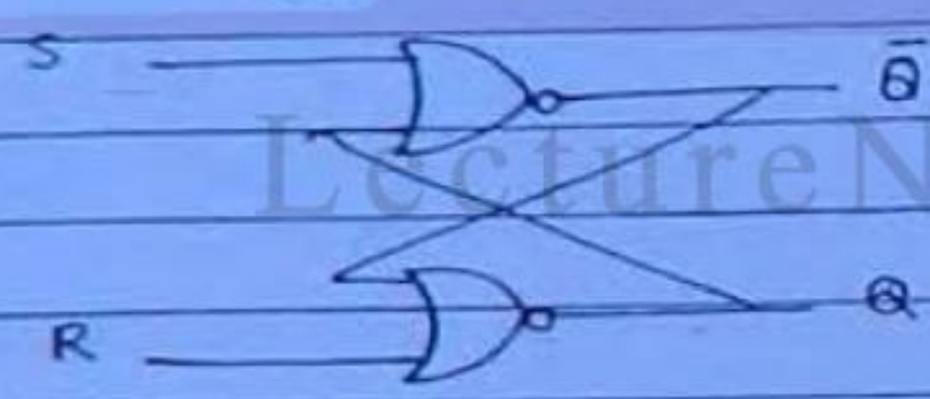

∵ NAND enable is 1 and disable is 0

and, in NOR - E = 0

D = 1.

⇒ then we change Q and $\bar{Q}$ position

Truth table :-

S	R	Q
0	0	Previous state.
0	1	0
1	0	1
1	1	invalid ($Q = \bar{Q} = 0$)

AB	Y
0 0	1
0 1	0
1 0	0
1 1	0

⇒ SR latch is used to eliminate switch bouncing.

⇒ Bouncing means vibration of switches when ON or OFF

© Wiki Engineering

www.raghul.org

SR Flip Flop :-

S = Set

R = Reset

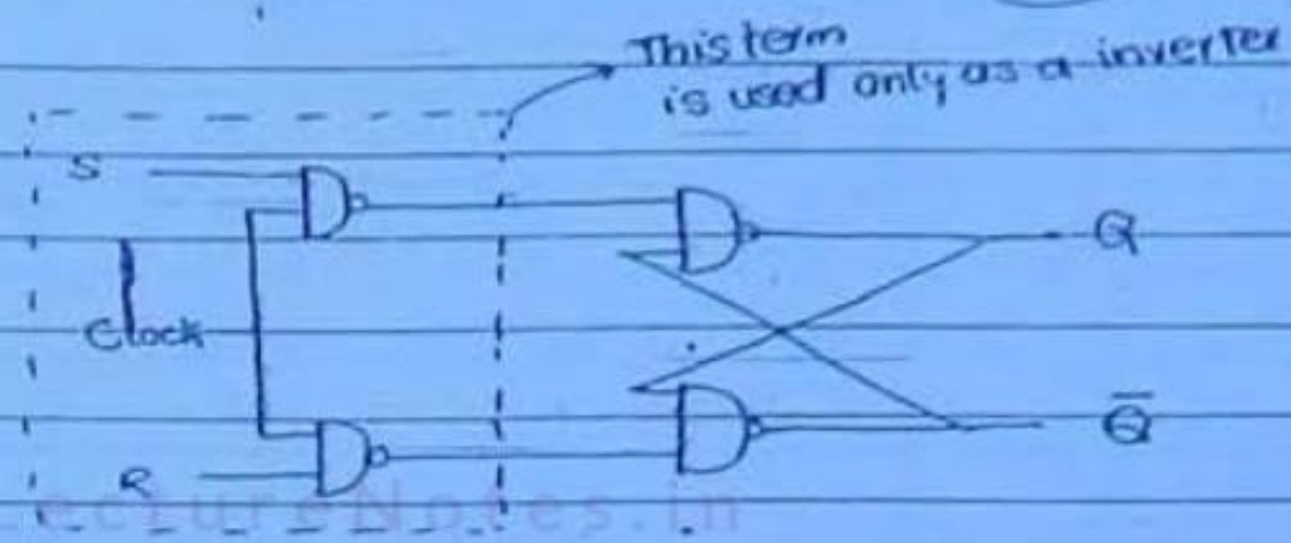

Truth table :-

Clock	S	R	Q_{n+1}	
0	*	*	Previous state. (Q_n)	→ Hold state
1	0	0	Q_n	
1	0	1	0 → Reset	
1	1	0	1 → Set	
1	1	1	invailid. → unused	

S	R	Q_{n+1}
0	0	Q_n
0	1	0
1	0	1
1	1	invailid.

← very imp.

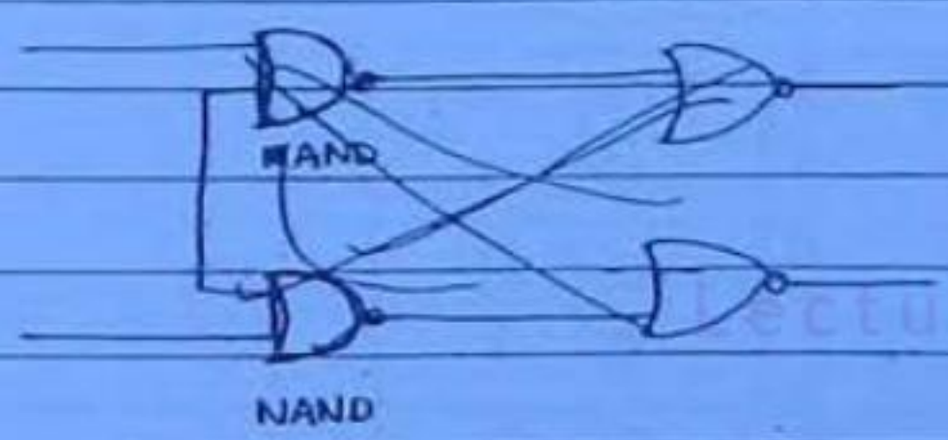

⇒ Truth table is same as for NAND gate SR FF.

© Wiki Engineering
www.raghul.org
LectureNotes.in

Characteristic table :-

S	R	Q_n	Q_{n+1}
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	x
1	1	1	x

S \ RQ_n	$\bar{R}\bar{Q}_n$	$\bar{R}Q_n$	RQ_n	$R\bar{Q}_n$
$\bar{S}$		1		
S	1	1	x	x

S	R	Q_{n+1}
0	0	Q_n
0	1	0
1	0	1
1	1	invailid

$Q_{n+1} = S + \bar{R}Q_n$

$\boxed{Q_{n+1} = S + \bar{R}Q_n}$ and $S \cdot R = 0$ —— (1)

⇒ since $S = 1$, $R = 1$ the o/p is invailid because $S \cdot R = 1$ not satisfy the above condition.

Excitation table :-

Q_n	Q_{n+1}	S	R
0	0	0	*
0	1	1	0
1	0	0	1
1	1	x	0

⇒ Disadvantage of SR FF is invailid state present when $S = 1$ and $R = 1$.

⇒ To avoid this JK FF is used.

© Wiki Engineering
www.raghul.org

JK Flip Flop :-

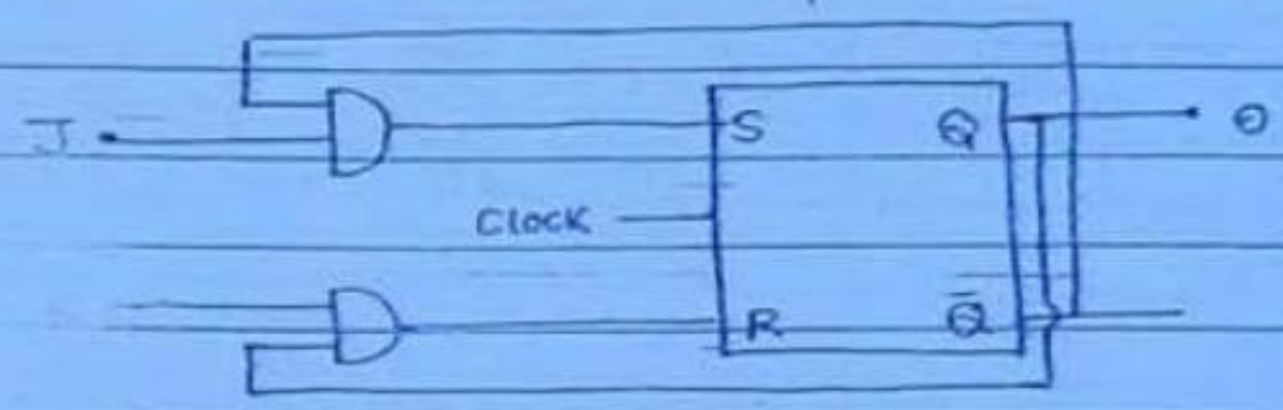

$S = J\bar{Q}$

$R = KQ$

LectureNotes.in

Clock	J	K	Q_{n+1}
0	x	x	Q_n
1	0	0	Q_n
1	0	1	0
1	1	0	1
1	1	1	$\bar{Q}_n$

J	K	Q_{n+1}	
0	0	Q_n	Hold
0	1	0	Reset
1	0	1	Set
1	1	$\bar{Q}_n$	Toggle.

J-K FF using NAND gate :-

LectureNotes.in

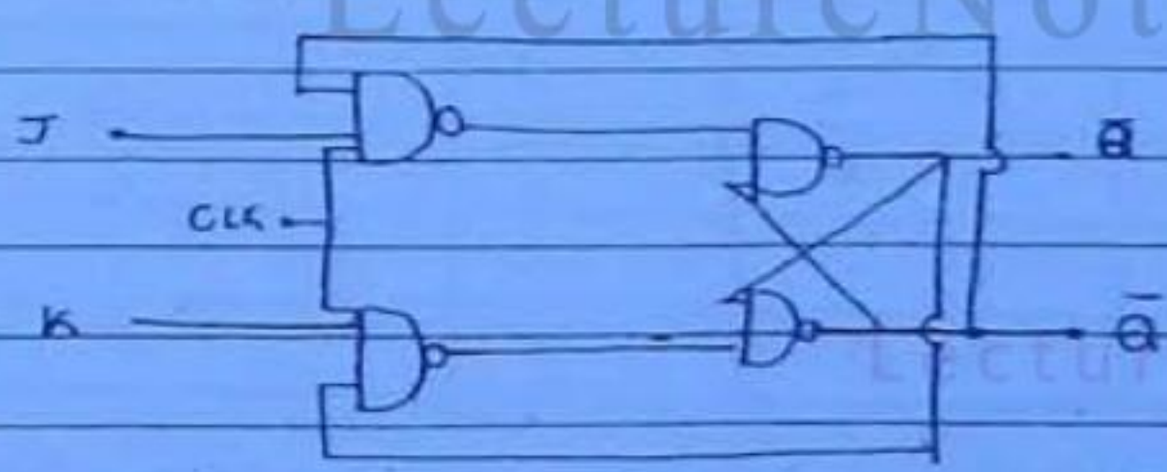

J-K FF using NOR gate :-

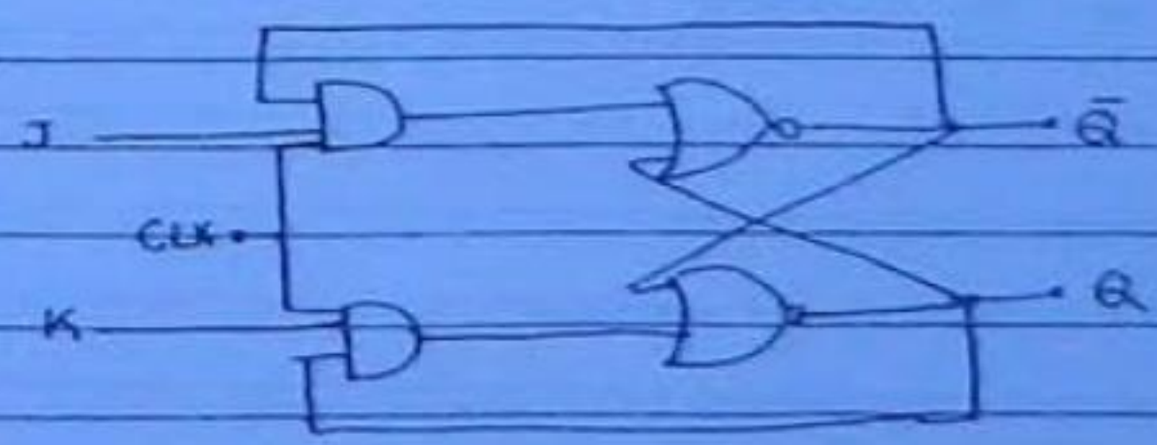

© Wiki Engineering

www.raghul.org

JK FF characteristic table :-

J	K	Q_n	Q_{n+1}
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	0

Logical Expression :-

minimization :-

J \ $\bar{K}\bar{Q}_n$	$\bar{K}Q_n$	KQ_n	$K\bar{Q}_n$
$\bar{J}$	1		
J	1	1	1

$$Q_{n+1} = J\bar{Q}_n + \bar{K}Q_n$$

$$\boxed{Q_{n+1} = J\bar{Q}_n + \bar{K}Q_n}$$

Exitation table :-

Q_n	Q_{n+1}	J	K
0	0	0	x
0	1	1	x
1	0	x	1
1	1	x	0

⇒ Drowback in JK ff is Race arround condition which is eliminated in D flipflop.

© Wiki Engineering

www.raghul.org

D-Flip Flop :-

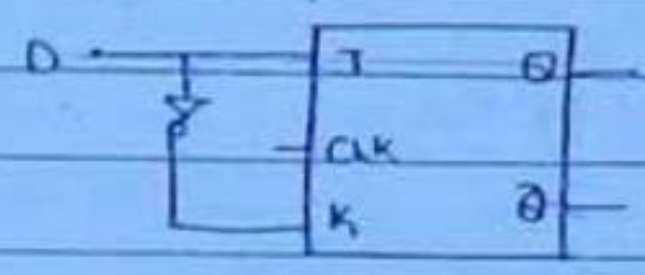

$J = D$

$JK = \bar{D}$

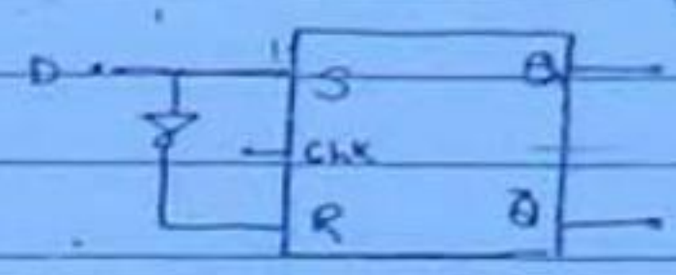

$S = D$

$R = \bar{D}$

Truth table :-

CLK	D	Q_{n+1}
0	*	Q_n
1	0	0
1	1	1

D	Q_{n+1}
0	0
1	1

Characteristic table :-

D	Q_n	Q_{n+1}
0	0	0
0	1	0
1	0	1
1	1	1

$\boxed{Q_{n+1} = D}$ → Therefore it is also called transparent latch

Excitation table :-

Q_n	Q_{n+1}	D
0	0	0
0	1	1
1	0	0
1	1	1

LectureNotes.in

Important :-

95

	J	K	Q_{n+1}
SR-FF	0	0	Q_n
	0	1	0
	1	0	1
	1	1	Q_n

0, 1 → D-FF

Q_n, Q_n → T-FF

LectureNotes.in

⇒ ∵ All tables are inside JK FF therefore it is also called as ~~JK FF~~ universal flip flop.

Excitation table :-

Q_n	Q_{n+1}	S	R	J	K	D	T
0	0	0	x	0	x	0	0
0	1	1	0	1	x	1	1
1	0	0	1	x	1	0	1
1	1	x	0	x	0	1	0

FF → Flip Flop - one bit storing element

$Q_{n+1} = S + \bar{R} Q_n$ ⇒ SR = Set Reset

$Q_{n+1} = J\bar{Q}_n + \bar{K} Q_n$ ⇒ JK = name of person who give the IC

$Q_{n+1} = D$ ⇒ D = Delay element

$Q_{n+1} = T \oplus Q_n$ ⇒ T = Toggle

LectureNotes.in

Toggle mode of JK :-

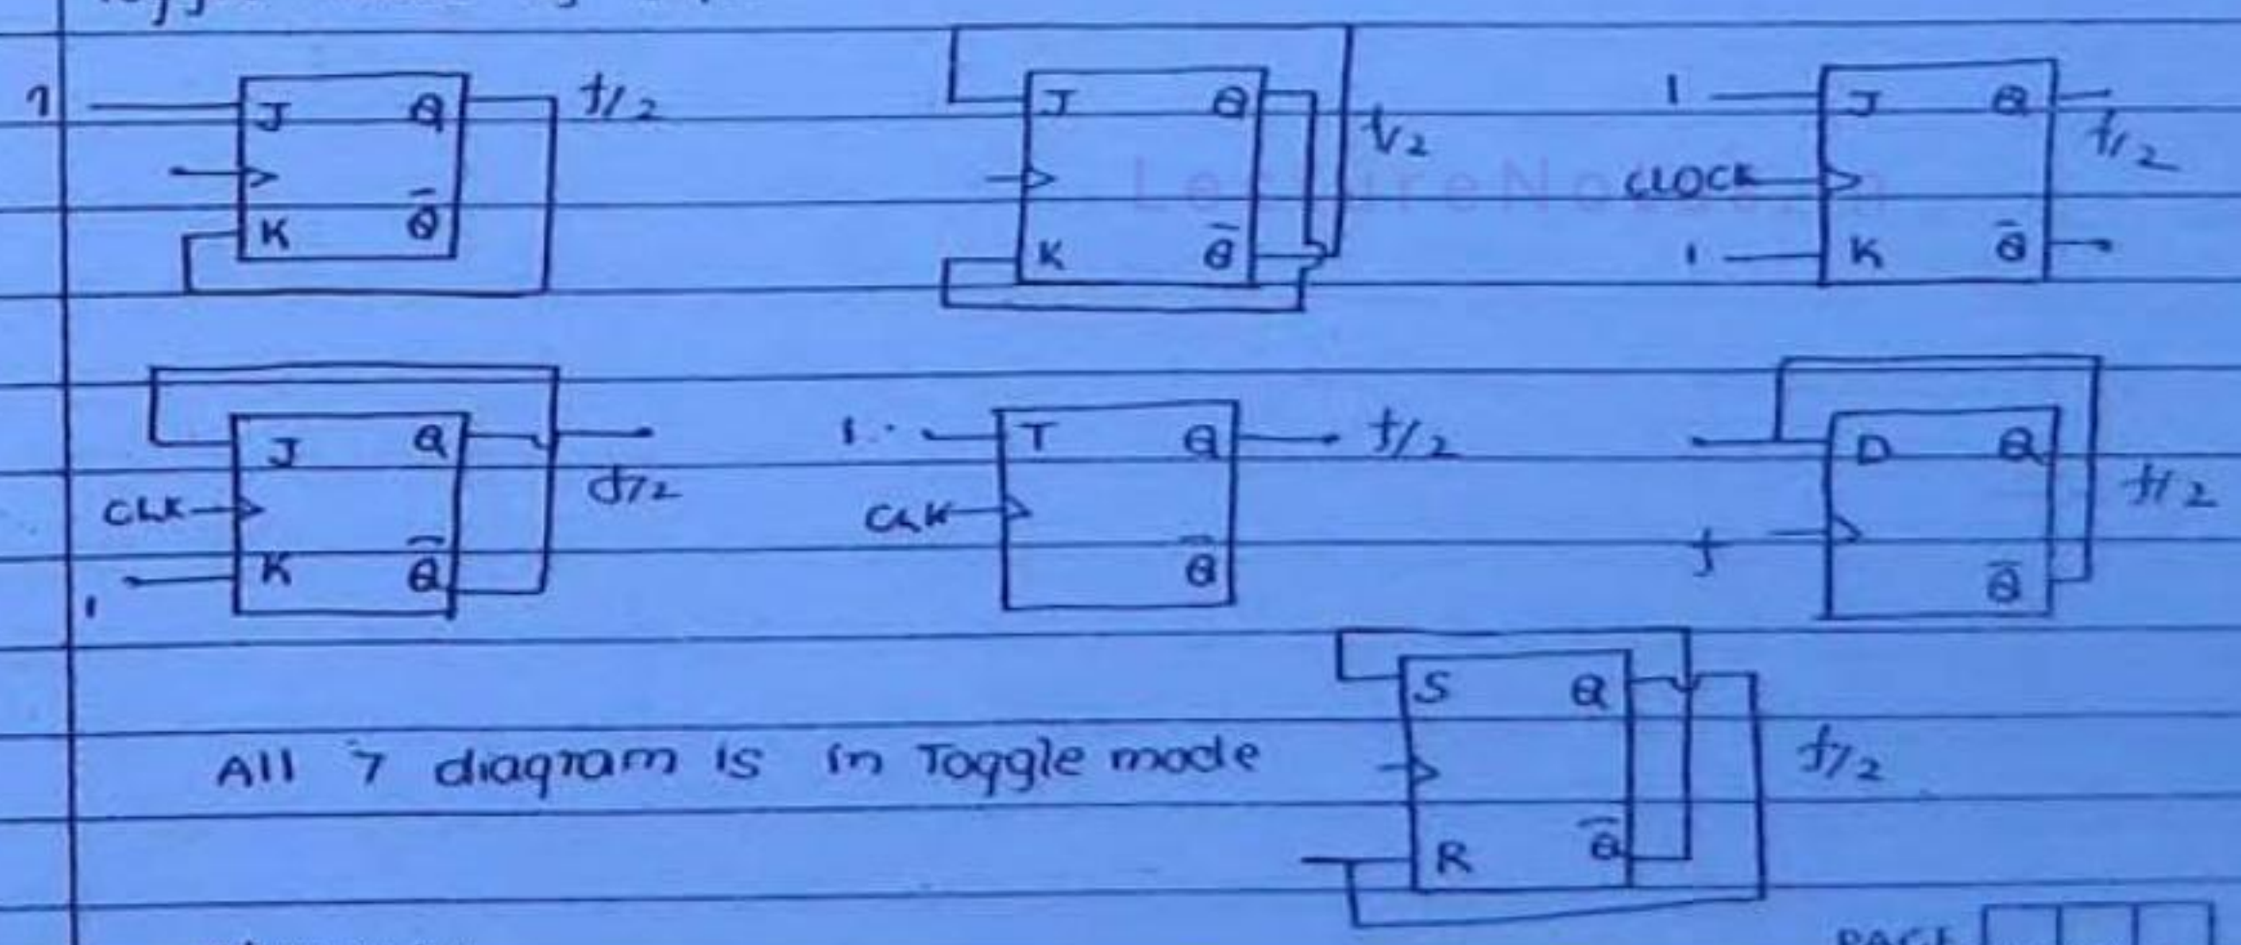

All 7 diagram is in Toggle mode

© WikiEngineering
www.raghul.org

Trigger

- Level trigger

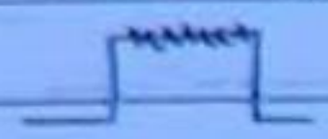

- Edge Trigger
  - +ive edge trigger
    - ⇒ 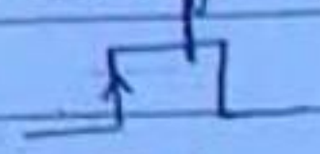
      0 → 1
    - ⇒ 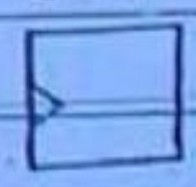
  - -ive edge trigger
    - ⇒ 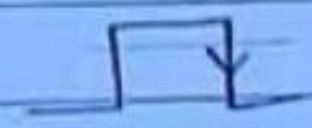
      1 → 0
    - ⇒ 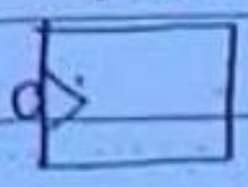

⇒ In level trigger ckt, o/p may changes many time in single clock

⇒ In edge trigger, o/p may change only ones in single pulse.

⇒ 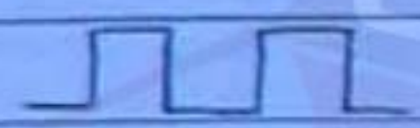
i/p

⇒ Differentiator ⇒
o/p

LectureNotes.in

Race Arround condition :-

⇒ occurs in JK flip-flop (Draw back)

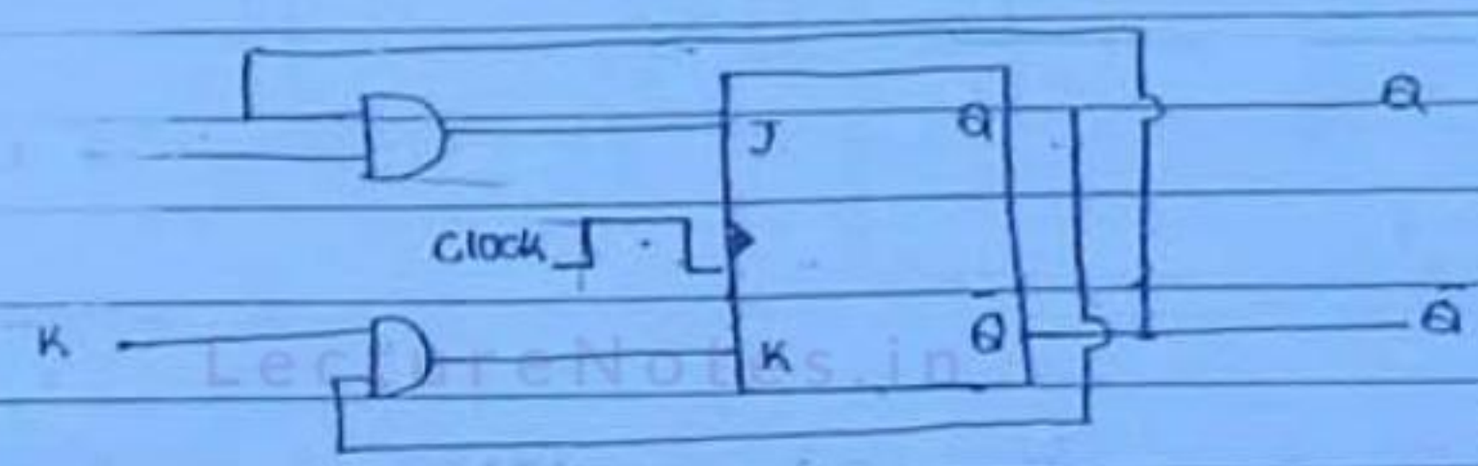

if t_{pw} = 10nsec

t_{pFF} = 1nse. Then :-

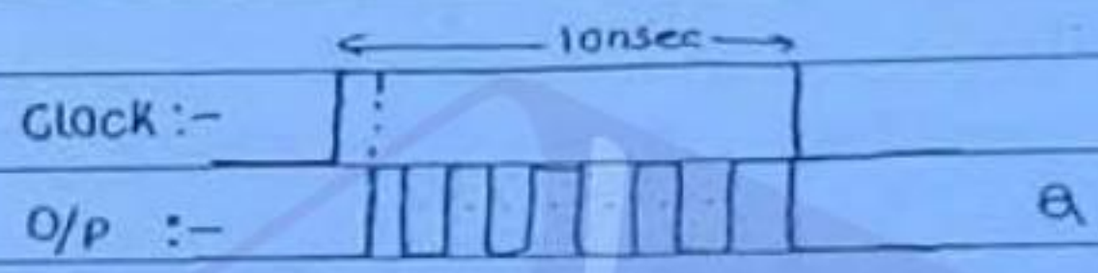

⇒ Then. To remove race arround condition :-

~~$t_{pdff} << t_{pdclock}$~~ $\boxed{t_{pdclock} << t_{pdFF}}$

⇒ In JK FF RAC occurs when J = K = 1. then ~~to~~ and t_{pdff} is ~~more~~ less than that of $t_{pdclock}$. and therefore the O/P is changes several time in single clock pulse.

Condition to remove Race arround condition :-

(i) $t_{pdclock} << t_{pdFF}$

(ii) Use of Master slave flipflop.

(iii) To increase the propagation delay of JK flip flop.

© Wiki Engineering
www.raghul.org

Master slave Flip Flop :-

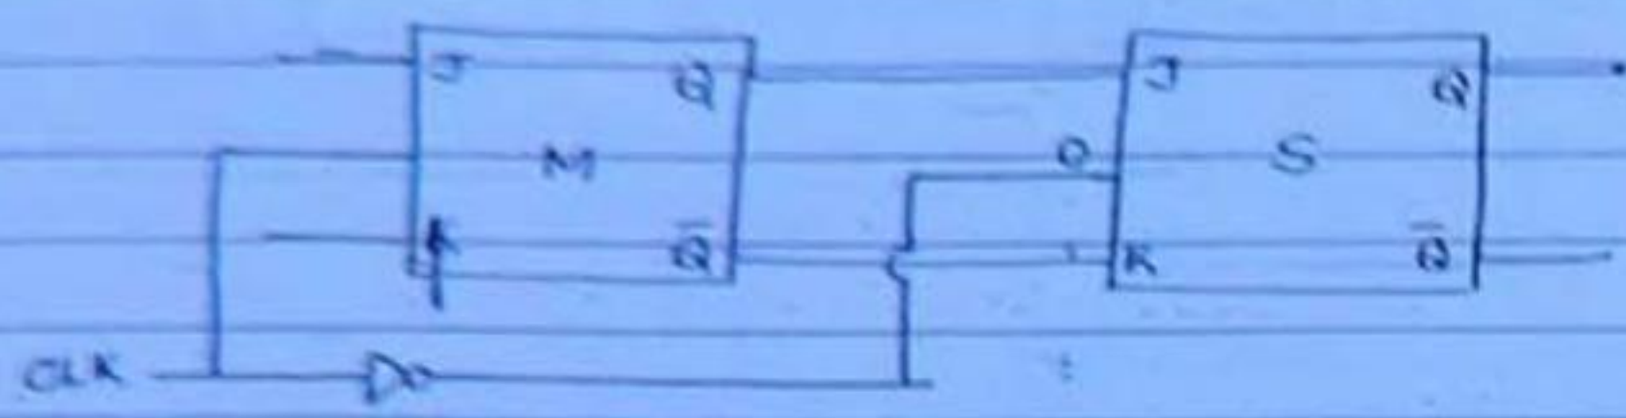

LectureNotes.in

⇒ Since the I/p of slave never go to (1, 1) therefore in Master slave the Race arround condition is removed.

⇒ Since I/p of slave is $J = Q$ and $K = \bar{Q}$ therefore it is always (1, 0) or (0, 1).

⇒ since race arround condition occurs only when the I/p is (1, 1).

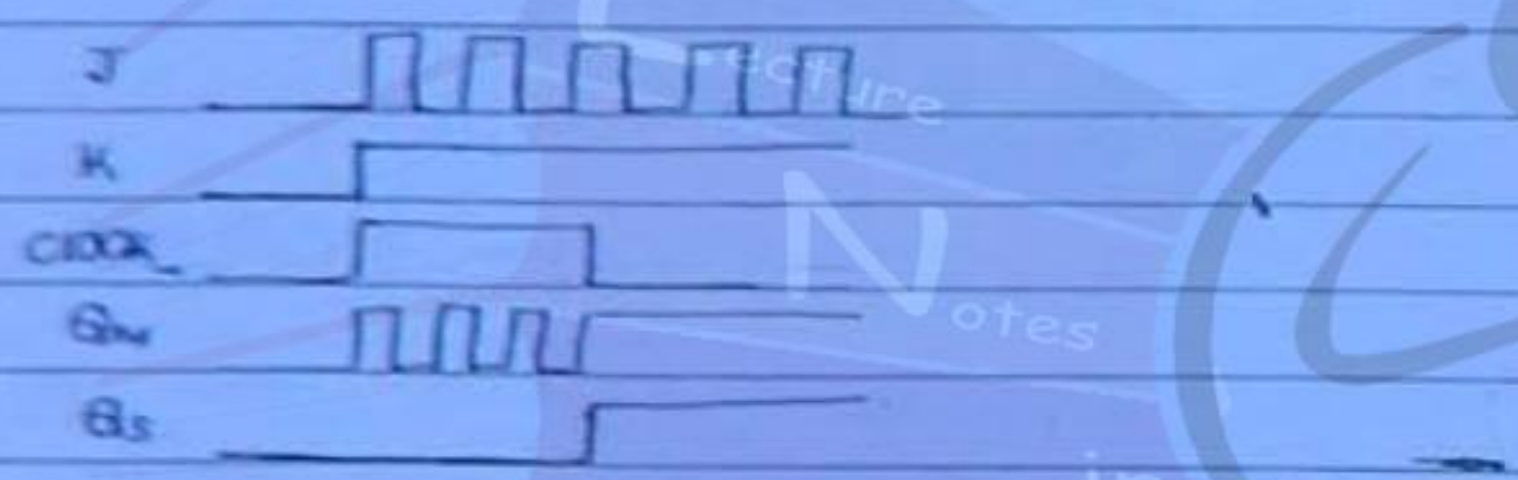

⇒ In M-S FF, o/p is change only when slave o/p is changing

⇒ In M-S FF, Master is level triggered and edge is slave is edge triggered.

LectureNotes.in

Conversion of one ff to other FF :-

Procedure :-

(99)

⇒ Required FF characteristic table.

⇒ Available FF excitation table.

⇒ Write logical expression for excitation.

(i) JK-FlipFlop to D-Flip Flop :-

D	Q_n	Q_{n+1}	J	K
0	0	0	0	x
0	1	0	x	1
1	0	1	1	x
1	1	1	x	0

⇒ write the logical expression for J and K :-

J =

D \ Q_n		
$\bar{D}$		x
D	1	x

K =

D \ Q_n		
$\bar{D}$	x	1
D	x	

$J = D$ $K = \bar{D}$

⇒ Implementation :-

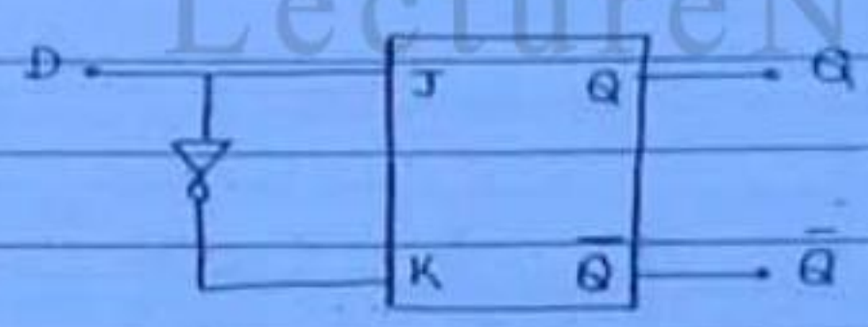

LectureNotes.in

Important :-

(A) SR to :- (10)

(i) JK :- $S = J\bar{Q}$

$R = KQ$

(ii) D :- $S = D$

$R = \bar{D}$

(iii) T :- $S = T\bar{Q}$

$R = TQ$

(B) JK to :-

(i) SR :- $J = S$

$K = R$

(ii) D :- $J = D$

$K = \bar{D}$

(iii) T :- $J = T$

$K = T$

(C) D to :-

(i) SR : $D = S + \bar{R}Q$

(ii) JK : $D = J\bar{Q} + \bar{K}Q$

(iii) T : $D = T \oplus Q$

(D) T to :-

(i) SR : $T = S\bar{Q} + RQ$

(ii) JK : $T = J\bar{Q} + KQ$

(iii) D : $T = D \oplus Q$

LectureNotes.in

(b) JK FF to SR FF :-

S	R	Q_n	Q_{n+1}	J	K
0	0	0	0	0	x
0	0	1	1	x	0
0	1	0	0	0	x
0	1	1	0	x	1
1	0	0	1	1	x
1	0	1	1	x	0
1	1	0	x	x	x
1	1	1	x	x	x

(101)

0 0	0 x
0 1	1 0
1 0	x 1
1 1	x 0

J ⇒

S \ RQ_n				
$\bar{S}$		x	x	
S	1	x	x	x

K ⇒

S \ RQ_n	$R\bar{Q}_n$	$\bar{R}Q_n$	RQ_n	$R\bar{Q}_n$
	x		1	x
	x		x	x

J = S K = R

implementation:-

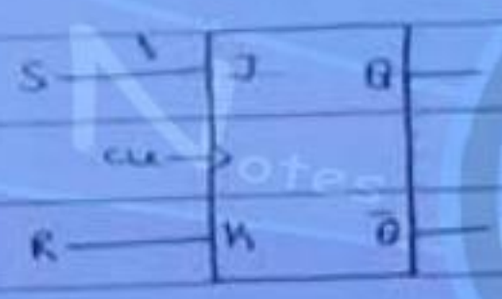

(iii) JK FF to T FF :-

T	Q_n	Q_{n+1}	J	K
0	0	0	0	x
0	1	1	x	0
1	0	1	1	x
1	1	0	x	1

J :-

T \ Q_n	$\bar{Q}_n$	Q_n
$\bar{T}$		x
T	1	x

K :-

T \ Q_n	$\bar{Q}_n$	Q_n
$\bar{T}$	x	
T	x	1

J = T , K = T

implementation:-

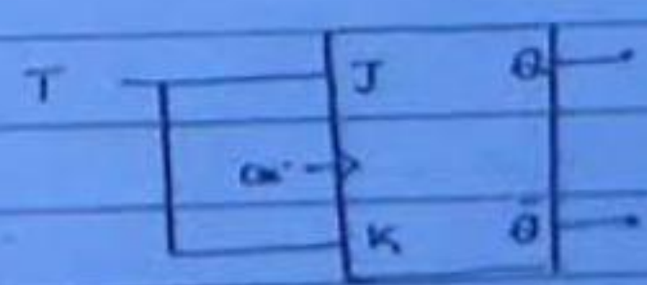

LectureNotes.in

© Wiki Engineering
www.raghul.org

Q_n	Q_{n+1}	S	R
0	0	0	x
0	1	1	0
1	0	0	1
1	1	x	0

(iv) SR to JK FF :-

(102)

J	K	Q_n	Q_{n+1}	S	R
0	0	0	0	0	x
0	0	1	1	x	0
0	1	0	0	0	x
0	1	1	0	0	1
1	0	0	1	1	0
1	0	1	1	x	0
1	1	0	1	1	0
1	1	1	0	0	1

S :-

J \ KQ_n	$\bar{K}\bar{Q}_n$			$K\bar{Q}_n$
$\bar{J}$		x		
J	1	x		1

R :-

J \ KQ_n			KQ_n	
J	x		1	x
$\bar{J}$			1	

$S = J\bar{Q}_n$

$R = JKQ_n$

Implementation :-

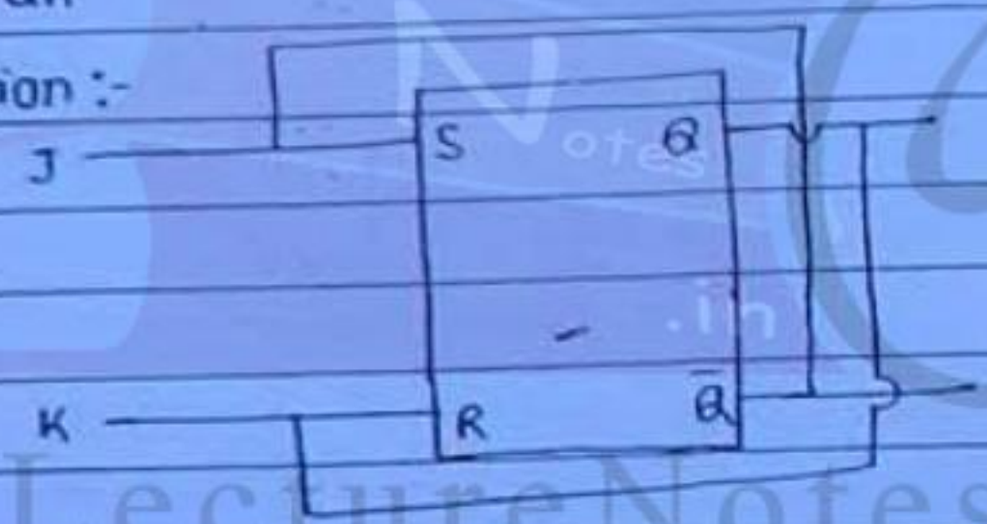

(v) SR FF to D FF :-

D	Q_n	Q_{n+1}	S	R
0	0	0	0	x
0	1	0	0	1
1	0	1	1	0
1	1	1	x	0

S :-

D \ Q_n		
$\bar{D}$		
D	1	x

R :-

D \ Q_n		
$\bar{D}$	x	1
D		

$R = \bar{D}$

LectureNotes.in

implementation :-

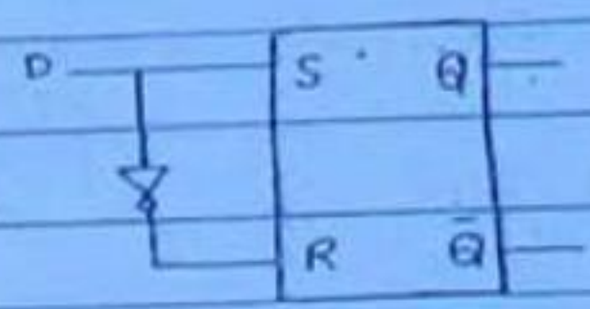

103

(vi) SR to T FF :-

T	Q_n	Q_{n+1}	S	R
0	0	0	0	X
0	1	1	X	0
1	0	1	1	0
1	1	0	0	1

S :-

T \ Q_n	$\bar{Q}_n$	$\bar{Q}$
$\bar{T}$		X
T	1	

R :-

T \ Q_n	$\bar{Q}_n$	Q_n
$\bar{T}$	X	
T		1

$S = T\bar{Q}_n$ $\qquad$ $R = TQ_n$

Implementation :-

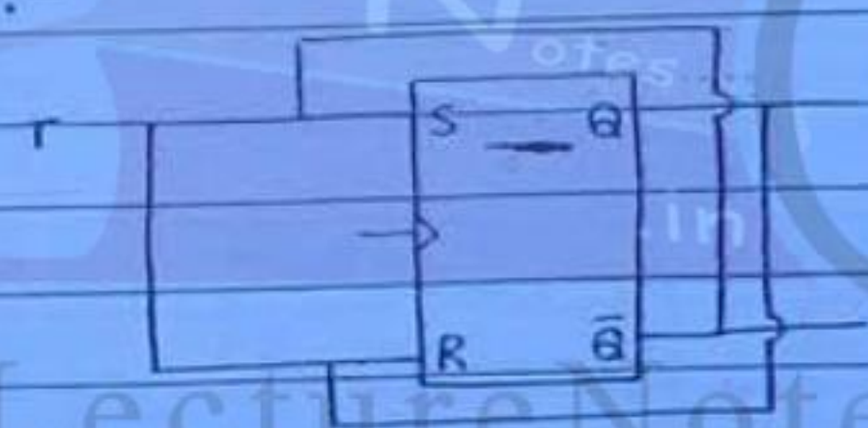

(vii) D FF to SR FF :-

S	R	Q_n	Q_{n+1}	D
0	0	0	0	0
0	0	1	1	1
0	1	0	0	0
0	1	1	0	0
1	0	0	1	1
1	0	1	1	1
1	1	0	X	X
1	1	1	X	X

D :

S \ RQ_n	$\bar{S}$			
S	1	1	X	X

$D = S + R\bar{Q}_n$

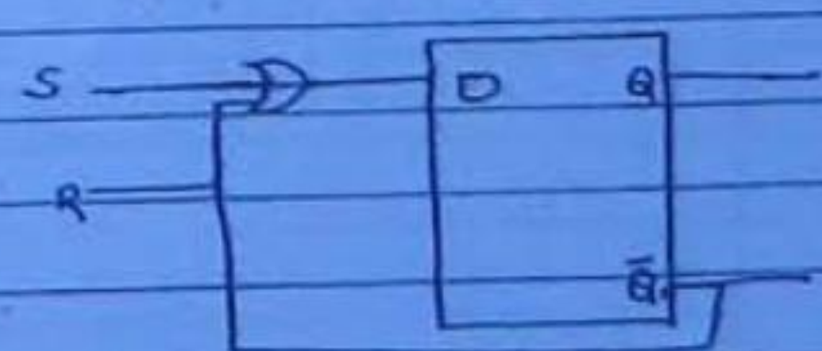

LectureNotes.in

(viii) D FF to JKFF :-

J	K	Q_n	Q_{n+1}	D
0	0	0	0	0
0	0	1	1	1
0	1	0	0	0
0	1	1	0	0
1	0	0	1	1
1	0	1	1	1
1	1	0	1	1
1	1	1	0	0

J \ KQ_n	$\bar{K}\bar{Q}$	$\bar{K}\bar{Q}$	KQ	$K\bar{Q}$
D ⇒ $\bar{J}$		1		
J	1	1	0	1

$D = J\bar{Q} + \bar{K}Q$

Implementation :-

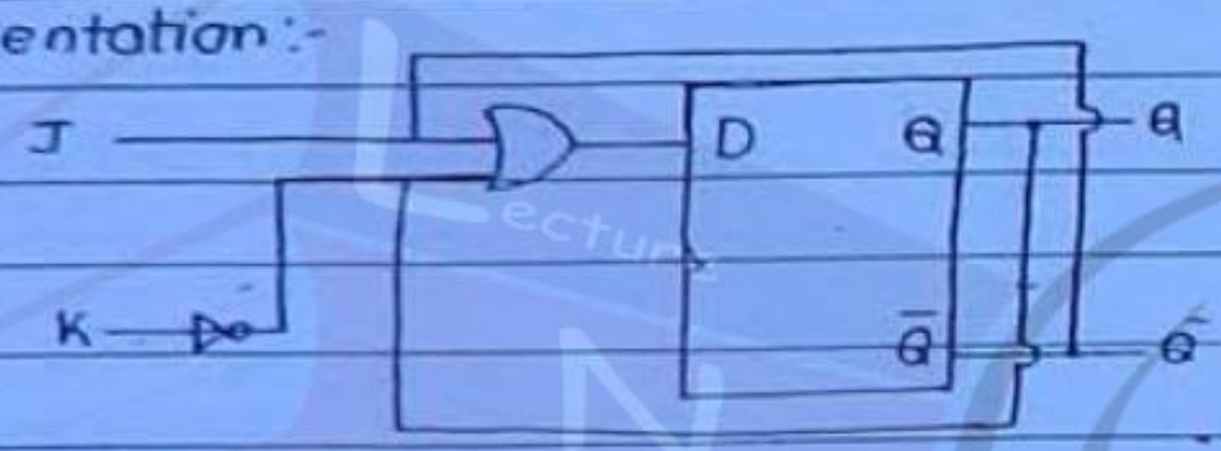

(ix) D-FF to T FF :-

T	Q_n	Q_{n+1}	D
0	0	0	0
0	1	1	1
1	0	1	1
1	1	0	0

Q_{n+F} \ Q_n	$\bar{Q}$	Q
$\bar{T}$		1
T	1	

$D = \bar{T}Q + T\bar{Q}$

Implementation :-

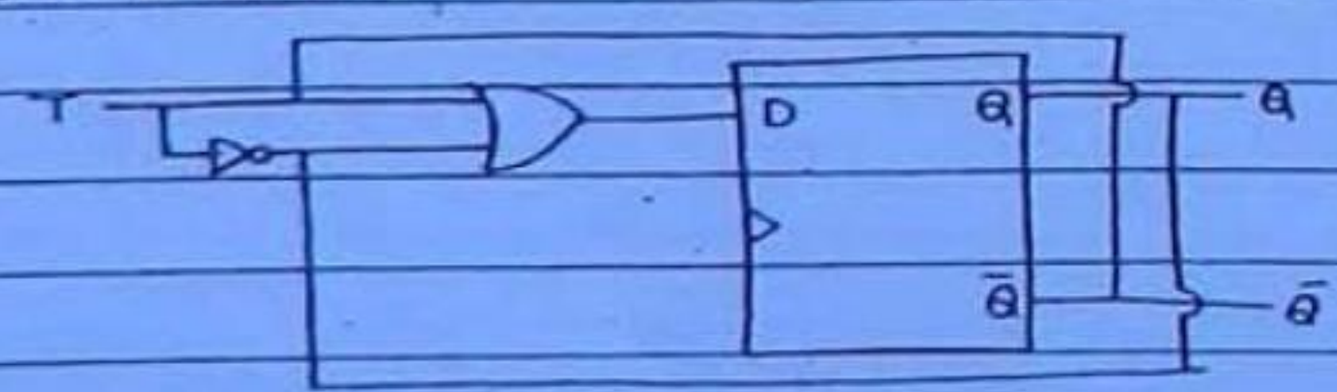

© Wiki Engineering
www.raghul.org

(X) T FF to SR FF :-

S	R	Q_n	Q_{n+1}	T
0	0	0	0	0
0	0	1	1	0
0	1	0	0	0
0	1	1	0	1
1	0	0	1	1
1	0	1	1	0
1	1	0	x	x
1	1	1	x	x

T :-

S \ RQ	$\bar{R}\bar{Q}$	$\bar{R}Q$	RQ	$R\bar{Q}$
$\bar{S}$			1	
S	1		x	x

$T = RQ + S\bar{Q}$

Implementation:-

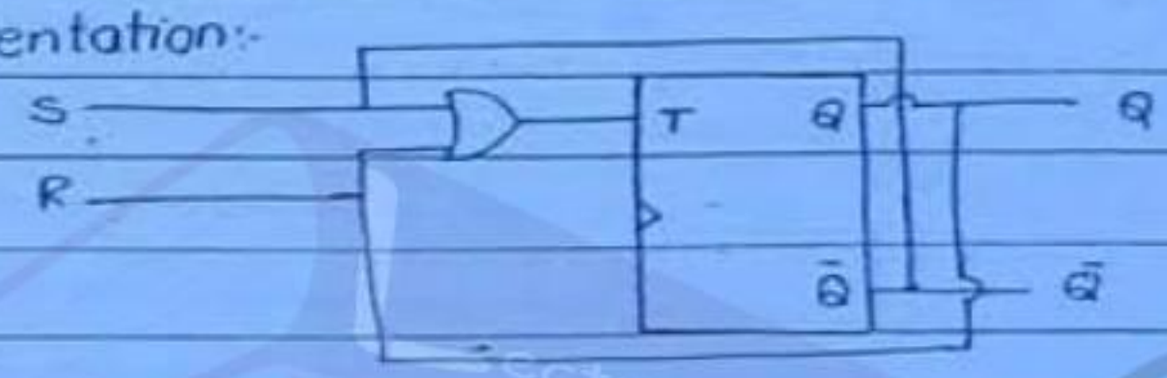

(XI) T FF to JK FF :-

J	K	Q_n	Q_{n+1}	T
0	0	0	0	0
0	0	1	1	0
0	1	0	0	0
0	1	1	0	1
1	0	0	1	1
1	0	1	1	0
1	1	0	1	1
1	1	1	0	1

T :-

J \ KQ_n	$\bar{K}\bar{Q}$	$\bar{K}Q$	KQ	$K\bar{Q}$
$\bar{J}$			1	
J	1		1	1

$T = J\bar{Q} + KQ$

Implementation :-

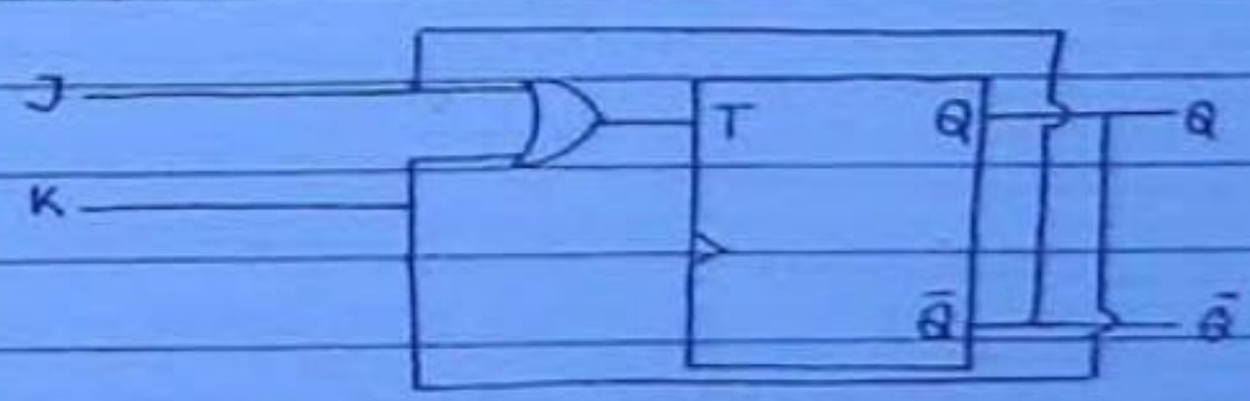

© Wiki Engineering

(iii) T-FF to D-FF :-

LectureNotes.in

D	Q_n	Q_{n+1}	T
0	0	0	0
0	1	0	1
1	0	1	1
1	1	1	0

T :-

D \ Q	$\bar{Q}$	Q
$\bar{D}$		1
D	1	

$T = D\bar{Q} + \bar{D}Q$.

LectureNotes.in

LectureNotes.in

DATE

* latch.	Flip Flop.
⇒ level triggered	⇒ Edge triggered.
⇒ Asynchronous ckt	⇒ Synchronous ckt.
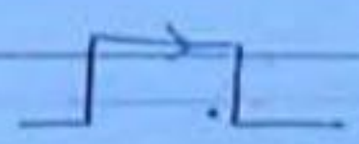	

(109)

⇒ Setup time :-

The min. time required to keep I/P at proper level before ally apply clock.

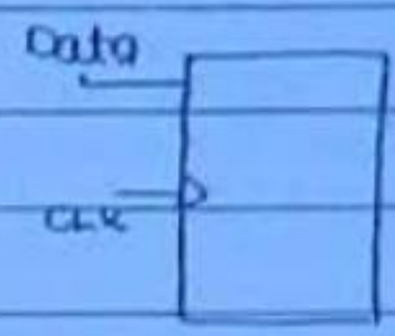

Note :- Any ff we give Data first th ~~the~~ we apply clk.

⇒ Hold time :-

The min. time required to keep I/P is same level after applying clock.

LectureNotes.in

☆ REGISTER :-

⇒ Register are used to store group of bits. (108)

⇒ To store n bit n FF are cascaded in register.

⇒ Register are four type (Depending on I/P and O/P) :-

(i) SISO (Serial in serial out).

(ii) SIPO (most Imp).

(iii) PISO

(iv) PIPO

⇒ Depending on application the register are two type:-

(i) Shift register

(ii) Storage register

(A) SISO (Serial in Serial out) :-

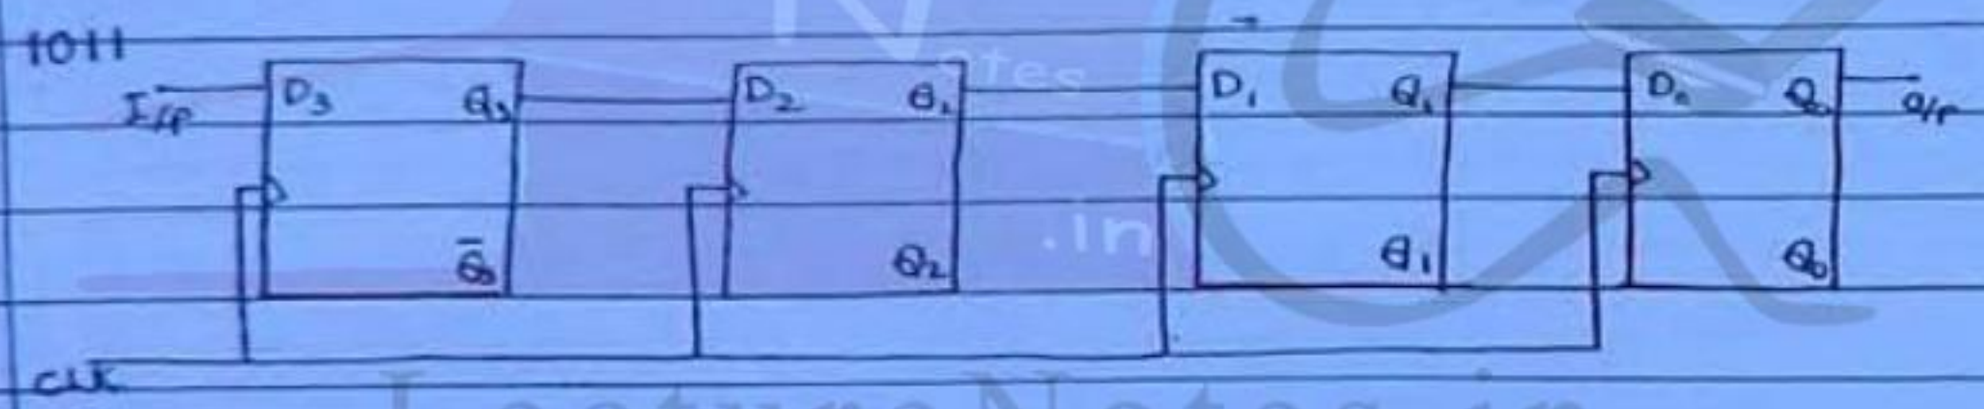

Data	Q_3 Q_2 Q_1 Q_0	CLK.
1011	0 0 0 0	0
	1 0 0 0	1
	1 1 0 0	2
	0 1 1 0	3
	1 0 1 1	4

⇒ For serial in register the n bit data storage requires n clock pulse.

⇒ In SISO register to store n bit data is require n clock pulse.

⇒ SISO register used to provide n clock pulse delay to I/P data.

$$\boxed{\text{delay} = n\,T_{CLK}}$$

© Wiki Engineering Classmate

www.rahul.org

⇒ To provide n bit data serially out it requires (n-1) clock pulse.

(B) SIPO (Serial in parallel out) :-

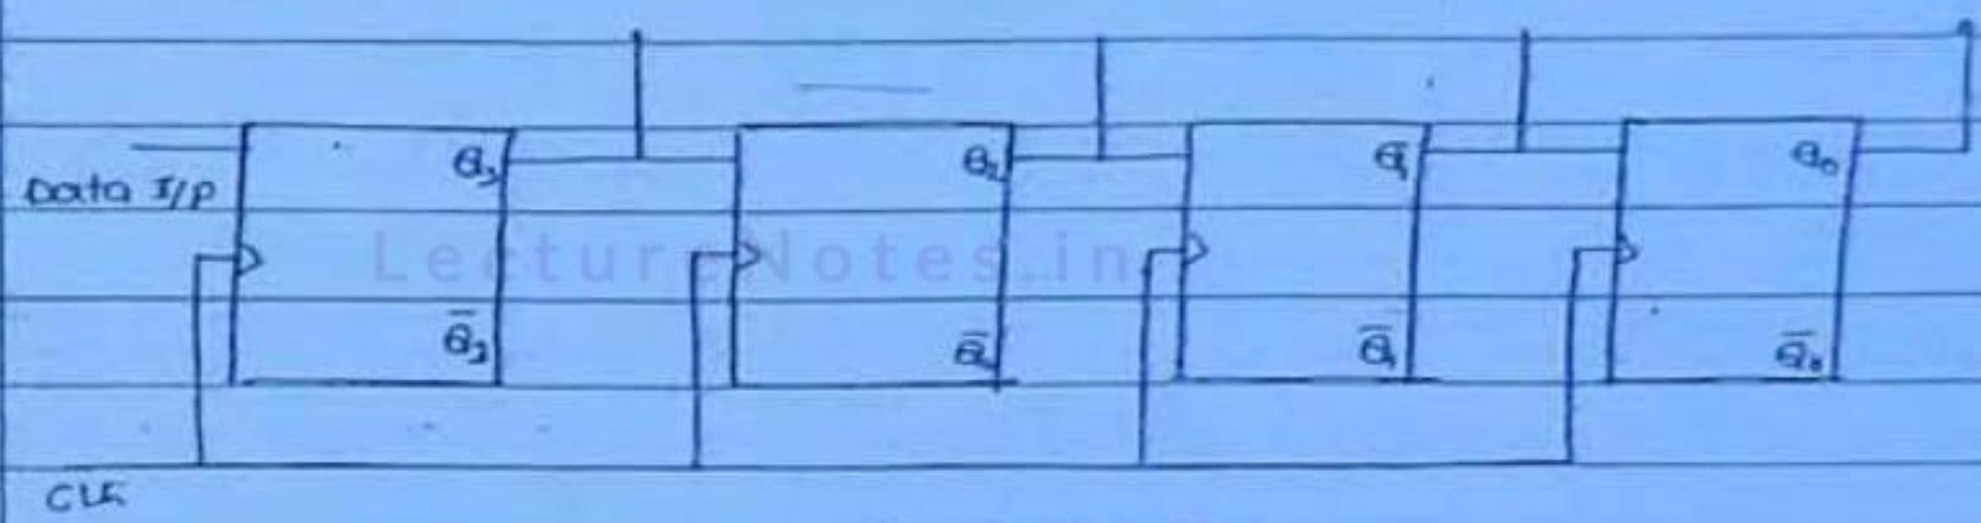

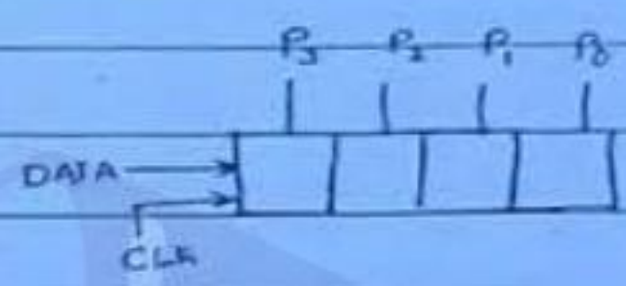

⇒ In SIPO register to provide n bit data serially in it requires n clock pulse and provide parallel o/p it requires 0 clk pulse required.

⇒ It is used to serial to parallel converter.

⇒ SIPO is used to convert Temporial code to spacial code.

⇒ Slow to fast converter.

serial . t =

Parallel = Spacial code

Q:- The ckt shown in the fig. if 4 bit SIPO register which in initially loaded with 1010. If ~~stare~~ three clk pulses applied then the data if the system is.

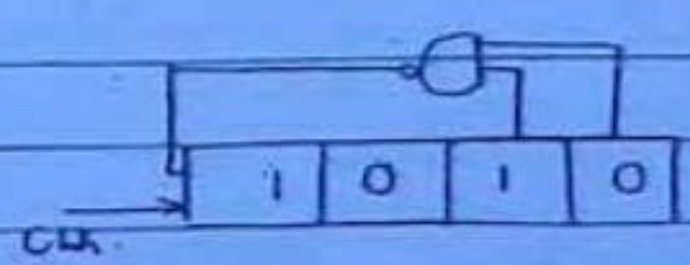

(a) 1010
(b) 1101
(c) 1111
(d) 0000

© Wiki Engineering www.raghul.org

Q:-

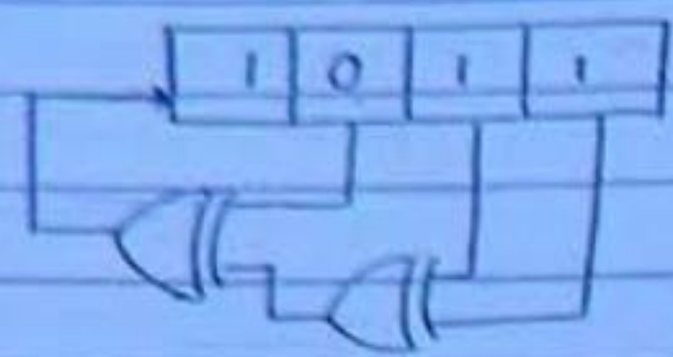

(a) 4
✓(b) 7 (110)
(c) 11
(d) 15

Initially loaded 1011. if CLK pulse applied continuously after how many CLK pulse again the data become 1010.

Sol: o/p of 3 variable x-OR is 1 if no. of 1's is odd.

CLK	Q_3	Q_2	Q_1	Q_0	
1	0	1	0	1	
2	0	0	1	0	
3	1	0	0	1	
4	1	1	0	0	
5	1	1	1	0	
6	0	1	1	1	
7	0	0	1	1	✓ after 7-clock
8	0	0	0	1	
9	1	0	0	0	
10	0	1	0	0	
11	1	0	1	0	

(c) PISO (Parallel in serial out) :-

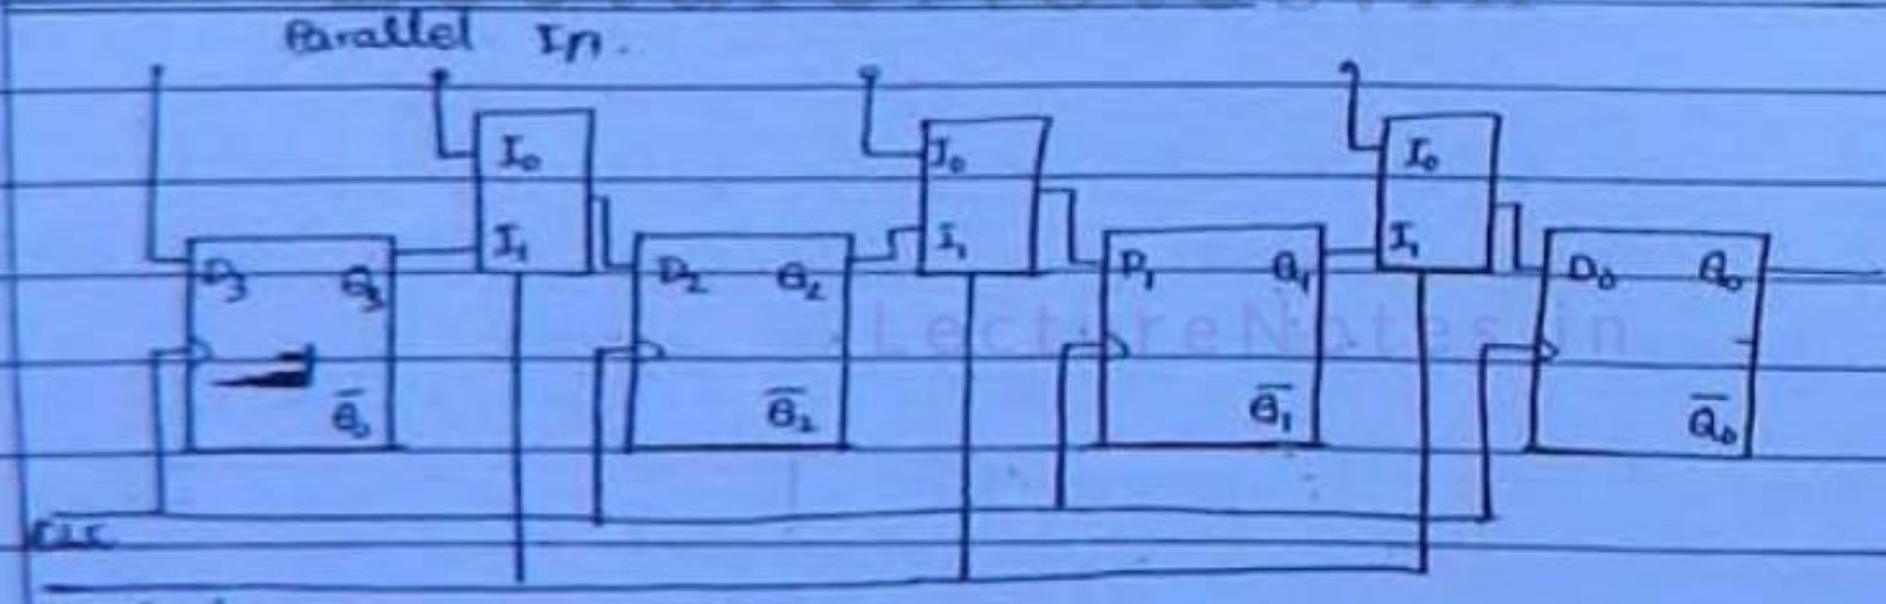

Control	= 0	=	Parallel In
Control	= 1	=	Serial out

⇒ In PISO register to provide parallel in it require 1 clock pulse and to provide serial out (n-1) clock pulse.

© Wiki Engineering

⇒ PISO is also used to convert spacial code to temporial code.

(III)

(D) PIPO (Parallel in parallel out) :-

⇒ PIPO is used as storage register.

⇒ for Parallel in it requires 1 clock pulse.

⇒ for parallel out it requires 0 clock pulse

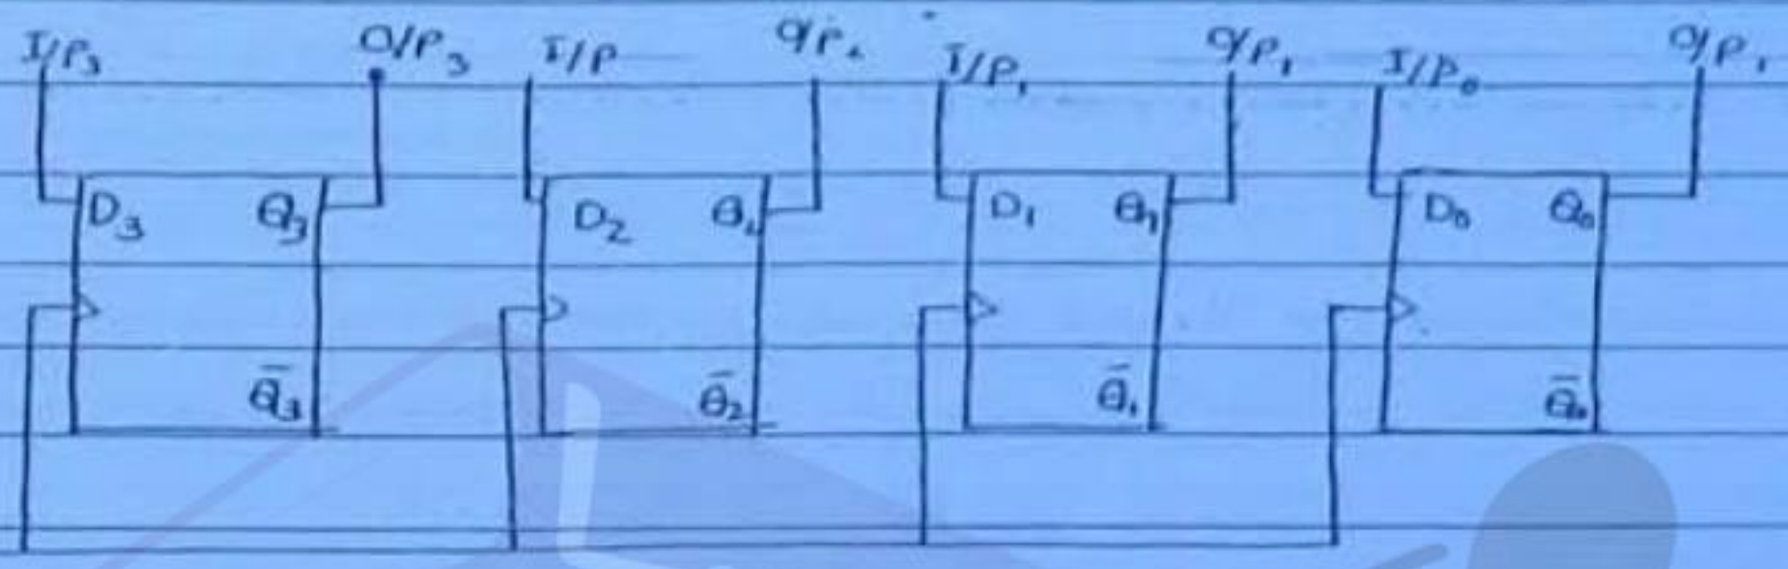

Important :-

	I/P	O/P
SISO	n	n-1
SIPO	n	0
PISO	1	n-1
PIPO	1	0

⇒ ~~S~~ Each shift left register operation provide multiplication by 2.

⇒ If n shift left operation performed then data is multiplied by 2^n.

⇒ Each shift right operation performed then data is divide by 2.

⇒ ~~Ea~~ If n shift right operation performed then data is divided by 2^n.

© Wiki Engineering
www.raghul.org
classmate

☆ COUNTERS :-

⇒ Counters are basically used to count no of clock pulse applied. it can also be used for frequency divider, & time measurement, frequency measurement, Range measurement, pulse width.

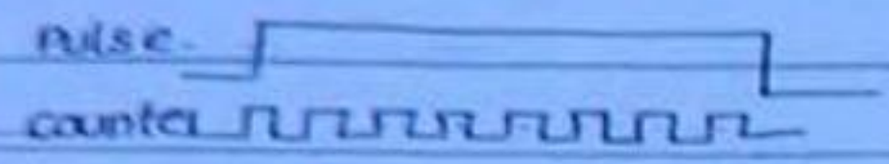

16× Pulse width = Total width.

LectureNotes.in

⇒ Also used for waveform generator.

⇒ With n-ff, max possible stage in the counter is 2^n.

$$\boxed{N \leq 2^n}$$

or, $n \geq \log_2 N$

where N = no. of stage

n = no. of FF.

- Depending on clock pulse applied counters of two type:-

(i) Asynchronous

(ii) Synchronous

Asynchronous	Synchronous
1. Different FF are applied with different clock	1. All FF are applied same clock.
2. It is slower.	2. It is faster
3. Fixed count sequece ie. up or down.	3. Any count sequence is possible
4. Decoding errors will present	4. No decoding error will present
5. Ripple counter	5. Ring counter

© Wiki Engineering
www.raghul.org

⇒ No. of stage use in counter mean modulus of counter

i.e. if MOD 5 counter = 5 stage

MOD n counter = n stage (113)

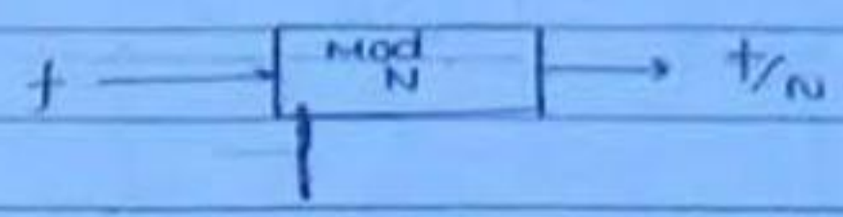

Q:- A decade counter is applied with frequency of 10MHz then O/P frequency is...

Sol:- $f_{out} = \frac{f_{in}}{10} = \frac{10\,MHz}{10} = 1\,MHz$

⇒ Let Mod M and MOD N are cascaded then it will act as MOD MN counter.

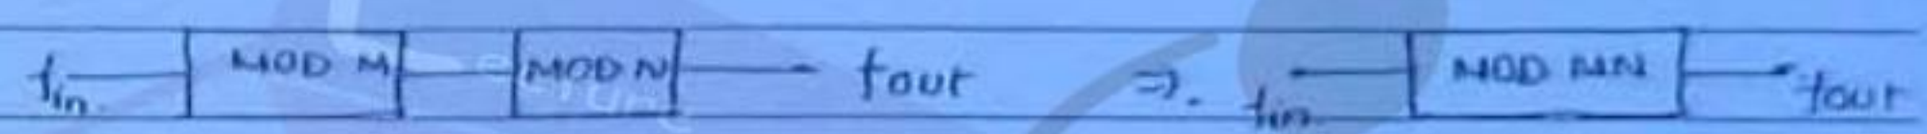

Content :-

Basic

Ripple counter

Non binary ripple counter

Ring counter

Johnson counter

Synchronous series carry

Synchronous parallel carry

Synchronous counter design and Analysis

(A) Ripple counter :-

⇒ It is a Asynchronous counter.

⇒ Different FF used different clock pulse.

⇒ Toggle mode.

⇒ Only one FF is applied with external clk and other ff's are clk is from previous ff o/p. (whether Q or $\bar{Q}$).

⇒ The FF applied with external clk will acts as LSB bit

© WikiEngineering
www.raghul.org

3 bit ripple counter :- (up counter)

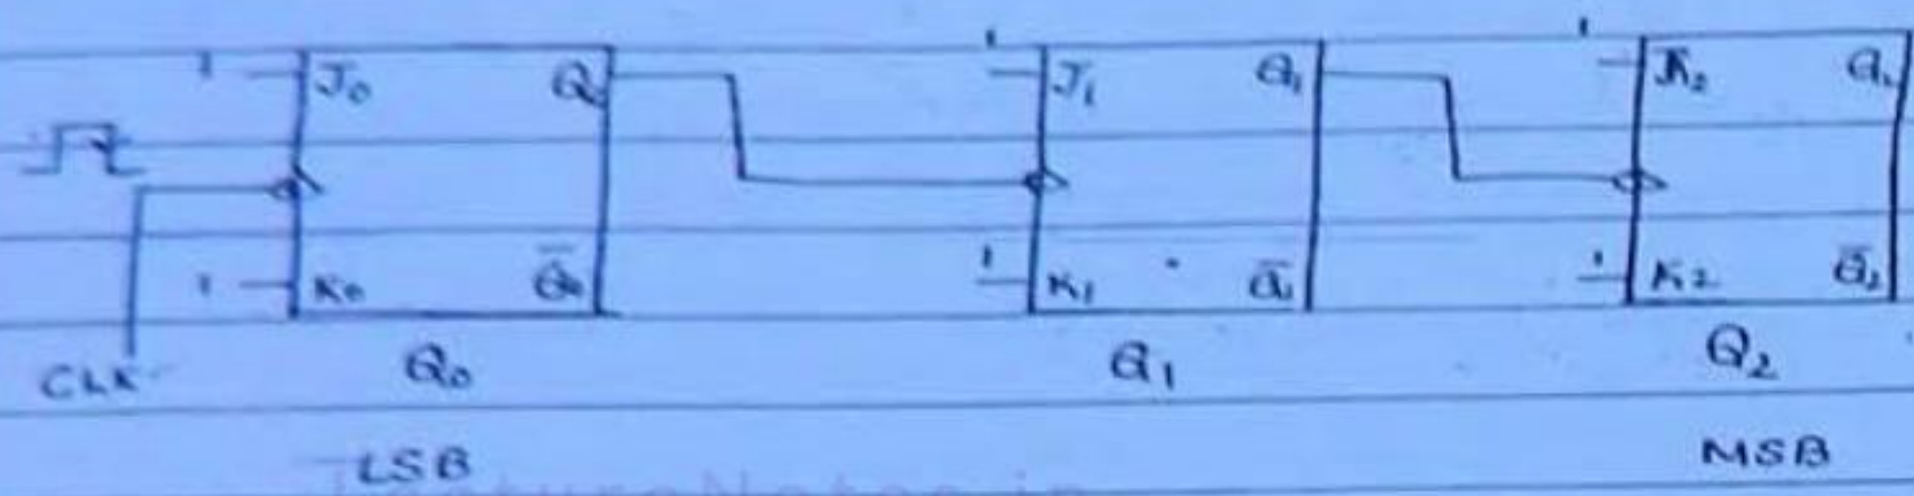

LectureNotes.in

i) Explanation :-

⇒ The ckt shown in fig. Q_0 toggle for every clk pulse

⇒ Q_n change when Q_{n-1} change from 1 - 0. i.e. Q_1 changes when Q_1 changes from 1 - 0.

ii) ⇒ Truth table :-

CLK	Q_2	Q_1	Q_0
0	0	0	0
1	0	0	1
2	0	1	0
3	0	1	1
4	1	0	0
5	1	0	1
6	1	1	0
7	1	1	1
8	0	0	0

LectureNotes.in

⇒ This is up counter.

⇒ It is also called MOD 8 ripple counter.

iii) Timing Diagram :-

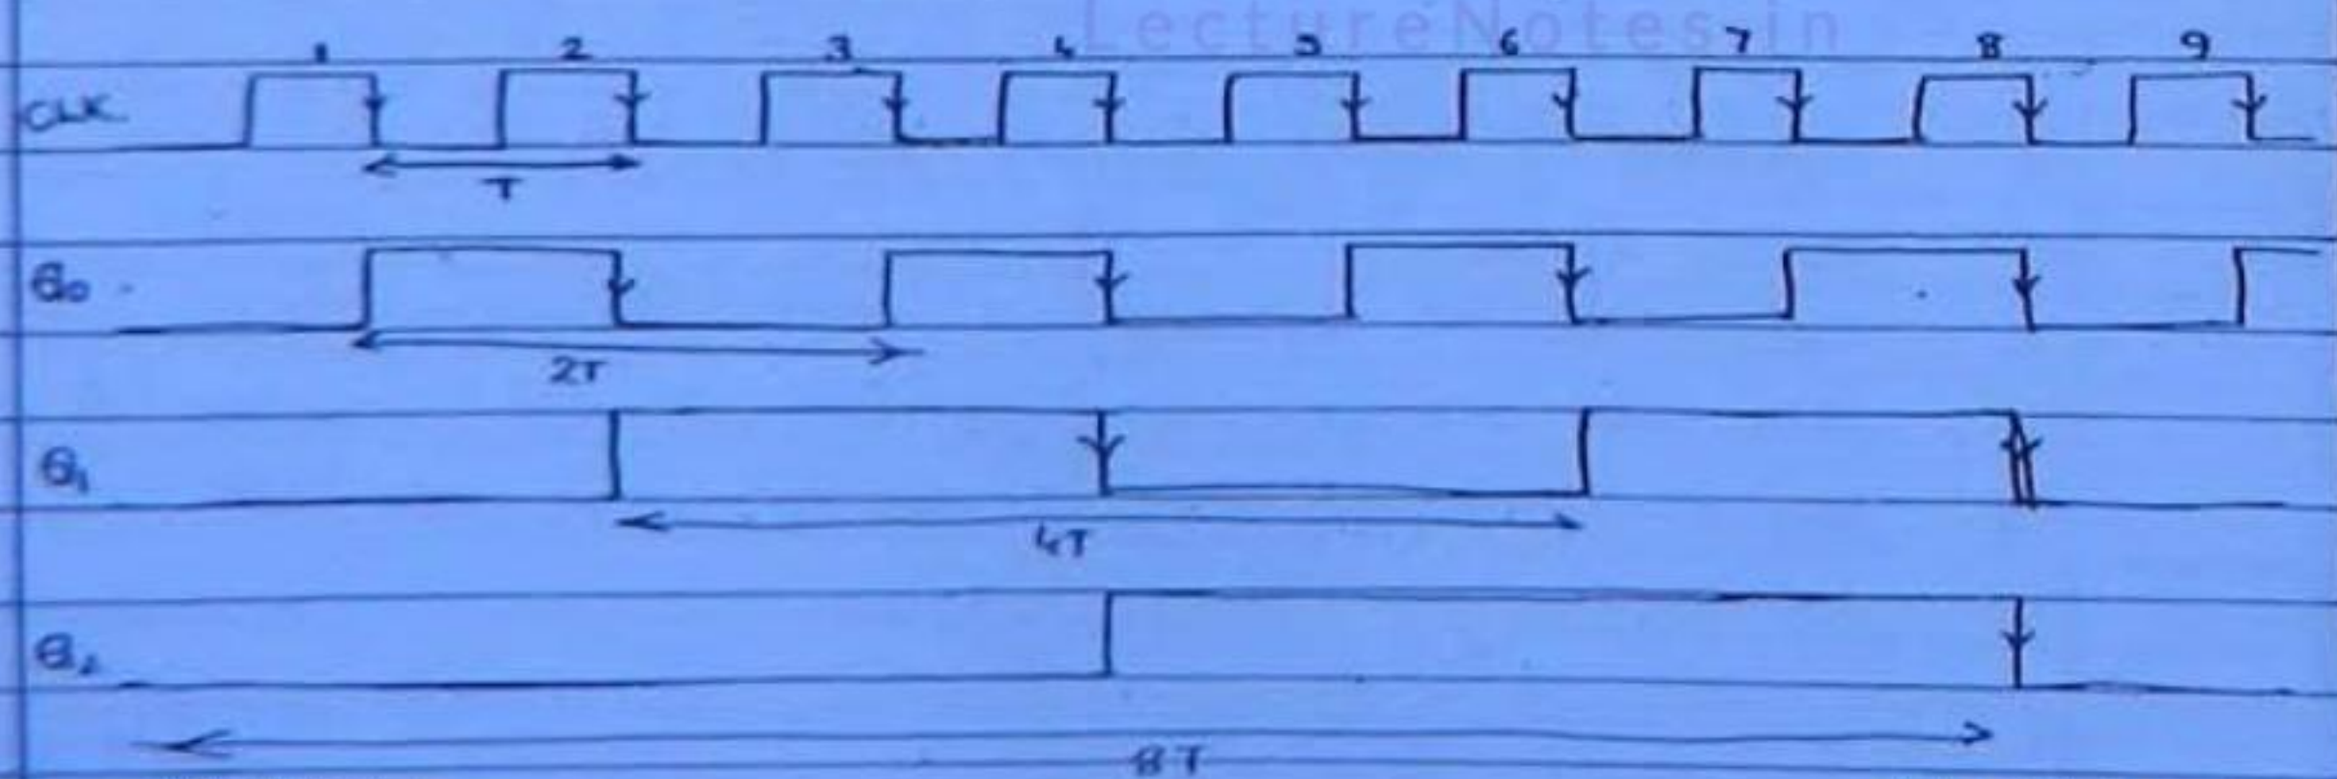

© Wiki Engineering
www.neghul.org

⇒ In n bit ripple counter propogation delay of each ff is t_{Pdff}. then time period of CLK is,

115

$$t_{CLK} \geq n\, t_{Pdff}$$

$$f_{CLK} \leq \frac{1}{n\, t_{Pdff}}$$

$$f_{max} = \frac{1}{n\, t_{Pdff}}$$

Note:-

(i) -ive edge trigger → Q as clock → up counter
(ii) +ive " " → $\bar{Q}$ as clock → up counter
(iii) -ive " " → $\bar{Q}$ as clock → down counter
(iv) +ive " " → Q as clock → down counter

3-Bit Ripple counter (Down counter):-

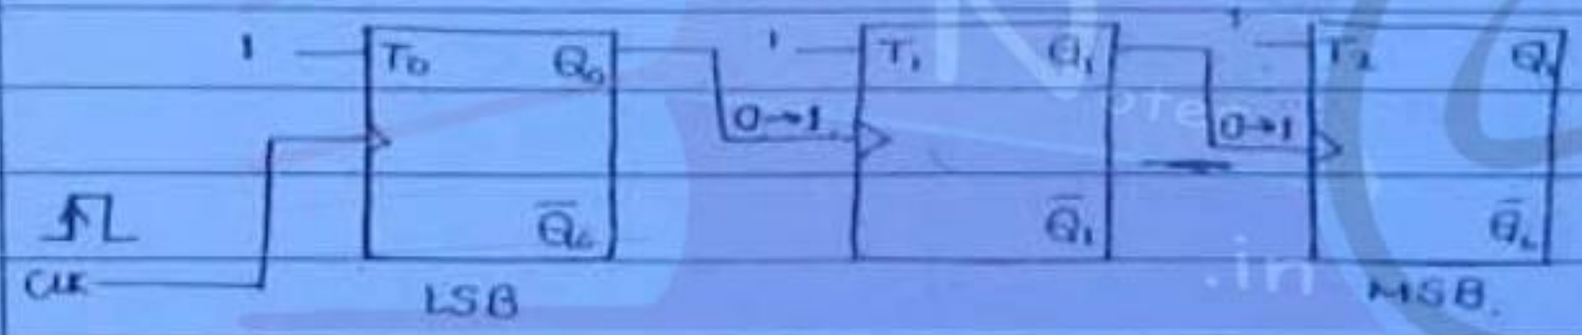

(i) Explaination :-

⇒ The ckt shown in fig Q_0 toggles for every clock pulse.
⇒ Q_1 toggles when Q_0 changes from 0 to 1.
⇒ Q_2 toggles when Q_1 changes from 0 to 1.

(ii) Truth table:-

Clock	Q_2	Q_1	Q_0
0	0	0	0
1	1	1	1
2.	1	1	0
3.	1	0	1
4.	1	0	0
5.	0	1	1
6.	0	1	0
7	0	0	1

classmate

© Wiki Engineering
www.raghul.org

⇒ This is called ripple counter because the input clock is the o/p of previous FF output. this is just like ripple. then called Ripple counter.

(116)

⇒ if the o/p is (000) and clock is applied then t_{pdf} is delay

000

t_{pdf} → 001 } unwanted or decoding error.

t_{pdf} → 011 } also called transient state.

111

⇒ Decoding errors or transient state present in ripple counter due to propogation delay.

⇒ To avoid decoding error strobe signal is used.

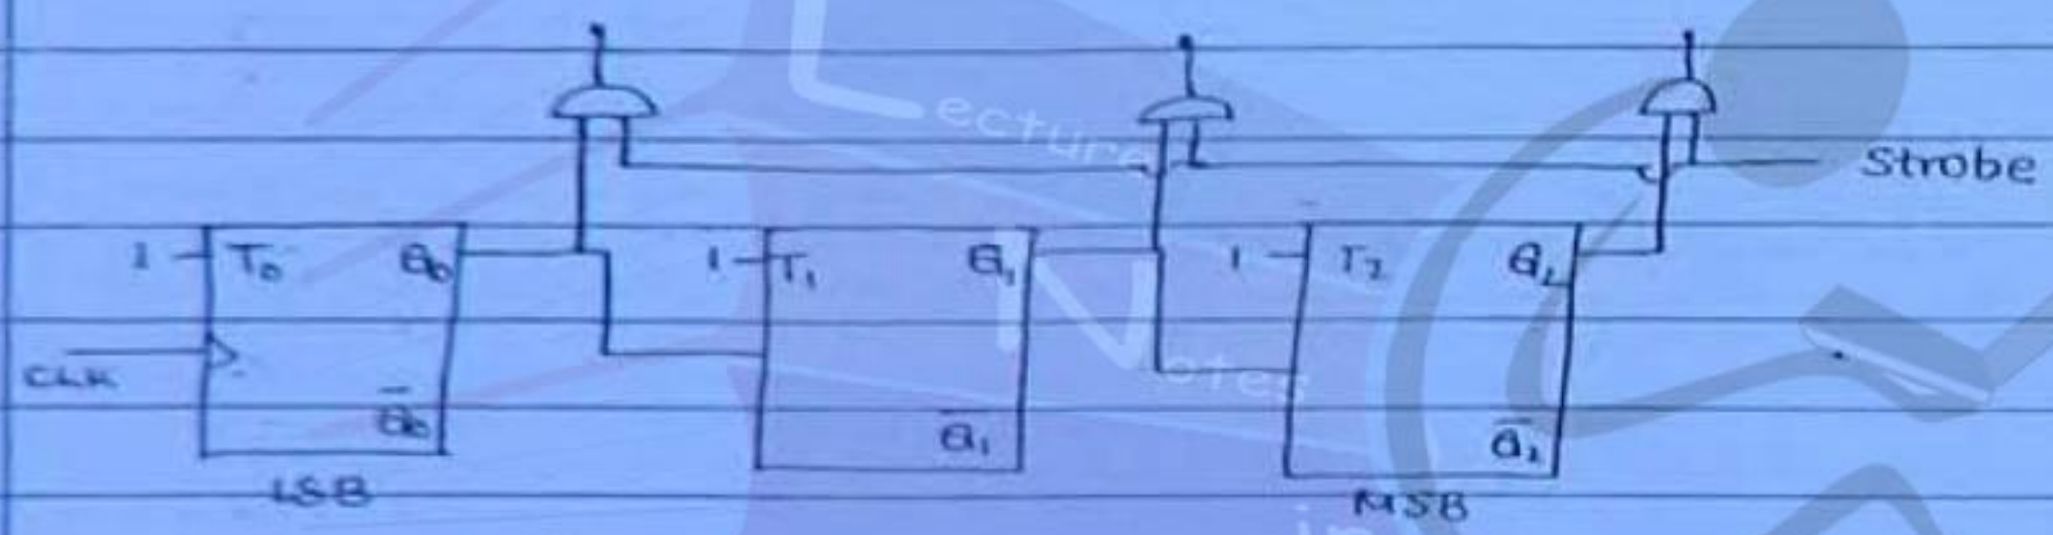

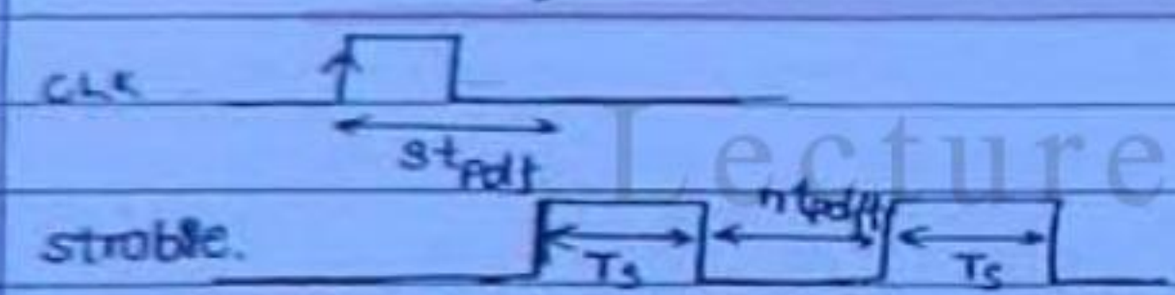

⇒ i.e. strobe signal is zero for nt_{pdff} and after that it is one for next clock. then all the o/p is zero for the transient time therefore due to strobe signal we can remove decoding error.

$$\boxed{T_{CLK} \geq nt_{pdf} + T_s}$$

⇒ In ripple counter with n ff max possible state is 2^n.

⇒ frequency after n FF in the Ripple counter is $f/2^n$. (ie. for 3 FF o/p is $f/8$)

© Wiki Engineering
www.raghul.org

⇒ Clear and preset are known as Asynchronous I/P

S, R, J, K, D, T are Synchronous I/P.

(117)

Clear :- clear is use to rest our ff. or counter.

Preset :- preset is use to set our FF or counter.

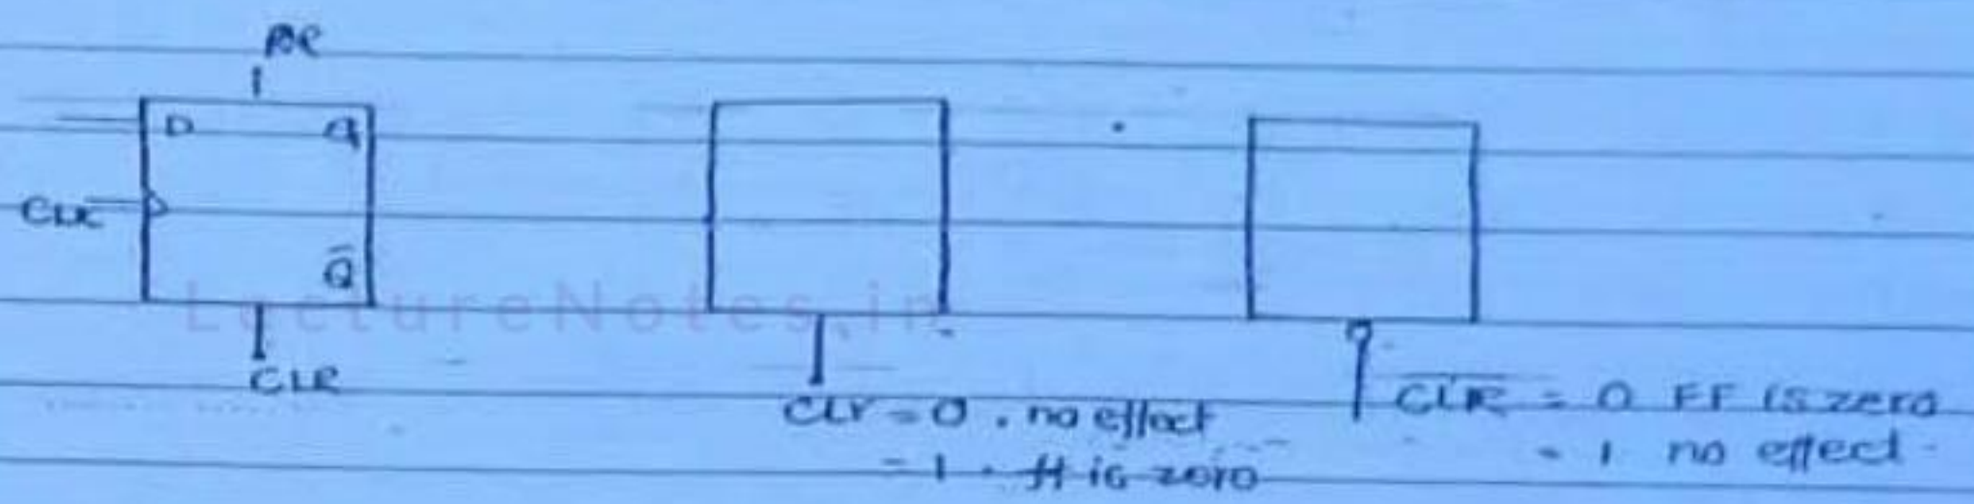

(B) Non Binary Ripple counter :-

(B₁) BCD counter :- (Decade counter)

⇒ 4 flip flop used.

CLK	Q_3	Q_2	Q_1	Q_0
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
0	0	0	0	0

(1010)

$Q_3\bar{Q}_2Q_1\bar{Q}_0$

LectureNotes.in

© Wiki Engineering www.raghul.org

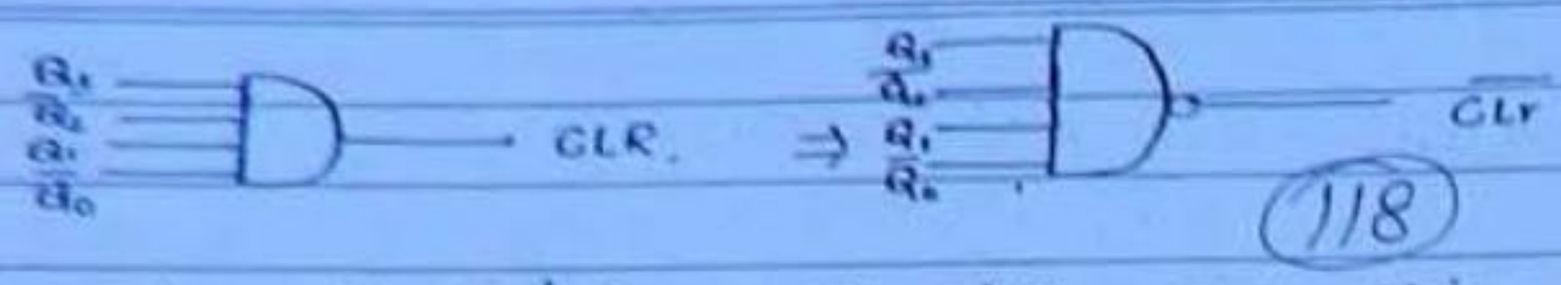

118

if we use only Q_3 and Q_1, we also use this as clear ckt.

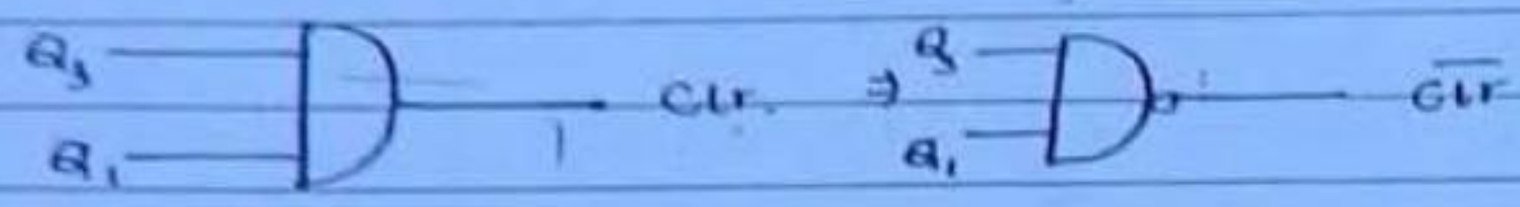

⇒ All BCD counter is Decade counter but reverse is not true.

⇒ BCD counter is Asymmetric o/p time Diagram.

⇒ o/p frequency of BCD counter is f/10.

⇒ low for 8 clock and high for 2 clock in Q_3.

⇒ duty cycle is 20%.

⇒ In Asynchronous counter follow steps:-

1. Trigger → +ive, → −ive
2. clock → Q, → $\bar{Q}$
3. counter → UP, → Down.
4. Preset /clear → clear → 000, → Preset → 111
5. Decoding logic (Terminating logic).

LectureNotes.in

(c) Ring Counter :- (Synchronous counter)

⇒ The last ff o/p is connected to first ff i/p.

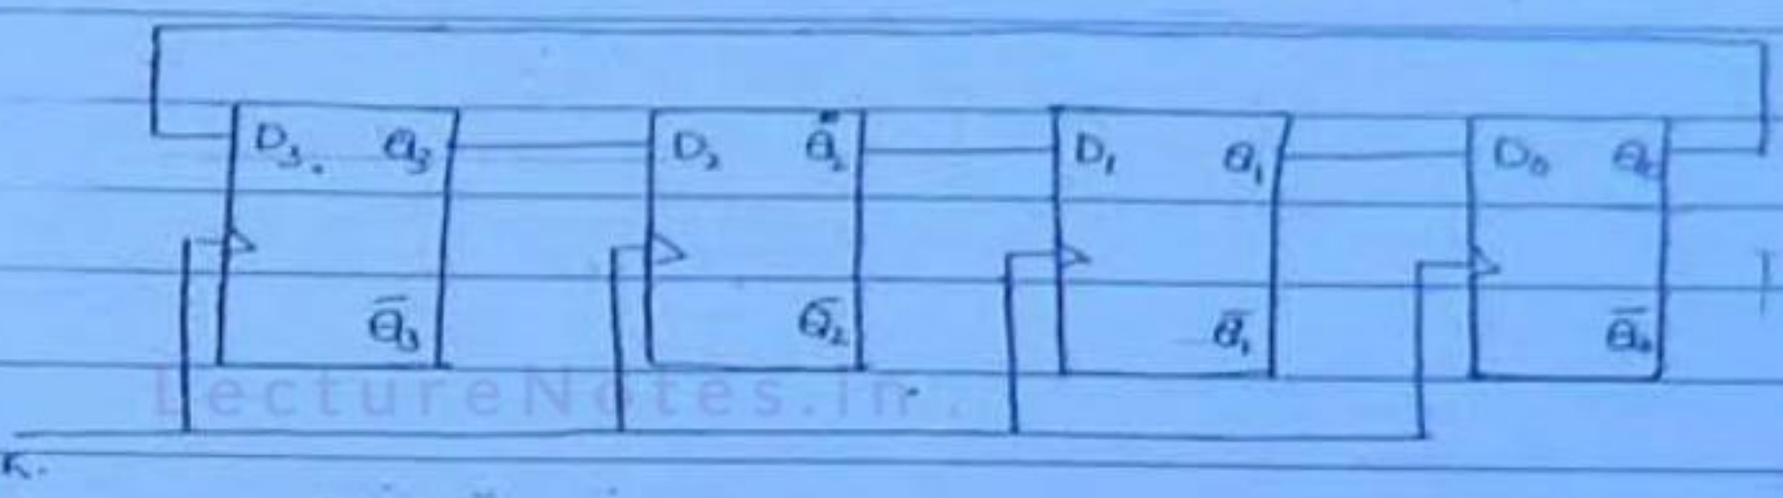

(i) Explanation:-

⇒ only one FF o/p is high and remaining FF are low.

⇒ In 4 bit ring counter 4 states are there. (i.e. For n FF there is n states).

(ii) Truth table :-

CLK	Q_3	Q_2	Q_1	Q_0
0	0	0	0	0
1	1	0	0	0
2	0	1	0	0
3	0	0	1	0
4	0	0	0	1
5	1	0	0	0

} 4-state.

⇒ In synchronous counter the +ive edge or −ive edge, the o/p remains same.

(iii) Time Diagram :-

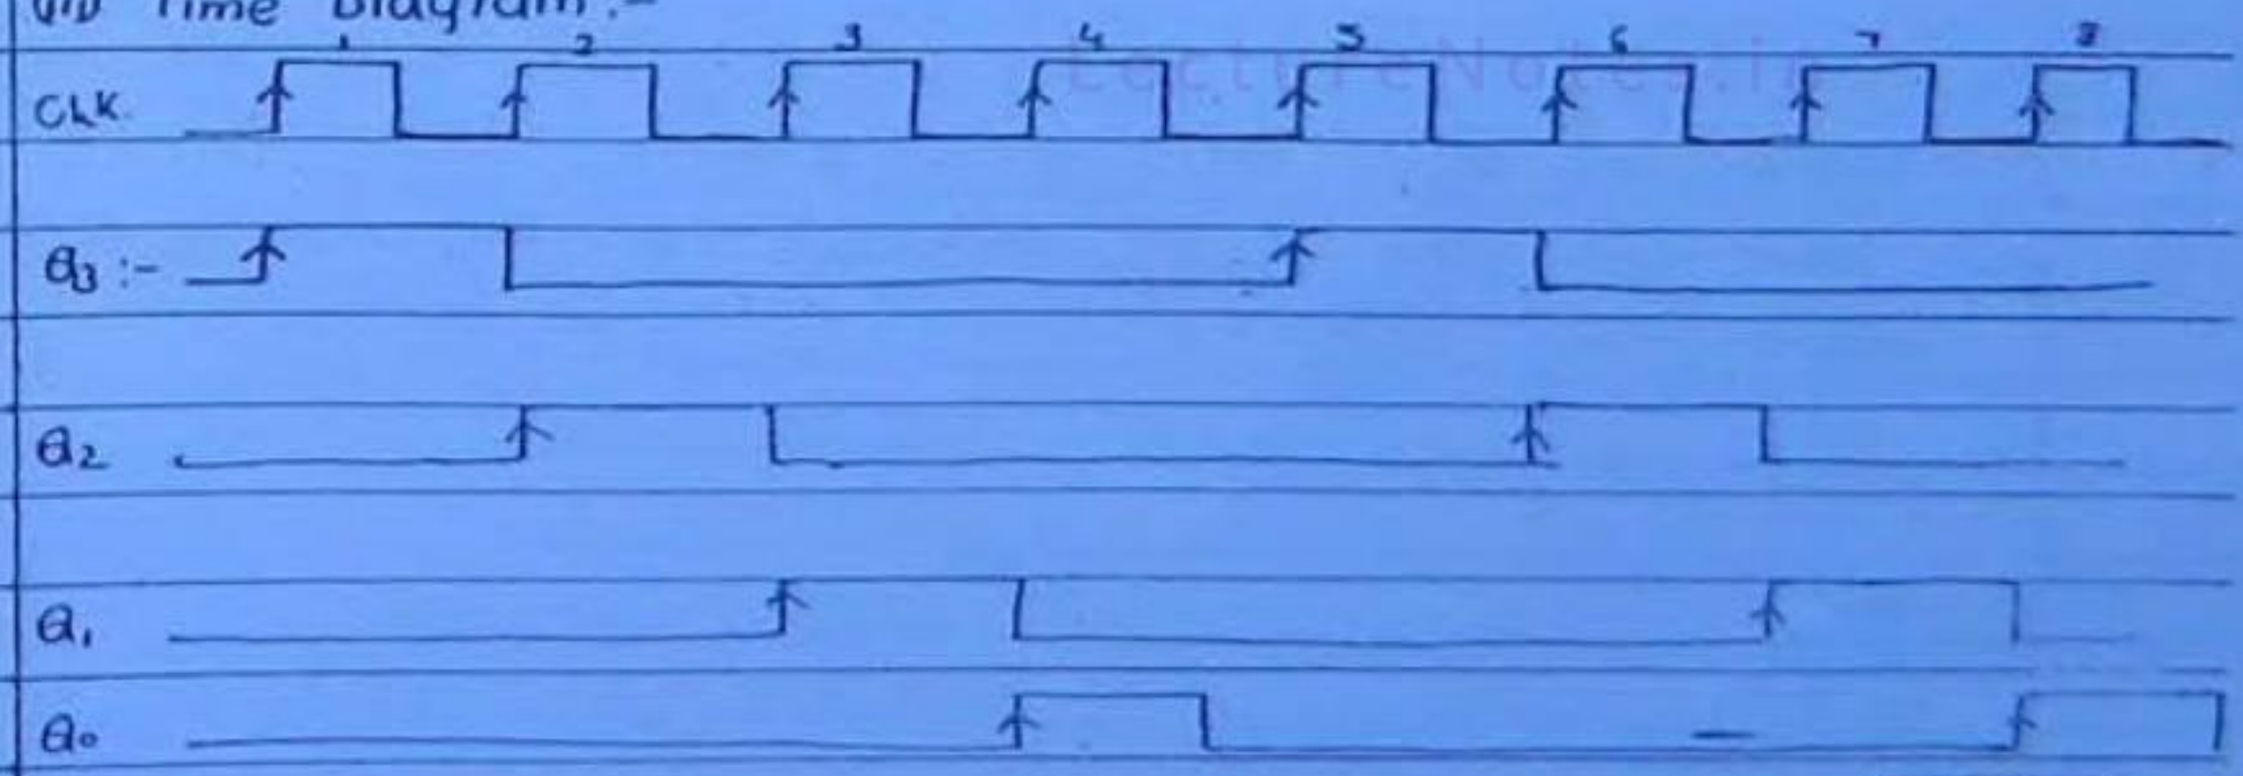

⇒ n bit ⇒ n state

⇒ $t_0 = t/n$

(120)

⇒ Phase shift b/w generated waveform is $360/n$.

$$\phi = \frac{360}{n}$$

Application :-

⇒ used in stepper motor control.

⇒ in Analog to Digital converter

⇒ No. of unused state in ring counter is $2^n - n$.

ring counter using J-K :-

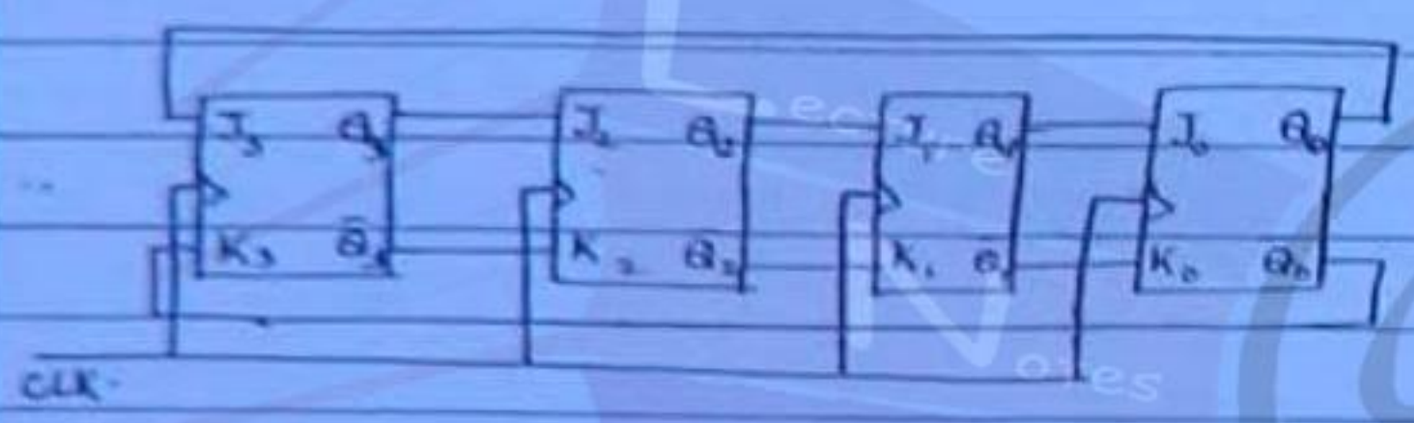

* self starting Ring counter :-

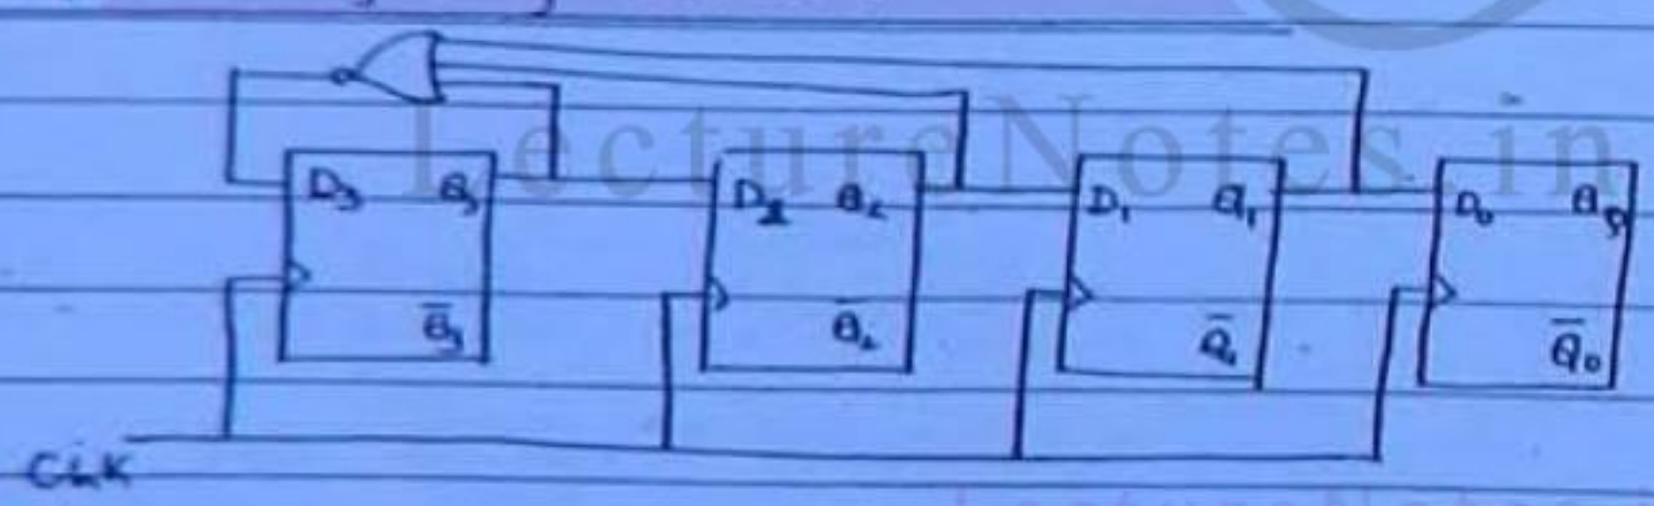

⇒ Advantage of Ring counter is decoding is simple. to decode no logic gate are required.

⇒ Last o/p can not be connected in the I/P of self start ring counter.

© Wiki Engineering

(D) Johnson Counter :-

⇒ Symmetric o/p waveform.

⇒ 8-stages are there for 4 bit counter.

⇒ phase shift $= \frac{360}{4} = 90^\circ$

⇒ It is just like SISO register.

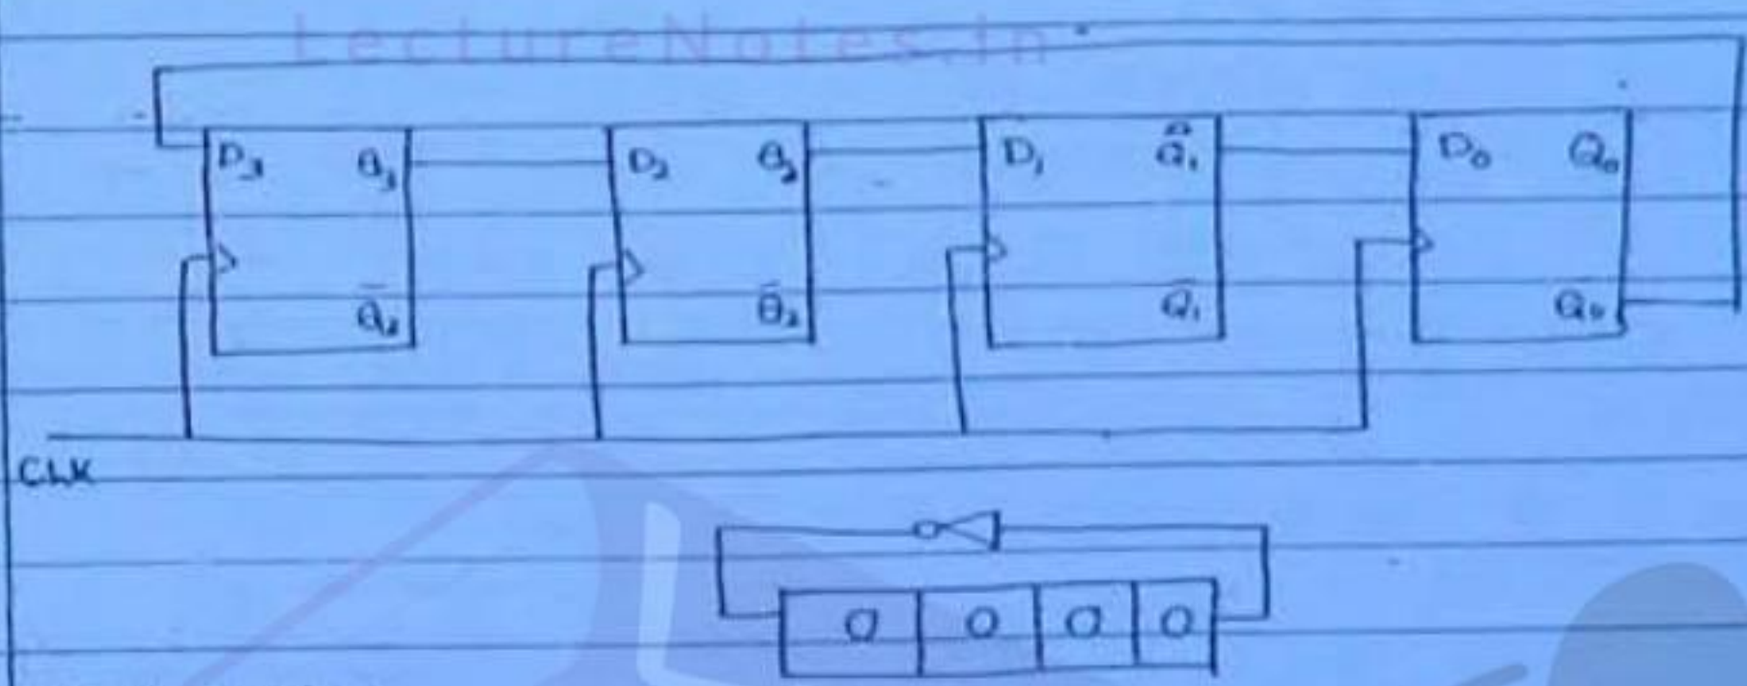

(ii) Truth Table :-

CLK	Q_3	Q_2	Q_1	Q_0
0	0	0	0	0
1	1	0	0	0
2	1	1	0	0
3	1	1	1	0
4	1	1	1	1
5	0	1	1	1
6	0	0	1	1
7	0	0	0	1
8	0	0	0	0

8 state

⇒ Total no. of used state = 8

⇒ Total no. of unused state = $2^n - 8 = 2^4 - 8 = 8$ state

⇒ Also called Twisted Ring counter, Mobies counter or, creeping counter or, Walking counter or, switch tail counter.

LectureNotes.in

CLOCK	$Q_3\ Q_2\ Q_1\ Q_0$		
0	0 0 0 0	→	$\bar{Q}_3 \bar{Q}_0$
1	1 0 0 0	→	$Q_3 \bar{Q}_2$
2	1 1 0 0	→	$Q_2 \bar{Q}_1$
3	1 1 1 0	→	$Q_1 \bar{Q}_0$
4	1 1 1 1	→	$Q_3 Q_0$
5	0 1 1 1	→	$\bar{Q}_3 Q_2$
6	0 0 1 1	→	$\bar{Q}_2 Q_1$
7	0 0 0 1	→	$\bar{Q}_1 Q_0$
8	0 0 0 0		

122

⇒ In Johnson counter to decode each state one two I/p. AND / NOR gate used.

Disadvantage:

⇒ lock out may occur. (when counter enter into unused state)

Note:- In synchronous counter propogation delay of each counter is t_{pdff} then.

$$\boxed{T_{CLK} \geq t_{pdFF}}$$

$$f_{CLK} \leq \frac{1}{t_{pdff}}$$

$$\boxed{f_{max} = \frac{1}{t_{pdff}}}$$

In synchronous counter.

© Wiki Engineering
www.raghul.org

DATE

(A) Synchronous Series carry counter :-

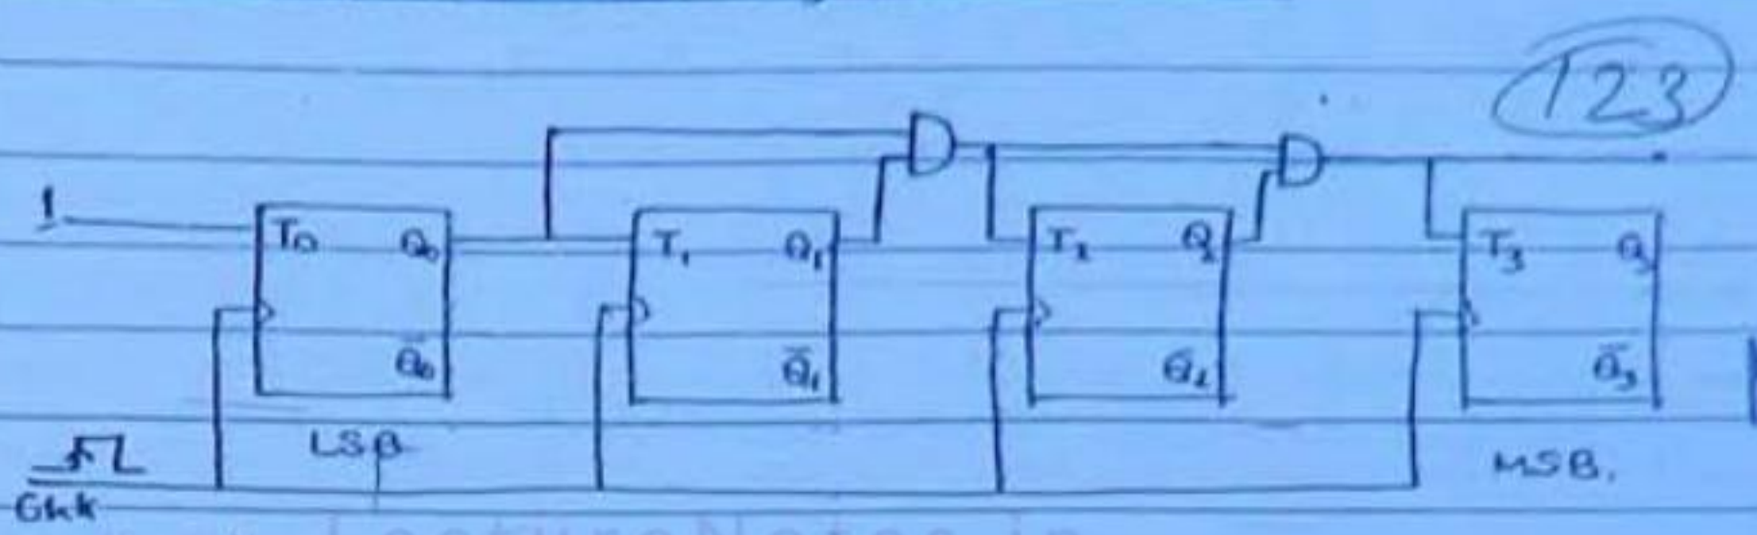

(i) Explanation :-

⇒ Ckt shown in fig. is Synchronous series carry up counter.

⇒ In this counter Q_0 toggles for every clock pulse.

⇒ Q_1 toggles when $Q_0 = 1$ and clock is applied.

⇒ Q_2 toggles when $Q_1 = Q_0 = 1$ and clock applied.

⇒ Q_3 will toggles when $Q_2 = Q_1 = Q_0 = 1$ and clock applied.

⇒ This ckt may be down counter when $\bar{Q}$ is connected to T.

(ii) Truth table :-

Clock	Q_3	Q_2	Q_1	Q_0
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
10	1	0	1	0
11	1	0	1	1
12	1	1	0	0
13	1	1	0	1
14	1	1	1	0
15	1	1	1	1

⇒ To provide down counter used $\bar{Q}$ o/p to provide next stage i/p.

© Wiki Engineering

www.raghul.org

PAGE

DATE

(A) Synchronous Series carry counter :-

(125)

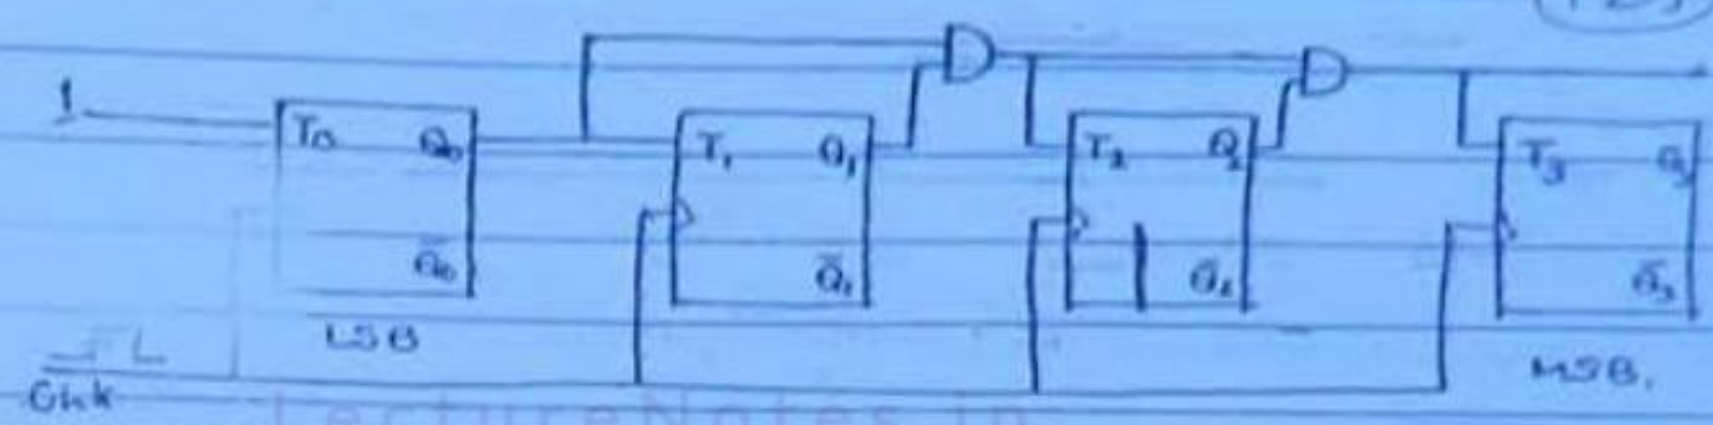

i) Explanation :-

⇒ ckt shown in fig. is synchronous series carry up counter.

⇒ In this counter Q_0 toggles for every clock pulse.

⇒ Q_1 toggles when $Q_0 = 1$ and clock is applied.

⇒ Q_2 toggles when $Q_1 = Q_0 = 1$ and clock applied.

⇒ Q_3 will toggles when $Q_2 = Q_1 = Q_0 = 1$ and clock applied.

⇒ This ckt may be down counter when $\bar{Q}$ is connected to T.

ii) Truth table :-

Clock	Q_3	Q_2	Q_1	Q_0
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
8	1	0	0	0
9	1	0	0	1
10	1	0	1	0
11	1	0	1	1
12	1	1	0	0
13	1	1	0	1
14	1	1	1	0
15	1	1	1	1

⇒ To provide down counter used $\bar{a}$ o/p to provide next stage I/P.

© Wiki Engineering
www.raghul.org

$$T_{CLK} \geq t_{PdFF} + (n-2)\, t_{PdAND}$$

8) Synchronous parallel carry counter :-

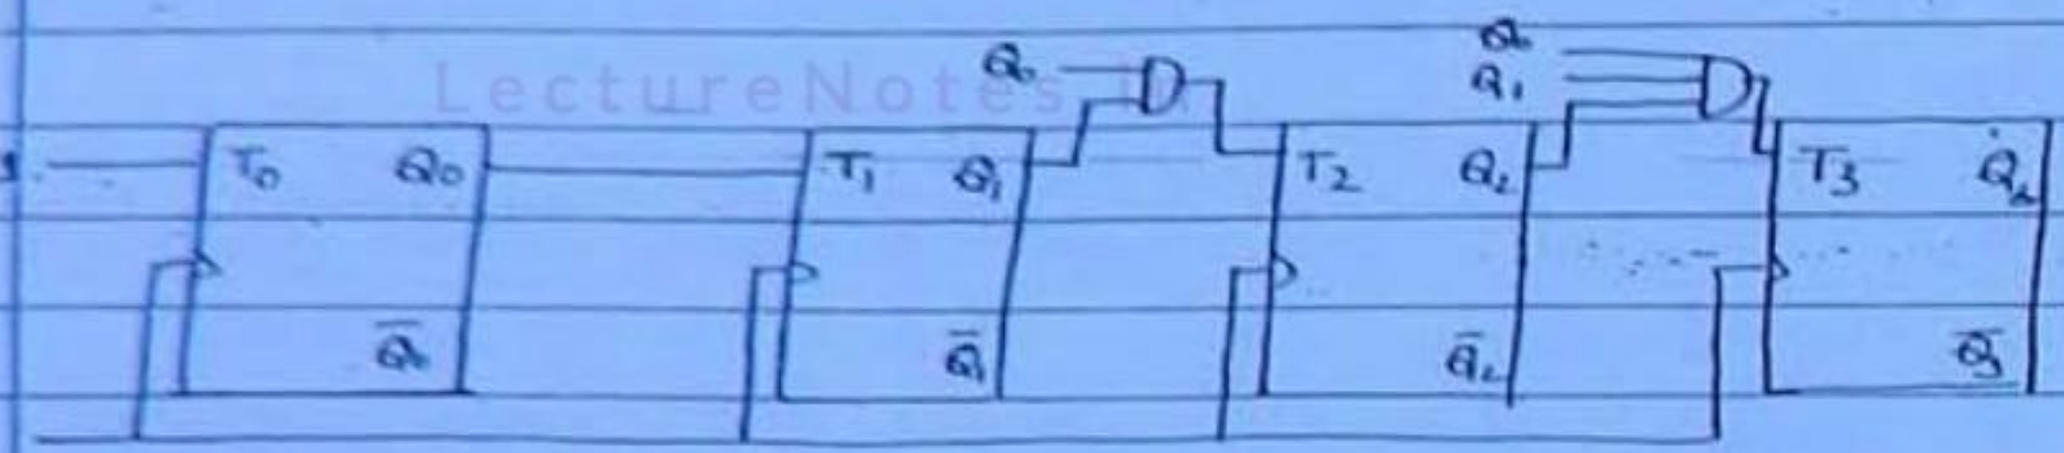

⇒ Faster than series carry counter.

⇒ Disadvantage is increased I/P pin of AND Gate.

$$T_{CLK} \geq t_{PdFF} + t_{PdAND}$$

⇒ Sync

⇒ Ripple counter < Synchronous serial carry < Synchronous parallel carry counter for faster logic.

LectureNotes.in

Synchronous counter design for the given sequence:-

Problem:- Design a synchronous counter for the count sequence 0→3→1→2→0 using +ive edge trigger D-FF.

Sol:

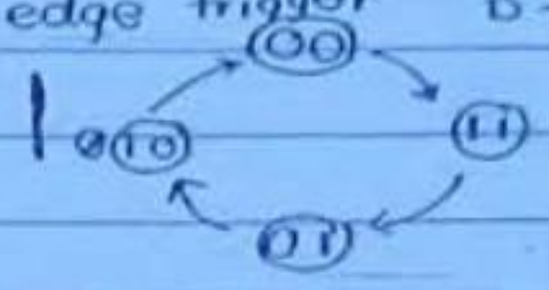

STATE DIAGRAM.

Sol:- Procedure :-

(i) Identify no. of FF and I/P and O/P.

(ii) construct state table.

(iii) logical expression for I/P.

(iv) Minimize.

(v) Implement the ckt.

Now,

(i)

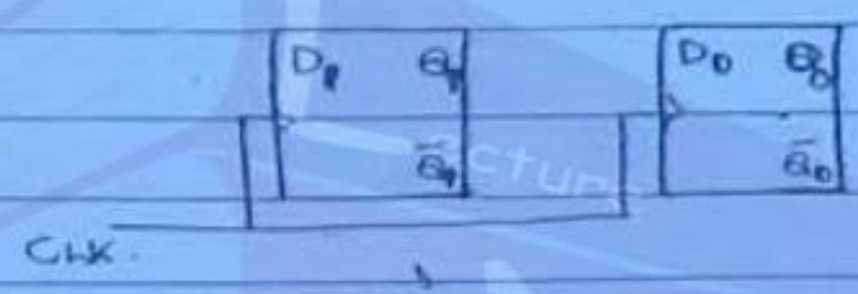

(ii) State table :-

Present state	Next state	
Q_1 Q_0	Q_{1+} Q_{0+}	D_1 D_0
0 0	1 1	1 1
1 1	0 1	0 1
0 1	1 0	1 0
1 0	0 0	0 0

(iii) logical expression :-

$$D_1 = \bar{Q}_1\bar{Q}_0 + \bar{Q}_1 Q_0 = \bar{Q}_1 (Q_0 + \bar{Q}_0) = \bar{Q}_1$$

$$D_0 = \bar{Q}_1\bar{Q}_0 + Q_1 Q_0 = Q_1 \oplus Q_0 = Q_1 \odot Q_0$$

(iv) Implementation :-

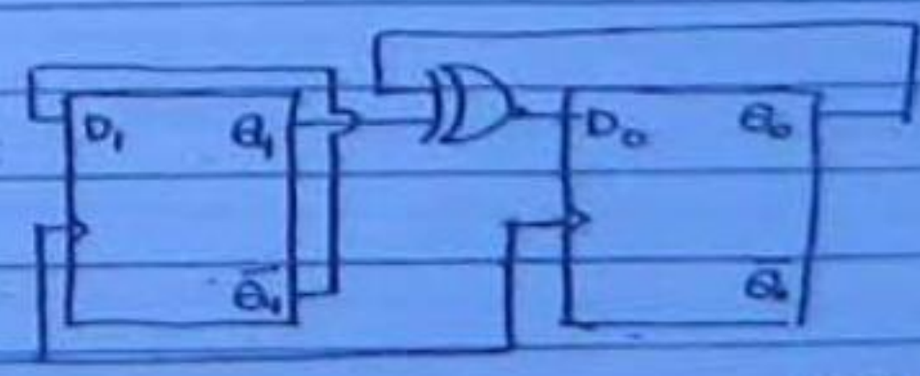

© WikiEngineering
www.raghul.org

Q: Design usin T-FF. 0-3-1-2-0.

Sol- (i)

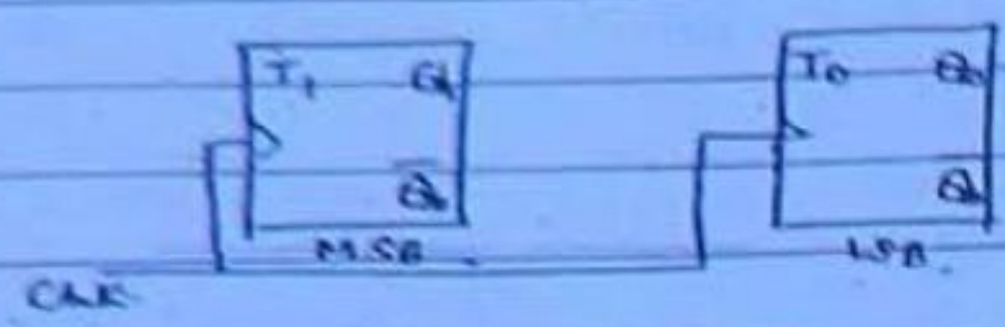

128

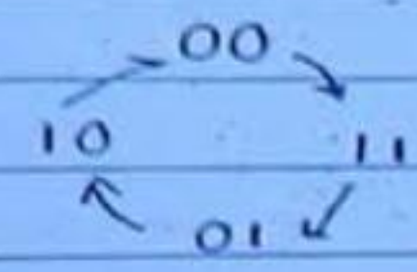

(ii) state table-

Q_1	Q_0	Q_{1+}	Q_{0+}	T_1	T_0
0	0	1	1	1	1
1	1	0	1	1	0
0	1	1	0	1	1
1	0	0	0	1	0

(iii) logical expression:

$T_1 = 1$

$T_0 = \bar{Q}_1 \bar{Q}_0 + \bar{Q}_1 Q_0 = \bar{Q}_1$

(iv) Implementation:-

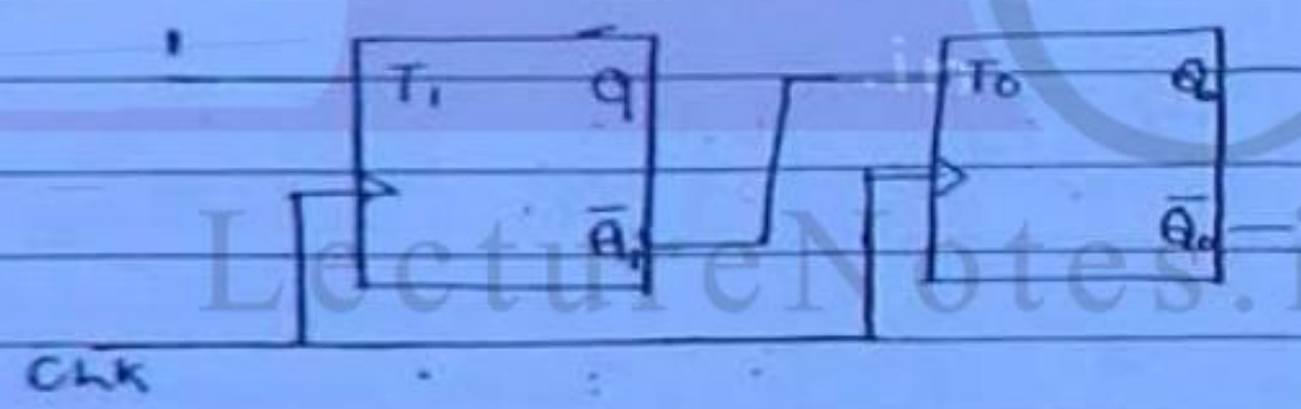

LectureNotes.in

DATE

Content :-

⇒ Various no. system.

⇒ Arithmetic operation. → complement
→ Add , sub.

129

⇒ Various codes.

⇒ Data representation. → unsigned
→ signed → signed magnitude
→ 1's
→ 2's

Number system and codes :-

Weighted

⇒ Positional weighted

e.g. Binary , Octal
Decimal , Hexdecimal
BCD code.

Unweighted.

⇒ No weighted

e.g. gray code , Excess-3 code

⇒ A number system with base or radix r contains , r different digit and they are from (0 — r-1).

e.g. $(101)_r$

r = Base or radix.

Base	Different Digit.
2	0, 1
8	0, --- 7
10	0, --- 9
12	0, --- 9, A, B
16	0, 9, A, B, C, D, E, F
4	0, --- 3
6	0, 1, 2, 3, 4, 5

© Wiki Engineering

☆ Conversion (various number system) :-

1. Decimal to others :-

(130)

⇒ To convert decimal no. into any other base r divide integer part multiply fractional part with r.

e.g.

Q:- convert $(25.625)_{10}$ — $(__)_2$.

Sol:-

2	25	
2	12	– 1 ↑
2	6	– 0
2	3	– 0
2	1	– 1
	0	– 1

$0.625 \times 2 = 1.25 = 1.$
$0.25 \times 2 = 0.50 = 0$
$0.5 \times 2 = 1.0 = 1$ ↓

Ans :- $(11001.101)_2$

Q:- Convert (25.625) — $(__)_8$.

Sol:-

8	25	
8	3	– 1 ↑
	0	– 3

$0.625 \times 8 = 5.$

Ans :- $(31.5)_8$.

⇒ When we go from higher to lower base the no. t is increased.

Q:- convert $(25.625)_{10}$ – $(__)_{16}$

Sol:-

16	25	
16	1	– 9 ↑
	0	– 1

$0.625 \times 16 = 10. = A$

Ans :- $(19.A)_{16}$.

Q: convert $(254)_{16}$ – $(__)_{16}$.

Sol:-

16	254	
16	15	14 = E ↑
	0	15 = F

= $(FE)_{16}$

Q: Convert $(27.4)_{10} = (_)_4$

Sol:

$$\begin{array}{r|l} 4 & 27 \\ 4 & 6 - 3 \\ 4 & 1 - 2 \\ & 0 - 1 \end{array}$$

$0.4 \times 4 = 1.6 = 1$

$0.6 \times 4 = 2.4 = 2$

$0.4 \times 4 = 1.6 = 1$

(131)

Ans:- $(123.\overline{121})_4$

2: Others to Decimal :-

$(X_1 X_2 X_3 . Y_1 Y_2)_r = (\quad)_{10}$

⇒ To convert any other base r to decimal multiply each digit with positional weighted then add.

then,

$(_)_{10} = X_1 \times r^2 + X_2 r^1 + X_3 \times r^0 + Y_1 r^{-1} + Y_2 r^{-2}$

Q: Convert $(10101.11)_2 = (_)_{10}$

Sol: $1 \times 2^4 + 0 \times 2^3 + 1 \times 2^2 + 0 \times 2^1 + 1 \times 2^0 + 1 \times 2^{-1} + 1 \times 2^{-2}$

$= 16 + 4 + 1 + 1/2 + 1/4$

$= \frac{64 + 16 + 4 + 2 + 1}{4} = \frac{87}{4} = (21.75)_{10}$

Q: Convert $(57.4)_8 = (\ )_{10}$

Sol: $5 \times 8^1 + 7 \times 8^0 + 4 \times 8^{-1}$

$= 40 + 7 + \frac{4}{8} = \frac{320 + 56 + 4}{8} = \frac{380}{8}$

$= 47.5 = (47.5)_{10}$

Q: Convert $(57.4)_{16} = (\ )_{10}$

Sol: $5 \times 16 + 7 + \frac{4}{16} = 87 + 0.25 = (87.25)_{10}$

Q: Convert $(BAD)_{16} = (\ )_{10}$

Sol: $11 \times 16^2 + 10 \times 16 + 13$

$= 256 \times 11 + 160 + 13$

$= 2816 + 160 + 13 = (2989)_{10}$.

© Wiki Engineering www.raghul.org

Q:- convert $(35)_6 = (-)_{10}$

Sol:- $3 \times 6 + 5 \times 1 = 18 + 5 = (23)_{10}$

132

3. Octal to Binary & Binary to Octal:-

$(xyz)_8 = (-)_2$

⇒ each no. is represent by its 3 bit binary formate.

Ques:- convert $(37.45)_8 = (\ )_2$

Sol:- $(011111.100101)_2$

Binary to octal :-

Ques:- convert $(10110.11)_2$

Sol:- $(010\ 110.110)_2$

$= (26.6)_8$

4. Hexadecimal to Binary and Binary to Hexadecimal:-

⇒ Each digit is represent by 4 bit binary.

Ques:- convert $(259A)_{16} = (-)_2$

Sol:- $(0010\ 0101\ 1001\ 1010)_2$

5. Hexadecimal to octal or octal to Hexa:-

for Hexa ⟷ Octadecimal

Binary

Q: convert $(CAD)_{16} = ()8$

Sol:- $(CAD)_{16}$

$= (1100\ 1010\ 1101)_2$

$= (6255)_8$

© Wiki Engineering
www.raghul.org

☆ ARITHMETIC OPERATION :-

(133)

(A) Binary Addition, subtraction, Multiplication :-

Q: Add

```
  110110
+ 101101
 1100011
```

Q: Sub :-

```
  1101
  1011
  0010
```

Q. Multiply :

(a)

```
   1010
    101
  ----
   1010
  0000
 1010
 ------
 110010
```

(b)

```
   1111
   1111
  ----
   1111
  1111
 1111
 1111
 ------
 00001
 111
```

$4 = 100$

$6 = 110$

(B) Octal Addition, subtraction :-

0+0 = 0

0+1 = 1

1+1 = 2

⋮

1+7 = 10

7+2 = 11

7+1 = (8)$_{10}$ = 8 | 8 → 1 − 0 ; 0 − 1 ↑ = (10)

7+7 = 8 | 14 → 1 − 6 ; 0 − 1 ↑ = 16.

Sum of 2 octal no :-

(i)
```
  243
+ 212
  ---
  455
```

(ii)
```
  567
+ 243
 ----
 1032
```

Q:- Subtract :-

(i)
```
  743
  564
  ---
  157
```

© Wiki Engineering

www.raghul.org

(C) Hexadecimal (Add, Subtraction) :-

(134)

Addition :-

$1+1 = 2$

$1+9 = A$

$A+A = (20)_{10} = (14)_{16}$

$1+B = C$

Q:- (i)

```
  5 6 8 9
  4 5 7 4
  -------
  9 B F D
```

(ii)

```
  ADD
  DAD
  -------
  188CA
```

$16 \overline{)26}$ — 10, 1 — 1

$16 \overline{)13}$ — 5, 1 — 1

$16 \overline{)24}$ — 8, 1 — 1

11 = B

Q: Subtract :

Sol: (i)

```
  9 7 4 B
  5 8 7 C
  -------
  3 E C F
```

(ii)

```
  9654
- 5321
  ----
  4333
```

LectureNotes.in

© Wiki Engineering www.raghul.org

(D) Complements :-

r = → (r-1)'s complement
→ r's complement

135

Binary → 1's
→ 2's

Octa → 7's
→ 8's

Decimal → 9's
→ 10's

Hexa → F's
→ 16's

LectureNotes.in

(r-1)'s complement :-

⇒ Subtract from max. no. to the given no.

e.g. comp. of (1010)

```
   1111
   1010
   ----
   0101
```

To determine (r-1)'s compliment subtract given no from max. no. possible in the given base. (max. no. $(r^n - 1)$.)

e.g. 1's complement of 101101 is,

Sol:-

```
  111111
- 101101
  ------
  010010
```

LectureNotes.in

Q:- determine 7's complement of octal no. 5674.

Sol:-

```
  7777
- 5674
  ----
  2103
```

LectureNotes.in

Q:- Determine 9's compliment of Decimal 2679.

Sol:-

```
  9999
- 2679
  ----
  7320
```

Q: Det. F's comp. of Hexa. 2689

Sol:

```
  FFFF
- 2689
  ----
  D976
```

© Wiki Engineering

www.raghul.org

DATE

(ii) r's complement :-

To determine r's complement first write (r-1)'s complement then add 1 at LSB. (at right most)

Q:- Det. 2's complement of 10100.

Sol:

```
  11111
- 10100
 -------
  01011
     +1
 -------
  01100  Ans.
```

(136)

Q:- Determine 2's complement of 10110.11

Sol:- 1^s complement = 01001.00

```
        +1
 -------
 01001.01  Ans.
```

Q:- Determine 8's complement of octal 2670.

Sol:- 7^s. comp =

```
  7777
- 2670
 -----
  5107
    +1
 -----
  5110
```

Q: Determine 10's Complement of Decimal 5690.

Sol:- 9's =

```
  9999
- 5690
 -----
  4309
    +1
 -----
  4310
```

Q: Determine 16's complement of Hexadecimal 5289.

Sol:- F's =

```
  FFFF
- 5289
 -----
  AD76
    +1
 -----
  AD77
```

LectureNotes.in

CODES :-

1. BCD code :-

137

⇒ Binary coded decimal

⇒ weighted code.

⇒ 4 bit Code.

⇒ 8421 code.

⇒ Each decimal digit ~~with~~ is represented with 4 bit

Decimal	BCD	Excess -3 code
0	0000	0011
1	0001	0100
2	0010	0101
3	0011	0110
4	0100	0111
5	0101	1000
6	0110	1001
7	0111	1010
8	1000	1011
9	1001	1100

1010
1011
1100
1101
1110
1111

invailid BCD code or don't care.

⇒ During Arithemetic operation if invalid BCD present the add 0110 to get correct result.

Problems:- A combinational ckt is applied with 4bit BCD code which is represented as $D_8 D_4 D_2 D_1$, o/p is Y., Y = 1 then I/P BCD is divisible by 3. then logical expressi for Y is.

© WikiEngineering
www.raghul.org
LectureNotes.in

Sol. 0000 – 0
0011 – 3
0110 – 6
1001 – 9

D_8D_4 \ D_2D_1	$\bar{D}_2\bar{D}_1$	$\bar{D}_2D_1$	D_2D_1	$D_2\bar{D}_1$
	1		1	
D_8D_1	x	x	x	x
$D_8\bar{D}_1$		1	x	x

138

$$Y = \bar{D}_8\bar{D}_4\bar{D}_2\bar{D}_1 + \cancel{D_8\bar{D}_4\bar{D}_2D_1 + D_8D_1} + D_8D_1 + D_2D_1\bar{D}_4 + D_2\bar{D}_1D_4$$

$$Y = \bar{D}_8\bar{D}_4\bar{D}_2\bar{D}_1 + D_1D_8 + D_1D_2\bar{D}_4 + \bar{D}_1D_2D_4$$

⇒ For write BCD code each digit (decimal) is write seperately in BCD.

e.g. $(534)_{10} = (0101\ 0011\ 0100)_{BCD}$

2. Excess - 3 code :-

⇒ Excess - 3 code = $\overline{BCD + 3}$

⇒ Unweighted code

⇒ 4 bit code.

Decimal	Excess - 3 code
0	0011
1	0100
2	0101
3	0110
4	0111
5	1000
6	1001
7	1010
8	1011
9	1100

selfcomplement

⇒ It is self complement code.

⇒ Only unweighted code which is self complement is Excess 3-code.

⇒ The code which addition is 9 is self complement code.

e.g. 2421, 3321, 4311, 5211 } weighted } self complemented.

© Wiki Engineering
www.raghul.org

Q: Write 2421 weighted code.

Sol.

Decimal	2 4 2 1
0	0 0 0 0
1	0 0 0 1
2	0 0 1 0
3	0 0 1 1
4	0 1 0 0
5	1 0 1 1
6	1 1 0 0
7	1 1 0 1
8	1 1 1 0
9	1 1 1 1

139

Self complement

3. Binary to Gray code :-

(A) Binary to Gray :-

⇒ Unweighted code.

⇒ Successive no. is differ by 1 bit.

⇒ Also called unit distance code.

⇒ Also cyclic code, Reflective code and Minimum error code.

Binary 1 0 1 1 B_3 B_2 B_1 B_0

Gray 1 1 1 0 G_3 G_2 G_1 G_0

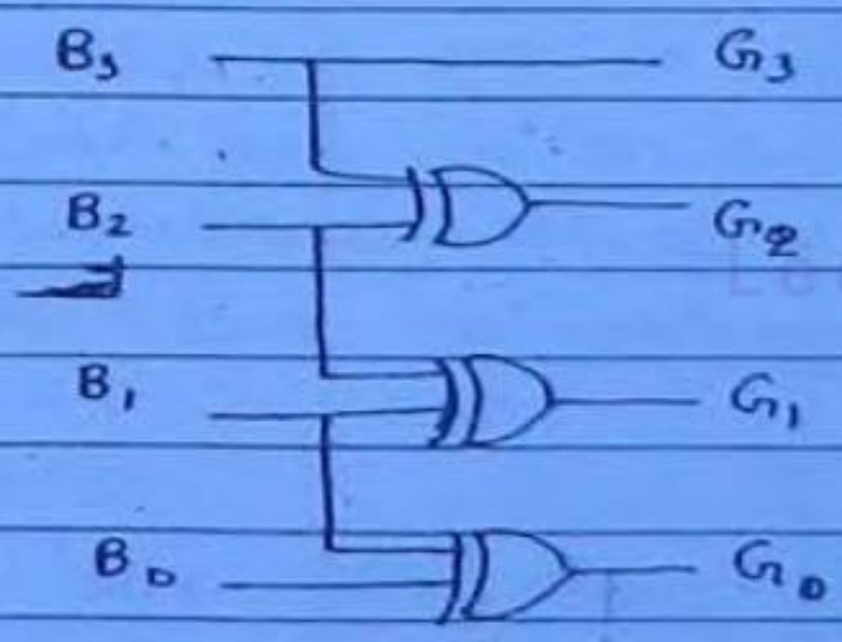

(B) Gray to Binary :-

Binary Gray

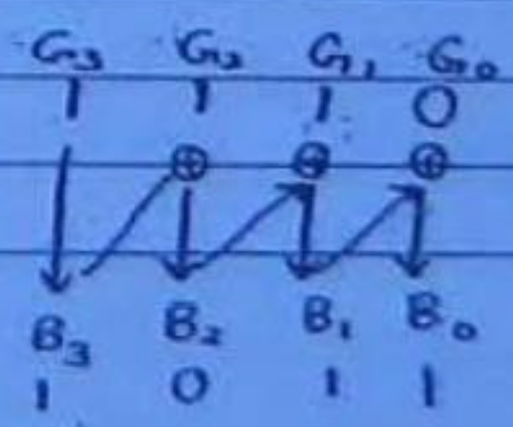

© Wiki Engineering
www.raghul.org
LectureNotes.in

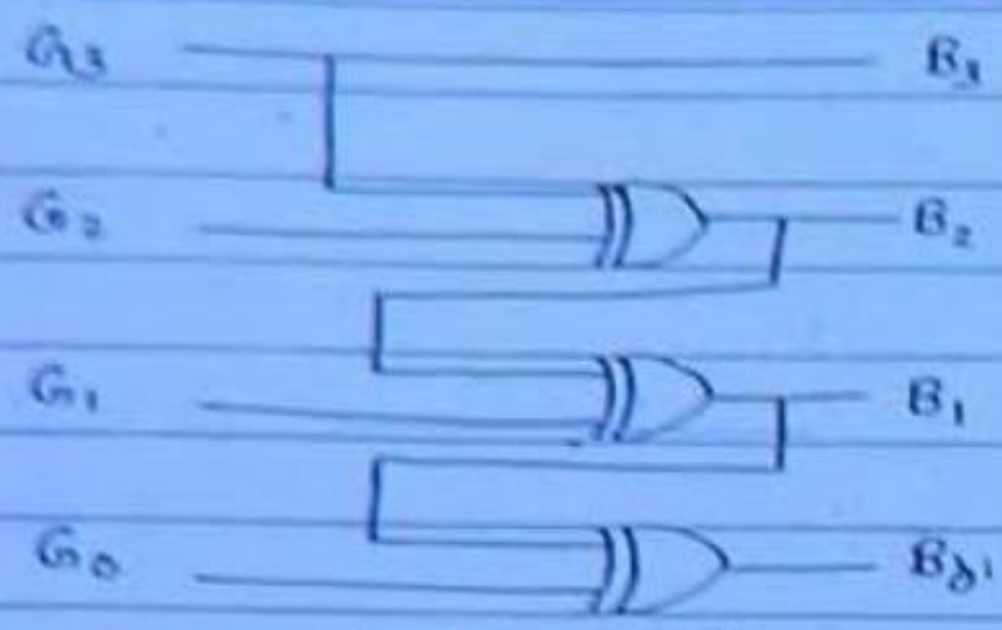

140

LectureNotes.in

☆ Data Representation :-

Data representation

- Magnitude
  - unsigned
    - +ive
    - no sign bit
  - signed
    - +ive, -ive
- complement
  - 1's
    - +ive, -ive
  - 2's
    - +ive, -ive

one extra bit → sign.

sign → MSB

logic – 0 → +ive

– 1 → -ive.

	unsigned	signed	1's	2's
+6	110	0110	0110	0110
-6	× (can't write)	1110	1001	1010

LectureNotes.in

⇒ In all representation +ive no. are represented in similar way. To represent -ive no in sign magnitude only sign bit change. In 1's complement represent of -ive no. first write positive no. and then 1's complement to it.

⇒ And in 2's complement first write +ive no. and then 2's complement to it.

Q:⇒ A no. is represent in the 2's complement for 1011 the equivalent decimal value.

Sol:- 1011 = -(0101) = -(0101)

= -5.

© Wiki Engineering

www.raghul.org

Q:- To find 5-4 ?

Sol:- 5+(-4)

+5 = 0101 +5+(-4) = 0101

-4 = 1100 1100 (14)

* 0001

⇒ In 2's complement addition if any carry present it is discarded.

⇒ In 2's complement to extend no. of bit copy MSB bit.

Q:-17. Page - (6).

Sol:- 1001 → -(0111) = -7

11001 → -(00111) = -7

111001 → -(000111) = -7.

Binary	sign mag	1's	2's
0000	+0	+0	+0
0001	+1	+1	1
0010	+2	2	2
0011	+3	3	3
0100	+4	4	4
0101	+5	+5	+5
0110	+6	+6	+6
0111	+7	+7	+7
1000	-0	-7	-8 *
1001	-1	-6	-7
1010	-2	-5	-6
1011	-3	-4	-5
1100	-4	-3	-4
1101	-5	-2	-3
1110	-6	-1	-2
1111	-7	-0	-1

LectureNotes.in

© Wiki Engineering www.raghul.org

4 bit :-

(i) range of signed mag $-7 \rightarrow +7$

(ii) " " 1's complement $-7 \rightarrow +7$

(iii) " " 2's complement $-8 \rightarrow +7$

142

⇒ For signed mag. and 1's complement :-

n bit $\rightarrow$ $-(2^{n-1}-1)$ to $+(2^{n-1}-1)$

⇒ For 2's complement :-

n bit $\rightarrow$ $-(2^{n-1})$ to $+(2^{n-1}-1)$

Q:- Perform 5+4 using 2's complement.

Sol:-

$$\begin{array}{rcl} 5 & = & 0101 \\ 4 & = & 0100 \\ \hline & & 1001 \end{array} \quad *$$

overflow may occur when same (two sign no. are added in signed representation, because for 4 bit we can only represent.

because

$-(2^{n-1}) \text{ to } +(2^{n-1}-1) = (-8 \rightarrow +7)$

Let x and y are sign bit of two no. and z is resultant sign no. then condition for overflow is.

$$Z = \boxed{\bar{X}\bar{Y}Z + XY\bar{Z}}$$ condition of overflow.

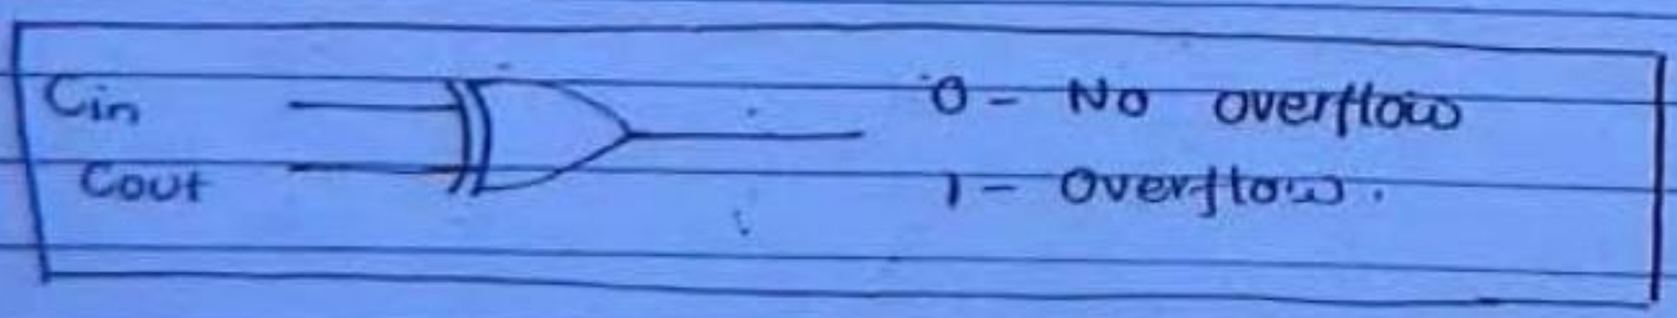

LectureNotes.in

© Wiki Engineering
www.rahul.org

let Cin = carry into MSB
Cout = carry from MSB

LectureNotes.in

LectureNotes.in

LectureNotes.in

© Wiki Engineering

www.raghul.org

Q: Design a synchronous counter using D-FF for the sequence
$0 \to 2 \to 5 \to 3 \to 4 \to 7 \to 0$.

Sol: (i)

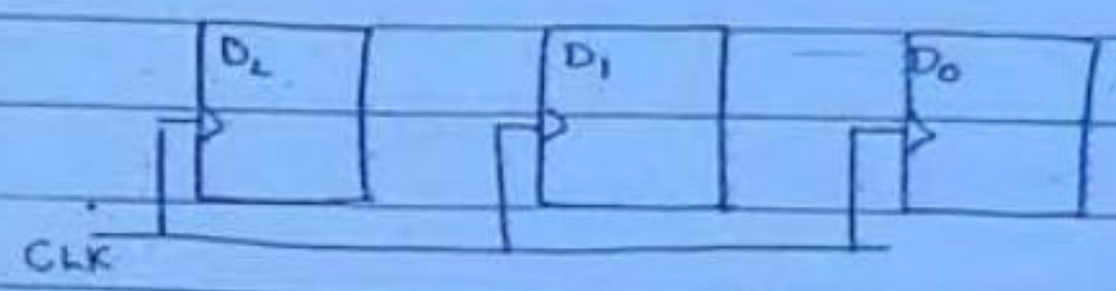

since 1, 6 is unused used lock out condition
i.e. $1 \to 0$
$6 \to 0$

(ii) Truth table:-

PS	NS
$Q_2\ Q_1\ Q_0$	$Q_{2+}\ Q_{1+}\ Q_{0+}$
0 0 0	0 1 0
0 1 0	1 0 1
1 0 1	0 1 1
0 1 1	1 0 0
1 0 0	1 1 1
1 1 1	0 0 0
0 0 1	0 0 0
1 1 0	0 0 0

145

⇒ To avoid lock out change unused states into one of used states in state table.

Q:- 10 or, 31.

10 1 | 10 11 | 0 1 0 1 | 10 11

overlapping

⇒ 4 bit ⇒ 4 state requires ⇒ 2 FF required.

LectureNotes.in

Moore & Mealy :-

DATE

State Machines

Moore	Mealy
⇒ o/p depend on present state	⇒ o/p depend on → Present st → Present i/p
⇒ Design easy	⇒ Design complex.
⇒ More no. of state	⇒ less no. of state.

146

LectureNotes.in

© Wiki Engineering

www.raghul.org

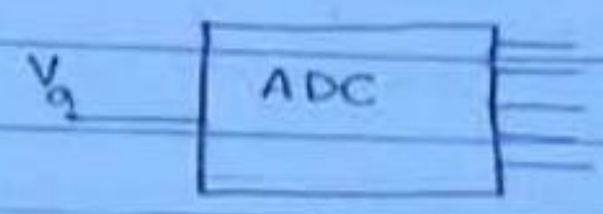

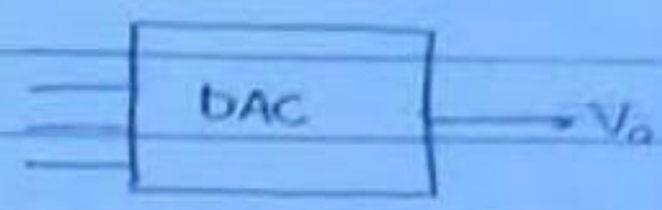

142

nter type ADC

R type ADC

(c) Parallel comparator type

(d) dual slope integrating type.

(i) Weighted resistor

(ii) R-2R ladder.

(A) Digital to Analog converter (DAC) :-

(1) Resolution / Step size.

(2) Analog o/p voltage.

(3) V_{FS} (4) % Resolution (5) Error Accuracy.

1. Resolution / Step size :-

It change in analog voltage corresponding one LSB increment in the I/P.

$$\boxed{\text{Resolution} = \frac{V_r}{2^n - 1}}$$

where V_r = reference voltage corresponding to logic 1

n = no. of bits.

2. Analog o/p voltage :-

$$\boxed{V_{analog} = \text{Resolution} \times \text{Decimal equivalent of binary data}}$$

Q. In a 4 bit DAC reference voltage 5V. if binary data 100: is applied then analog voltage is

Sol:

$$\text{Resolution} = \frac{V_r}{2^n - 1} = \frac{5}{16-1} = 1/3$$

$$V_{analog} = \frac{1}{3} \times 9 = 3V.$$

© Wiki Engineering www.raghul.org

(3) V_{FS} :-

Full scale voltage is the max. o/p voltage of DAC.

$$V_{FS} = \frac{V_r}{2^n - 1} \times 2^n - 1$$

$$\boxed{V_{FS} = V_r.}$$

148

(4) % Resolution :-

$$\boxed{\% \text{ Resolution} = \frac{\text{Resolution}}{V_{FS}} \times 100.}$$

$$\boxed{\% \text{ Resolution} = \frac{1}{2^n - 1} \times 100}$$

(5) Errors / Accuracy :-

→ error acceptable in ADC's or DAC's is equal to resolution or step size.

(B) Analog to Digital converter :-

Characteristics of ADC's :-

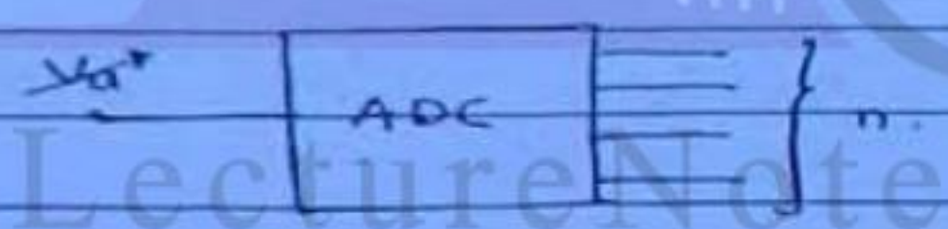

(1) $$\boxed{\text{Resolution} = \frac{V_{range}}{2^n - 1}}$$

where,

$V_{range} = V_{max} - V_{min}$.

(2) $$\boxed{\% \text{ Resolution} = \frac{1}{2^n - 1} \times 100}$$

(3) $$\boxed{\text{Dynamic range} = (6n + 1.76)\,dB \approx 6n\,dB}$$

© Wiki Engineering

Resolution of R-2R ladder type DAC's is :-

$$\boxed{\text{Resolution} = \frac{V_r}{2^n}}$$

(49)

Ques- 5. Page 41.

Sol^n-

$V_{FS} = 10.24$

$n = 10$

$$\text{Resolution} = \frac{10.24}{2^{10}} = 10mV.$$

$$\text{error} = \frac{LSB}{2} = \frac{10mV}{2} = \pm 5mV$$

calibarate at 25° i.e. error at 25°c is zero.

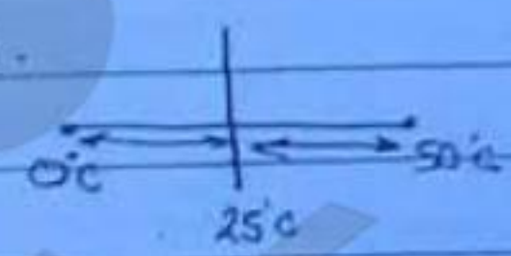

$\Rightarrow \pm 25°c \rightarrow 5mV$

$$1°c = \frac{5}{25°c} mV$$

$$= 0.2\ mV/°c = 200\ \mu V/°c.$$

LectureNotes.in

(A) Digital to Analog Circuit :-

Digital to Analog circuits :-

(A) Weighted Resistor DAC :- (4Bit) :- (150)

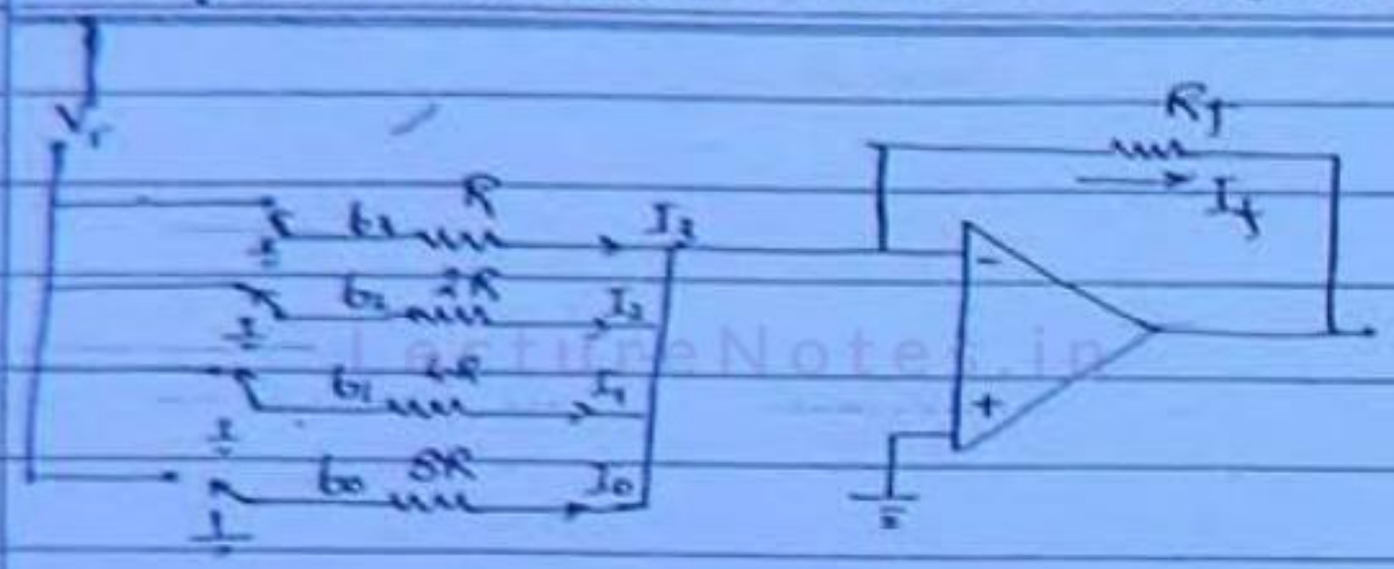

b_3 = MSB = more current

b_0 = LSB = less current

$$I_3 = \frac{V_r}{R} \times b_3$$

$$I_2 = \frac{V_r}{2R} \times b_2$$

$$I_1 = \frac{V_r}{4R} \times b_1$$

$$I_0 = \frac{V_r}{8R} \times b_0$$

$$I_f = I_3 + I_2 + I_1 + I_0$$

$$V_0 = -I_f R_f$$

$$\boxed{\text{LSB resistance} = (2^{n-1}) \text{ - MSB resistance.}}$$

⇒ In weighted resistor DAC the accuracy is less due to use of different resistance.

⇒ To overcome this we use R-2R ladder used.

© Wiki Engineering

DATE

(B) R-2R ladder :-

- Normal ladder
- Inverted ladder.

* Non inverting
* Inverting.

(157)

(B₁) 3 Bit R-2R ladder :-

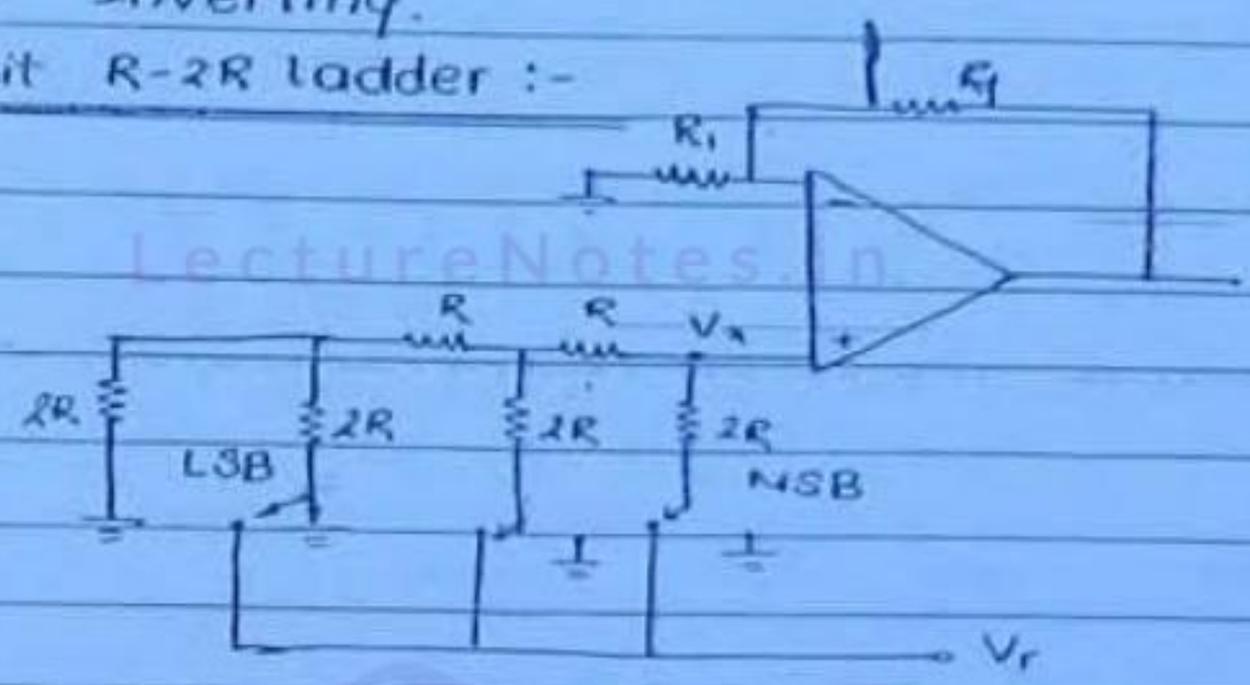

⇒ Adjecent to 2R is LSB.

$$V_o = \left(1 + \frac{R_f}{R_1}\right) V_x$$

V_x = Resolution * Decimal equivalent of Binary data.

$$= \frac{V_r}{2^n} * \sum_{i=0}^{n-1} 2^i b_i$$

(decimal equivalent = $b_2 b_1 b_0$ (binary data))

$$b_2 2^2 + b_1 2^1 + b_0 2^0 = \sum_{i=0}^{n-1} 2^i b_i$$

$$\boxed{V_o = \frac{V_r}{2^n} * \sum_{i=0}^{n-1} 2^i b_i * \left(1 + \frac{R_f}{R_1}\right)}$$

V_o = Resolution * Decimal * gain.

(B₂) 3 Bit R-2R ladder (Inverting) :-

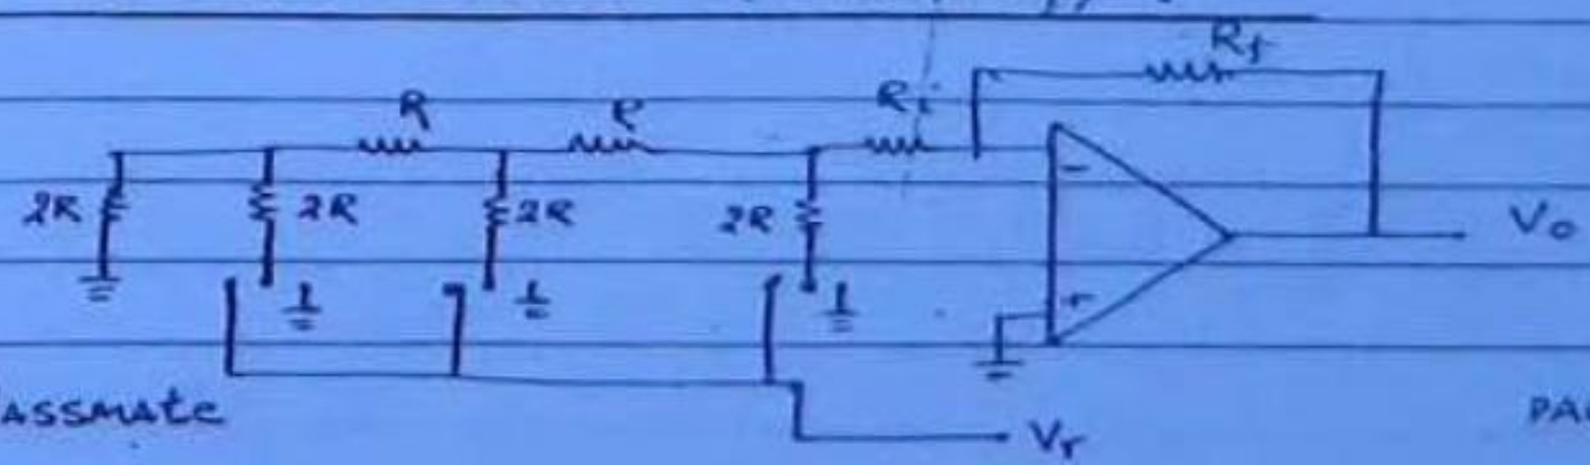

classmate

PAGE

© Wiki Engineering
www.raghul.org

V_o = Resolution * decimal * gain.

$$\boxed{V_o = \frac{V_r}{2^n} \times \sum_{i=0}^{n-1} 2^i b_i \times \left[\frac{-R_f}{R_1+R}\right]}$$

(152)

$$\boxed{I_f = \frac{V_r}{2^n} \times \sum_{i=0}^{n-1} 2^i b_i \times \left[\frac{1}{R_1+R}\right]}$$

LectureNotes.in

3) Inverted ladder type DAC circuit :-

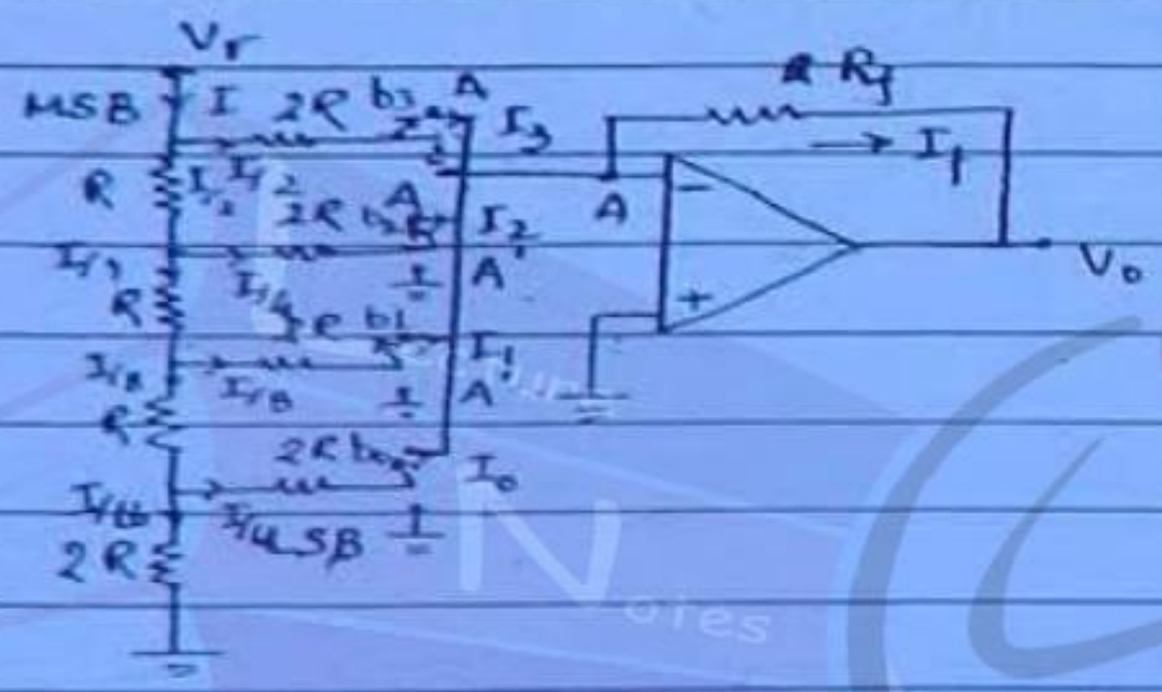

⇒ Since A and A' both are ground then (logical or virtual ground and ground) the switch is at same potential then charging and discharging of switch problem removed in previous ckt.

$I = V_r/R$

$I_3 = \frac{I}{2} \times b_3$

$I_2 = \frac{I}{4} \times b_2$

$I_1 = \frac{I}{8} \times b_1$

$I_0 = \frac{I}{16} \times b_0$

© Wiki Engineering
www.raghul.org

$$I_f = I_0 + I_1 + I_2 \; I_3$$

$$= \frac{I}{16}\left[8b_3 + 4b_2 + 2b_1 + b_0\right]$$

$$= \frac{V_r}{2^n}\left(\sum_{i=0}^{n-1} 2^i b_i\right) \times \frac{1}{R} \quad (153)$$

$$\boxed{I_f = \frac{V_r}{2^n}\left(\sum_{i=0}^{n-1} 2^i b_i\right)\frac{1}{R}}$$

$$\boxed{V_o = \frac{V_r}{2^n}\left(\sum_{i=0}^{n-1} 2^i b_i\right)\left(-\frac{R_f}{R}\right)}$$

LectureNotes.in

© Wiki Engineering www.raghul.org

Analog to Digital circuit :-

(A) Counter type ADC :-

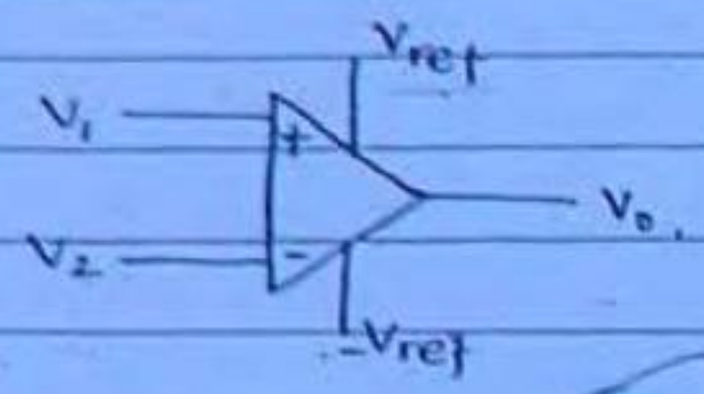

154

$V_1 > V_2 \Rightarrow V_o = V_{ref}$

$V_1 < V_2 \Rightarrow V_o = -V_{ref}$

⇒ It is one bit quantizer.

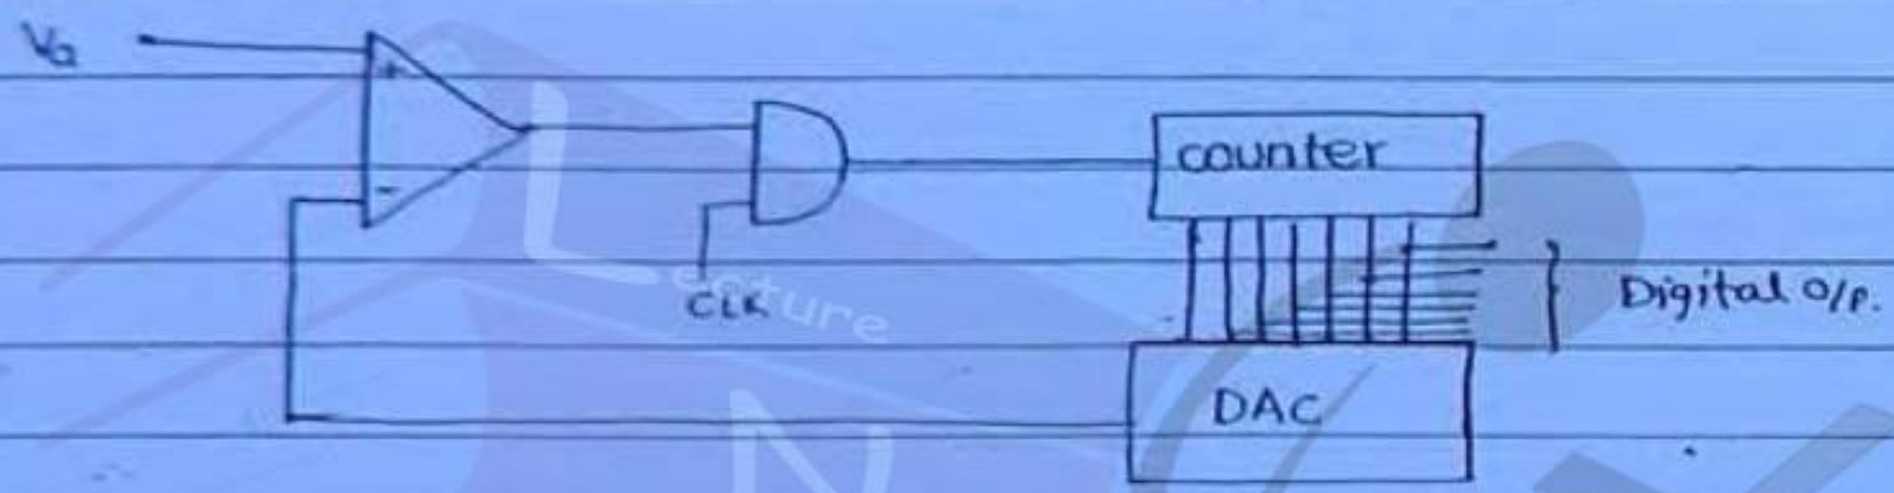

⇒ In counter type ADC a comparator is used in I/p stage to compare I/p analog voltage with reference voltage provided by DAC feedback.

⇒ A counter is used to count no. of clock pulses applied when analog voltage (V_a) is greater than DAC voltage then o/p is 1 then counter count and if analog voltage (V_a) is less than reference voltage (DAC voltage) then o/p is 0 and counter stops counting and it give the comparative digital o/p.

⇒ Max. no. of clock pulses required for N bit conversion is $2^n - 1$.

⇒ Max. conversion time $= (2^n - 1)\, T_{CLK}$.

⇒ Conversion time depends on I/p analog voltage.

⇒ Also called Ramp type ADC

© Wiki Engineering
www.raghul.org

Range of analog	O/P.
$V_a > 7V_r/8$	111
$7V_r/8 > V_a > 6V_r/8$	110
$6V_r/8 > V_a > 5V_r/8$	101
$5V_r/8 > V_a > 4V_r/8$	100
$4V_r/8 > V_a > 3V_r/8$	011
$3V_r/8 > V_a > 2V_r/8$	010
$2V_r/8 > V_a > V_r/8$	001
$V_r/8 > V_a$	000

156

(c) SAR Type (Successive approximation Register) :-

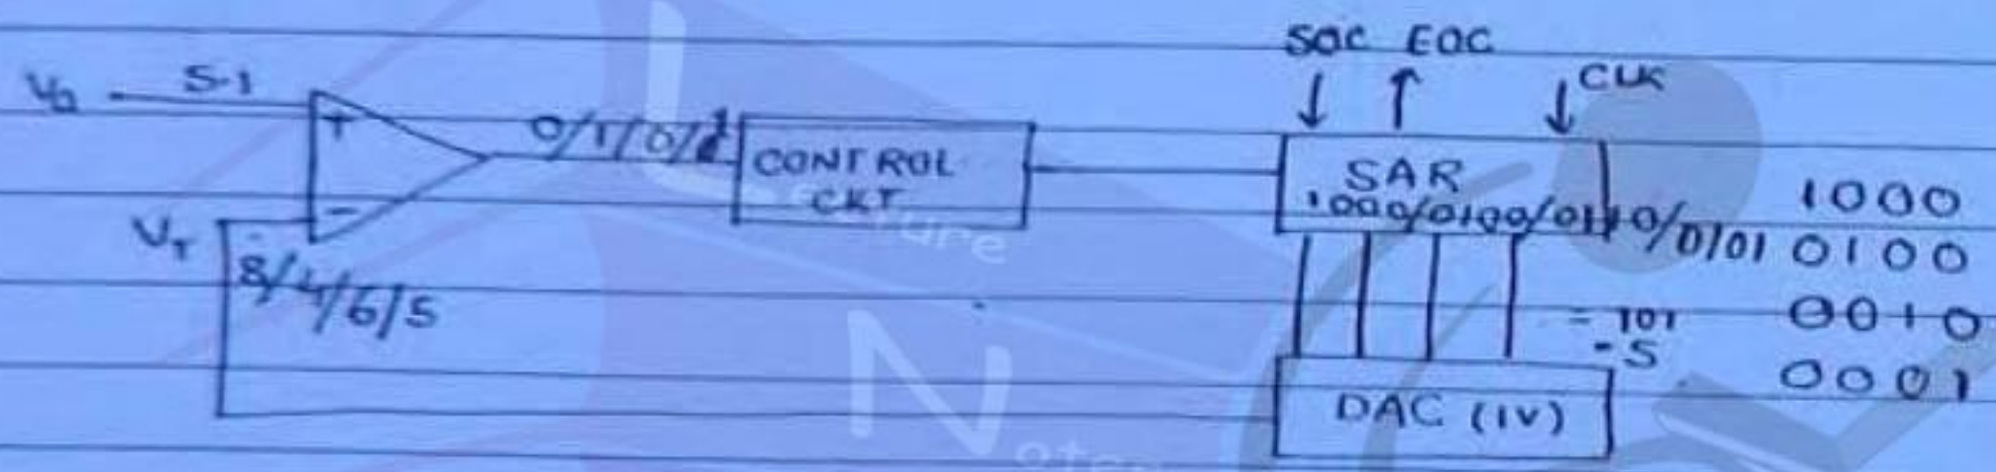

SOC - Start of conversion
EOC - End of conversion

⇒ Ring counter is used to set the base
⇒ Control ckt is used to reset ($V_a < V_r$)

⇒ In SAR Type ADC, ring counter will present to successively set the base.
⇒ Control ckt is used to reset, previously set bit when $V_a < V_r$.
⇒ In SAR Type ADC, n clock pulse required for n bit conversion.
⇒ $\boxed{\text{conversion time} = n T_{CLK}}$

⇒ SAR Type, conversion time uniform for any analog voltage. (conversion time is Independent of

© Wiki Engineering
www.raghul.org

⇒ SAR is mostly used in Digital ckt to provide interface with microprocessor.

(D) Dual slope Integrating type ADC :-

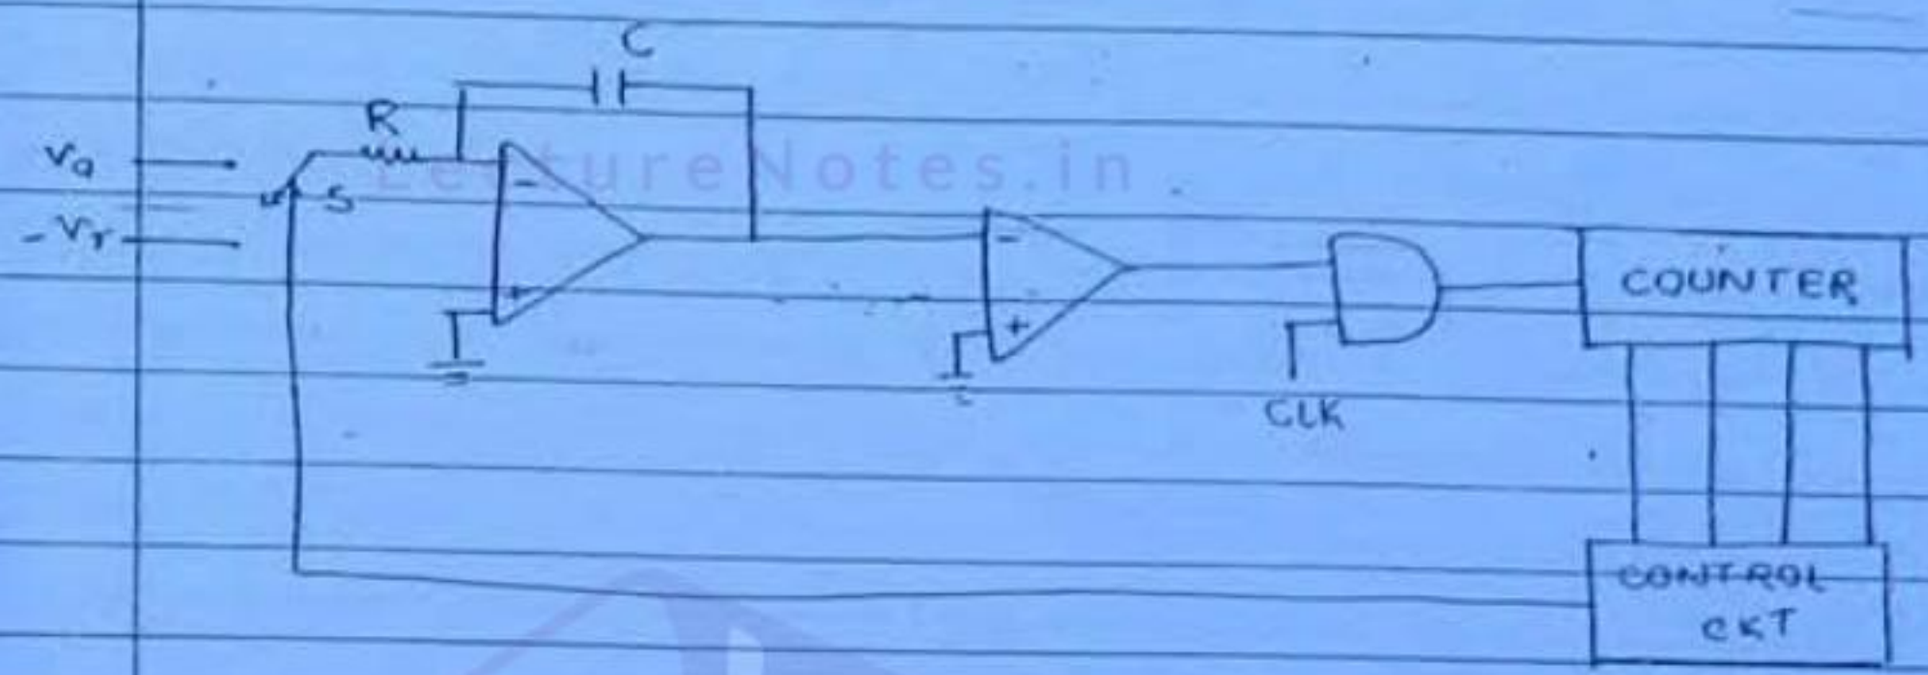

⇒ V_r slope is always greater than V_a slope.

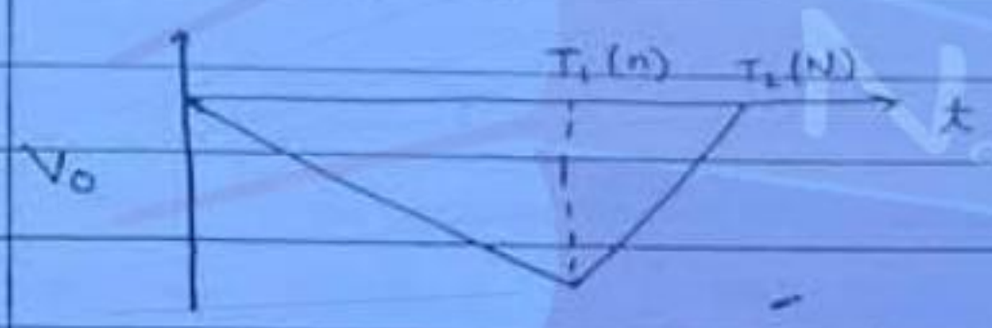

$$T_1 = 2^n T_{CLK}$$
$$T_2 = N T_{CLK}$$

⇒ In Dual slope a counter is used to count clock pulse
⇒ conversion started initially counter is reset to zero and switch s is connected to V_a (analog voltage) wh integrater is integrating analog voltage o/p of integrate will becom -ive voltage. due to this comparator o/p i 1. and counter continues cont clock pulses. after 2^n clk pulses again counter value become zero. at this time t_1 control ckt connect switch s to $-V_R$. During V_R integration upto T_2 time o/p of integrator is -ive. due to this counter again contin clock pulses. at time T_2 o/p of integrator become +i and comparator o/p become 0 due to this counte

© Wiki Engineering www.raghul.org

will stops. let N is count when counter stops:

Then,

$$V_o = -\frac{V_a}{RC} \cdot T_1 + \frac{V_r}{RC}(T_2 - T_1)$$

at time $t = T_2$, $V_o = 0$.

158

$$\Rightarrow 0 = -\frac{V_a}{RC} \cdot T_1 + \frac{V_r}{RC}(T_2 - T_1)$$

$$\Rightarrow V_a T_1 = V_r(T_2 - T_1)$$

$$\Rightarrow V_a \cdot 2^n \cdot T_{CLK} = V_r (N T_{CLK})$$

$$\Rightarrow N = \frac{V_a \cdot 2^n}{V_r} = \frac{V_a 2^n}{V_r}$$

$$\Rightarrow V_a = \frac{V_r}{2^n} \cdot N.$$

$$\boxed{V_a = \frac{V_r}{2^n} \cdot N}$$

If $V_r = 2^n$ then,

$$\boxed{V_a = N}$$

⇒ This is the most accurate ADC among all

⇒ All ripple and noise is seperated or compressed by capacitor. (Therefore this have more accuracy due to integrator).

⇒ max. no. of clock pulse $= 2^n - 1$.

$\approx 2^n + 2^n = 2^{n+1}$.

⇒ It is slowest among all.

Application :-

⇒ Mostly used in digital voltmeter.

Clock pulse :-

(i) counter type $= 2^n - 1$ (ii) Flash $= 1$

(iii) SAR $= n$ (iv) Dual type $= 2^{n+1}$

© Wiki Engineering

www.raghul.org

DATE

1.

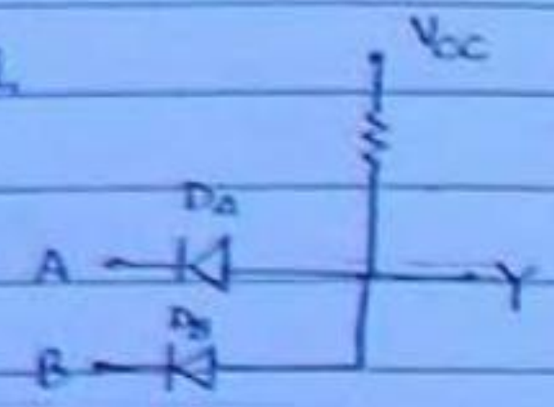

(Diode AND Gate)

A	B	D_A	D_B	Y
0	0	ON	ON	0
0	1	ON	OFF	0
1	0	OFF	ON	0
1	1	OFF	OFF	1.

2.

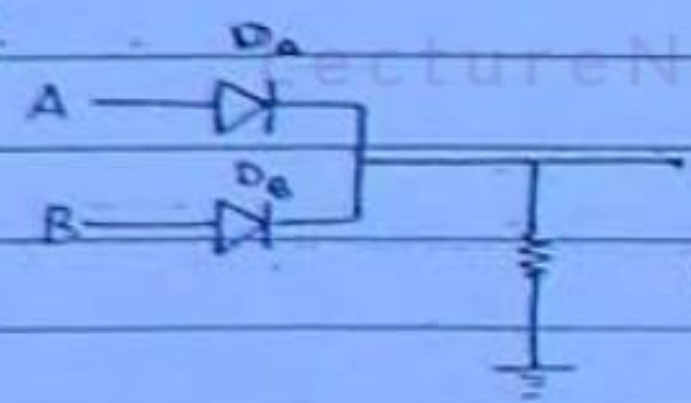

$V_o = A + B$

(Diod OR Gate)

160

⇒ For Not gate we use transistor.

em:-

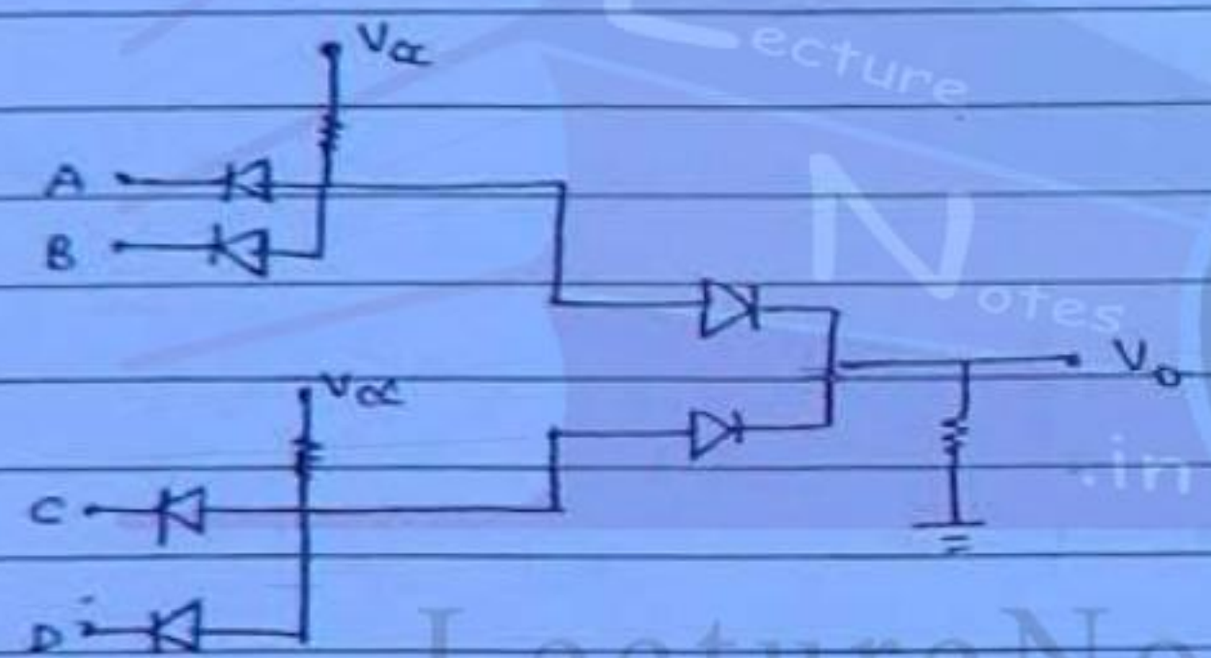

:- $V_o = AB + CD$.

3. NOT :-

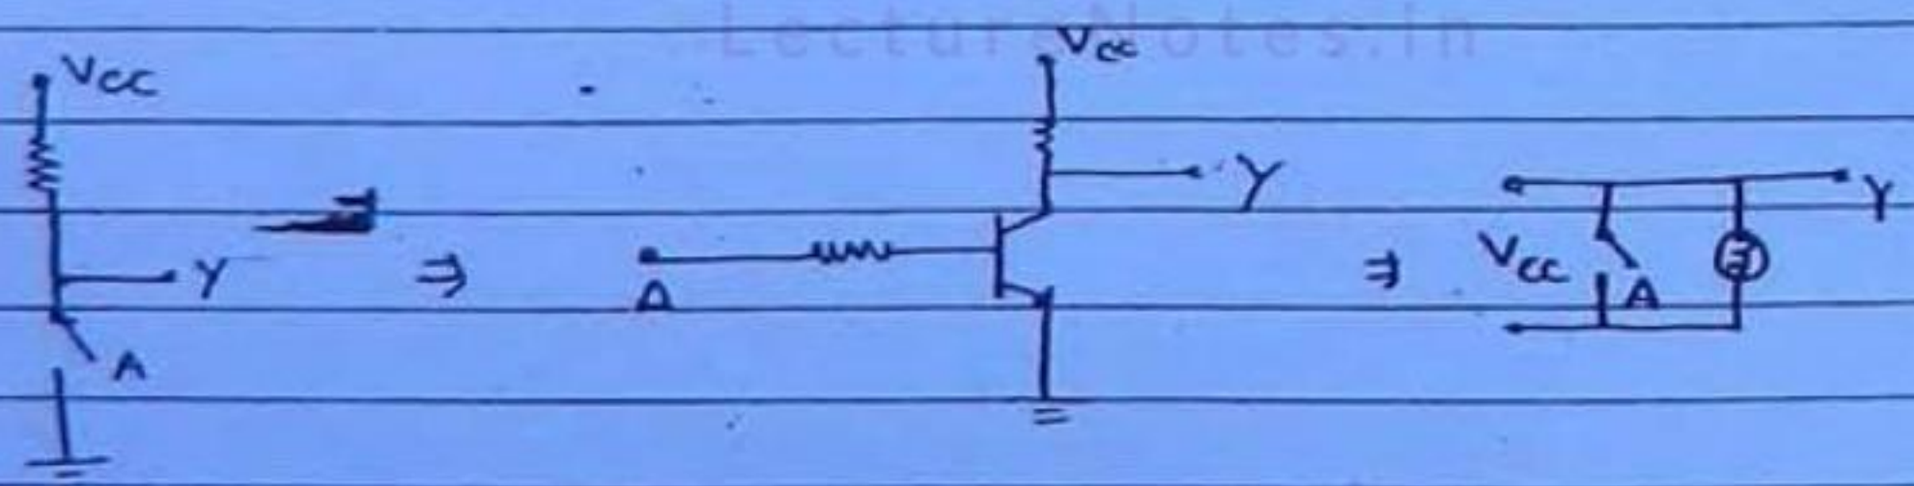

if A = 0, T_r is cutoff, Y = 1.

if A = 1, T_r is SAT, Y = 0

© Wiki Engineering

www.raghul.org

4. NAND Gate :-

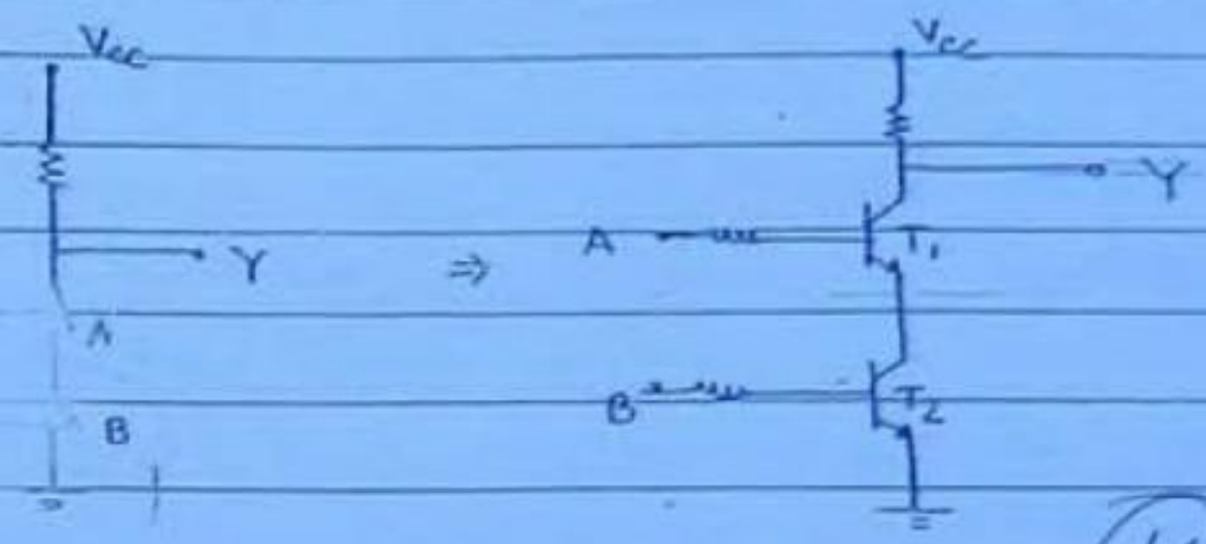

A	B	Y
0	0	1
0	1	1
1	0	1
1	1	0

161

5. NOR Gate :-

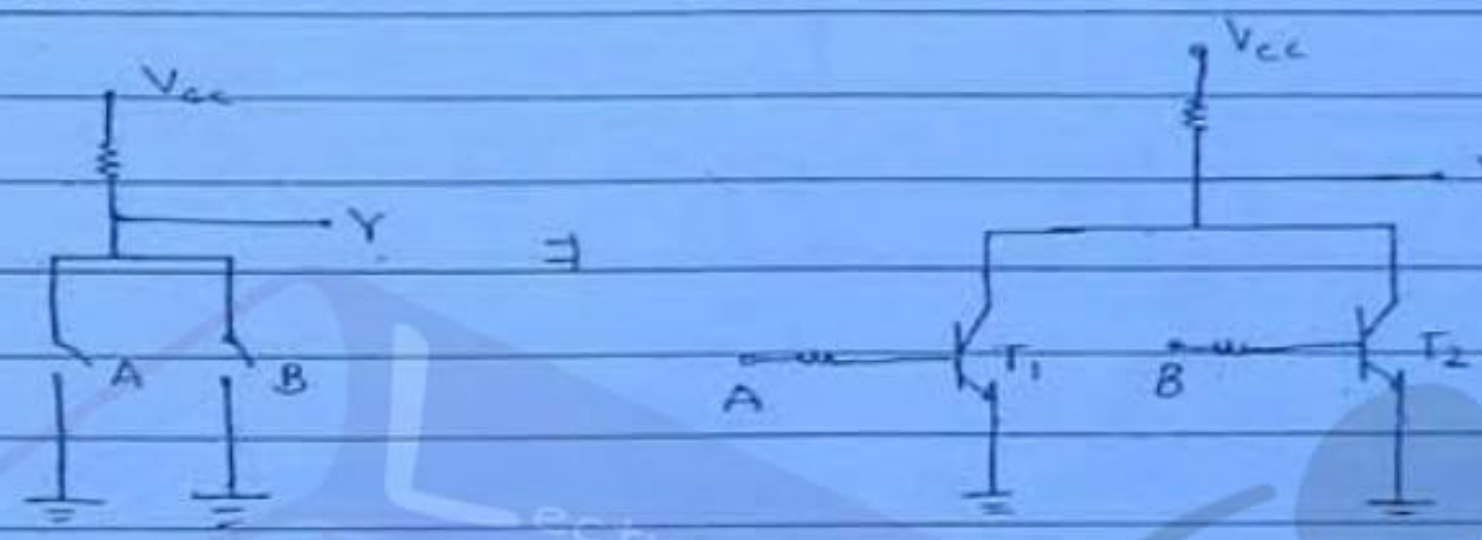

A	B	Y
0	0	1
0	1	0
1	0	0
1	1	0

⇒ When logic gate o/p is 1 (Tr. OFF) it will act as current source.

⇒ When logic gate o/p is 0 (Tr. ON) it will act as current sink.

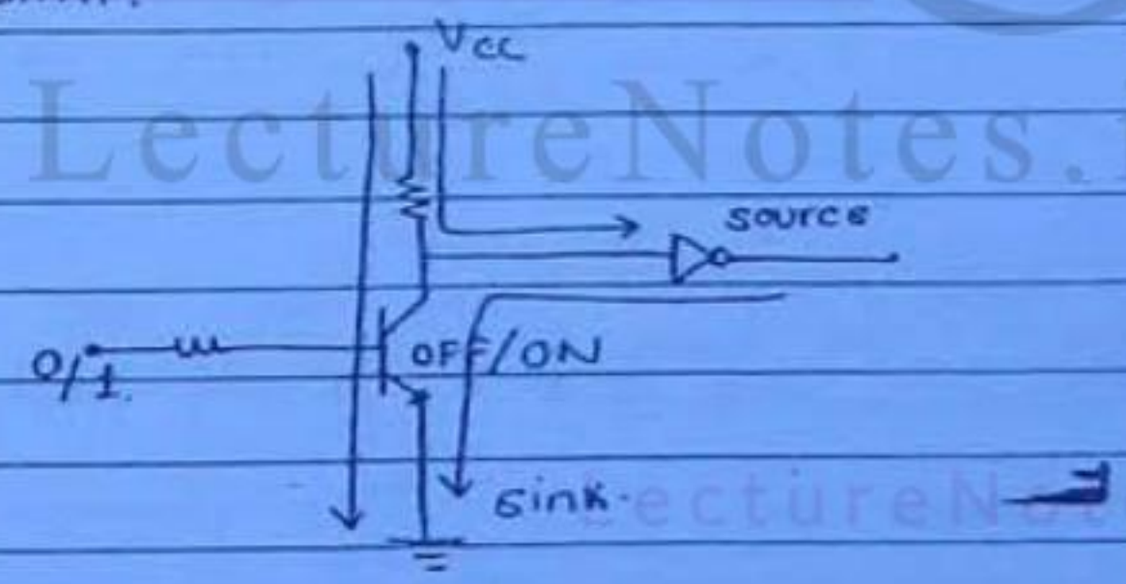

⇒ In cutoff and saturation region transistor will act as switch.

J_E	J_C	Region
RB	RB	cutoff
RB	FB	Reverse active
FB	RB	Active
FB	FB	SATURATION

classmate

© Wiki Engineering
www.raghul.org

Characteristics of logic family :-

(i) Propogation delay :- (t_{pd}) :-

⇒ It is measured in nsec.

162

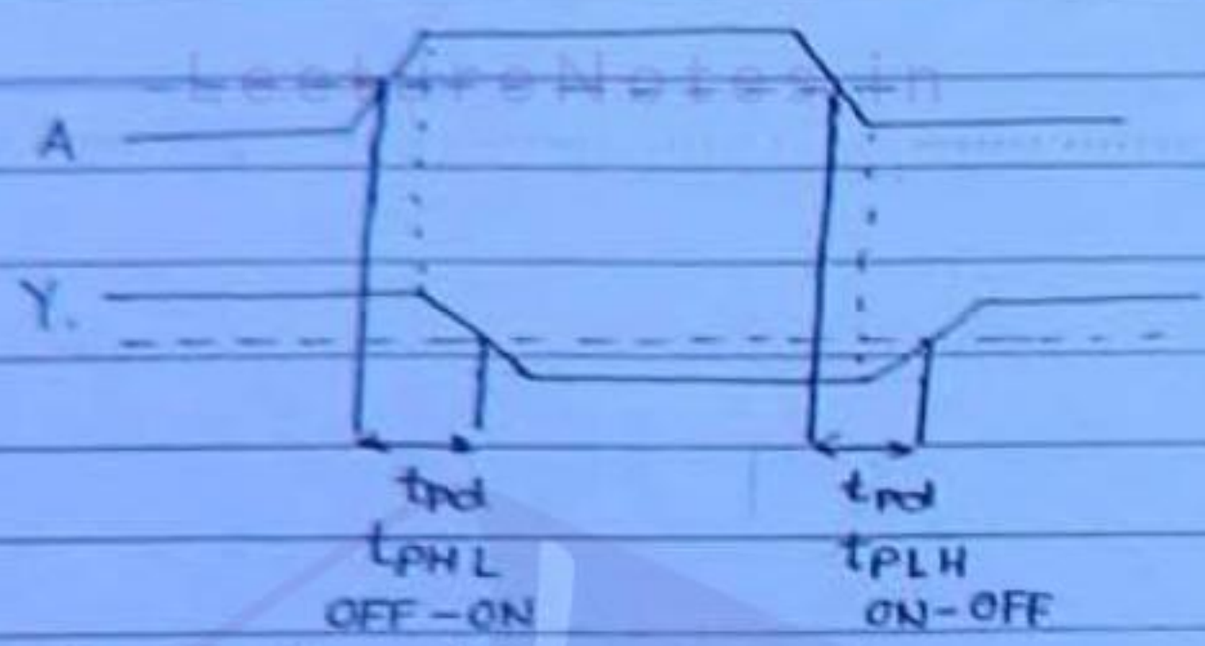

$$t_{pd} = \frac{t_{PHL} + t_{PLH}}{2}$$

⇒ Propogation delay is always measured from 50% value of the diag.

⇒ In Tr, ON to OFF time is more compare to OFF to ON time due to saturation or storatge time.

(ii) Power dissipation :-

⇒ Power dissipation by each logic gate.

⇒ P_{diss} = mw.

$$P_{diss} = V_{cc} \cdot I_{ccavg}$$

(iii) Figure of Merit :-

$$FOM = P_{diss} * t_{pd}$$ = PJoule.

⇒ I^2L have best FOM.

⇒ value of FOM is low the logic family is best

© Wiki Engineering
www.raghul.org

(iv) Fan out :-

It is max. no. of logic gate that can be given by 1 logic gate.

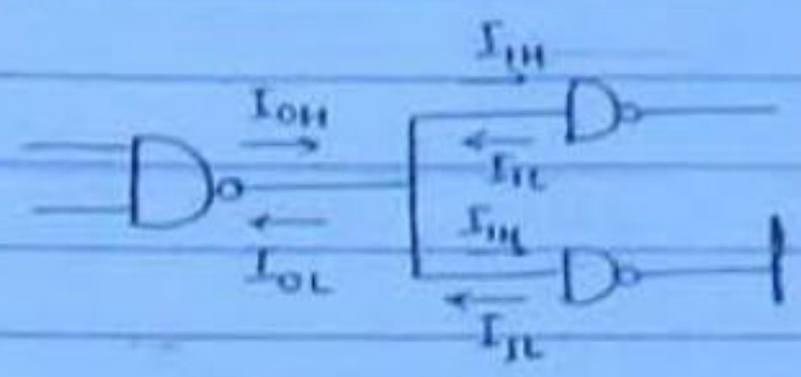

163

$$fanout_H = \frac{I_{OH}}{I_{ILH}}$$

$$fanout_L = \frac{I_{OL}}{I_{IL}}$$

⇒ Max. fan out is min value of ($fanout_H$, $fanout_L$).

Ques:- if $I_{OH} = 400\,\mu A$, $I_{IH} = 40\,\mu A$, $I_{OL} = -16\,mA$, $I_{IL} = 1.6$ find fanout.

Sol'n.

$$fanout_H = \frac{400}{40} = 10$$

$$fanout_L = \frac{16}{1.6} = 10$$

max. fan out $= (10, 10)_{min} = 10$.

⇒ TTL have max fanout.

(v) Noise Margin :-

It is the max. noise voltage that can be added to the logic family which will not affect the o/p.

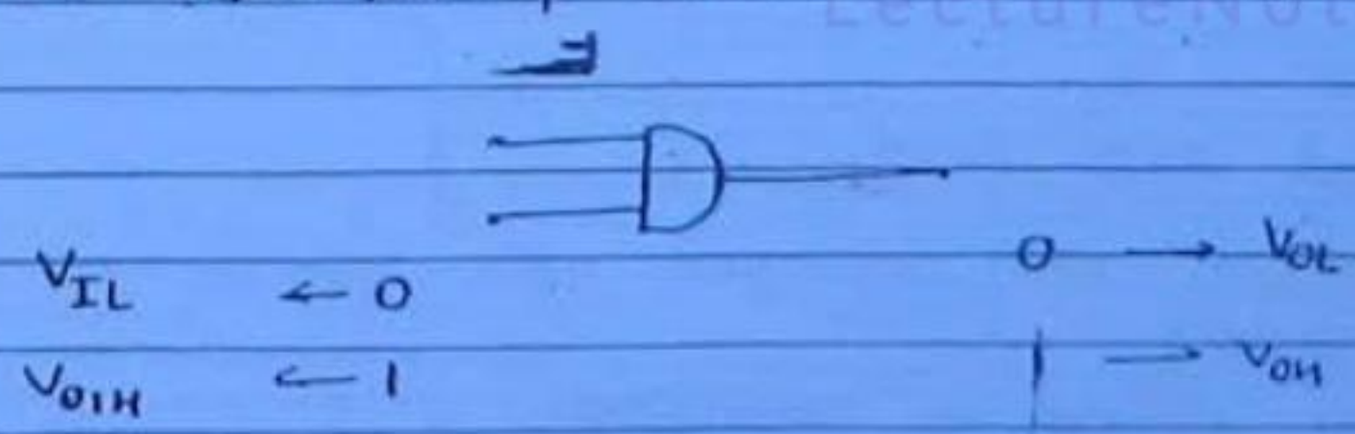

$$\boxed{V_{OH} > V_{IH} > V_{IL} > V_{OL}}$$

high level NM$_H$ — low level NM$_L$

© WikiEngineering www.raghul.org

$$NM_H = V_{OH} - V_{IH}$$

$$NM_L = V_{IL} - V_{OL}$$

overall noise margin = $(NM_H, NM_L)_{min}$.

164

(A) RTL (Register Transistor logic) family :-

LectureNotes.in

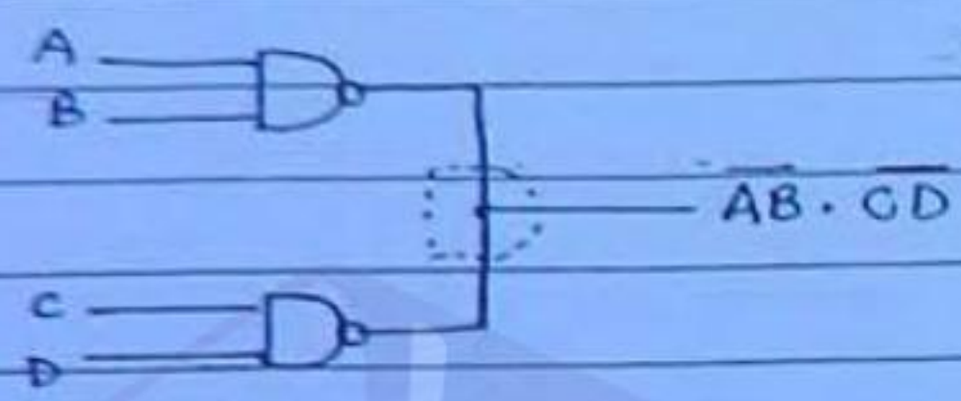

(wired AND)

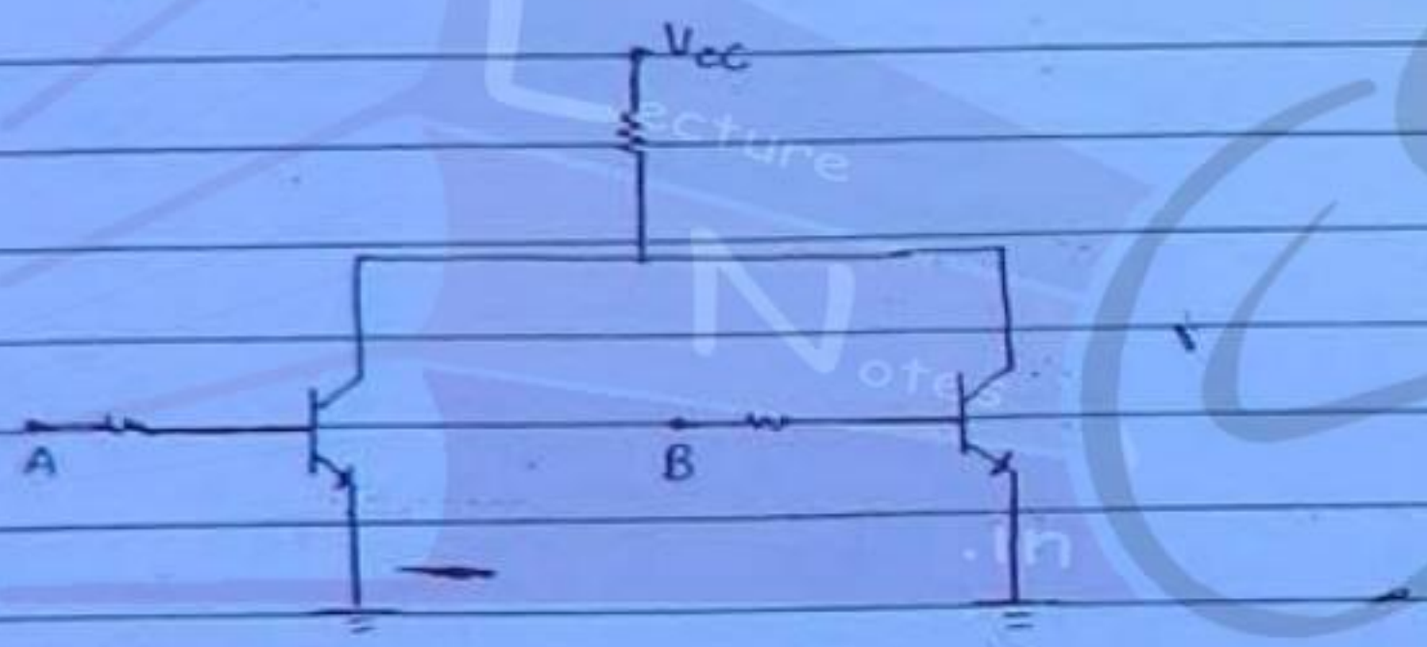

⇒ Basic gate - NOR gate.

⇒ t_{pd} = 50ns

⇒ P_{diss} = 10 mW.

⇒ FOM = 500 PJ

⇒ NM = 0.2 V

⇒ Fanout = 3

⇒ wired AND used.

Disadvantage :-

1. lower speed of operation.
2. low Noise margin
3. lowest fan out.

DATE

(B) DCTL (Direct Coupled Transistor logic) :-

⇒ In RTL logic family if I/P resistance removed then resultar is DCTL.

⇒ t_{pd} = 40 nsec.

(165)

Disadvantage :-

⇒ Current Hogging.

LectureNotes.in

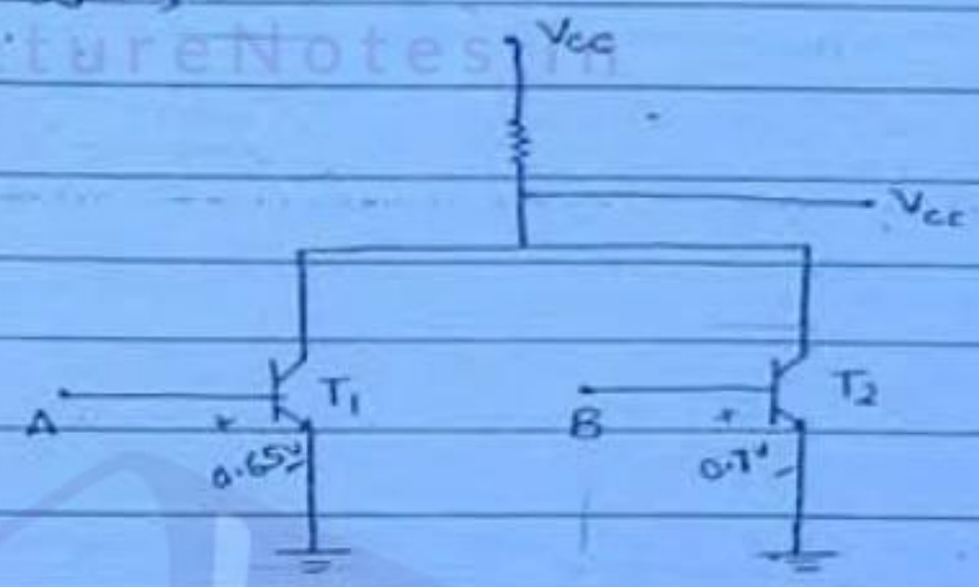

A	B	T_1	T_2	Y
0	0	OFF	OFF	1
0	1	OFF	ON	0
1	0	ON	OFF	0
1	1	ON	OFF	0

due to current Hogging

⇒ In DCTL logic, If tr. switch different characteristics are use the Tr having lower V_{BESAT} then first ON and it will no allow other Tr to ON. this phenomenon is known as curre Hogging.

Integrated Injection logic (I^2L) :-

⇒ It's injecting the current into Base.

LectureNotes.in

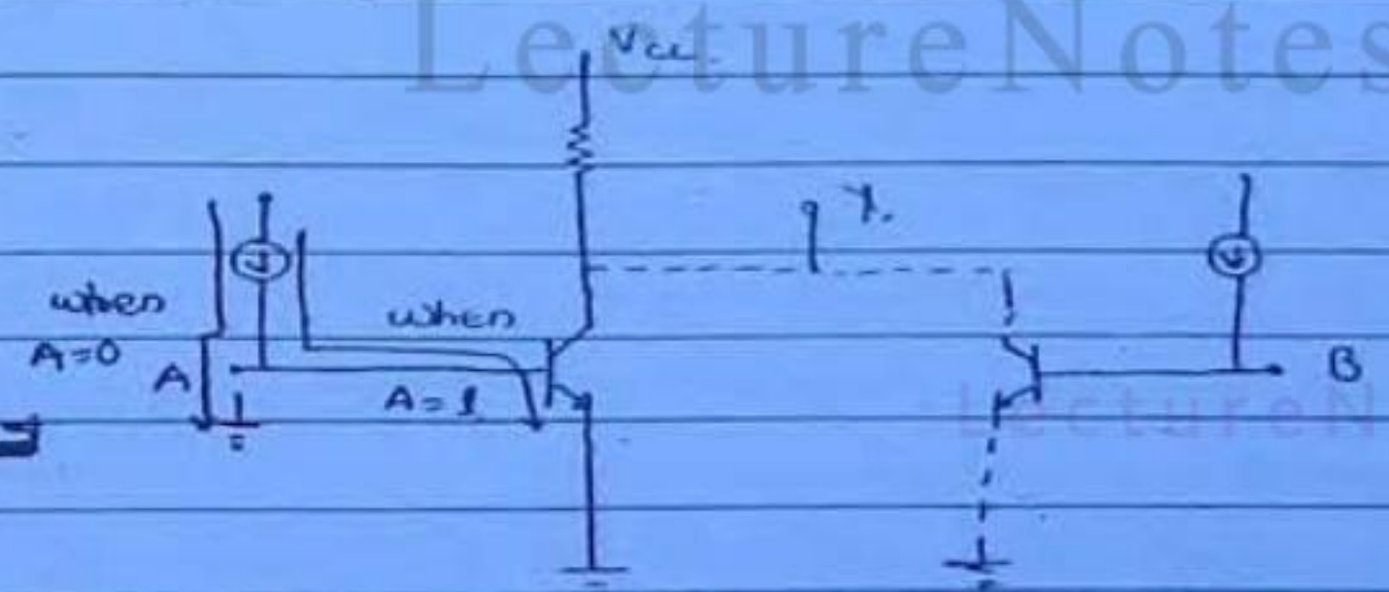

⇒ When A is high the current flows through the base of Tr.

⇒ i.e. Tr. must be ON.

⇒ I^2L covers less space.

⇒ ie I^2L have high density.

⇒ It is equivalent to NOT gate.

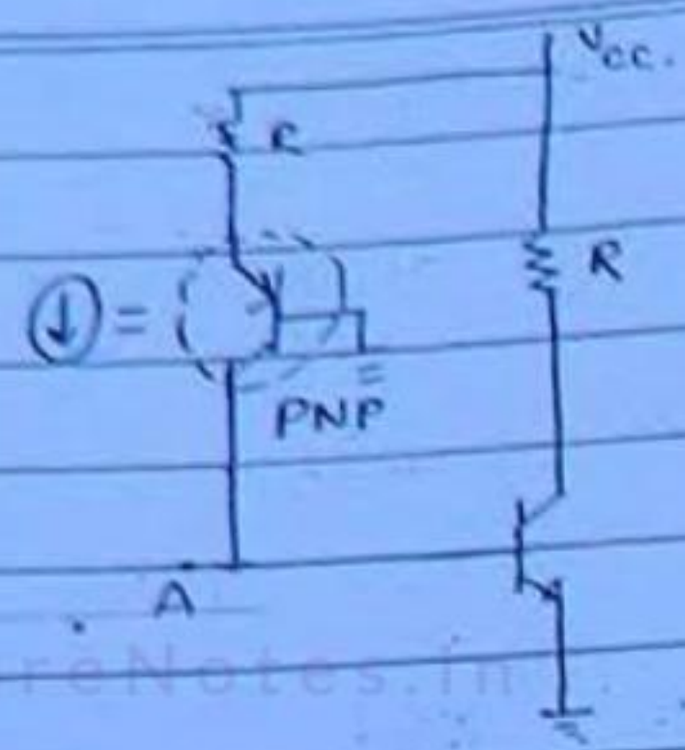

⇒ There is no problem of current Hogging.

⇒ FOM = 0.1 PJ – 0.7 PJ.

Best FOM among all logic family.

⇒ t_{pd} = 40ns.

⇒ Fan out = 8.

SSI	–	1-12	no of gates used in this integration.
MSI	–	13-99	
LSI	–	100-1000	
VLSI	–	>1000.	

⇒ In I^2L logic, due to integration of PNP and NPN tr. it occupies less area hence density are more in I^2BL logic. It is mostly used in MSI and LSI logic family.

⇒ Also called MTL (Merged logic family) due to integration of Transistor.

© Wiki Engineering
www.raghul.org

DTL (Diode Transistor logic) family :-

(167)

⇒ AND Gate followed by NOT gate.

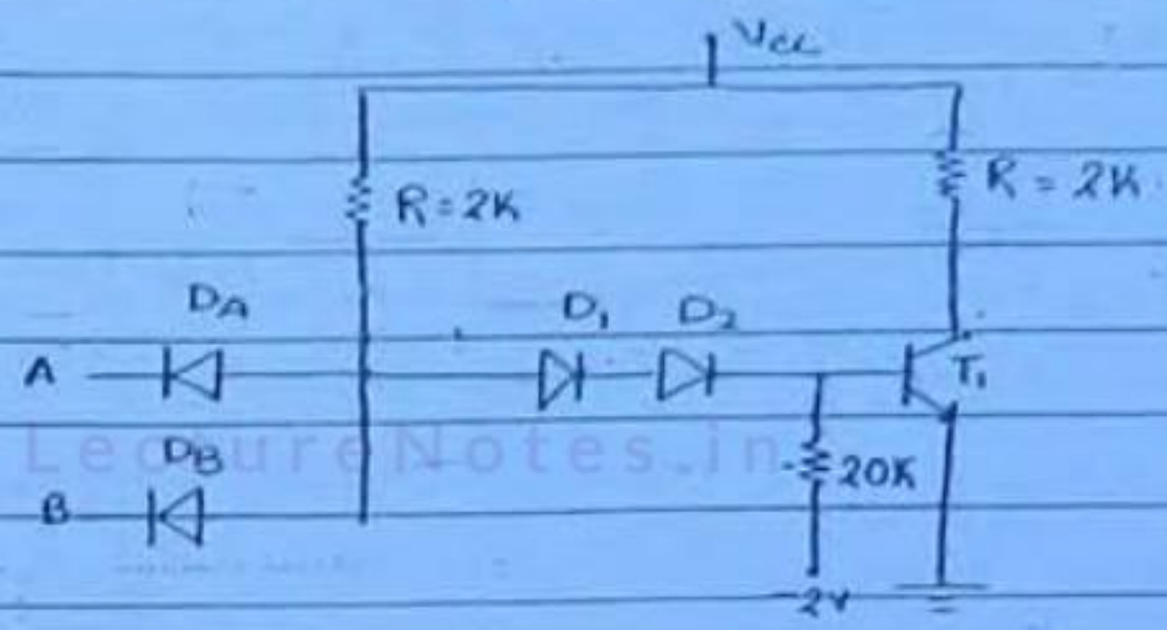

A	B	T_1	Y
0	0	OFF	1
0	1	OFF	1
1	0	OFF	1
1	1	ON	0

⇒ 20K resister used only for discharging the junction capacitance. The capacitance which is discharge is Transition cap. C_c.

⇒ The ckt is called Basic DTL gate.

⇒ In this any one of the I/P is low or all the I/P are low. D_A ~~and~~ or D_B will become forward bias where as D_1 and D_2 will become reverse bias due to the Tr T_1 is OFF and O/P is 1.

⇒ when all the I/P's are high then D_A and D_B become reverse bias and D_1 and D_2 will become forward bias and T_1 is ON and O/P is low.

⇒ The basic gate is NAND gate.

⇒ t_{Pd} = 30ns.

⇒ P_{diss} = 8 mw.

⇒ FOM = 240 PJ

⇒ NM = 0.75 V

⇒ Fanout = 3

⇒ It provides wired AND operation.

⇒ To increase fan out we introduce Tr in place of Diode.

⇒ 5KΩ resistor used to lower the I_1 current.

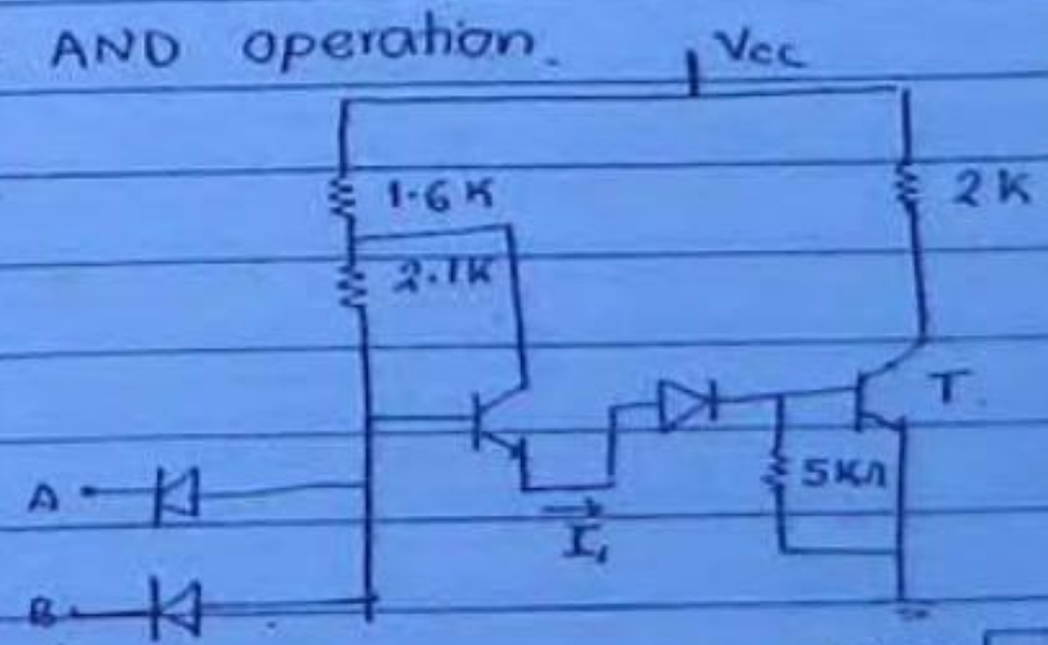

Internetc called STANDARD LOGIC

© Wikiengineering

www.raghul.org

High Threshold logic (HTL) family :-

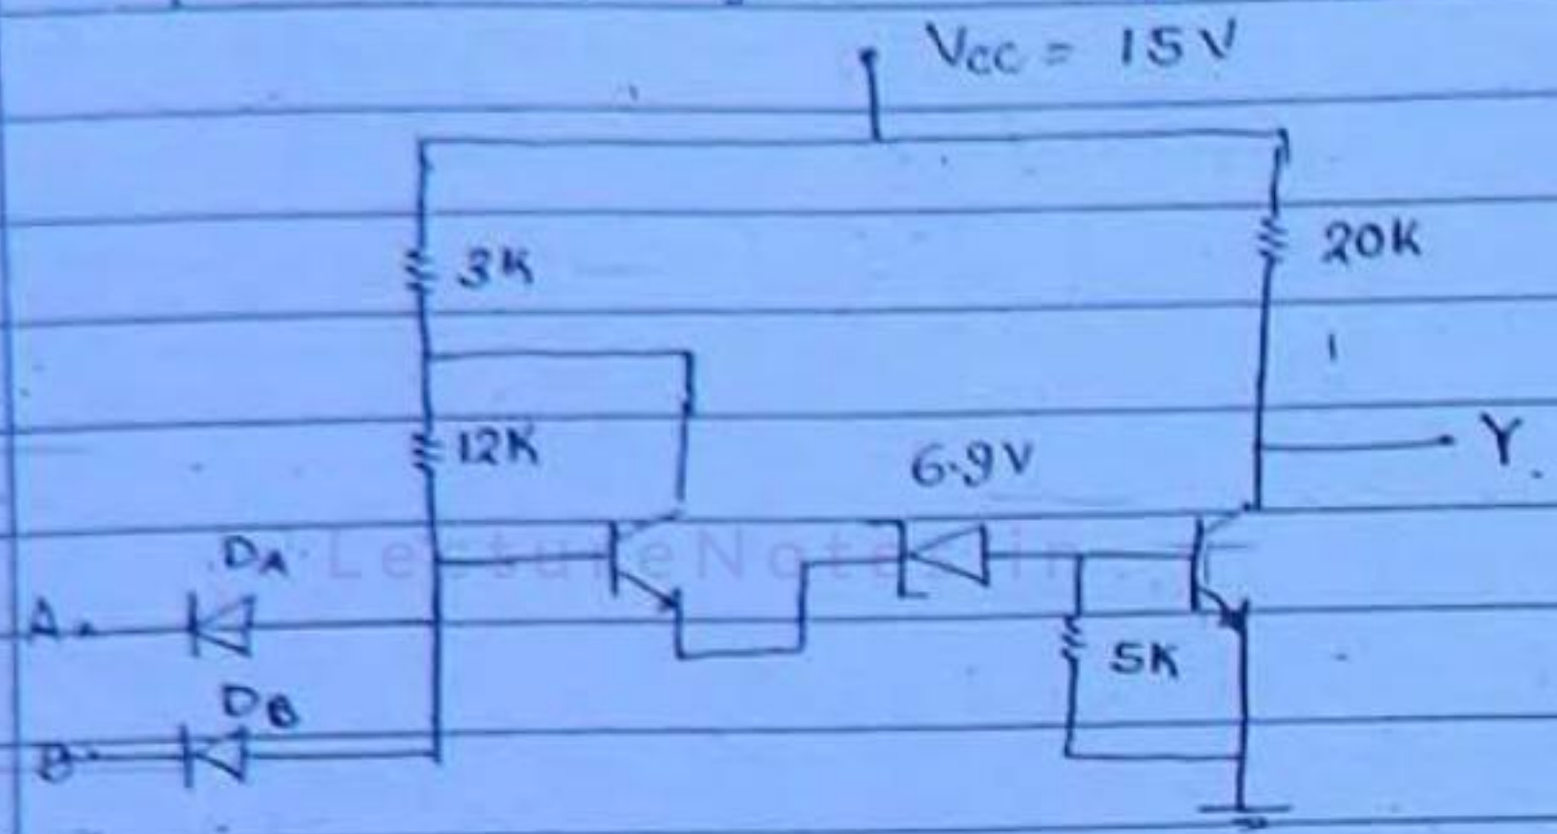

168

⇒ Zener Diode is used in place of D_2

⇒ NM = 4 - 5V (Highest noise margin)

⇒ since in DTL all diode and Transistor is -ive temp coefficient ($\frac{dV}{dT}$ = 0 - 2.5 mV/°C.

⇒ logic 0 = 2V, logic 1 = 12V. } Higher voltage swing

⇒ t_{pd} = 90 ns

⇒ P_{diss} = 55 mW

⇒ FOM = 4950 PJ ≈ 5000 PJ

⇒ Fanout = 8

⇒ Basic gate = NAND gate

⇒ Noise margin = 4V - 5V.

LectureNotes.in

TTL (Transistor Transistor logic) family :-

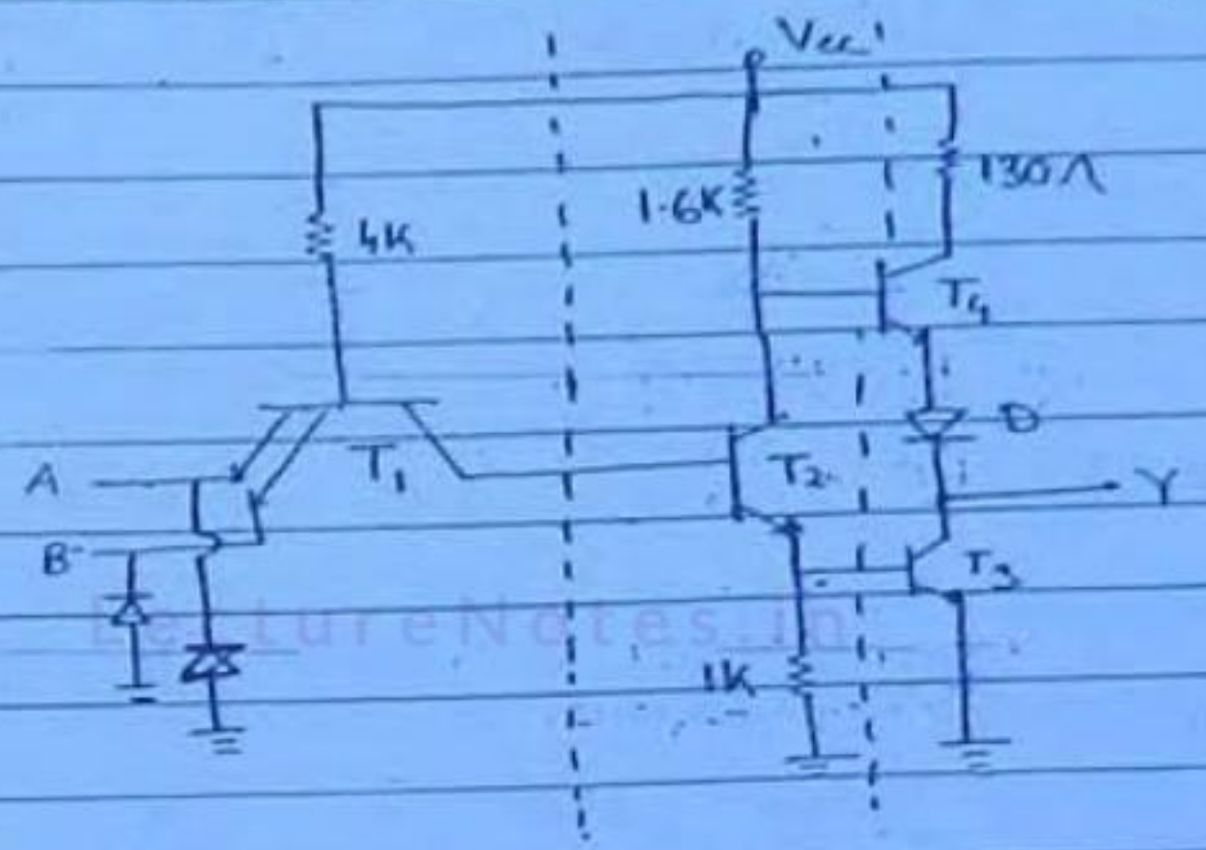

169

T_1 = Multiemitter transistor.

A	B	T_1	T_2	T_3	T_4	Y
0	0	A	C	C	S	1
0	1	A	C	C	S	1
1	0	A	C	C	S	1
1	1	R	S	S	C	0

⇒ The ckt shown in fig. is standard TTL logic family. it basically have three stage.

(i) Multiemitter I/P stage

(ii) Phase splitter.

(iii) Totem pole or, active pull up. O/P stage.

active = use of Tr T_4

Pullup = Tr (T_4) connect to Vcc.

Operation :-

⇒ Any one of I/P low or all I/P's are low- then EB Junction is FB. (J_E = FB) and collector base (J_C = RB is RB. T_1 is in active mode. due to this Tr. T_2 and T_3 are OFF (in cutoff region) where as T_4 in is SAT. Hence O/P is 1.

⇒ When all the I/P's are high then J_E (EB Junct^n) of T_1 is RB. and J_C (CB Junct^n) is FB. (The mode of operation is Reverse active.

© Wiki Engineering
classmate
PAGE
www.raghul.org

T_2 and T_3 are in saturation and T_4 is in cutoff. Hence O/P is zero.

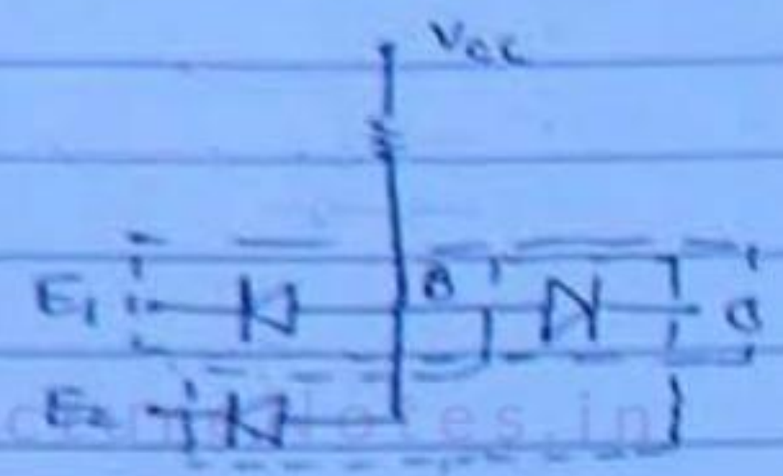

(170)

V_{IN} = 2 V → I/P voltage at which T_r takes logic 1

V_{OH} = 2.4 V

V_{IL} = 0.8

V_{IH} = 0.4

t_{pd} = 10 ns

P_{diss} = 10 mW

FOM = 100 PJ

Fanout = 10

NM = 0.4V

⇒ Diode D is used to cutoff T_r T_4 when T_3 is ON.

⇒ Advantage of Totem pole :-

1. lower power dissipation
2. Higher speed of operation
3. Higher fan out

⇒ Disadvantage of Totem pole :-

It is not used in wired logic

⇒ To provide wired AND logic open collector configuration is used.

© Wiki Engineering

DATE

⇒ 130 Ω resistor used in collector in O/P stage to reduce ripple or noise generation to in ~~for~~ high frequency of operation.

⇒ In TTL if any I/P is open it behaves as logic 1.

⇒ Clamping diodes are connected in I/P stage to prote transistor during high frequency of operation.

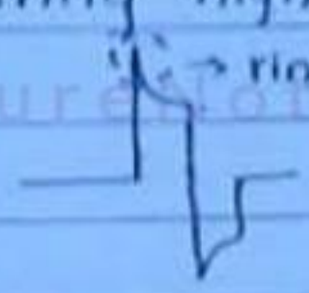

(171)

⇒ Clamping D. removes ringing of high frequency operation.

⇒ There are different type of TTL :-

(a) Standard TTL
(b) High speed
(c) Low power
(d) Schottky TTL.

LectureNotes.in

High speed TTL :-

In standard TTL logic family if Resistor value reduce then t_{pd} reduces and known as High speed logic family.

t_{pd} = 6nsec.

⇒ Power dissipation increases.

172

low speed power TTL :-

In TTL logic family if Resistor value increased then power dissipation reduced and resultant is known as low power logic family.

Schottky diode :-

If schottky diode is used b/w collector and Base region then it will remove storage time and saturation delay. the family known as schottky diode TTL.

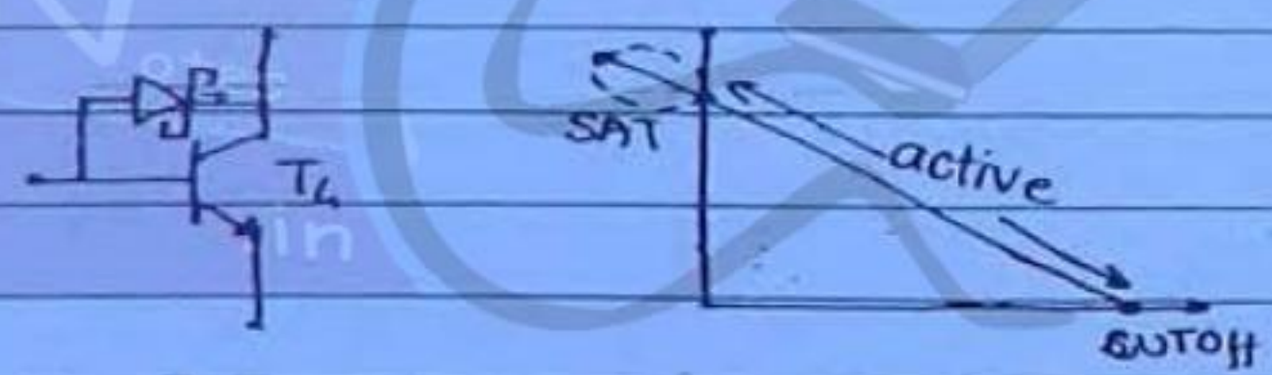

t_{pd} = 2nsec.

LectureNotes.in

© Wiki Engineering
www.raghul.org

ECL (Emitter coupled logic family) :-

⇒ It is never go in saturation region.

⇒ work only in cutoff and Active region. (123)

⇒ It is fastest logic family due to work in Active and cutoff region. (Because it is non saturated)

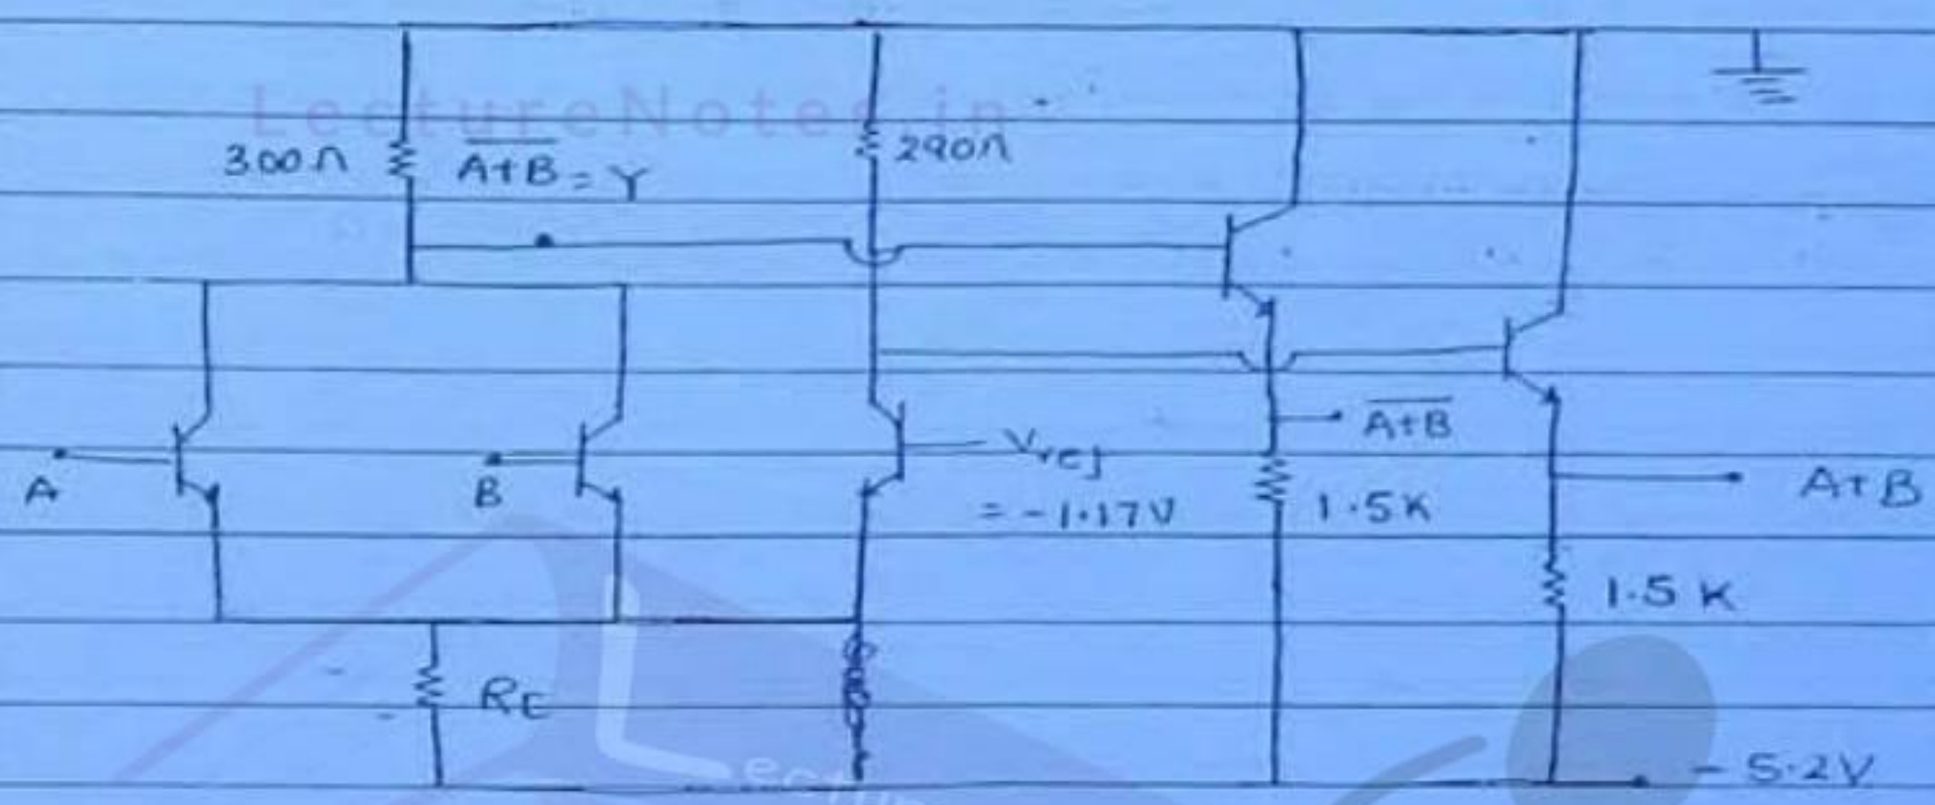

t_{pd} = 1nsec
fanout = 25

⇒ It basically ~~contains~~ contains two stage.
(1.) Differential amp' I/P stage.
(2) CC or Emitter follower O/P stage.

⇒ Due to use of D.A. complementry O/P are available in ECL logic family. (NOR / OR) gate.

⇒ Due to use of CC stage in the O/P fanout is high

⇒ Negative spikes do not affect the transistor due to -ive power supply.

⇒ ECL uses -ive power supply. Due to this any spikes or negative voltage not affect operation.

t_{pd} = 1ns
P_{diss} = 55mw
FOM = 55 PJ
Fanout = 25
N.M = 0.3V
classmate

PAGE

© Wiki Engineering
www.raghul.org

DATE

logic 0 = −1.7V
logic 1 = −0.85V

} It is logic 1 mode only voltage supply is negative

⇒ ECL provide wired AND logic

174

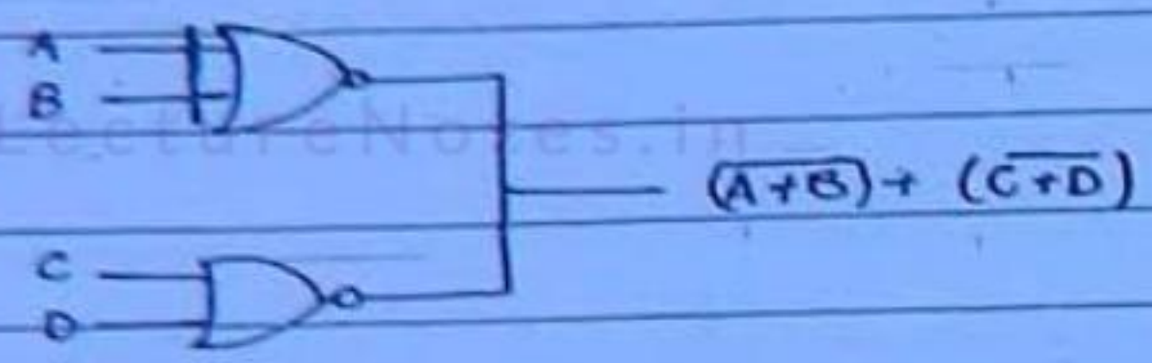

⇒ If any I/P is open then it is logic '0'.

LectureNotes.in

NMOS :-

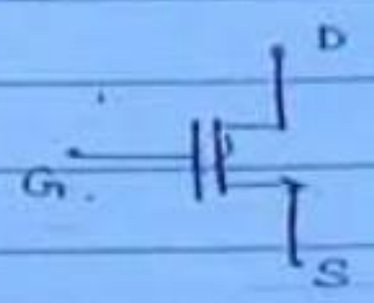

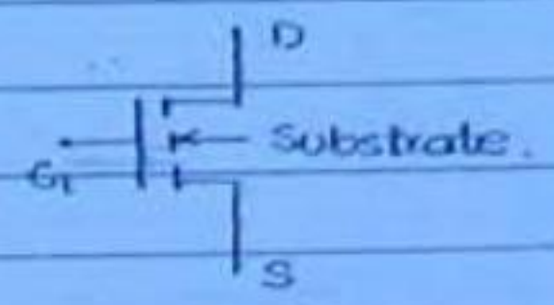

175

N-channel :-

logic '0' = OFF

logic 1 = ON.

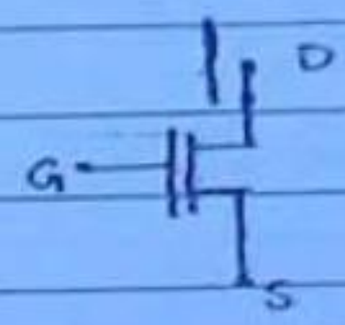

P- channel MOS :-

logic '0' = ON

logic 1 = OFF.

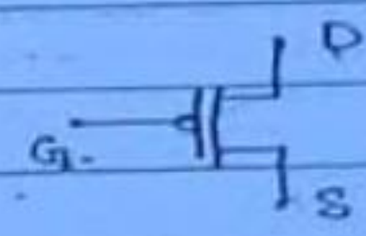

⇒ Since FET is voltage variable resistor hence in MOS circuit in place of ~~reg~~ resistor we use MOSFET.

NMOS NOT Gate :-

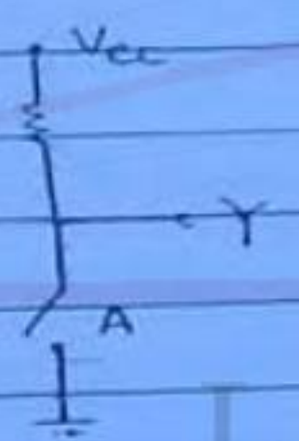

⇒

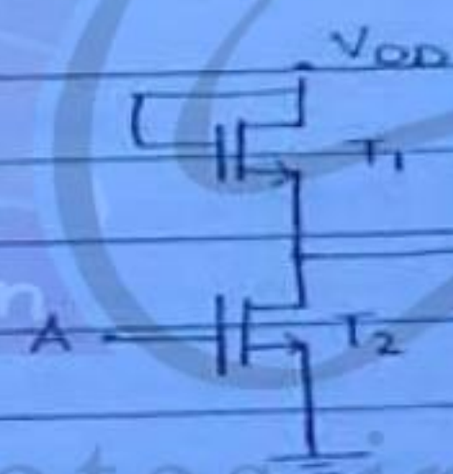

A	T_2	Y
0	OFF	1
1	ON	0

NMOS NAND Gate:-

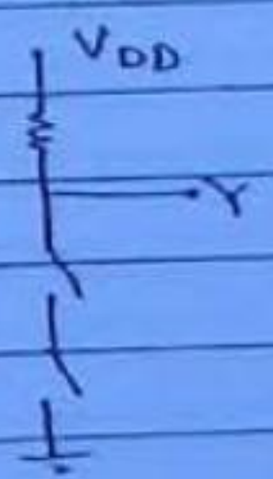

⇒

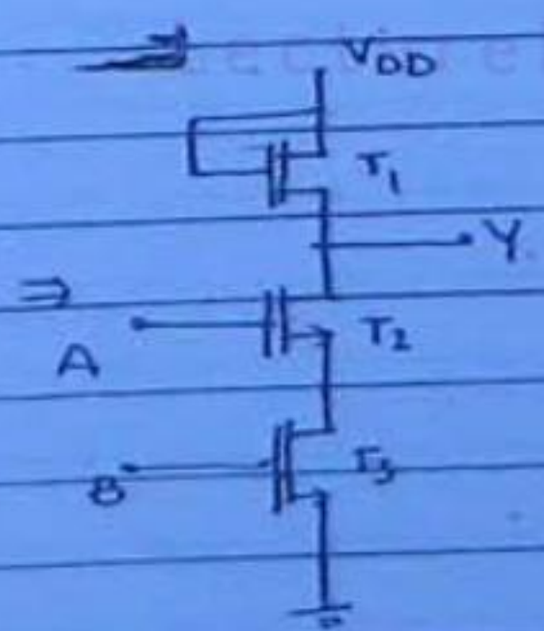

A	B	T_2	T_3	Y
0	0	OFF	OFF	1
0	1	OFF	ON	1
1	0	ON	OFF	1
1	1	ON	ON	0

© Wiki Engineering
www.raghul.org

NMOS NOR Gate :-

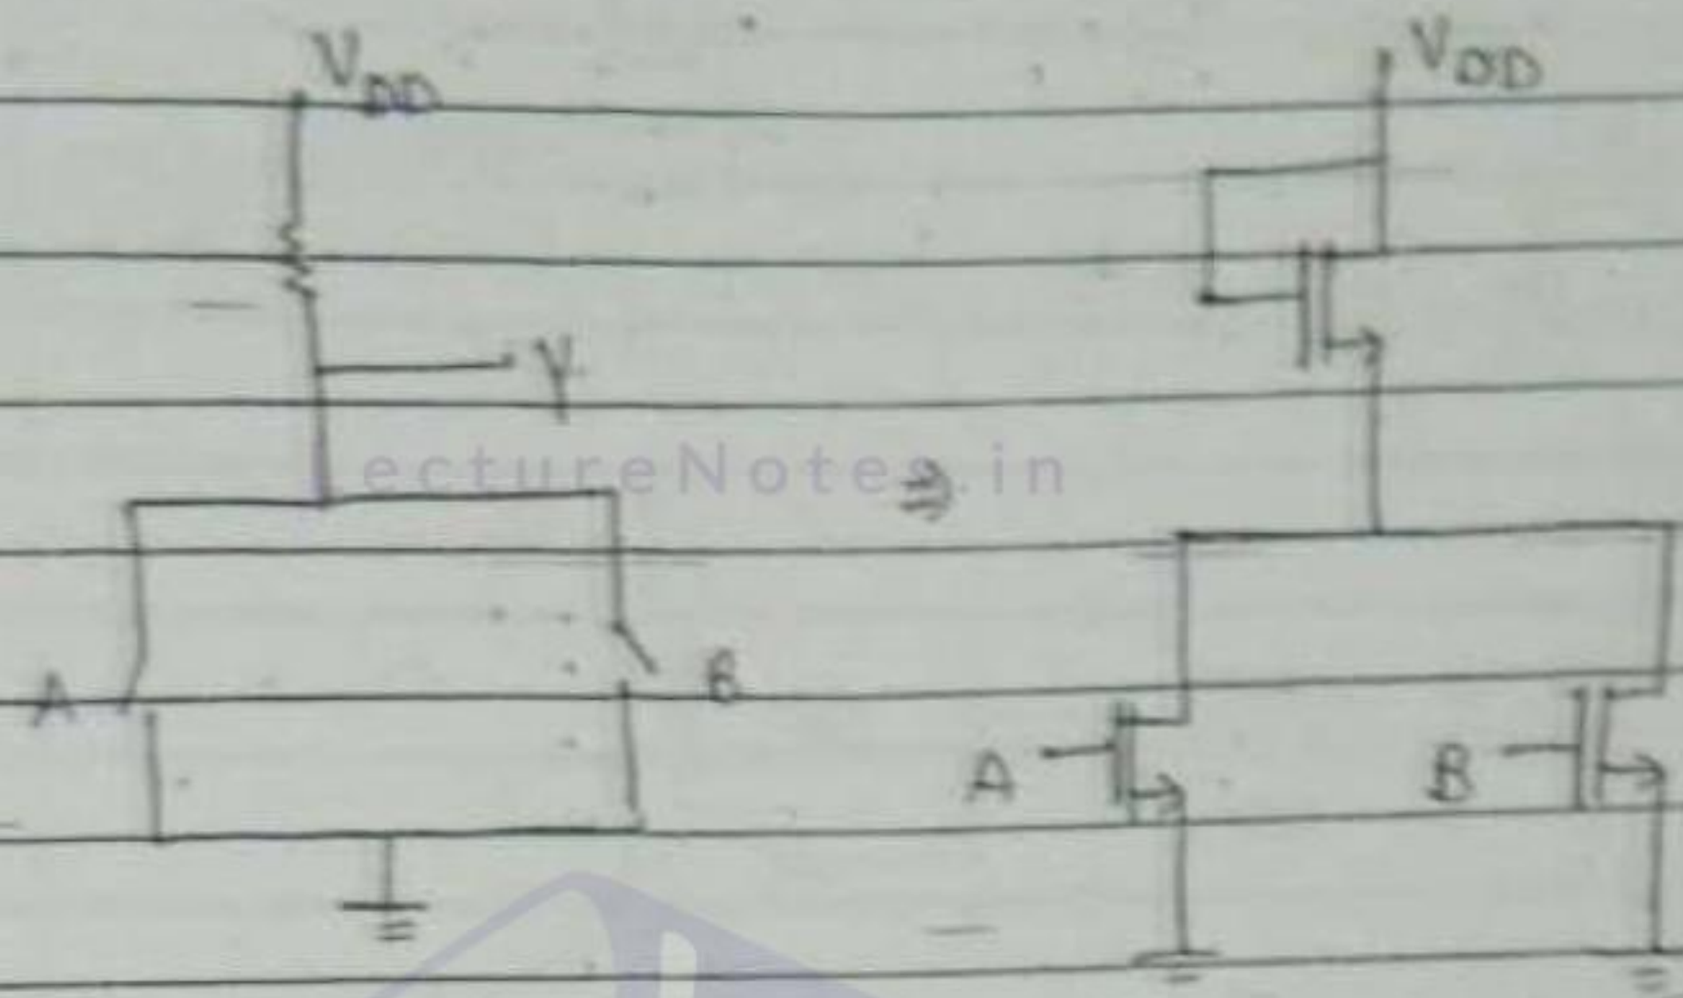

t_{pd} = 250 nsec

P_{diss} = 1mW

FOM = 250 PJ

fanout = 5

NM = 1.5V

LectureNotes.in

PMOS NOR Gate :-

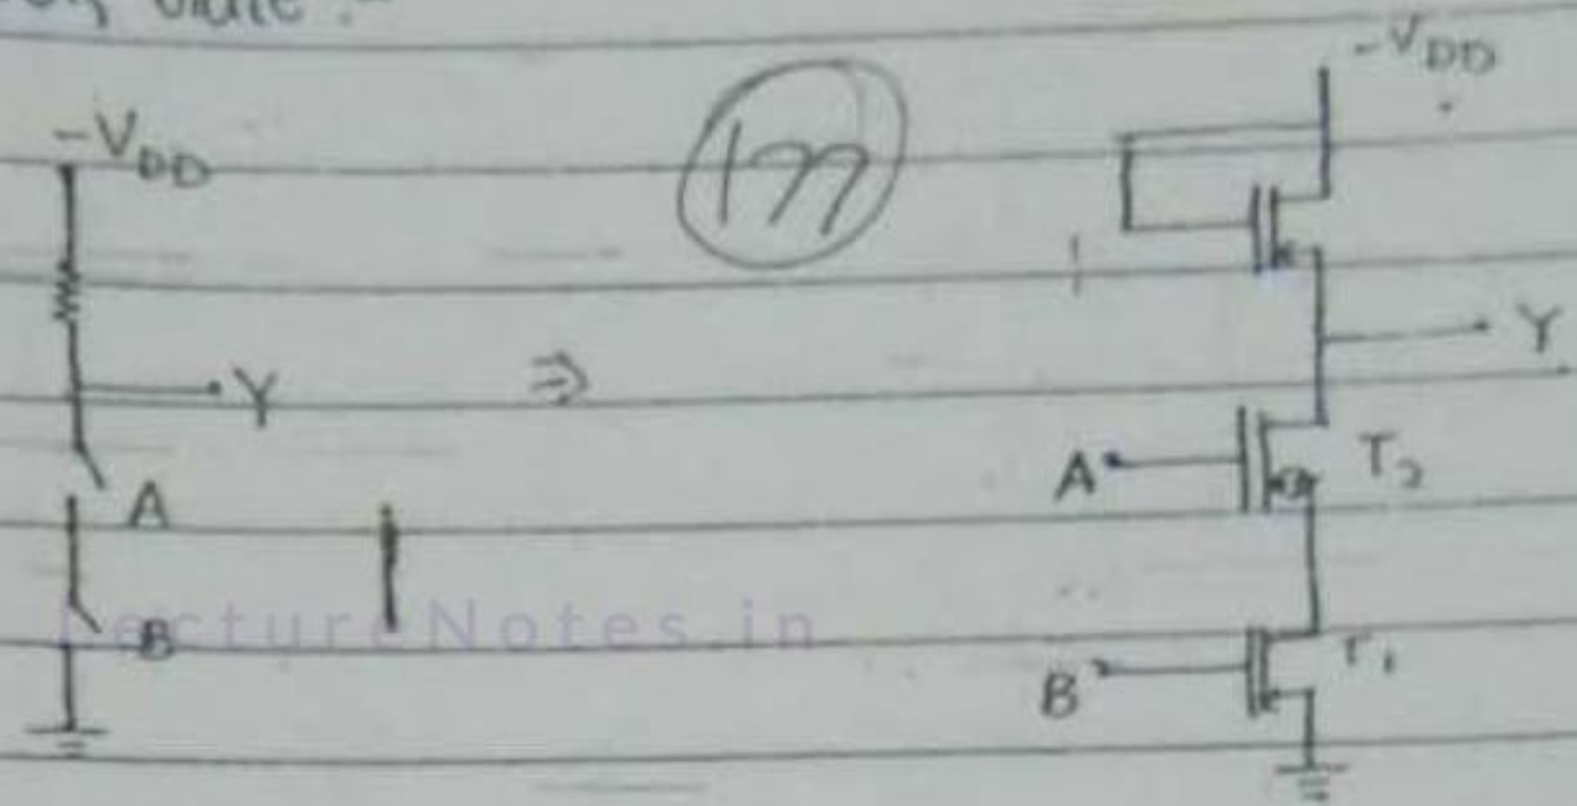

A	B	Y
0	0	1
0	1	0
1	0	0
1	1	0

t_{pd} = 300 nsec

P_{diss} = 0.2 mW

FOM = 60 PJ.

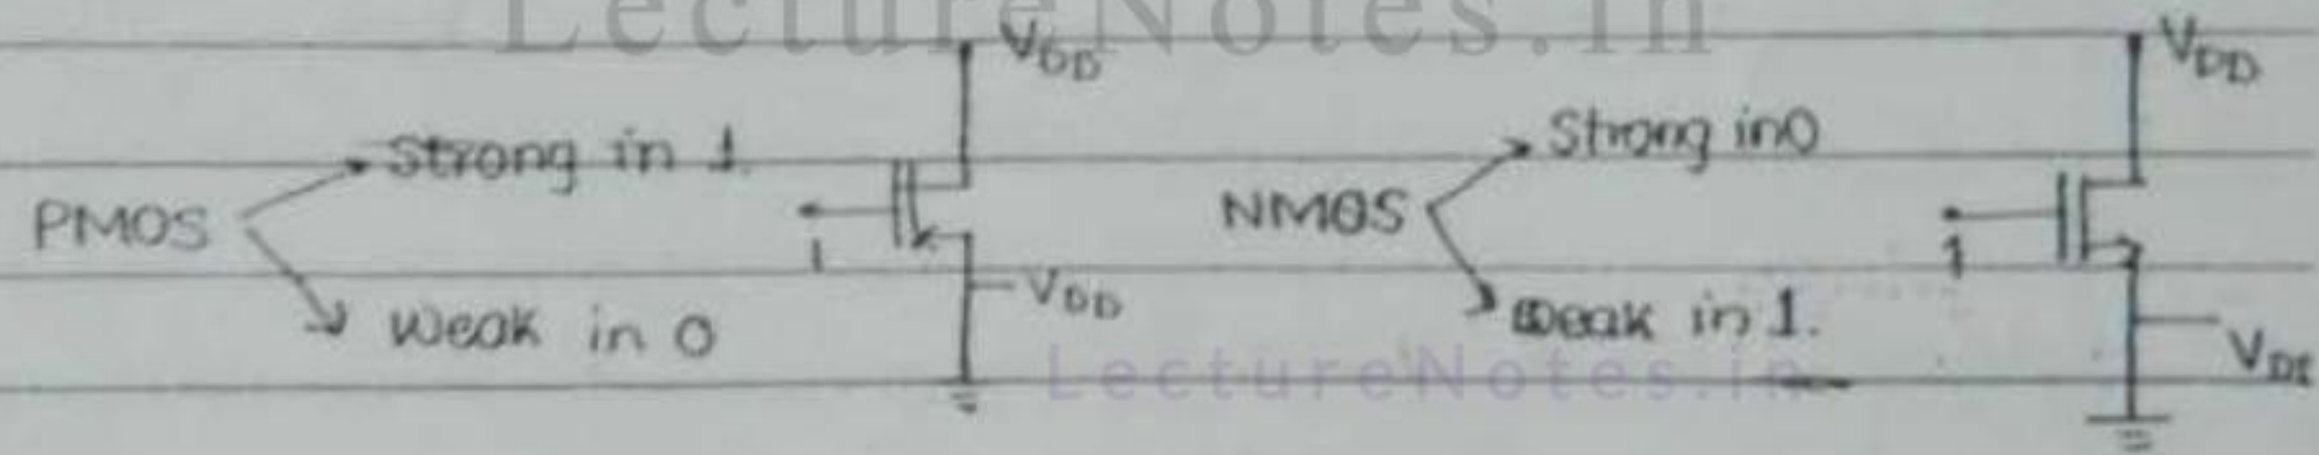

Where, V_T = Threshold voltage.

© Wiki Engineering
www.raghul.org

CMOS NOT Gate :-

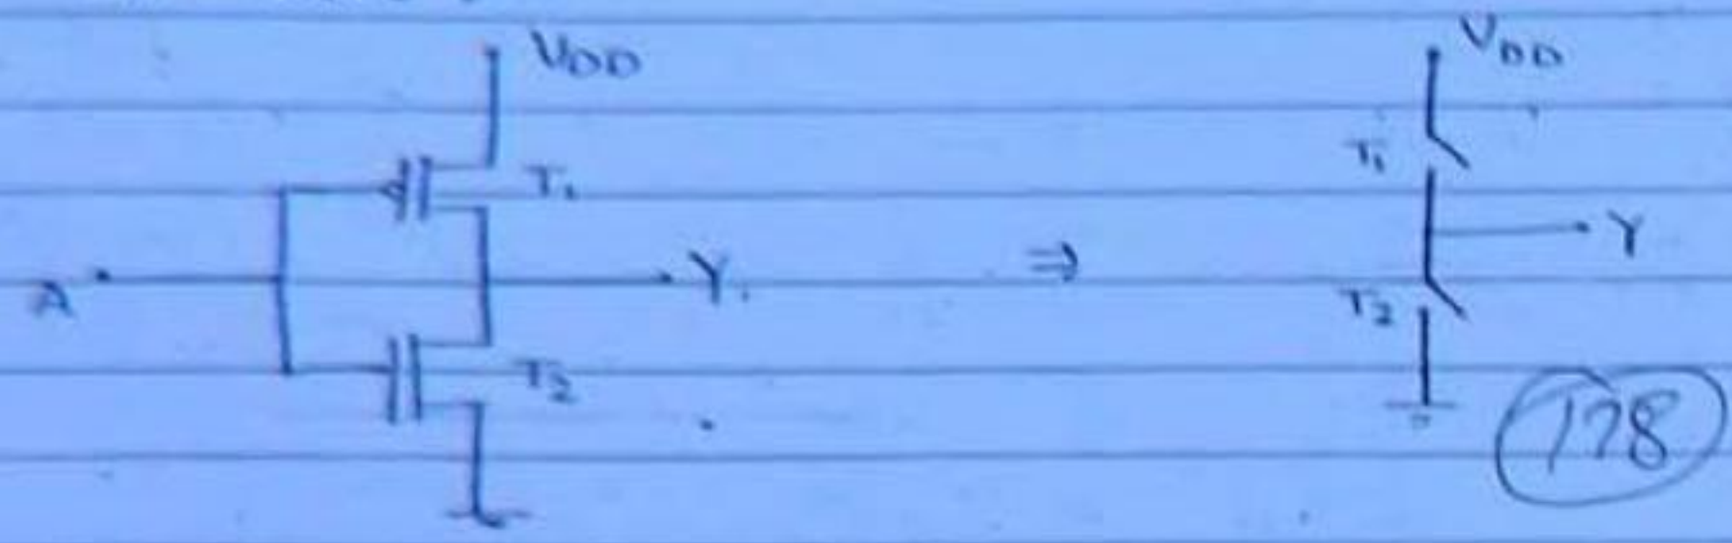

178

A	T_1	T_2	Y
0	ON	OFF	1
1	OFF	ON	0

Transfer characteristics :-

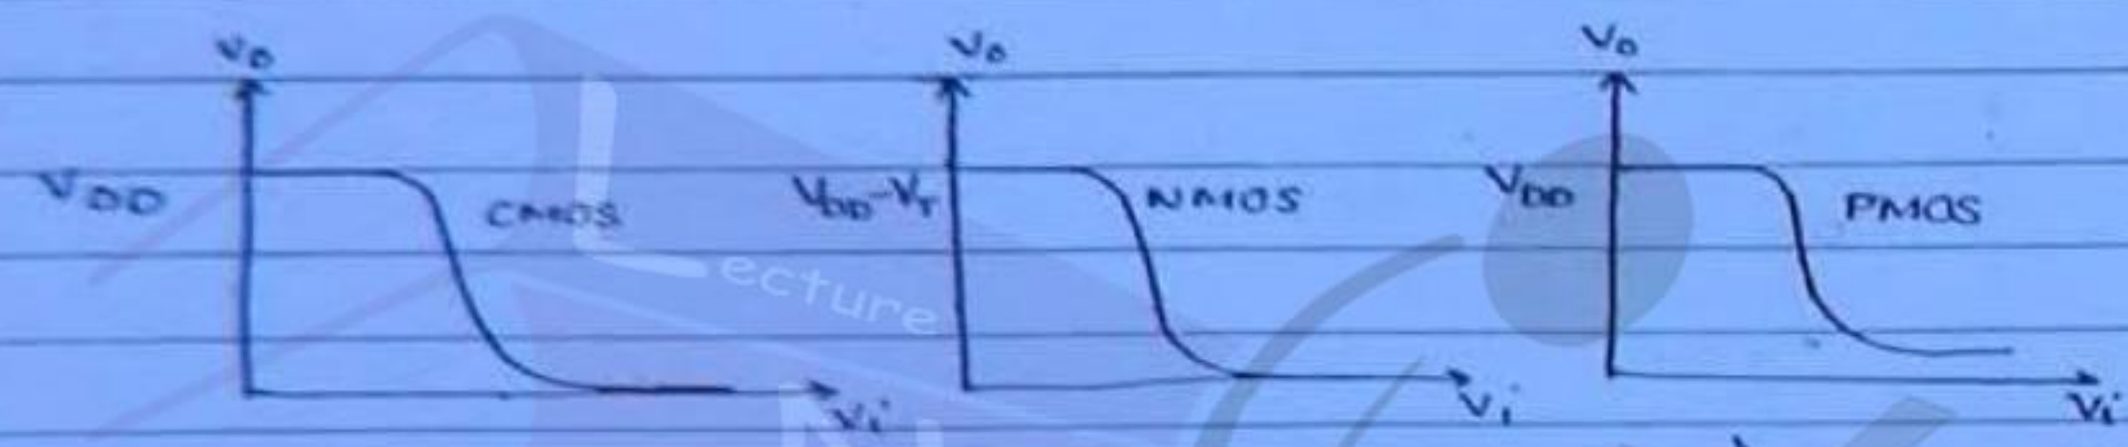

⇒ lowest power dissipation.

P_{diss} = 0.01 mW

t_{pd} = 70 nsec

FOM = 0.7 pJ

Fanout = 50

NM = $\frac{V_{DD}}{2}$

Power Dissipation :-

(i) Staitic PD =

During logic '0' or logic '1'.

(ii) Dynamic PD =

During transition from 0→1 or 1→0.

$$\boxed{PD = C f V_{DD}^2}$$

© Wiki Engineering

DATE

CMOS NAND Gate:-

(179)

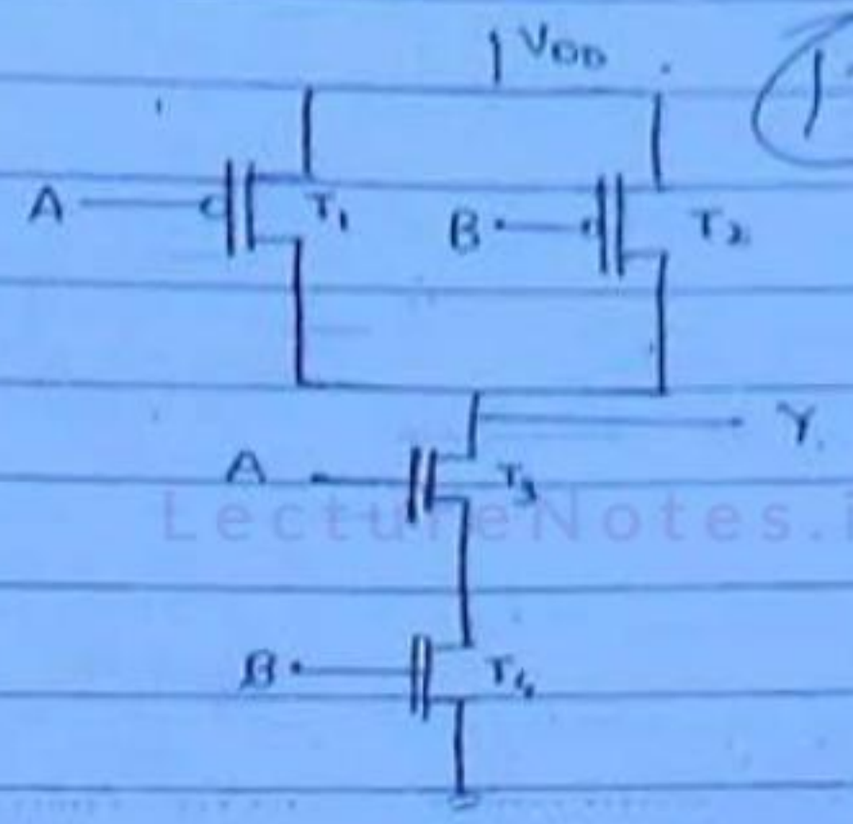

A	B	T_1	T_2	T_3	T_4	Y
0	0	ON	ON	OFF	OFF	1
0	1	ON	OFF	OFF	ON	1
1	0	OFF	ON	ON	OFF	1
1	1	OFF	OFF	ON	ON	0

LectureNotes.in

© Wiki Engineering

Transmission Gate :-

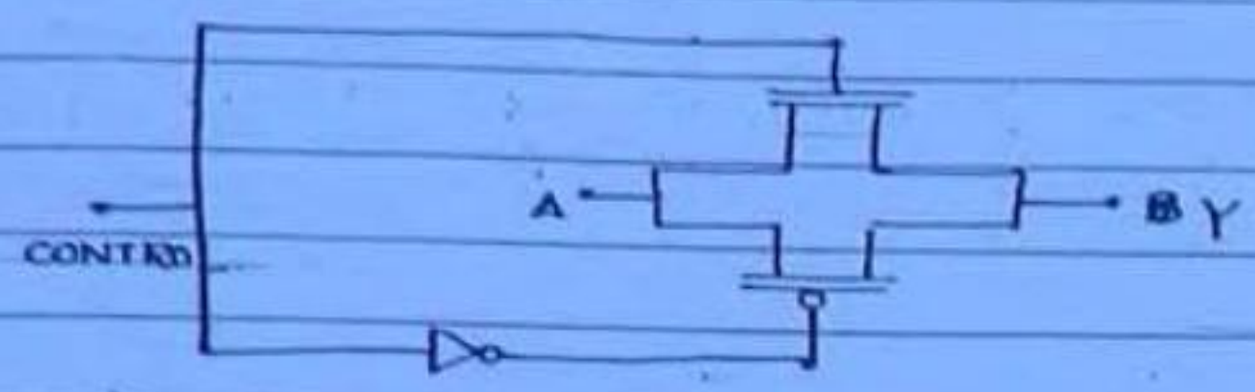

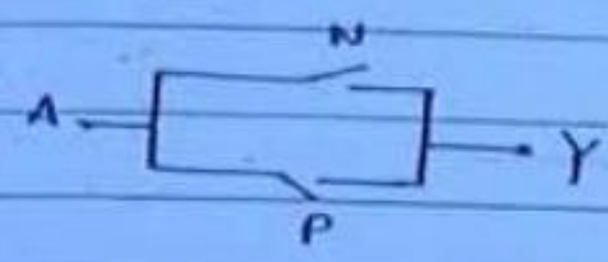

Control	A	Y
0	X	High impedence.
1	0	0
1	1	1

Control	Y
0	High imped
1	A

Symbol of Transmission gate :-

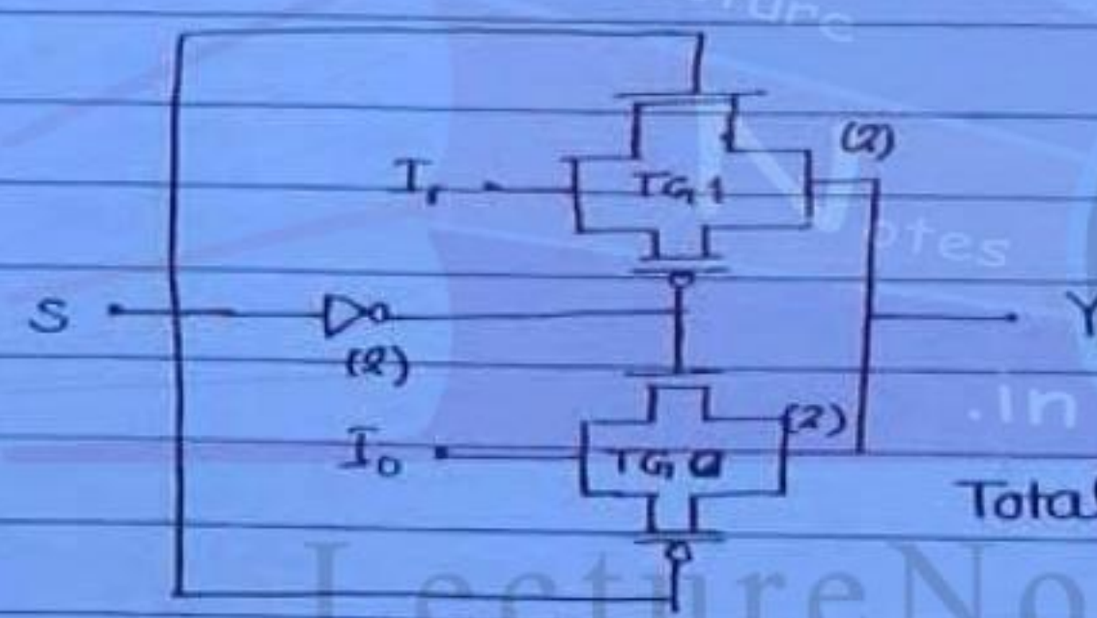

S	Y
0	I_0
1	I_1

Total no. of transistor $= 2+2+2 = 6$.

CMOS monostable multivibrator :-

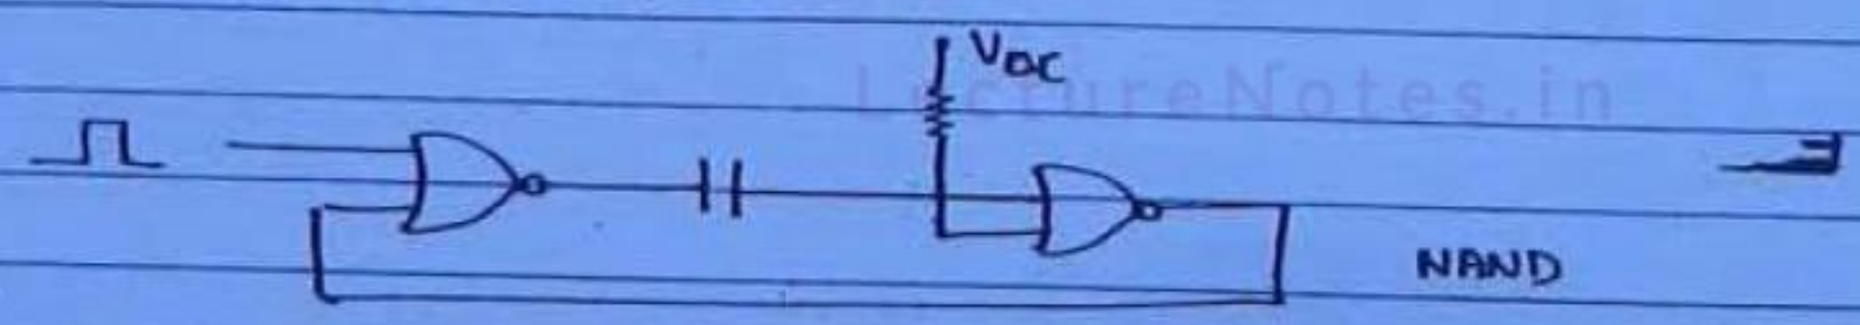

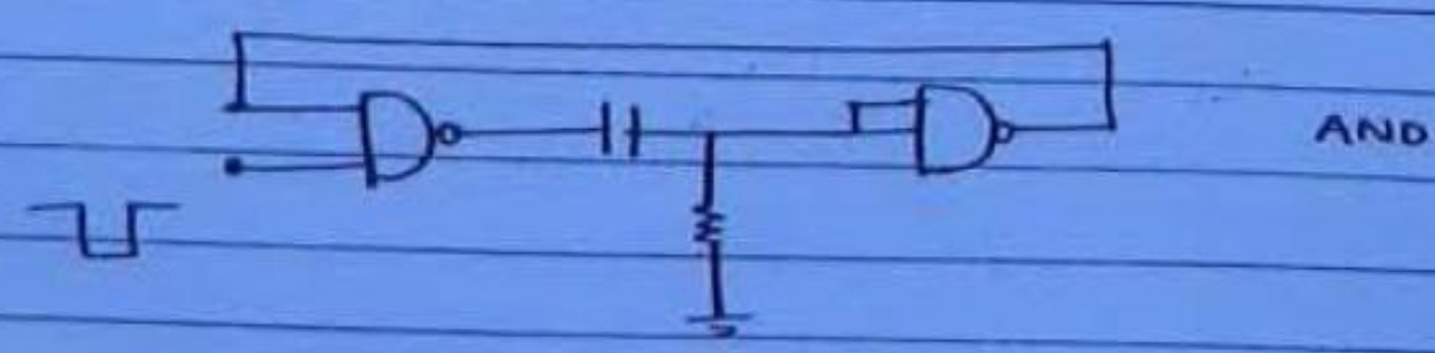

© Wiki Engineering
www.raghul.org