

Roku App Test Install Guide

Only the steps needed to download, sideload, and log in to the Synology DS Video Roku app.


You need

A Roku device and remote on the same network as your computer.

The latest app ZIP file from GitHub: roku-ds-video.zip.

A password you choose for the Roku developer installer.

1. Download the Latest App ZIP

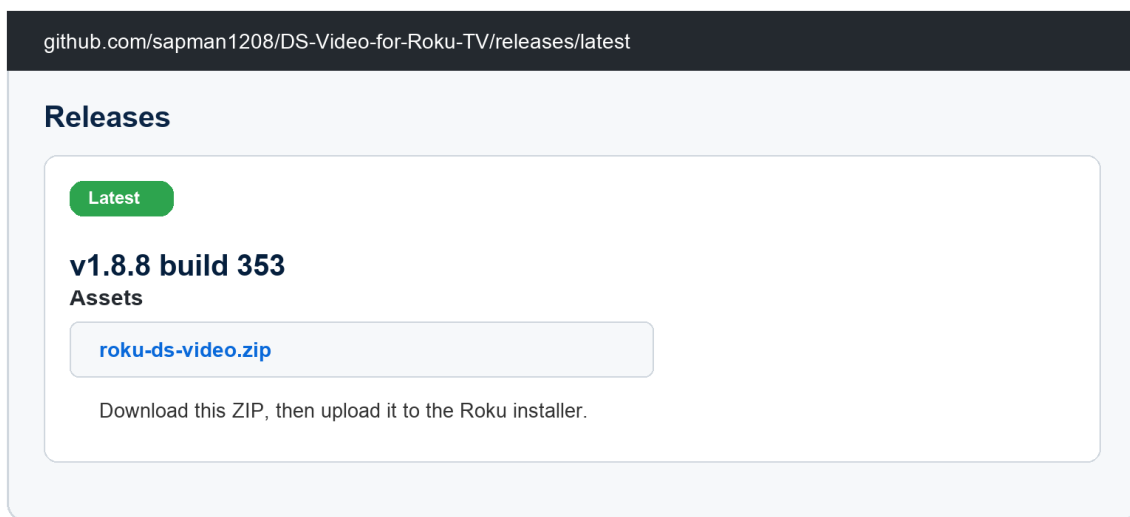

GitHub latest release page: download the roku-ds-video.zip asset.

1. Open the latest release page:
<https://github.com/sapman1208/DS-Video-for-Roku-TV/releases/latest>
2. Under Assets, download roku-ds-video.zip. Do not unzip it.
3. Remember where the ZIP file downloads; you will upload this file to the Roku installer.

2. Open Developer Mode on Your Roku TV


Developer Mode remote sequence



Enter this sequence from the Roku home screen.


Remote sequence that opens the Developer Settings screen.

4. On the Roku home screen, enter this remote sequence: Home, Home, Home, Up, Up, Right, Left, Right, Left, Right.
5. When the Developer Settings screen appears, write down the Roku device URL shown on screen. It usually looks like `http://ROKU_IP_ADDRESS`.
6. Select the option to enable the Development Application Installer.
7. Read and accept the Developer Tools License Agreement.
8. Create the installer password. Passwords are case-sensitive.
9. Let the Roku reboot. After it restarts, it is ready for sideloading.

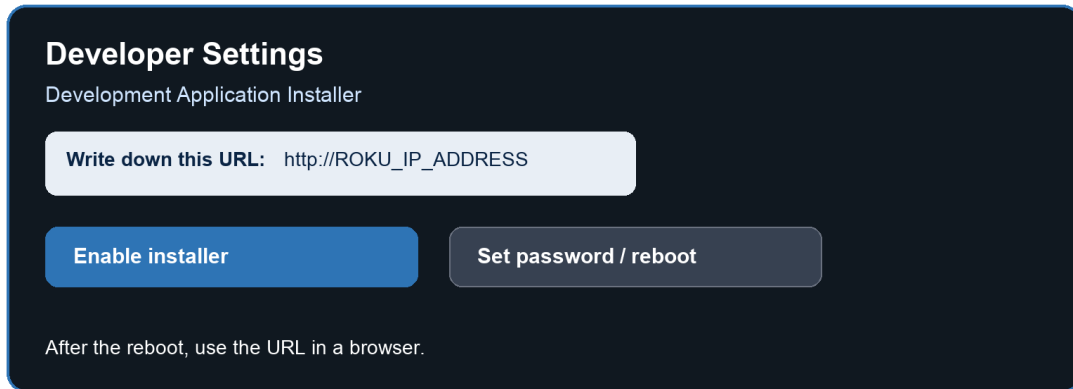

Developer Settings: note the URL, enable the installer, then set the password.


3. Sideload the App

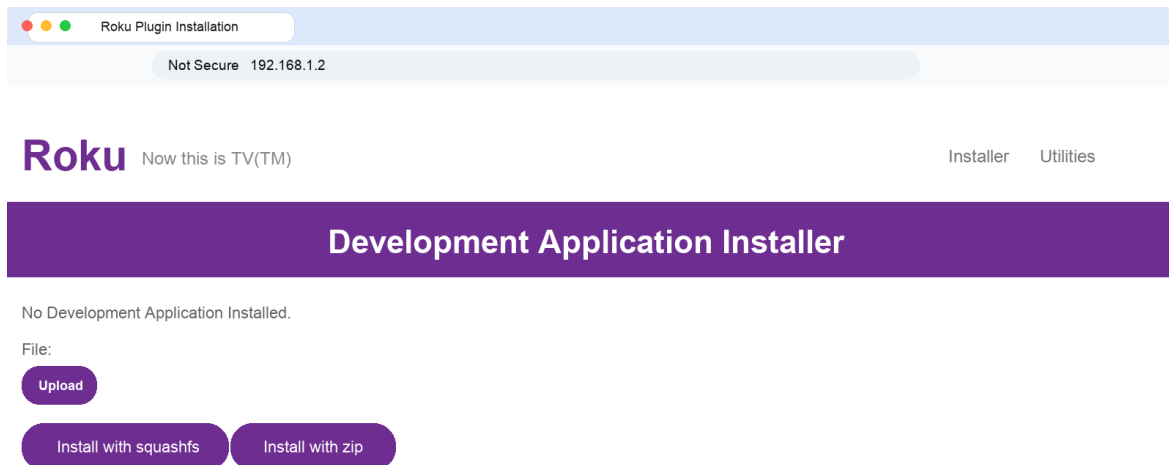

Roku browser installer screen: upload the ZIP, then install with zip or squashfs.


10. On your computer, open a browser and go to the Roku URL you wrote down.
11. Log in with username `rokudev` and the password you created above.
12. On the Development Application Installer page, click Upload and choose `roku-ds-video.zip`.
13. Click Install with zip or Install with squashfs.

- Wait for the upload to finish. The sideloaded app appears on the Roku home screen as the development channel.

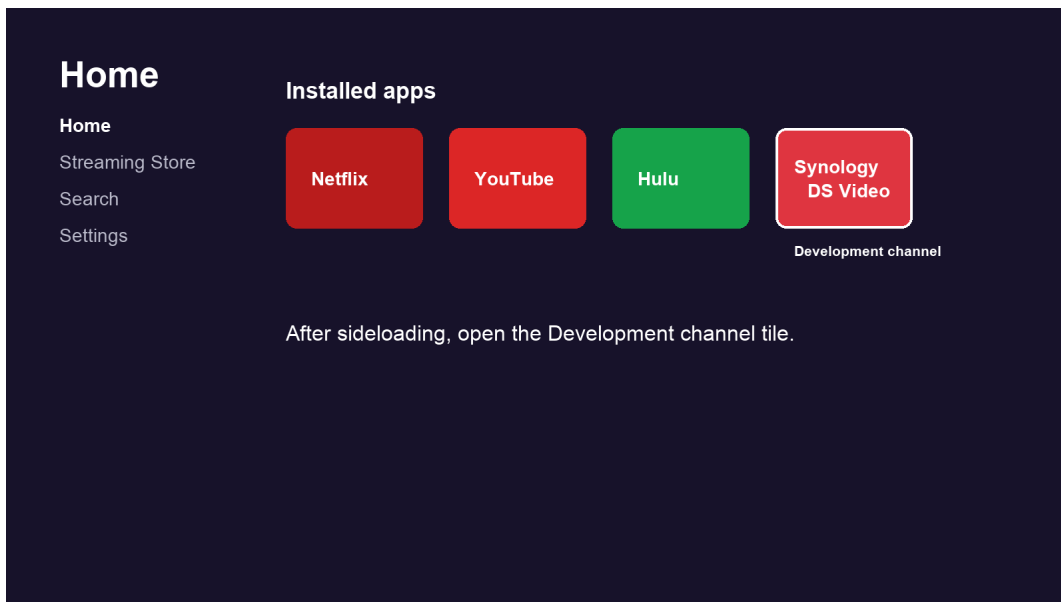

Roku home screen after install: open the Development channel tile.

4. Open the App and Log In

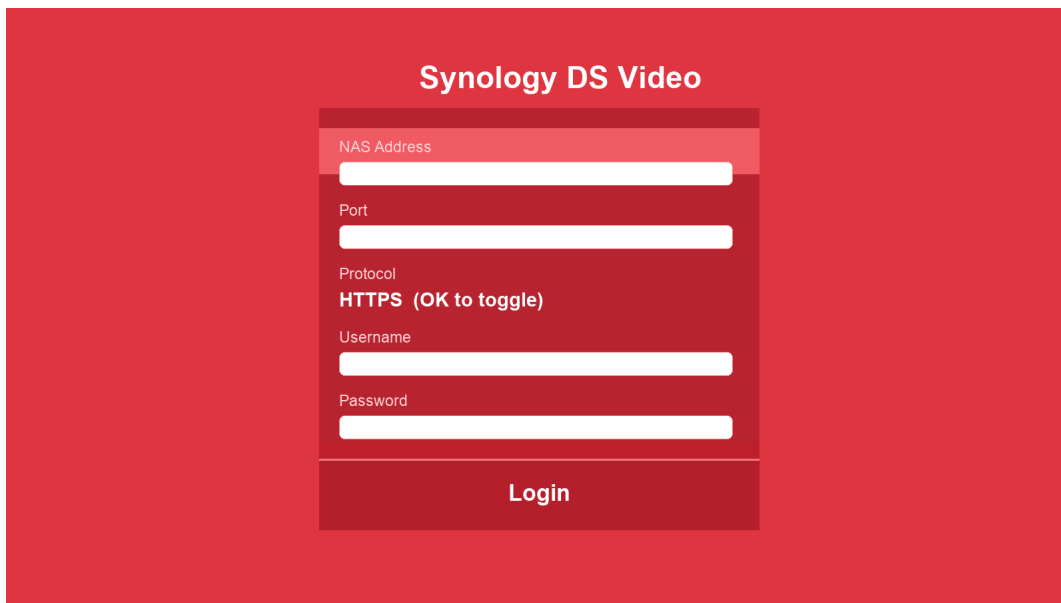

Roku app login screen. Fill in the blank fields with the NAS details provided to you.

- Open the Synology DS Video development channel on the Roku.
- Fill in NAS Address, Port, Protocol, Username, and Password. Use port 5001 for DSM HTTPS or 5000 for DSM HTTP.
- Select Login.

Important Notes

- Only one development app can be sideloaded at a time. Installing another development app replaces the current one.
- If Roku reports that the same package is already installed, delete the development app from the installer page and install again.
- If the browser cannot reach the Roku URL, confirm the Roku and computer are on the same network and that the Roku is still in developer mode.

Source: Roku Developer Docs, Activating developer mode, <https://developer.roku.com/dev/docs/developer-setup>